

# QuickStart Guide

## FORTINET

© Copyright 2007 Fortinet Incorporated. All rights reserved.  
Products mentioned in this document are trademarks or registered trademarks of their respective holders.  
Regulatory Compliance  
FCC Class A Part 15 CSA/CUS  
7 September 2007



## FortiGate-ASM-S08

01-30005-0413-20070907

LED	State	Description
HS	Blue	Ejection latch open.
	Flashing	Ejection latch opened during system operation.
OOS		LED currently not in use.
ACT/RDY	Amber	The module is properly inserted in the FortiGate unit.
	Off	The module is not receiving power from the FortiGate unit.
PORT		LED currently not in use.

## Installing the AMC Module

It is important to carefully seat the FortiGate ASM-S08 module all the way into the chassis. Only then will the FortiGate ASM-S08 module power-on and start up correctly.

**CAUTION:** The ambient room temperature of a FortiGate unit with the ASM-S08 module installed must be no greater than 35°C (95°F).

To complete this procedure, you need:

- A FortiGate chassis with an empty AMC single-width (SW) opening.
- To avoid any electrostatic discharge, install in a static free area.

FortiGate ASM-S08 modules are not hot swappable. The procedure for inserting the FortiGate ASM-S08 module into a FortiGate chassis slot requires the FortiGate unit to be powered off.

FortiGate ASM-S08 modules must be protected from static discharge and physical shock. Only handle or work with FortiGate ASM-S08 modules at a static-free workstation. To avoid any electrostatic discharge (ESD) when handling FortiGate ASM-S08 modules, install in a static free area.

### To insert a FortiGate ASM-S08 module into a FortiGate chassis

1. Ensure the FortiGate unit is powered off before proceeding.
2. Remove the panel block on the FortiGate unit using the hot swap latch.
3. Insert the FortiGate ASM-S08 module into the empty slot in the chassis. Ensure the Fortinet logo is right-side up. It should be on the upper-right corner of the module.
4. Carefully guide the module into the chassis.

5. Pull out the hot swap latch on the right-hand side of the module if pushed in.
6. Insert the module by applying moderate force to the front faceplate near the upper edge to slide the module into the slot.  
The module should glide smoothly into the chassis. If you encounter any resistance while sliding the module in, the module could be aligned incorrectly. Pull the module back out and try inserting it again.
7. Press the hot swap latch firmly to lock in the module.
8. Power on the FortiGate unit.

## Removing the AMC module

Should you need to remove the ASM-S08, shut down the FortiGate unit using proper shut down procedures.

### To remove the ASM-S08 module

1. Ensure the FortiGate unit is powered off before proceeding.
2. To avoid any electrostatic discharge (ESD) when handling FortiGate ASM-S08 modules, install in a static free area.
3. Pull the hot-swap latch on the right-hand side of the module to the extended position to unlock the module from the FortiGate unit.
4. Gently pull the hot swap latch to remove the module.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>