

# Owner's Manual

Please read before using this unit.

## DVD/CD Player MSD125

**MAGNAVOX**  
SMART. VERY SMART.

INSTRUCCIONES EN ESPAÑOL INCLUIDAS.

### Supplied Accessory


- Remote control (NB070UD) with two AA batteries
- Audio/Video cables (WPZ0102TM015/ WPZ0102LTE01/ WPZ0102CAB01)
- Owner's Manual (1VMN20430)



### Connecting to RF Modulator

If your TV has AUDIO/VIDEO input jacks, see the section "Connections" on page 6. If not, it is still possible to connect this unit to your TV by using a **STEREO AUDIO/VIDEO RF Modulator (commercially available.)** In this case, follow the instructions below.

- 1) Connect the AUDIO/VIDEO output jacks of this unit to the AUDIO/VIDEO input jacks of your RF Modulator by audio and video cables.
- 2) The antenna input jack of your TV may have been already occupied. If so, disconnect the RF cable from your TV, then connect the RF cable to your RF Modulator (usually marked "ANT IN".)
- 3) Connect your RF modulator to your TV by another RF cable.
- 4) Set your RF modulator's channel 3/4 switch to either 3 or 4, whichever the TV channel is least used in your area. If your RF modulator has a Modulator/Antenna switch, set it according to your RF modulator's manual.
- 5) Turn on your TV and choose the same channel as you set the RF modulator's channel 3/4 switch to.  
For more details, follow the instructions supplied with the RF Modulator.

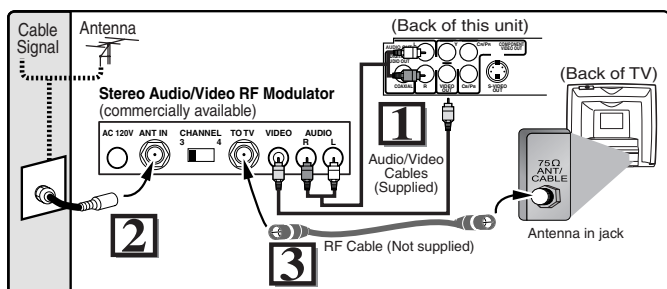

### Hint

- The quality of picture may become poor if the unit is connected to an RF Modulator.

If you need additional operating assistance after reading this owner's manual, please call  
**TOLL FREE : 1-800-605-8610**  
or visit our web site at <http://www.funai-corp.com>

### Table of Contents

#### Precautions

|  |   |
|--|---|
| Laser Safety                                   | 2 |
| ■ <b>Important Safeguards</b>                  | 3 |
| Installation Location                          | 4 |
| Avoid the Hazards of Electrical Shock and Fire | 4 |
| Moisture Condensation Warning                  | 4 |
| About Copyright                                | 4 |
| Notice for Progressive Scan Outputs            | 4 |
| Symbols Used in This Manual                    | 4 |
| Maintenance                                    | 4 |
| ■ <b>About the Discs</b>                       | 5 |
| Playable Discs                                 | 5 |
| Unplayable Discs                               | 5 |

#### Setup

|   |   |
|---|---|
| ■ <b>Connections</b>                            | 6 |
| Connection to a TV                              | 6 |
| Connection to an Audio System                   | 7 |
| Rear Terminals                                  | 7 |
| ■ <b>About the Remote Control</b>               | 8 |
| Remote Control                                  | 8 |
| Installing the Batteries for the Remote Control | 8 |

#### Functions

|   |    |
|---|----|
| ■ <b>Playback</b>   | 9  |
| ■ <b>On-Screen Display</b>                                    | 10 |
| ■ <b>Search Function</b>                                      | 11 |
| Track Search  | 11 |
| Title / Chapter Search  | 11 |
| Time Search   | 11 |
| ■ <b>Marker Setup</b>   | 11 |
| ■ <b>Repeat / Random / Programmed Playback</b>                | 12 |
| Repeat Playback   | 12 |
| Repeat A-B Playback   | 12 |
| Random Playback   | 12 |
| Programmed Playback   | 12 |
| ■ <b>Special Settings</b>                                     | 13 |
| Subtitle Language   | 13 |
| Audio Language  | 13 |
| Camera Angles   | 13 |
| Black Level Setting   | 13 |
| Stereo Sound Mode   | 13 |
| Virtual Surround  | 13 |
| ■ <b>DVD Setup</b>  | 14 |
| LANGUAGE Setting  | 14 |
| DISPLAY Setting   | 15 |
| AUDIO Setting   | 15 |
| PARENTAL Setting  | 16 |
| OTHERS Setting  | 16 |
| Reset to the Default Setting<br>(except for PARENTAL Setting) | 17 |

#### Information

|                                |    |
|--------------------------------|----|
| ■ <b>Troubleshooting Guide</b> | 17 |
| ■ <b>Specifications</b>        | 18 |
| ■ <b>Language List</b>         | 18 |
| ■ <b>Limited Warranty</b>      | 18 |

|                |    |
|----------------|----|
| <b>Español</b> | 19 |
|----------------|----|

|                        |    |
|------------------------|----|
| <b>Quick Use Guide</b> | 20 |
|------------------------|----|

Precautions

Setup

Functions

Information

Español

# Precautions

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



**CAUTION**  
**RISK OF ELECTRIC SHOCK**  
**DO NOT OPEN**



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

## Laser Safety

This unit employs a laser. Only a qualified service person should remove the cover or attempt to service this device, due to possible eye injury.

**CAUTION:** USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

**CAUTION:** VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK DEFEATED. DO NOT STARE INTO BEAM.

**LOCATION:** INSIDE, NEAR THE DECK MECHANISM.

**FCC WARNING-** This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

## RADIO-TV INTERFERENCE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1) Reorient or relocate the receiving antenna.
- 2) Increase the separation between the equipment and receiver.
- 3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4) Consult the dealer or an experienced radio/TV technician for help.

**This Class B digital apparatus complies with Canadian ICES-003.**

**Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.**

**CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.**

**ATTENTION: POUR ÉVITER LES CHOC ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.**

## A NOTE ABOUT RECYCLING

This product's packaging materials are recyclable and can be reused. Please dispose of any materials in accordance with your local recycling regulations.

Batteries should never be thrown away or incinerated but disposed of in accordance with your local regulations concerning chemical wastes.

## Make your contribution to the environment!!!

- Used up batteries do not belong in the dust bin.
- You can dispose of them at a collection point for used up batteries or special waste. Contact your council for details.



For Customer Use:

Read carefully the information located at the bottom of this unit and enter below the Serial No. Retain this information for future reference.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

# IMPORTANT SAFEGUARDS

- 1) Read Instructions - All the safety and operating instructions should be read before the product is operated.
- 2) Retain Instructions - The safety and operating instructions should be retained for future reference.
- 3) Heed Warnings - All warnings on the product and in the operating instructions should be adhered to.
- 4) Follow Instructions - All operating and use instructions should be followed.
- 5) Cleaning - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 6) Attachments - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
- 7) Water and Moisture - Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.
- 8) Accessories - Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

PORTABLE CART WARNING  
(Symbol provided by RETAC)



S3125A
- 9) A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
- 10) Ventilation - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 11) Power Sources - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
- 12) Grounding or Polarization - This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- 13) Power-Cord Protection - Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
- 14) Lightning - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the product due to lightning and power-line surges.
- 15) Power lines - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- 16) Overloading - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- 17) Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- 18) Servicing - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- 19) Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - a) When the power-supply cord or plug is damaged,
  - b) If liquid has been spilled, or objects have fallen into the product,
  - c) If the product has been exposed to rain or water,
  - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation,
  - e) If the product has been dropped or damaged in any way.
  - f) When the product exhibits a distinct change in performance - this indicates a need for service.
- 20) Replacement Parts - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
- 21) Safety Check - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
- 22) Heat - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

## Installation Location

For safety and optimum performance of this unit:

- Do not stand the unit up vertically. Install the unit in a horizontal and stable position. Do not place anything directly on top of the unit. Do not place the unit directly on top of the TV.
- Shield it from direct sunlight and keep it away from sources of intense heat. Avoid dusty or humid places. Avoid places with insufficient ventilation for proper heat dissipation. Do not block the ventilation holes on the sides of the unit. Avoid locations subject to strong vibration or strong magnetic fields.
- Be sure to remove the disc and unplug the AC power cord from the output before carrying the unit.

## Avoid the Hazards of Electrical Shock and Fire

- Do not handle the power cord with wet hands.
- Do not pull on the power cord when disconnecting it from AC wall outlet. Grasp it by the plug.
- If, by accident, water is spilled on this unit, unplug the power cord immediately and take the unit to our Authorized Service Center for servicing.

## Moisture Condensation Warning

Moisture condensation may occur inside the unit when it is moved from a cold place to a warm place, or after heating a cold room or under conditions of high humidity. Do not use this unit at least for 2 hours until its inside gets dry.

## About Copyright

Unauthorized copying, broadcasting, public performance and lending of discs are prohibited. This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

## Notice for Progressive Scan Outputs

Consumers should note that not all high definition television sets are fully compatible with this product and may cause artifacts to be displayed in the picture. In case of picture problems with 525 progressive scan output, it is recommended that the user switch the connection to the 'standard definition' output. If there are questions regarding your TV set compatibility with this 525p DVD player, please contact our customer service center.

## Symbols Used in This Manual

The following symbols appear in some headings in this manual.



: Description refers to playback of DVD-Video discs.



: Description refers to playback of Audio CDs.

## Maintenance

### SERVICING

- Please refer to relevant topics on the "Troubleshooting Guide" on page 17 before returning the product.
- If this unit becomes inoperative, do not try to correct the problem by yourself. There are no user-serviceable parts inside. Turn off, unplug the power plug, and please call our help line mentioned on the front page to locate an Authorized Service Center.

### CLEANING THE CABINET

- Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasive.

### CLEANING DISCS

- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the center out. Do not wipe in a circular motion.
- Do not use solvents such as benzene, thinner, commercially available cleaners, detergent, abrasive cleaning agents or antistatic spray intended for analog records.

### CLEANING THE DISC LENS

- If this unit still does not perform properly although you refer to the relevant sections and to "Troubleshooting Guide" in this Owner's Manual, the laser optical pickup unit may be dirty. Consult your dealer or an Authorized Service Center for inspection and cleaning of the laser optical pickup unit.

### DISC HANDLING

- When you handle a disc hold it by its edge and try not to touch the surface of the disc.
- Always store a disc in its protective case when it is not used.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

# About the Discs

## Playable Discs

| Playable discs                               | Mark (logo)  | Region code | Recorded signals      | Disc size    | Disc types  |
|--|--------------|-------------|-----------------------|--------------|---|
| DVD-Video<br>* 1, 2, 4, 6, 10                |              | or          | Digital video (MPEG2) | 12 cm or 8cm | <p><b>Example</b></p> <p>Title 1   Title 2</p> <p>Chapter 1   Chapter 2   Chapter 3   Chapter 4   Chapter 1   Chapter 2</p> |
| DVD-RW<br>DVD-R<br>* 1, 3, 4, 5, 6, 7, 9, 10 | <br>         | -           |                       |              |   |
| DVD+RW<br>DVD+R<br>* 1, 3, 4, 5, 6, 8, 9, 10 | <br>         | -           |                       |              |   |
| Audio CD<br>* 4, 6, 10                       |              | -           | Digital audio         | 12 cm or 8cm | <p><b>Example</b></p> <p>Track 1   Track 2   Track 3   Track 4   Track 5   Track 6</p>                                      |
| CD-RW<br>CD-R<br>* 4, 5, 6, 9, 10            | <br><br><br> |             |                       |              |   |

**DVD** is a trademark of DVD Format/Logo Licensing Corporation.

### If you cannot play back a disc which bears one of the marks above, check the following notes.

- \*1: This unit conforms to the NTSC color system. Discs recorded in other color systems such as PAL cannot be played back.
- \*2: Certain DVD-Video discs do not operate as described in this manual due to the intentions of the disc's producers.
- \*3: Discs recorded in the VR (Video Recording) format cannot be played back.
- \*4: Scratched or stained discs may not be played back.
- \*5: Some discs cannot be played back because of incompatible recording conditions, characteristics of the recorder or special properties of discs.
- \*6: You can play back discs which bear the marks above. If you use nonstandardized discs, this unit may not play them back. Even if they are played back, the sound or video quality will be compromised.
- \*7: You may play back the unfinalized DVD-R/RW disc recorded in the video format on our brand's DVD recorder. However, depending on the recording status of a disc, the disc may not be played back at all or normally (the picture or sound may not be smooth, etc.). In this case, you need to finalize the disc with the DVD recorder. Refer to the manual accompanying the DVD recorder.
- \*8: Only the discs recorded in the video format and finalized can be played back. Unfinalized discs cannot be played back. Depending on the recording status of a disc, the disc may not be played back at all or normally (the picture or sound may not be smooth, etc.).
- \*9: If there is too much recording space left on a disc (the used portion is less than 55 mm across), it may not play back properly.
- \*10: Do not glue paper or put stickers on to the disc. These may damage the disc and the unit may not read it correctly.

## Unplayable Discs


- **NEVER play back the following discs. Otherwise, malfunction may result!**  
DVD-RAM / CD-I / Photo CD / Video CD / DVD with region codes other than 1 or ALL  
DTS-CD / DVD-ROM for personal computers / CD-ROM for personal computers
- **On the following disc, the sound MAY NOT be heard.**  
Super Audio CD  
**NOTE:** Only the sound recorded on the normal CD layer can be delivered.  
The sound recorded on the high density Super Audio CD layer cannot be delivered.
- *Any other discs without compatibility indications*

# Setup

## Connections

If your TV has AUDIO/VIDEO input jacks, see the following instructions. If not, see the section "Connecting to RF Modulator" on the front page.

### Connection to a TV

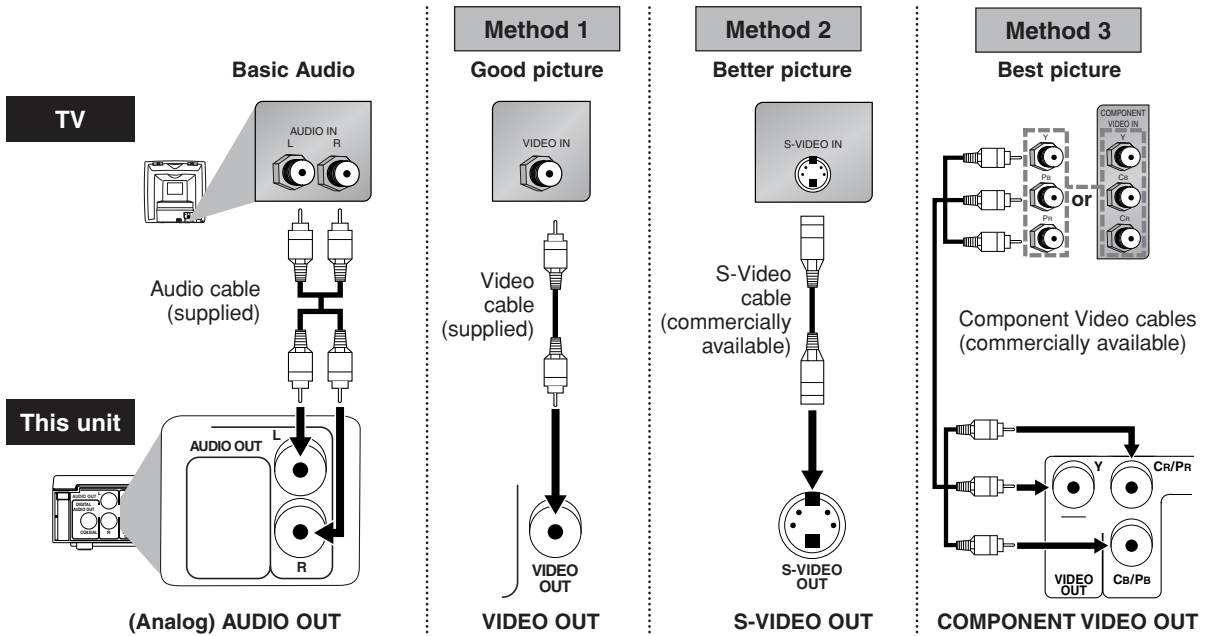

### Hint


- Connect this unit directly to the TV. If the Audio/Video cables are connected to a VCR, pictures may be distorted due to the copy protection system.
- When progressive scanning mode is selected, no video signal will be output from the VIDEO OUT or S-VIDEO OUT jack.

### If your TV is compatible with 525p (480p) progressive scanning and you want to enjoy that high quality picture:

Set "PROGRESSIVE" to "ON" in the Display menu. P.SCAN light will light up on the front of the unit. Details are on page 15.

### If your TV is not compatible with progressive scanning:

Use this unit in interlace mode. Make sure "PROGRESSIVE" is set to "OFF" and P.SCAN light on the front of the unit is off. Progressive scanning mode can be set to off either in the Display menu or by pressing and holding [PLAY ▶] on the front of the unit for more than 5 seconds. Details are on page 15.

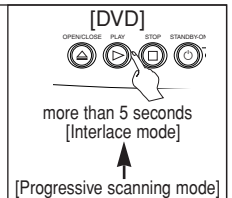

### After you have completed connections

- Hit the input selector button (usually TV/VIDEO, INPUT or AUX) on your TV to switch an appropriate external input channel (usually near channel 0) for viewing the picture from this unit. If the picture does not appear, also refer to the manual accompanying your TV.

### INPUT MODES FOR COMMON TV BRANDS (Example)

- Listed below are inputs for common brand name TV's.

|                |                                     |
|----------------|-------------------------------------|
| Admiral:       | AUX                                 |
| Curtis Mathis: | LINE1, LINE2, 00, 90, 91, 92, 93    |
| GE:            | INPUT, TV/VCR, 00, 90, 91, 92, 93   |
| Hitachi:       | INPUT, AUX                          |
| JVC:           | A/V CHANNEL, INPUT1, SVIDEO, INPUT2 |
| Kenwood:       | AUX                                 |
| LXI-Series:    | 00                                  |
| Magnavox:      | AUX CHANNEL                         |
| Panasonic:     | TV/VIDEO                            |
| RCA:           | INPUT, TV/VCR, 00, 90, 91, 92, 93   |

|          |                        |
|----------|------------------------|
| Samsung: | TV/VIDEO               |
| Sanyo:   | VIDEO                  |
| Sharp:   | 00                     |
| Sony:    | VIDEO1, VIDEO2, VIDEO3 |
| Toshiba: | TV/GAME                |
| Zenith:  | 00                     |


## Connection to an Audio System

### Method 1

#### Stereo system

#### Analog audio input jacks


AUDIO

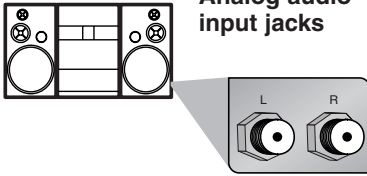

Audio cable (supplied)

This unit


#### (Analog) AUDIO OUT

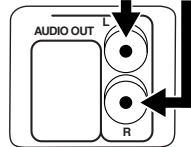

### Method 2


#### Dolby Digital decoder, MD deck or DAT deck

#### Digital audio input jack

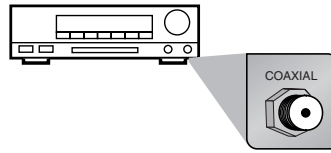

Audio Coaxial Digital cable (commercially available)

#### DIGITAL AUDIO OUT

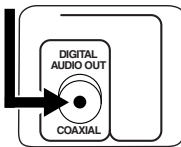

| Connection                   | Setting | SETUP > AUDIO menu > |
|------------------------------|---------|----------------------|
| Connecting to Stereo System. |         | DOLBY DIGITAL<br>PCM |

\* To complete these settings, refer to pages 14-15.

### Hint

- Playing a DVD using incorrect settings may generate noise distortion and may also damage the speakers.

| Connection   | Setting | SETUP > AUDIO menu >       |
|--|---------|----------------------------|
| Connecting to a Dolby Digital decoder for Dolby Digital audio output.                          |         | DOLBY DIGITAL<br>BITSTREAM |
| Connecting to the other equipment (an MD deck or DAT deck etc.) without Dolby Digital decoder. |         | PCM                        |

\* To complete these settings, refer to pages 14-15.

### Hint

- The audio source on a disc in a Dolby Digital 5.1 channel surround format cannot be recorded as digital sound by an MD or DAT deck.
- By hooking this unit up to a Multi-channel Dolby Digital decoder, you can enjoy high-quality Dolby Digital 5.1 channel surround sound as heard in the movie theaters.
- Playing a DVD using incorrect settings may generate noise distortion and may also damage the speakers.


## Rear Terminals

### AUDIO OUT jacks

Connect the supplied audio cable (red/white) here through the audio input jacks of a TV or other audio equipment.

### COMPONENT VIDEO OUT jacks

Connect optional component video cables here through the component video input jacks of a television.

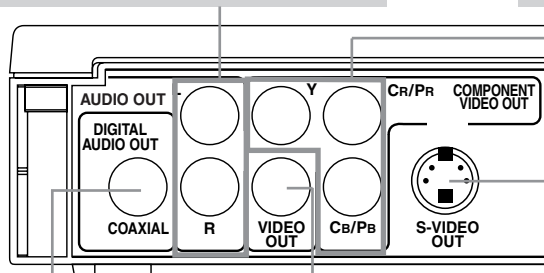

### DIGITAL AUDIO OUT COAXIAL jack

Connect an optional coaxial digital audio cable here through the coaxial digital audio input jack of a decoder or audio receiver.

### VIDEO OUT jack


Connect the supplied video cable (yellow) here through the TV's video input jack.

### S-VIDEO OUT jack

Connect an optional S-Video cable here through the S-video input jack of a TV.

# About the Remote Control


## Remote Control

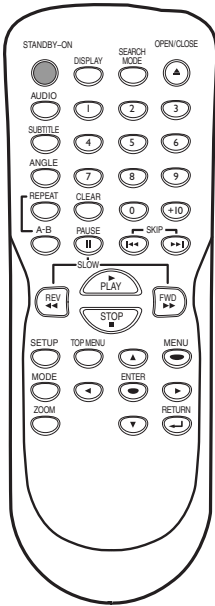

Setup


### Installing the Batteries for the Remote Control

Install two AA batteries (supplied) matching the polarity indicated inside battery compartment of the remote control.

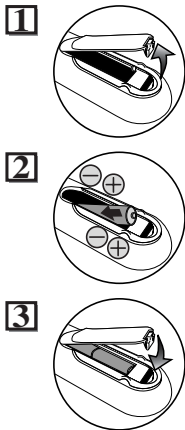

Keep in mind the following when using the remote control:

- Make sure that there is no obstacle between the remote control and the remote sensor on the unit.
- The maximum operable ranges from the unit are as follows.
  - **Beeline:** approx. 23 feet (7m)
  - **Either side of the center:** approx. 16 feet (5m) within 30°
  - **Above:** approx. 16 feet (5m) within 15°
  - **Below:** approx. 10 feet (3m) within 30°

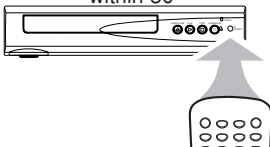

| Button<br>(Alphabetical order) | Disc | DVD-V  | CD   |
|--------------------------------|------|--|--|
| 1 2 3<br>4 5 6<br>7 8 9<br>0   |      | • To select chapter or title directly.   | • To select track directly.  |
| ENTER                          |      | • To move the cursor and determine its position.   | • To move the cursor and determine its position.   |
| A-B                            |      | • To repeat between your chosen point A and B.   | • To repeat between your chosen point A and B.   |
| ANGLE                          |      | • To select camera angles on a disc.   | —  |
| AUDIO                          |      | • To select audio languages on a disc.   | • To select STEREO, L-ch or R-ch.  |
| CLEAR                          |      | • To clear the markers.<br>• To clear the numbers entered incorrectly.<br>• To cancel the point for A-B repeat.  | • To clear the markers.<br>• To remove status number in program input.<br>• To clear the numbers entered incorrectly.<br>• To cancel the point for A-B repeat. |
| DISPLAY                        |      | • To display the current disc mode.  | • To display the current disc mode.  |
| REV FWD                        |      | • To search forward/backward through a disc.<br>• To begin slow forward /reverse playback during the pause mode. | • To search forward/backward through a disc.   |
| MENU                           |      | • To call up the Menu on a disc.   | —  |
| MODE                           |      | • To set black level on/off.<br>• To set virtual surround on/off.  | • To arrange the playing order or play randomly.<br>• To set virtual surround on/off.  |
| OPEN/CLOSE                     |      | • To open or close the disc tray.  | • To open or close the disc tray.  |
| PAUSE                          |      | • To pause disc playback.<br>• To advance playback one frame at a time.  | • To pause disc playback.  |
| PLAY                           |      | • To begin disc playback.  | • To begin disc playback.  |
| STANDBY-ON                     |      | • To turn the unit on or off.  | • To turn the unit on or off.  |
| REPEAT                         |      | • To play a chapter or title repeatedly.   | • To play a track or disc repeatedly.  |
| RETURN                         |      | • To return to the previous operation in menu.   | • To return to the previous operation in menu.   |
| SEARCH MODE                    |      | • To search chapter, title or time.<br>• To set or search the markers.   | • To search track.<br>• To search time.<br>• To set or search the markers.   |
| SETUP                          |      | • To call up the DVD setup menu.   | • To call up the DVD setup menu.   |
| SKIP                           |      | • To skip chapters.  | • To skip tracks.  |
| STOP                           |      | • To stop playback.  | • To stop playback.  |
| SUBTITLE                       |      | • To select subtitles on a disc.   | —  |
| TOP MENU                       |      | • To call up the Top Menu on a disc.   | —  |
| ZOOM                           |      | • To magnify part of a picture. (x2/x4)  | —  |




# Functions

Operations described after this section are mainly based on the remote control use. Some operations can be carried out on main unit.

## Playback


Before: Turn on the TV, amplifier and any other equipments which are connected to this unit. Make sure the TV and audio receiver (commercially available) are set to the correct channel.

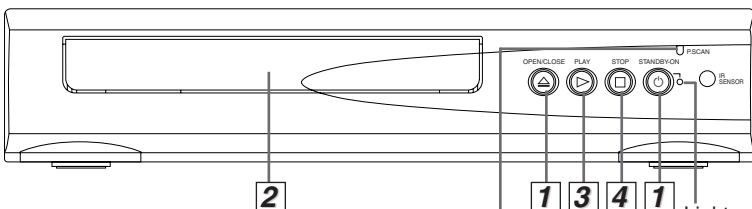

**P.SCAN (Progressive Scan) light**  
Lights up when the "PROGRESSIVE" is "ON". Details are on page 15.



|   |  |
|---|--|
| <p><b>1</b> STANDBY-ON → OPEN/CLOSE</p> | <p><b>2</b></p> <p>Insert a disc with label facing up.</p> |
| <p><b>3</b> To start playback</p>       | <p><b>4</b> To stop playback</p>                           |

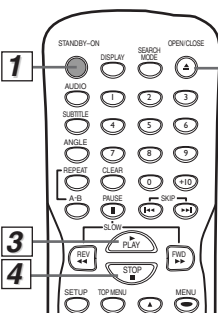

**Hint**

- A "prohibited icon" may appear at the top-right on the TV screen when the operation is prohibited by the disc or this unit.
- Some DVDs may start playback from title 2 or 3 due to specific programs.
- During the playback of a two-layered disc, pictures may stop for a moment. This happens while the 1st layer is being switched to the 2nd layer. This is not a malfunction.

**TIP:**  
You can change the On-Screen language in "PLAYER MENU" setting. (Refer to page 14.)

### DVD menu

Some discs contain menus which allow you to customize DVD playback. Press [▲/▼/◀/▶] to select an item, then press [ENTER] (or [PLAY ▶]).

### Calling Up a Menu Screen during Playback

- Hit [MENU] to call up the DVD menu.
- Hit [TOP MENU] to call up the title menu.


### Hint

- Menu operations may vary depending on the disc. Refer to the manual accompanying the disc for more details.

### Resume



Hit [STOP ■]. Resume message will appear on the TV screen.

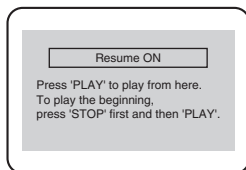

Hit [PLAY ▶], playback will resume from the point at which playback was stopped.

### Hint

- To cancel resume, hit [STOP ■] one more time during the stop mode.
- The resume information will be kept even when the power is turned off.

### Paused and Step-by-Step Playback



Hit [PAUSE ||] during playback. To continue playback, hit [PLAY ▶].



The disc goes forward by one frame each time [PAUSE ||] is hit during the pause mode. To continue playback, hit [PLAY ▶].

### Hint

- On DVDs, set "STILL MODE" to "FIELD" in the Display menu if pictures in the pause mode are blurred. (Refer to pages 14-15.)

### Fast Forward/Reverse Search



Press [FWD ▶▶] or [REV ◀◀] repeatedly during playback to select the required forward or reverse speed.

To continue playback, hit [PLAY ▶].

### Hint

- For DVDs, fast forward or reverse search speed is different depending on the disc. Approximate speed is 1(x2), 2(x8), 3(x20), 4(x50) and 5(x100).
- For Audio CDs, approximate speed is 1(x2), 2(x8) and 3(x30).

### Slow Forward/Slow Reverse



Press [FWD ▶▶] or [REV ◀◀] repeatedly during the pause mode to select the required forward or reverse speed.

To continue playback, hit [PLAY ▶].

### Hint

- Slow forward or reverse speed is different depending on the disc. Approximate speed is 1(1/16), 2(1/8) and 3(1/2).
- Set "STILL MODE" to "FIELD" in the Display menu if pictures in the slow playback mode are blurred. (Refer to pages 14-15.)

### Zoom



Hit [ZOOM] repeatedly during playback to select the required zoom factor: x2, x4 or OFF.



Press [▲/▼/◀/▶] to slide the zoomed picture across the screen.

To exit zoom function, hit [ZOOM] repeatedly to select OFF.



### Hint

- Zooming function does not work while the disc menu is showing up.
- x4 zoom is not available on some discs.
- The picture may be distorted when you press [PAUSE ||] or [REV ◀◀] repeatedly in the zoom mode.
- It may take several seconds to slide the zoomed picture.

Functions

# On-Screen Display

You can check the information about the current disc by hitting [DISPLAY] on the remote control.

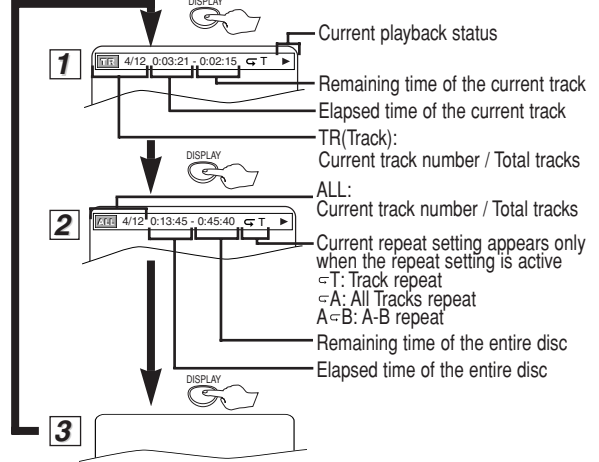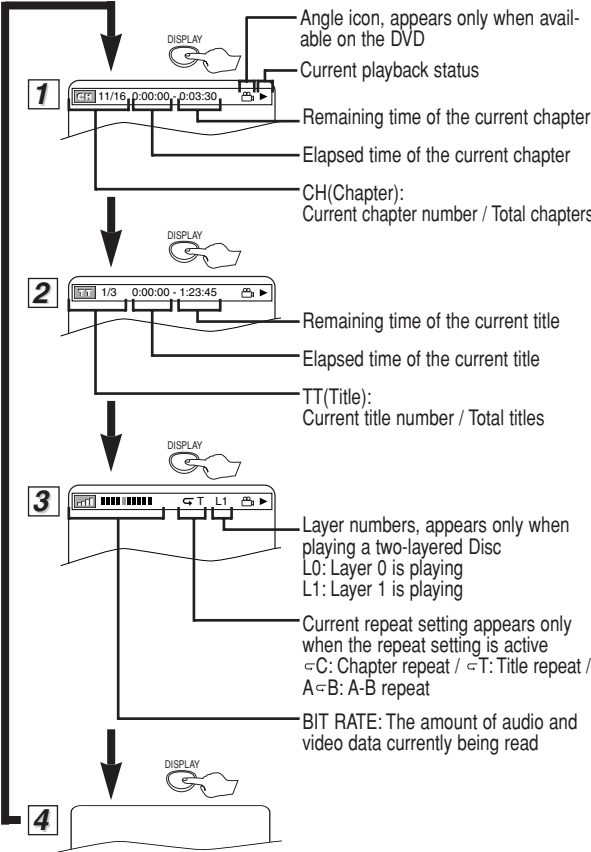

**Hint**

- When you are playing a disc in PROGRAM or RANDOM mode, **DISP** PROGRAM (or RANDOM) will be displayed instead of **2**.


 
Functions

# Search Function

## Track Search




### Using [SEARCH MODE]

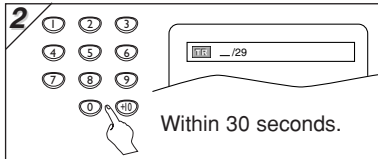

- For the disc with less than 10 tracks, hit the track number directly.
- For discs with more than 10 but less than 99 tracks, to play single-digit track, hit [0] first, then the track number (e.g. for track 3, hit [0], [3]). To play a double-digit track, hit the track number.

### Using [SKIP ◀◀, ▶▶]

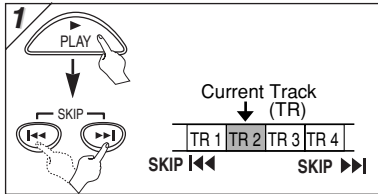


#### Hint

- [+10] button can also bring the Track Search display, except for the disc with less than 10 tracks. For such a disc, track search can be done by just hitting the track number.


## Title / Chapter Search



 
### Using [SEARCH MODE]



Hit once for the chapter search.  
Hit twice for the title search.

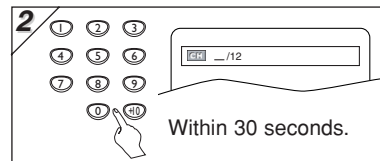


### Using [SKIP ◀◀, ▶▶]

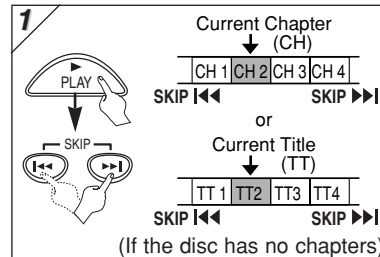


#### Hint

- Depending on the disc being played, this function can also be performed by directly entering the desired chapter number with the **Number** buttons. Refer to the manual accompanying the disc.

## Time Search

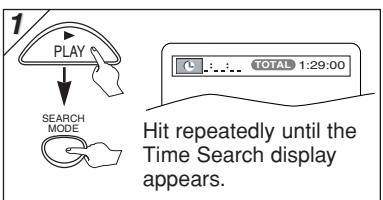

Hit repeatedly until the Time Search display appears.

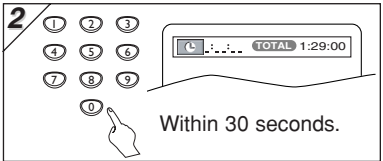

#### Hint




- When there is no need to enter a number, "0" appears automatically.
- For example, "0 : 0 : ..." appears in the Time Search display if the total time of the title or track is less than 10 minutes.
- Hit [CLEAR] to erase the incorrect input at step 2).

# Marker Setup






This feature allows you to assign a specific point on a disc to be called back later.

### To set a marker

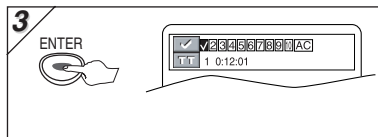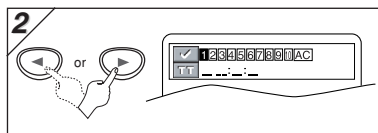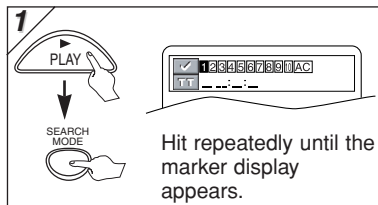


### To return to the marker later

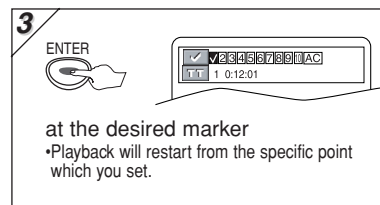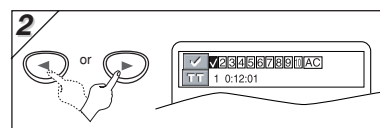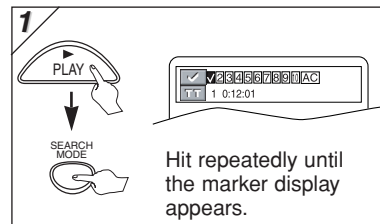

- Playback will restart from the specific point which you set.

### To exit the marker display

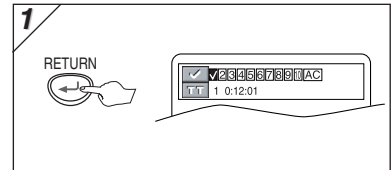

#### Hint


- Opening the disc tray or turning off the power will erase all markers.
- Selecting "AC" at step 2) in the section "To set a marker" will also erase all markers.
- To clear a marker, select the marker to be cleared at step 2) in the section "To return to the marker later," and then hit [CLEAR].

# Repeat / Random / Programmed Playback

## Repeat Playback



Repeat function is available only during playback.

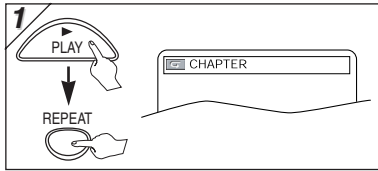

Each time you hit [REPEAT], repeat function changes as example below.



- ▶ CHAPTER (current chapter repeat)
- ▶ TITLE (current title repeat)
- ▶ OFF (repeat off)





- ▶ TRACK (current track repeat)
- ▶ ALL (entire disc repeat)
- ▶ OFF (repeat off)

### Hint

- Repeat setting will be cleared when moving to another title, chapter, or track.
- Repeat playback may not function with some discs or during repeat A-B playback.

## Repeat A-B Playback

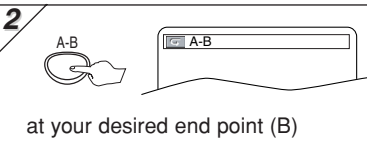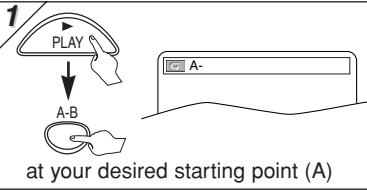



- Point B should be in the same title or track as point A.

### Hint

- To exit the sequence, hit [A-B] so that OFF appears.
- To cancel Point A, hit [CLEAR].
- This function does not work in the other repeat modes.

## Random Playback

This function shuffles the playing order of tracks instead of playback in the sequence.

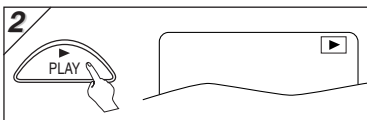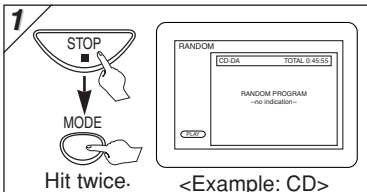




### Hint

- To repeat the current track in the random selections, hit [REPEAT] repeatedly until "▶ TRACK" appears during playback.
- To repeat the entire random selections, hit [REPEAT] repeatedly until "▶ ALL" appears during playback.

## Programmed Playback



You may determine the order in which tracks will play.

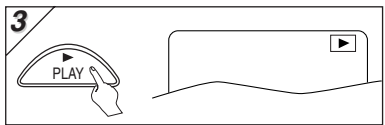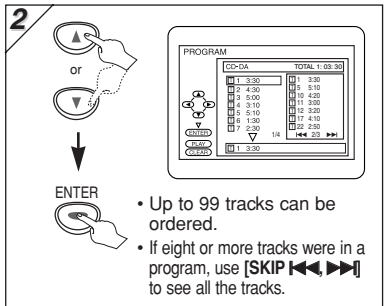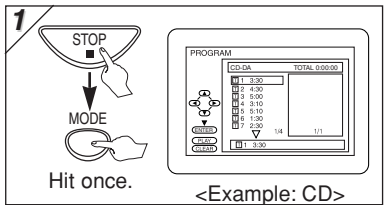

### Hint


- Hit [CLEAR] at step 2) to erase the most recently entered track.
- To erase all programmed tracks at once, select "ALL CLEAR" and hit [ENTER] at step 2).
- While a program is being played back, [STOP] works as follows:
  - ⇒ Hit [STOP] and [PLAY] next, so that the programmed playback restarts.
  - ⇒ Hit [STOP] twice and [PLAY] next, so that playback restarts from the first track in the original order. However, your programmed playback can be restarted when you follow the above steps. (Your programs are still stored until either the disc tray is open or power is turned off.)
- To repeat the current track in the program, hit [REPEAT] repeatedly until "▶ TRACK" appears during playback.
- To repeat the entire program, hit [REPEAT] repeatedly until "▶ ALL" appears during playback.

# Special Settings


## Subtitle Language





This unit allows you to select a subtitle language (if available) during DVD playback.

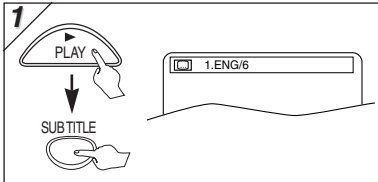

Each time you hit **[SUBTITLE]**, subtitle language changes as example below.

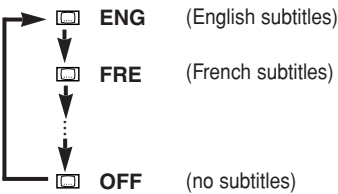

### To set subtitle ON/OFF

 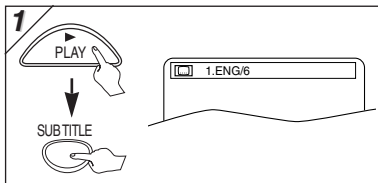


### Hint

- If your language is not shown after pressing **[AUDIO]** or **[SUBTITLE]** several times, the disc may not have that language. However, some discs allow audio language or subtitle language setting on the disc menu. (Operation varies depending on the disc, so refer to the manual along with the disc.)
- When "NOT AVAILABLE" appears on the TV screen, it means no subtitle is recorded on the scene.
- If you choose a language that has three-letter-language code, the code will be displayed every time you change the subtitle language setting. If you choose any other languages, '---' will be displayed instead. (Refer to page 18.)


## Audio Language



This unit allows you to select an audio language (if multiple languages are available on disc) during DVD playback.

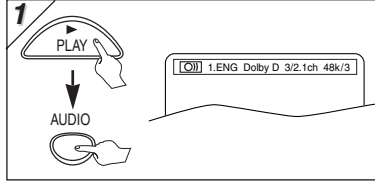


Each time you hit **[AUDIO]**, audio language changes as example below.

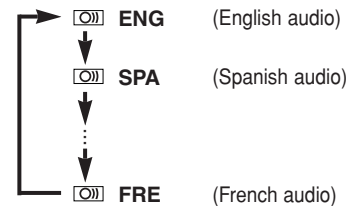

## Camera Angles





Some DVD discs may contain scenes which have been shot simultaneously from various angles. You can change the camera angle if the (ANGLE) icon appears on the screen. If the "ANGLE ICON" setting is "OFF" in the OTHERS menu, the (ANGLE) icon will not appear. (Refer to pages 14-16.)

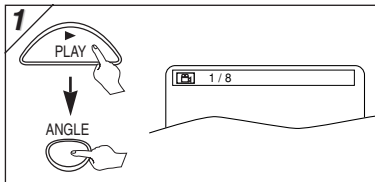

## Black Level Setting




Adjust the Black Level Setting to make the dark areas of the TV picture brighter.

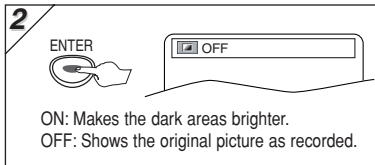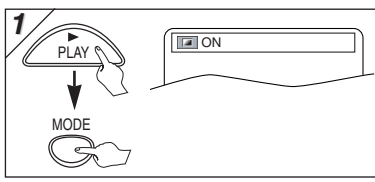


## Stereo Sound Mode



This unit allows you to select a sound mode during CD playback.

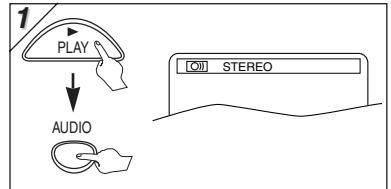



Each time you hit **[AUDIO]**, sound mode changes as example below.

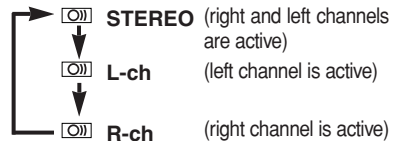

## Virtual Surround



You can enjoy stereophonic virtual world on your existing 2 channel stereo system.

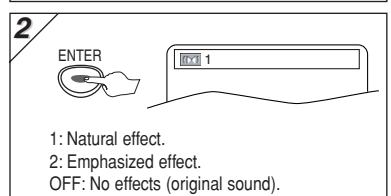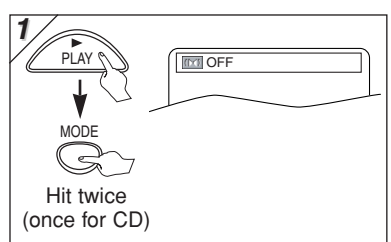

### Hint


#### For CD playback only

- Virtual Surround will not be effective if the sound mode is set to something other than STEREO. Refer to "Stereo Sound Mode".

# DVD Setup

## QUICK SETUP Menu


You can select the "PLAYER MENU", "TV ASPECT", "PROGRESSIVE" or "DOLBY DIGITAL" from the QUICK SETUP menu quickly.

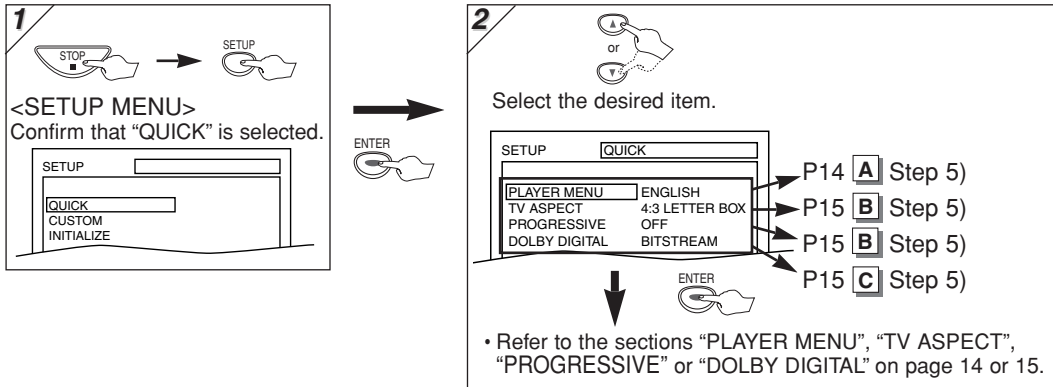

## CUSTOM Menu


You can change the settings of the unit.

- **QUICK** on pages 14-16 indicates DVD Setup menus also accessible from the QUICK SETUP menu.

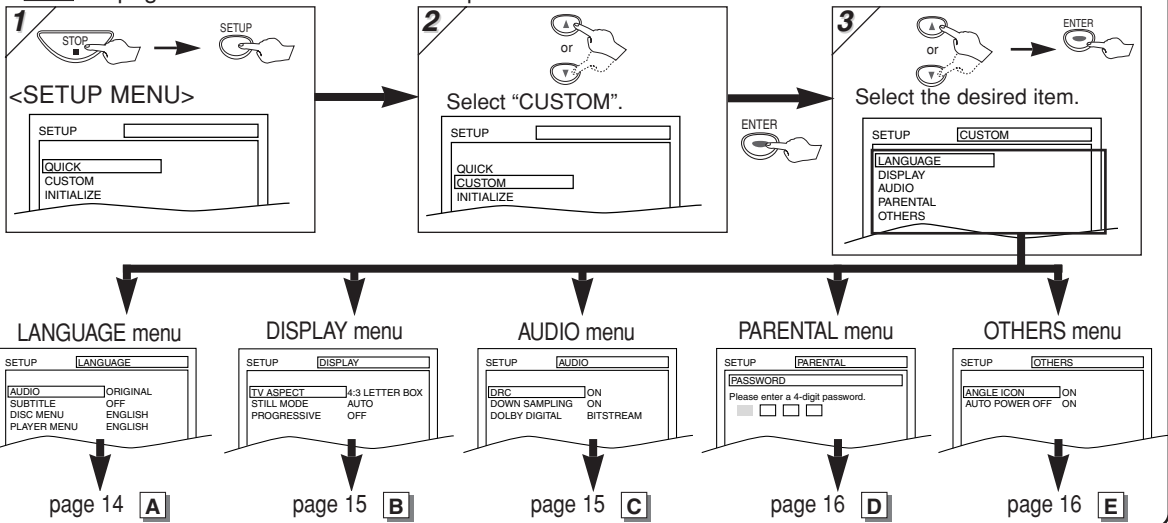

## A LANGUAGE Setting

Follow steps 1) to 3) in the "CUSTOM Menu" section above.

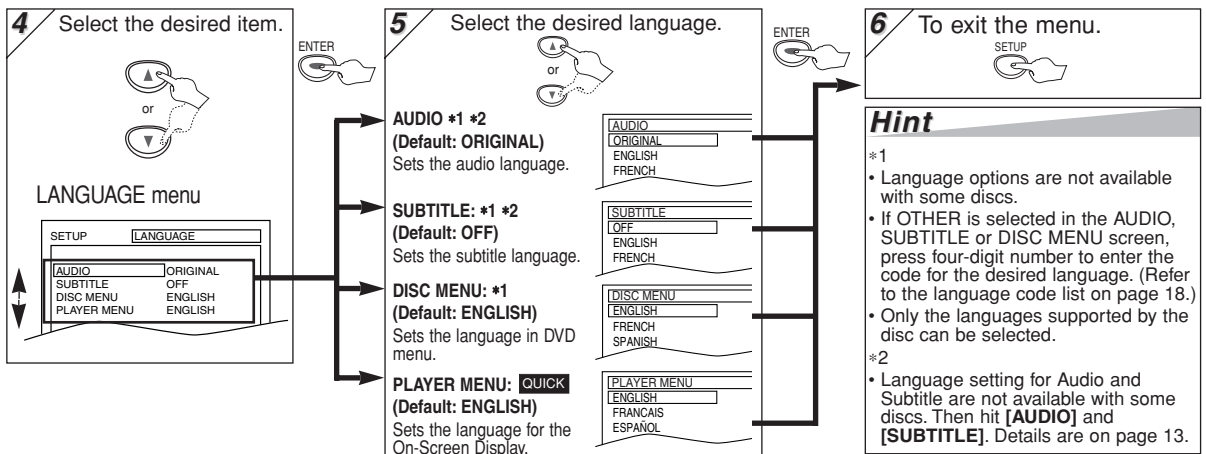

## B DISPLAY Setting

You can change the display functions. Follow steps 1) to 3) in the "CUSTOM Menu" section on page 14.

**4** Select the desired item.

DISPLAY menu

**5** **TV ASPECT: QUICK** (Default: 4:3 LETTER BOX)  
See Hint to the right.

Select the desired setting.

**ENTER**

**STILL MODE: (Default: AUTO)**  
See Hint to the right.

Select the desired setting.

**ENTER**

**6** To exit the menu (for TV ASPECT & STILL MODE)

SETUP

**5** **PROGRESSIVE: QUICK** (Default: OFF)  
See Hint to the right.

**ENTER**

If you do not hit any buttons for 15 seconds, Progressive Scan will switch to "OFF".

Select YES.

**ENTER**

If "PROGRESSIVE" is "ON", this message appears:

Select YES.

**ENTER**

**6** To confirm the PROGRESSIVE scanning mode

**ENTER**

**Hint**

**TV ASPECT:**

- Select "4:3 LETTER BOX", so that black bars may appear on the top and bottom of the screen.
- Select "4:3 PAN & SCAN" for a full height picture with both sides adjusted.
- Select "16:9 WIDE" if a wide-screen TV is connected to this unit.

**STILL MODE:**

- Select "AUTO" usually.
- If you select AUTO, automatically select the best resolution setting (FRAME or FIELD) based on the data characteristics of the pictures. (default).
- If you select "FIELD", the picture in the still mode will be stabilized.
- If you select "FRAME", the picture in the still mode will be highly defined.
- An individual picture on TV screen is called as "frame", which consists of two separate images called as "field". Some pictures may be blurred at the AUTO setting in still mode due to their data characteristics.

**PROGRESSIVE:**

- You can set "PROGRESSIVE" to "OFF" either in the Display menu or by pressing and holding [PLAY] on the front of the unit for more than 5 seconds.
- When "PROGRESSIVE" is "ON", video signals from VIDEO OUT and S-VIDEO OUT jacks will be distorted or not be output at all.

## C AUDIO Setting

Choose the appropriate audio settings for your equipments. It only affects during the playback of DVD discs. Follow steps 1) to 3) in the "CUSTOM Menu" section on page 14.

**4** Select the desired item.

AUDIO menu

**5** **DRC (Dynamic Range Control): (Default: ON)**  
Set to "ON" to compress the range between soft and loud sounds.

**ENTER**

**DOWN SAMPLING: (Default: ON)**  
Set to "ON" when outputting in 48 kHz.  
Set to "OFF" when outputting the original sound.

**ENTER**

**DOLBY DIGITAL: QUICK (Default: BITSTREAM)**  
Set to "BITSTREAM" when the unit is connected to a Dolby Digital receiver.

- BITSTREAM: Outputs a Dolby Digital Signals.
- PCM: Convert the Dolby Digital into PCM (2 channel).

**ENTER**

**6** To exit the menu

SETUP

**Hint**

**DRC:**

- This function is available only on the discs which are recorded in the Dolby Digital format.

**DOWN SAMPLING:**

- When playing disc with copyright protection, the sound will be down sampled at 48kHz, even if you set to OFF.
- This function is available only on digital outputting of a disc recorded in 96kHz.

## D PARENTAL Setting

Parental Control limits the disc viewing that exceed your settings. (An incorrect password will not play.) This feature prevents your children from viewing inappropriate materials.

### Parental Levels

Parental Level allows you to set the rating levels of your DVD discs. Playback will stop if the ratings exceed the levels you set. Follow steps 1) to 3) in the "CUSTOM Menu" section on page 14.

**4** Enter your desired four-digit password (except for 4737).

PARENTAL menu

SETUP PARENTAL

PASSWORD

Please enter a 4-digit password.

or

If you have set a password already, enter the current four-digit password.

SETUP PARENTAL

PASSWORD

Enter current password.

**5** Select "PARENTAL LEVEL".

PARENTAL LEVEL ALL

PASSWORD CHANGE

**6** Select the desired level.

PARENTAL LEVEL

ALL

8

7 [NC-17]

6 [R]

**7** To exit the menu

SETUP

**CONTROL LEVELS**

- ALL: All parental locks are cancelled.
- Level 8: DVD softwares of any grades (adult/general/children) can be played back.
- Levels 7 to 2: Only DVD softwares intended for general use and children can be played back.
- Level 1: Only DVD softwares intended for children can be played back, with those intended for adult and general use prohibited.

**TIPS FOR LEVELS**

- 7 [NC-17]: No one under 17 admitted
- 6 [R]: Restricted; under 17 requires accompanying parent or adult guardian
- 4 [PG13]: Unsuitable for children under 13
- 3 [PG]: Parental Guidance suggested
- 1 [G]: General Audience

**Hint**

- DVD-Video discs may not respond to the parental lock settings. Make sure this function works with your DVD-Video discs.

### To Change the Password for Parental Controls

You can change your password for parental controls. Follow steps 1) to 3) in the "CUSTOM Menu" section on page 14.

**4** Enter your desired four-digit password (except for 4737).

PARENTAL menu

SETUP PARENTAL

PASSWORD

Enter current password.

**5** Select "PASSWORD CHANGE".

PARENTAL LEVEL

PASSWORD CHANGE

**6** Enter your new four-digit password (except for 4737).

SETUP PARENTAL

PASSWORD

Please enter a 4-digit password.

**7** To exit the menu

SETUP

**Hint**

- Record the password in case you forget it.
- If you forget the password, hit [4], [7], [3], [7] at step 4), then enter your new password.
- Password will be cleared and parental levels will be set to "ALL".

## E OTHERS Setting

You can change the other functions. Follow steps 1) to 3) in the "CUSTOM Menu" section on page 14.

**4** Select the desired item

OTHERS menu

SETUP OTHERS

ANGLE ICON ON

AUTO POWER OFF ON

**5**

**ANGLE ICON:**  
(Default: ON)  
Set to "ON" to show the angle icon when multiple camera angles are available during DVD playback.

ANGLE ICON ON OFF

AUTO POWER OFF ON

ENTER

**AUTO POWER OFF:**  
(Default: ON)  
Set to "ON" to turn this unit off automatically after 30 minutes of no use.

ANGLE ICON ON OFF

AUTO POWER OFF ON OFF


ENTER

**6** To exit the menu

SETUP



## Reset to the Default Setting (except for PARENTAL Setting)

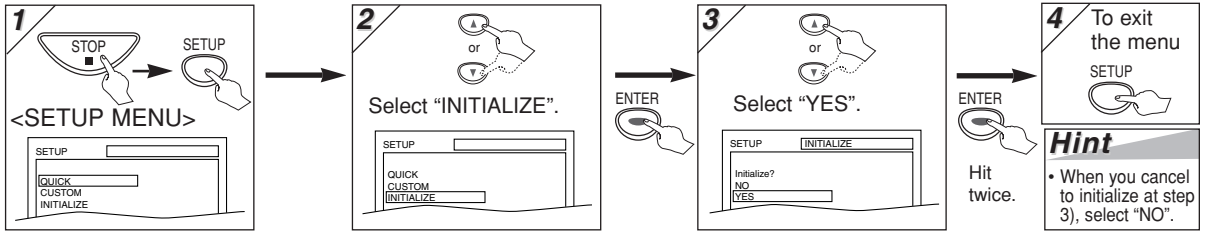

## Information

### Troubleshooting Guide

If the unit does not perform properly when operated as instructed in this Owner's Manual, check the unit consulting the following checklist.

| Problem  | Solution   |
|--|--|
| No power   | <ul style="list-style-type: none"> <li>–Check if the AC power cord is properly connected.</li> <li>–Unplug the outlet once, and wait for 5-10seconds and then plug it in again</li> </ul>  |
| No sound or picture  | <ul style="list-style-type: none"> <li>–Check if the TV is switched on.</li> <li>–Check the video connection</li> <li>–Check the VIDEO/AUDIO cable connections to the TV (See Connection to a TV)</li> <li>–Set PROGRESSIVE correctly. Turn it on only if your TV has Progressive Scan and you are using the Component Video connections between the unit and the TV. Disable Progressive Scan for all other connections. (See page 6)</li> </ul>  |
| Distorted picture  | <ul style="list-style-type: none"> <li>–Sometimes a small amount of picture distortion may appear. This is not a malfunction.</li> <li>–Connect the unit directly to the TV.</li> </ul>  |
| Completely distorted picture or black/white picture with DVD         | <ul style="list-style-type: none"> <li>–Connect the unit directly to the TV.</li> <li>–Make sure the disc is compatible with the unit.</li> <li>–Check if the INTERLACE/PROGRESSIVE mode is set correctly. See page 6.</li> </ul>  |
| No sound or distorted sound  | <ul style="list-style-type: none"> <li>–Adjust the volume.</li> <li>–Check that the speakers are connected correctly.</li> </ul>   |
| No audio at digital output   | <ul style="list-style-type: none"> <li>–Check the digital connections.</li> <li>–Check if the audio format of the selected audio language matches your receiver capabilities.</li> </ul>   |
| No DTS audio is output   | <ul style="list-style-type: none"> <li>–This unit does not support DTS audio. This is not a malfunction.</li> </ul>  |
| Picture freezes momentarily during playback                          | <ul style="list-style-type: none"> <li>–Check the disc for fingerprints/scratches and clean with a soft cloth wiping from center to edge.</li> <li>–Clean the disc</li> </ul>  |
| Disc can't be played   | <ul style="list-style-type: none"> <li>–Clean the disc</li> <li>–Ensure the disc label is facing up.</li> <li>–Check if the disc is defective by trying another disc.</li> <li>–Cancel the parental lock or change the control level.</li> <li>–Insert a correct disc that plays on this unit.</li> <li>–Handle a disc with special care so that it does not have fingerprints, scratches, or dusts on its surface.</li> </ul>   |
| No return to start-up screen when disc is removed                    | <ul style="list-style-type: none"> <li>–Reset the unit by switching the unit off, then on again.</li> </ul>  |
| The unit does not respond to the remote control                      | <ul style="list-style-type: none"> <li>–Aim the remote control directly at the sensor on the front of the unit.</li> <li>–Reduce the distance to the unit.</li> <li>–Replace the batteries in the remote control.</li> <li>–Re-insert the batteries with their polarities (+/- signs) as indicated.</li> <li>–Tune your radio to an empty AM station so that you hear a lot of noises. Then, turn the volume up. If you hear some signal sound from the radio by pressing buttons on the remote control, the remote control is working.</li> </ul> |
| Buttons do not work or the unit stops responding                     | <ul style="list-style-type: none"> <li>–To completely reset the unit, unplug the AC cord from the AC outlet for 5-10 seconds.</li> </ul>   |
| The unit does not respond to some operating commands during playback | <ul style="list-style-type: none"> <li>–Operations may not be permitted by the disc. Refer to the instructions of the disc.</li> </ul>   |
| The unit cannot read CDs/DVDs  | <ul style="list-style-type: none"> <li>–Use a commonly available cleaning CD/DVD to clean the lens before sending the unit for repair.</li> </ul>  |
| Angle does not switch  | <ul style="list-style-type: none"> <li>–The angle cannot be switched for DVDs which do not contain multiple angles. In some cases multiple angles are only recorded for specific scenes.</li> </ul>  |
| Playback does not start when the title is selected                   | <ul style="list-style-type: none"> <li>–Check the "PARENTAL" setting.</li> </ul>   |
| The password for rating level has been forgotten                     | <ul style="list-style-type: none"> <li>–Enter the default password "4737", then your forgotten password will be cleared</li> </ul>   |

#### NOTES:

- Some functions are not available in specific modes, but this is not a malfunction. Read the description in this Owner's Manual for more details on correct operations.
- Playback from a desired track and random playback are not available during program playback.
- Some functions are prohibited on some discs.

# Specifications

Output signal format:

NTSC color

Power source:

120 V AC +/- 10%, 60 Hz +/- 0.5%

Power consumption:

10 W (standby: 0.8 W)

Operating temperature:

41°F (5°C) to 104°F (40°C)

Dimensions:

W : 9 5/8" (245 mm)

H : 2" (52 mm)

D : 9 13/16" (249 mm)

Weight :

Approx 2 lbs (0.9 kg)

- Designs and specifications are subject to change without notice.
- If there is a discrepancy between languages, the default language will be English.

## Language List

| Language       | Code | Language        | Code | Language         | Code | Language      | Code |
|----------------|------|-----------------|------|------------------|------|---------------|------|
| Abkhazian      | A-B  | French [FRE]    | 5264 | Macedonian       | 5957 | Siswat        | 6565 |
| Afar           |      | Frisian         | 5271 | Malagasy         | 5953 | Slovak        | 6557 |
| Afrikaans      |      | Galician        | 5358 | Malay            | 5965 | Slovenian     | 6558 |
| Albanian       |      | Georgian        | 5747 | Malayalam        | 5958 | Somali        | 6561 |
| Amharic        |      | German [GER]    | 5051 | Maltese          | 5966 | Spanish [SPA] | 5165 |
| Arabic         |      | Greek [GRE]     | 5158 | Maori            | 5955 | Sundanese     | 6567 |
| Armenian       |      | Greenlandic     | 5758 | Marathi          | 5964 | Swahili       | 6569 |
| Assamese       |      | Guarani         | 5360 | Moldavian        | 5961 | Swedish [SWE] | 6568 |
| Aymara         |      | Gujarati        | 5367 | Mongolian        | 5960 |               |      |
| Azerbaijani    |      | Hausa           | 5447 | Nauru            | 6047 | Tagalog       | 6658 |
| Bashkir        |      | Hebrew          | 5569 | Nepali           | 6051 | Tajik         | 6653 |
| Basque         |      | Hindi           | 5455 | Norwegian [NOR]  | 6061 | Tamil         | 6647 |
| Bengali;Bangla |      | Hungarian [HUN] | 5467 |                  |      | Tatar         | 6666 |
| Bhutani        |      |                 |      | Occitan          | 6149 | Telugu        | 6651 |
| Bihari         |      | Icelandic [ICE] | 5565 | Oriya            | 6164 | Thai          | 6654 |
| Bislama        |      | Indonesian      | 5560 | Oromo(Afan)      | 6159 | Tibetan       | 4861 |
| Breton         |      | Interlingua     | 5547 | Panjabi          | 6247 | Tigrinya      | 6655 |
| Bulgarian      |      | Interlingue     | 5551 | Pashto;Pushto    | 6265 | Tonga         | 6661 |
| Burmese        |      | Inupiak         | 5557 | Persian          | 5247 | Tsonga        | 6665 |
| Byelorussian   |      | Irish [IRI]     | 5347 | Polish           | 6258 | Turkish [TUR] | 6664 |
|                |      | Italian [ITA]   | 5566 | Portuguese [POR] | 6266 | Turkmen       | 6657 |
|                |      | Japanese [JPN]  | 5647 | Quechua          | 6367 | Twi           | 6669 |
|                |      | Javanese        | 5669 | Rhaeto-Romance   | 6459 |               |      |
| Cambodian      | C-E  | Kannada         | 5760 | Romanian [RUM]   | 6461 | Ukrainian     | U-Z  |
| Catalan        |      | Kashmiri        | 5765 | Russian [RUS]    | 6467 | Urdu          | 6764 |
| Chinese [CHI]  |      | Kazakh          | 5757 |                  |      | Uzbek         | 6772 |
| Corsican       |      | Kinyarwanda     | 6469 | Samoan           | 6559 | Vietnamese    | 6855 |
| Croatian       |      | Kirghiz         | 5771 | Sangho           | 6553 | Volapuk       | 6861 |
| Czech          |      | Kirundi         | 6460 | Sanskrit         | 6547 | Welsh         | 4971 |
| Danish [DAN]   |      | Korean [KOR]    | 5761 | Scots Gaelic     | 5350 | Wolof         | 6961 |
| Dutch [DUT]    |      | Kurdish         | 5767 | Serbian          | 6564 | Xhosa         | 7054 |
| English [ENG]  |      |                 |      | Serbo-Croatian   | 6554 | Yiddish       | 6555 |
| Esperanto      |      | Laothian        | L-N  | Sesotho          | 6566 | Yoruba        | 7161 |
| Estonian       |      | Latin           | 5847 | Setswana         | 6660 | Zulu          | 7267 |
|                |      | Latvian;Lettish | 5868 | Shona            | 6560 |               |      |
| Faroese        | F-H  | Lingala         | 5860 | Sindhi           | 6550 |               |      |
| Fiji           |      | Lithuanian      | 5866 | Singhalese       | 6555 |               |      |
| Finnish [FIN]  |      |                 |      |                  |      |               |      |

If you choose a Language that has a 3 letter language code, the code will be displayed every time you change the Audio or Subtitle language setting on page 13. If you choose any other languages, '---' will be displayed instead. (3 letter language code is written in bracket.)

## MAGNAVOX Limited Warranty

FUNAI CORP. will repair this MAGNAVOX product, free of charge in the USA in the event of defect in materials or workmanship as follows:

### DURATION:

**PARTS:** FUNAI CORP. will provide parts to replace defective parts without charge for one (1) year from the date of original retail purchase. Certain parts are excluded from this warranty.

**LABOR:** FUNAI CORP. will provide the labor without charge for a period of ninety (90) days from the date of original retail purchase.

### LIMITS AND EXCLUSIONS:

This warranty is extended only to the original retail purchaser. A purchase receipt or other proof of original retail purchase will be required together with the product to obtain service under this warranty.

This warranty shall not be extended to any other person or transferee.

This warranty is void and of no effect if any serial numbers on the product are altered, replaced, defaced, missing or if service was attempted by an unauthorized service center. This MAGNAVOX Limited warranty does not apply to any product not purchased and used in the United States.

This product is produced for home use and this warranty only covers failures due to defects in material or workmanship which occurs during normal use. It does not cover damage which occurs in shipment, or failures which are caused by repairs, alterations or product not supplied by FUNAI CORP., or damage which results from accident, misuse, abuse, mishandling, misapplication, alteration, faulty installation, improper maintenance, commercial use such as hotel, rental or office use of this product or damage which results from fire, flood, lightning or other acts of God.

THIS WARRANTY DOES NOT COVER PACKING MATERIALS, ANY ACCESSORIES (EXCEPT REMOTE CONTROL), ANY COSMETIC PARTS, COMPLETE ASSEMBLY PARTS, DEMO OR FLOOR MODELS. FUNAI CORP. AND ITS REPRESENTATIVES OR AGENTS SHALL

IN NO EVENT BE LIABLE FOR ANY GENERAL, INDIRECT OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR OCCASIONED BY THE USE OF OR THE INABILITY TO USE THIS PRODUCT. THIS WARRANTY IS MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, AND OF ALL OTHER LIABILITIES ON THE PART OF FUNAI, ALL OTHER WARRANTIES INCLUDING THE WARRANTY OF MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY DISCLAIMED BY FUNAI AND ITS REPRESENTATIVES IN THE UNITED STATES. ALL WARRANTY INSPECTIONS AND REPAIRS MUST BE PERFORMED BY A FUNAI AUTHORIZED SERVICE CENTER. THIS WARRANTY IS VALID WHEN THE UNIT IS CARRIED-IN TO FUNAI AUTHORIZED SERVICE FACILITY.

### IMPORTANT:

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE. IF, AT ANY TIME DURING THE WARRANTY PERIOD, YOU ARE UNABLE TO OBTAIN SATISFACTION WITH THE REPAIR OF THIS PRODUCT, PLEASE CONTACT FUNAI CORP.

### ATTENTION:

FUNAI CORP. RESERVES THE RIGHT TO MODIFY ANY DESIGN OF THIS PRODUCT WITHOUT PRIOR NOTICE.

To locate your nearest MAGNAVOX Authorized Service Center or for general service procedure, please call or write to the following:

### FUNAI CORPORATION, INC. SERVICE CENTER

19900 Van Ness Avenue, Torrance, CA 90501

Tel :1-800-605-8610

<http://www.funai-corp.com>

Head Office: 100 North Street, Teterboro, NJ 07608

PLEASE DO NOT SHIP YOUR UNIT TO THE TETERBORO ADDRESS.





## 1 Conexiones

Si su televisor tiene entradas de AUDIO/VIDEO vea la sección "Connection to a TV" en la página 6 en el Manual de Manejo. En caso contrario, vea la sección "Connecting to RF Modulator" en la página del frente en el Manual de Manejo.

## 2 Instalación de las pilas en el control remoto




## 3 Para cambiar el idioma en la pantalla

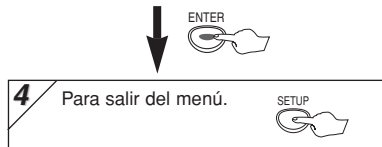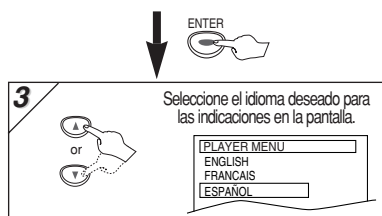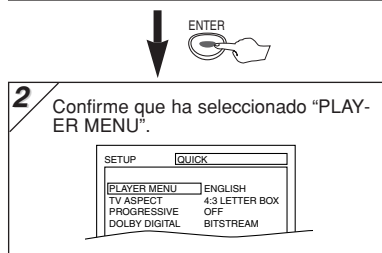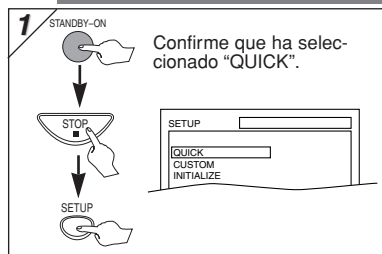

## 4 Reproducción

Antes.

- Encienda el televisor, amplificador y otros equipos conectados a esta unidad. Asegúrese que el televisor y el sintonizador de audio (de venta en los comercios) están en el canal correcto.

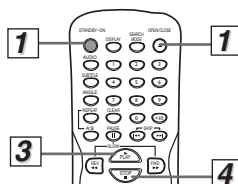

## 5 Control remoto

| Botón<br>(Orden alfabético)  | Disco | DVD-V   | DVD  |
|------------------------------|-------|---|--|
| 1 2 3<br>4 5 6<br>7 8 9<br>0 |       | • Para seleccionar directamente el capítulo o título.   | • Para seleccionar directamente la canción.  |
| ENTER                        |       | • Para mover el cursor y determinar la posición.  | • Para mover el cursor y determinar la posición.   |
| A-B                          |       | • Para repetir entre su punto A y B seleccionado.   | • Para repetir entre su punto A y B seleccionado.  |
| ANGLE                        |       | • Para seleccionar los ángulos de cámara en un disco.   | —  |
| AUDIO                        |       | • Para seleccionar idiomas de audio en un disco.  | • Para seleccionar ESTÉREO L-ch o R-ch.  |
| CLEAR                        |       | • Para borrar los marcadores.<br>• Para borrar los números mal entrados.<br>• Para borrar el punto para la repetición A-B.            | • Para borrar los marcadores.<br>• Para eliminar el N° de estado en la entrada de programa.<br>• Para borrar los números mal entrados.<br>• Para borrar el punto para la repetición A-B. |
| DISPLAY                      |       | • Para mostrar el modo de disco actual.   | • Para mostrar el modo de disco actual.  |
| REV FWD                      |       | • Para buscar en avance/retroceso por un disco.<br>• Para empezar la reproducción en avance lento/retroceso durante el modo de pausa. | • Para buscar en avance/retroceso por un disco.  |
| MENU                         |       | • Para llamar el Menú en un disco.  | —  |
| MODE                         |       | • Para activar/desactivar el nivel del negro.<br>• Para activar/desactivar el ambiental virtual.                                      | • Para disponer el orden de reproducción o la reproducción aleatoria.<br>• Para activar/desactivar el ambiental virtual.   |
| OPEN/CLOSE                   |       | • Para abrir o cerrar la bandeja del disco.   | • Para abrir o cerrar la bandeja del disco.  |
| PAUSE                        |       | • Para hacer una pausa en la reproducción.<br>• Para avanzar la reproducción un cuadro cada vez.                                      | • Para hacer una pausa en la reproducción del disco.   |
| PLAY                         |       | • Para empezar la reproducción del disco.   | • Para empezar la reproducción del disco.  |
| STANDBY-ON                   |       | • Para encender o apagar la unidad.   | • Para encender o apagar la unidad.  |
| REPEAT                       |       | • Para reproducir repetidamente un capítulo o título.   | • Para reproducir repetidamente una canción o disco.   |
| RETURN                       |       | • Para volver a la operación anterior en el menú.   | • Para volver a la operación anterior en el menú.  |
| SEARCH MODE                  |       | • Para buscar un capítulo, título o tiempo.<br>• Para colocar o buscar los marcadores.  | • Para buscar una canción.<br>• Para buscar el tiempo.<br>• Para colocar o buscar los marcadores.  |
| SETUP                        |       | • Para llamar el menú de ajustes de DVD.  | • Para llamar el menú de ajustes de DVD.   |
| SKIP                         |       | • Para saltar capítulos.  | • Para saltar canciones.   |
| STOP                         |       | • Para parar la reproducción.   | • Para parar la reproducción.  |
| SUBTITLE                     |       | • Para seleccionar subtítulos en un disco.  | —  |
| TOP MENU                     |       | • Para llamar el menú inicial en un disco.  | —  |
| ZOOM                         |       | • Para ampliar la imagen de vídeo en DVD. (x2/x4)   | —  |

# Quick Use Guide

## 1 Connections

If your TV has AUDIO/VIDEO input jacks, see the section "Connection to a TV" on page 6 of the Owner's Manual. If not, see the section "Connecting to RF Modulator" on the front page of the Owner's Manual.

## 2 Installing the Batteries for the Remote Control



## 3 To Change the On-Screen Language

**1** STANDBY-ON Confirm that "QUICK" is selected.

**2** Confirm that "PLAYER MENU" is selected.



**3** Select the desired language for the On-Screen Display.

**4** To exit the menu.

## 4 Playback

Before:

- Turn on the TV, amplifier and any other equipments which are connected to this unit. Make sure the TV and audio receiver (commercially available) are set to the correct channel.

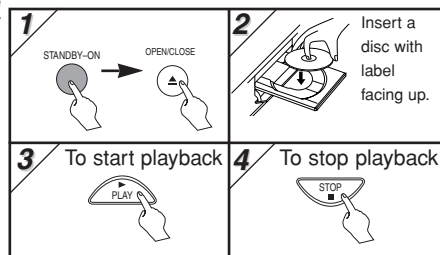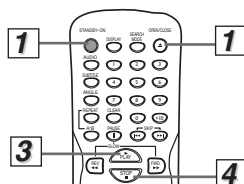

## 5 Remote Control

| Button (Alphabetical order)  | Disc | DVD-V   | DVD  |
|------------------------------|------|---|--|
| 1 2 3<br>4 5 6<br>7 8 9<br>0 |      | • To select chapter or title directly.  | • To select track directly.  |
| ENTER                        |      | • To move the cursor and determine its position.  | • To move the cursor and determine its position.   |
| A-B                          |      | • To repeat between your chosen point A and B.  | • To repeat between your chosen point A and B.   |
| ANGLE                        |      | • To select camera angles on a disc.  | —  |
| AUDIO                        |      | • To select audio languages on a disc.  | • To select STEREO, L-ch or R-ch.  |
| CLEAR                        |      | • To clear the markers.<br>• To clear the numbers entered incorrectly.<br>• To cancel the point for A-B repeat. | • To clear the markers.<br>• To remove status number in program input.<br>• To clear the numbers entered incorrectly.<br>• To cancel the point for A-B repeat. |
| DISPLAY                      |      | • To display the current disc mode.   | • To display the current disc mode.  |
| REV FWD                      |      | • To search forward/backward through a disc.<br>• To begin slow forward/reverse playback during the pause mode. | • To search forward/backward through a disc.   |
| MENU                         |      | • To call up the Menu on a disc.  | —  |
| MODE                         |      | • To set black level on/off.<br>• To set virtual surround on/off.   | • To arrange the playing order or play randomly.<br>• To set virtual surround on/off.  |
| OPEN/CLOSE                   |      | • To open or close the disc tray.   | • To open or close the disc tray.  |
| PAUSE                        |      | • To pause disc playback.<br>• To advance playback one frame at a time.   | • To pause disc playback.  |
| PLAY                         |      | • To begin disc playback.   | • To begin disc playback.  |
| STANDBY-ON                   |      | • To turn the unit on or off.   | • To turn the unit on or off.  |
| REPEAT                       |      | • To play a chapter or title repeatedly.  | • To play a track or disc repeatedly.  |
| RETURN                       |      | • To return to the previous operation in menu.  | • To return to the previous operation in menu.   |
| SEARCH MODE                  |      | • To search chapter, title or time.<br>• To set or search the markers.  | • To search track.<br>• To search time.<br>• To set or search the markers.   |
| SETUP                        |      | • To call up the DVD setup menu.  | • To call up the DVD setup menu.   |
| SKIP                         |      | • To skip chapters.   | • To skip tracks.  |
| STOP                         |      | • To stop playback.   | • To stop playback.  |
| SUBTITLE                     |      | • To select subtitles on a disc.  | —  |
| TOP MENU                     |      | • To call up the Top Menu on a disc.  | —  |
| ZOOM                         |      | • To magnify part of a picture. (x2/x4)   | —  |

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>