

GP-30/35 GPS NAVIGATOR

Operator's Guide

The purpose of this operator's guide is to provide the basic operating procedures for this equipment. For detailed information, refer to the operator's manual.

Selecting Display Mode

Press the [DISP] key.

Plotter Display

2D [5 ⁿ m]	Ⓜ
CSE: 7°	
SPD: 0.0 ^k t	
34°44.000N 135°21.000E	

Ship's track and data

Highway Display

BRG ---°	
CSE 7°	
RNG --- ⁿ m	
SPD 6.5 ^k t	

3D view of ship's track overlaid on intended course

Steering Display

2D MAG	05:32
SPD: 6.5 ^k t	CSE: 20°
RNG: -- ⁿ m	BRG: ---°
TTG: 1H30M	ETA: 12:30

Graphic display of steering data

Nav Data Display

2D	12-DEC-97	15:37:40
34° 44. 000' N 135° 21. 000' E		
SPD: 6.5 kt	CSE: 7°	

Comprehensive navigation data display

Enlarging, Shrinking the Display

1. Press the [MENU] key.
2. Press the [ENT] key.
3. Press ▲ to enlarge; ▼ to shrink.
4. Press the [ENT] key to close the window.

Shifting the Cursor, Display

1. Press the Cursor Pad to turn on and shift the cursor.
2. Place the cursor on an edge of the screen to shift the display.

Centering Own Position

1. Press the [MENU] key.
2. Select "SHIP TO CENTER?".
3. Press the [ENT] key.

Entering MOB Mark

1. Press the [MARK/MOB] key.
2. Select "MOB?".
3. Press the [ENT] key.
4. Press the [ENT] key again.



FURUNO ELECTRIC CO., LTD.

Registering Waypoints

A waypoint can be entered four ways. Below is the procedure for entry by the cursor.

1. Operate the Cursor Pad to place the cursor on the location you want to make a waypoint.
2. Press the [ENT] key.

CURSOR POS. → WYPT

ENTER A NEW WYPT NAME.
001 — — — ?
(001: DEFAULT NAME)

Quit : [MENU]

3. Press the [ENT] key.

NAME: KOBE
34°44.000'N MARK
135°21.000'E x
12—DEC—97 11:25

Exit?

4. Place the cursor under “MARK”.
5. Press the [ENT] key.
6. Press ▲ or ▼ to select the mark desired.
7. Press the [ENT] key.
8. Select “Exit?” and then press the [ENT] key.

Registering Routes

1. Press the [MENU] key twice.
2. Select “ROUTES”.
3. Press the [ENT] key.
4. Press the [ENT] key.
5. Press the [ENT] key, select route waypoint and press the [ENT] key.
6. Repeat steps 5 to enter other waypoints on the route.
7. Select “Exit?”.
8. Press the [ENT] key to register.

Setting, Cancelling Destination

Destination can be set three ways. Below is the method for setting destination by the cursor.

To set destination;

1. Press the [GOTO] key.
2. Select “CURSOR?”.
3. Press the [ENT] key.
4. Place the cursor on position to set as destination.
5. Press the [ENT] key.

To cancel destination;

1. Press the [GOTO] key.
2. Select “OFF?”.
3. Press the [ENT] key.

Setting the Arrival Alarm

1. Press the [MENU] key twice.
2. Select “ALARMS”.
3. Press the [ENT] key.
4. Press the [ENT] key.
5. Select “ARV”.
6. Press the [ENT] key.
7. Press the [ENT] key and enter arrival alarm range.
8. Press the [ENT] key.
9. Press the [MENU] key.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>