
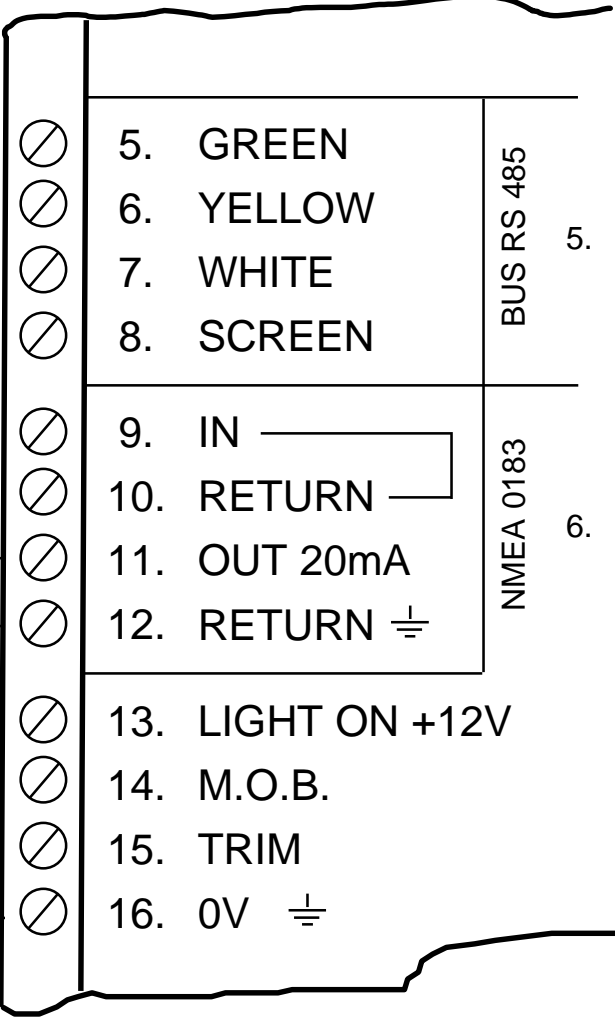
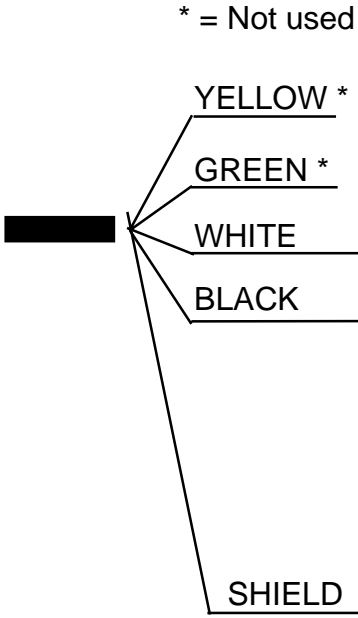


How to connect a a Furuno M1622 to the NEXUS Server.

SETTINGS:

NEXUS Server:

- [Cxx] =
- C79 = DPT
- C84 = RMB
- C85 = RMC
- C87 = ZDA

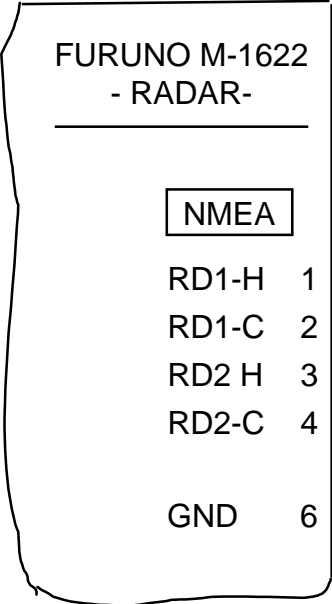

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>