

GARMIN.  
nüvifone™ G60

user's guide



Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

Garmin International, Inc. 1200 East 151st Street, Olathe, Kansas 66062, USA Tel. (913) 397.8200 or (800) 800.1020 Fax (913) 397.8282	Garmin (Europe) Ltd. Liberty House Hounslow Business Park, Southampton, Hampshire SO40 9LR UK Tel. +44 (0) 870.8501241 (outside the UK) 0808 2380000 (within the UK) Fax +44 (0) 870.8501251	Garmin Corporation No. 68, Jangshu 2nd Road, Shijr, Taipei County, Taiwan Tel. 886/2.2642.9199 Fax 886/2.2642.9099
--	---	--

All rights reserved. Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express prior written consent of Garmin. Garmin hereby grants permission to download a single copy of this manual onto a hard drive or other electronic storage medium to be viewed and to print one copy of this manual or of any revision hereto, provided that such electronic or printed copy of this manual must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Information in this document is subject to change without notice. Garmin reserves the right to change or improve its products and to make changes in the content without obligation to notify any person or organization of such changes or improvements. Visit the Garmin Web site ([www.garmin.com](http://www.garmin.com)) for current updates and supplemental information concerning the use and operation of this and other Garmin products.

Garmin® and the Garmin logo are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Ciao!™, nüMaps Guarantee™, nüvifone™, and myGarmin™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc., and any use of such name by Garmin is under license. Microsoft® and Windows® are registered trademarks of Microsoft Corporation in the United States and/or other countries. Mac® is a registered trademark of Apple Computer, Inc. microSD™ is a trademark of SanDisk or its subsidiaries. Wi-Fi® is a registered mark of the Wi-Fi Alliance. Yahoo® is a registered trademark of Yahoo! Inc. Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries.

## Table of Contents

<b>Set Up Your nüvifone .....</b>	<b>1</b>	<b>Use Your Phone .....</b>	<b>12</b>
Look at Your nüvifone .....	1	Dial a Number.....	12
Understand the Home Screen		Call a Contact.....	12
Icons .....	2	Set Up Voice Mail .....	12
Understand the Scrolling		Call Voice Mail .....	12
Icons .....	3	Use Call History.....	13
Tips and Shortcuts.....	3	Do a Reverse Lookup.....	14
Understand the Status Bar		Receive a Call .....	14
Icons .....	4	Use In-Call Options .....	15
Install the SIM Card and the		End a Call .....	15
Battery.....	6	Redial a Number.....	15
Charge the Battery .....	7	Set Your Ringtones.....	16
Install the microSD Card .....	8	Forward a Call .....	16
Remove the microSD Card.....	8	Use Call Waiting .....	17
Orient the Screen .....	9	Make a Conference Call.....	17
Scroll the Screen .....	9		
Lock the Screen.....	9		
Mount Your nüvifone.....	10		
Acquire Satellites.....	11		

<b>Search for Locations.....</b>	<b>18</b>	Find a Location Using	
Find an Address.....	18	the Map.....	25
Use the Location Page.....	19	Plan and Save a Route.....	26
Find a Point of Interest.....	19	<b>Follow Your Route.....</b>	<b>27</b>
Call a Location.....	19	View the Next Turn Page.....	28
Navigate to a Contact.....	20	View the Turn List Page.....	28
Search Near Another		View the Trip Computer	
Location.....	20	Page.....	29
Set a Home Location.....	20	Use the Compass.....	30
Go Home.....	20	Take a Detour.....	30
Search with		Add a Stop.....	30
Yellowpages.com.....	21	About Usage Modes.....	31
Save Favorite Locations.....	21	<b>View Traffic.....</b>	<b>32</b>
Find Favorite Locations.....	22	About Traffic.....	32
Find Recently Found		Understand Traffic on Your	
Locations.....	22	Route.....	32
Search the White Pages.....	23	Use the Traffic Menu.....	33
Find Movie Times.....	23		
Find Upcoming Events.....	24		
Find Cities.....	24		
Find Gas Prices.....	24		
Enter Coordinates.....	25		

<b>Work with Contacts .....</b>	<b>34</b>	<b>Use the Camera .....</b>	<b>39</b>
Add a Contact.....	34	Take a Picture.....	39
Edit a Contact.....	34	Add Location Information to a Picture.....	39
Assign a Picture to a Contact.....	34	View a Picture.....	40
Assign a Location to an Existing Contact.....	35	View a Slideshow .....	40
Work with the SIM Phone Book.....	35	Set Your Wallpaper.....	40
Delete a Contact.....	35	Share a Picture.....	41
<b>Use SMS/Text Messaging .....</b>	<b>36</b>	Navigate to a Picture .....	41
Send a Text Message .....	36	<b>Use the Music Player.....</b>	<b>42</b>
Read a Text Message.....	36	Play a Song .....	42
Send a Location Message.....	37	Create a Playlist .....	42
Use Text Messaging Options...	37	Play a Playlist .....	42
Delete Text Messages .....	38	Save the Current Playlist.....	43
		Edit a Playlist.....	43

<b>Browse the Web.....</b>	<b>44</b>	<b>Use Ciao!™ .....</b>	<b>51</b>
Enter a URL.....	44	Register with Ciao! .....	51
Use the Browser.....	44	Join Ciao!.....	52
Set Your Browser Home		Invite a Friend.....	52
Page.....	45	Accept an Invitation .....	53
Save Bookmarks .....	45	Remove a Friend .....	54
Clear Your History.....	45	Hide/Show Your Location .....	54
<b>Use E-mail .....</b>	<b>46</b>	View My Details .....	55
Set Up E-mail .....	46	View Ciao! Networks .....	55
Send an E-mail Message .....	47	Disable Ciao! .....	55
Check E-mail Messages.....	48	<b>Connect to Other Devices</b>	<b>56</b>
Delete E-mail Messages.....	48	About Bluetooth Technology....	56
Use E-mail Options.....	49	Synchronize Your nūvifone .....	58
		Transfer Files.....	59
		Set Up a Wi-Fi Connection .....	59

**View the Weather****Forecast..... 61**

- View a Weather Forecast for  
Another Location..... 61
- Update Weather Manually ..... 61

**Use the Calendar ..... 62**

- View the Calendar ..... 62
- Schedule an Appointment..... 62
- View an Appointment..... 63
- Delete an Appointment ..... 63

**Use the Tools ..... 64**

- Use Where Am I? ..... 64
- Use the Calculator ..... 64
- Use the Clock ..... 64
- Check Flight Status ..... 66
- Use the Converter ..... 67
- Use Notes..... 68
- Work with Checklists ..... 68

**Customize Your nūvifone 70**

- Change General Settings ..... 70
- Change Security Settings..... 70
- Change SIM Card Security  
Settings ..... 71
- Change Language Settings ..... 72
- Change Date/Time Settings .... 72
- Change Audio Settings ..... 73
- Change Phone Settings..... 74
- Change Navigation Settings .... 75
- Change Application Settings... 76
- Change Browser Settings..... 77
- Change the Main Menu  
Order..... 78
- Change Display Settings ..... 78
- Restore Settings ..... 79
- Clear All User Data ..... 79

<b>Appendix .....</b>	<b>80</b>
Access AT&T Service	
Numbers .....	80
Register Your Product.....	80
View Software Information.....	80
nüMaps Guarantee™ .....	81
Additional Maps .....	81
Update the Software.....	81
Reset the nüvifone.....	81
About GPS Satellite Signals ....	81
About the Battery.....	82
Replace the Battery .....	82
Change the Fuse in the	
Vehicle Power Cable.....	83
Mount on Your Dashboard.....	83
Troubleshooting.....	84
Specifications .....	86
<b>Index .....</b>	<b>88</b>



# Set Up Your nüvifone

## Look at Your nüvifone

*Power key: press and hold to turn on/off;  
press and release to lock and unlock the screen.*






See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

## Understand the Home Screen Icons






The nūvifone Home screen has scrollable icons. Touch and drag to view all the icons. For more information, see [page 3](#).












## Main Icons

Icon	Description
	Touch to make a phone call.
	Touch to search for locations, including restaurants, hotels, and auto services.
	Touch to view the map.





## Call Icon

	 —Missed call icon showing the number of missed calls.
	 —Voice mail icon showing the number of new voice mails.





## Understand the Scrolling Icons






Icons	Application	Icons	Application
	Browse the web.		Use the camera.
	Access text messages.		Access the tools, such as checklists and the alarm clock.
	Access your e-mail account(s).		Open Ciao!.
	Access your calendar.		Open the music player.
	View weather information for your area.		Access the settings for your phone.
	Access your contacts.		

## Tips and Shortcuts

- Touch  to return to the previous screen.
- To quickly return to the Home screen, touch and hold  from any screen.
- Touch  and  to see more choices. Quickly tap these buttons to scroll faster.

## Understand the Status Bar Icons

Icon	Description
	Mobile signal strength. The more colored bars that appear, the stronger the signal. A red "X" indicates no mobile signal strength.
	Network connectivity. This icon appears when the nūvifone is connected for Internet access. If the icon is white, the connection is in use. If the icon is gray, your nūvifone is trying to establish the data connection with the network. The connection types are as follows: G—GPRS, E—Edge, 3G—3G.
	Wi-Fi® connectivity. This icon appears in place of the network connectivity icon when the nūvifone is using Wi-Fi.
	An alarm is set.

Icon	Description
	Satellite connectivity. The more colored bars that appear, the stronger the satellite signal. If there is no satellite signal or the nūvifone is in simulator mode, a red "X" appears.
	Current time. The time is based on the location of the device or the selected time zone.
	The nūvifone is connected to a device using Bluetooth® wireless technology. If the icon is white, Bluetooth wireless technology is enabled but the nūvifone is not connected to a device.
	Teletypewriter (TTY) mode is activated.
	Battery charge. See <a href="#">page 7</a> for more information.

 
## Install the SIM Card and the Battery

1. Press down firmly on the battery cover and slide it off the back of your nüvifone.

*Battery cover*



2. Insert the SIM card in the slot at the top of the battery compartment. Insert the notched corner of the SIM card first with the gold contacts facing up. The SIM card clicks into place.

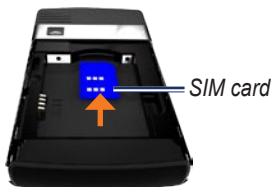

3. Locate the lithium-ion battery that came in the product box.
4. Locate the metal contacts on the end of the lithium-ion battery.
5. Insert the battery so that the metal contacts on the battery match up with the metal contacts inside the battery compartment.



6. Slide the battery cover onto the back of your nüvifone.




## Charge the Battery

1. Insert the appropriate plug adapter into the AC adapter.
2. Connect the small end of the USB cable to the mini-USB connector on the side of your nüvifone.
3. Connect the large end of the USB cable to the AC adapter.
4. Plug the AC adapter into a power outlet.

## Alternate Charging Methods

- (Preferred) Insert your nüvifone into the cradle, and connect the vehicle power cable to the cradle.
- Connect the vehicle power cable to your nüvifone.
- Connect your nüvifone to a computer using the USB cable included in the box.
- Insert the battery into the battery charger (accessory). For more information about accessories, go to [www.garmin.com](http://www.garmin.com).

## Battery Icons

Icon	Meaning
	Battery life. The more colored bars that appear, the greater the remaining battery charge.
	Battery is charging.
	External power is connected, and the battery is fully charged.

**WARNING:** This product contains a lithium-ion battery. To prevent damage, remove the device from the vehicle when exiting or store it out of direct sunlight.

**NOTICE:** Your nüvifone will not charge if it has exceeded the maximum charging temperature. If the nüvifone is mounted in the windshield, remove it from the mount and place it somewhere out of direct sunlight.

## Install the microSD Card

The use of a microSD card is optional.

1. On the side of your nüvifone, flip up the rectangular plastic cap and slide it over to reveal the microSD card slot.
2. Insert the microSD card with the contacts facing the nüvifone screen. The microSD card will lock into place.



3. Push the plastic cap back into place.

## Remove the microSD Card

1. On the side of your nüvifone, flip up the rectangular plastic cap and slide it over to reveal the microSD card slot.
2. Push the microSD card in until it clicks.
3. Pull out the microSD card.



## Orient the Screen


- Rotate your nüvifone to the left or the right to view in horizontal (landscape) mode.
- From horizontal mode, rotate your nüvifone to the left or the right to view in vertical (portrait) mode.



## Scroll the Screen

- Touch and slide your finger to slowly scroll the menu.
- Touch, quickly slide, and lift your finger to continue scrolling the menu after removing your finger.
- Touch the screen to stop scrolling, or wait for the image to slow to a stop.

 
## Lock the Screen

- With your nüvifone turned on, quickly press the **Power** key.
- To unlock the touchscreen, quickly press the **Power** key and then double-tap .

## Mount Your nüvifone

Before mounting the nüvifone, see the *Important Safety and Product Information* guide for information about laws pertaining to windshield mounting.

1. Plug the vehicle power cable into the power connector on the back of the cradle.

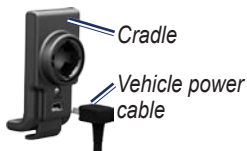

2. Remove the clear plastic from the suction cup. Clean and dry your windshield and the suction cup with a lint-free cloth.
3. Place the suction cup on the windshield.
4. Flip the lever back, toward the windshield.
5. Snap the cradle onto the suction cup arm.



6. Fit the gold contacts on the left side of your nüvifone into the cradle.
7. Tilt the nüvifone back until it snaps into the cradle.




**NOTICE:** If you encounter a problem charging your nüvifone, the battery might have exceeded the maximum charging temperature. If the nüvifone is mounted, remove it from the mount and place it somewhere out of direct sunlight.

## Acquire Satellites

Before you can navigate with your nüvifone, you need to acquire satellites.


1. Go outdoors to an open area, away from tall buildings and trees.
2. Turn on your nüvifone.


Acquiring satellite signals can take a few minutes. The  satellite icon indicates satellite strength. When at least one of the lines is green, your nüvifone has acquired satellite signals.

If you are having trouble acquiring satellites, ensure the data connection is turned on. From the Home screen, touch **Settings > Phone > Data Connection > On**.

## Use Your Phone

### Dial a Number

The first time you touch the  call icon, the system defaults to the Dial page.

1. Touch **Call** (> **Dial**).
2. Enter the phone number using the touch keypad.
3. Touch  to dial the phone number.

### Call a Contact

1. Touch **Call** > **Contacts**.
2. Select a contact, and touch **Call**.

For more information about adding and editing contacts, see [page 34](#).

## Set Up Voice Mail

1. From the Home screen, touch **Settings** > **Phone** > **Voice Mail Number**, and verify that your voice mail number is correct.
2. Touch **Call** > **Contacts** > **Voice Mail**, and follow the prompts.

## Call Voice Mail

The voice mail icon appears on the Home screen when you have new voice mail.

Select one of following methods to call your voice mail:

- Touch **Call** > **Contacts** > **Voice Mail**.
- Touch **Call** > **Dial**, and touch and hold “1.”
- Touch **Contacts** > **Voice Mail**.

## Use Call History

1. Touch **Call** > **Call History**. Calls are organized into four categories:



—Dialed call



—Received call




—Missed call




—Voice mail

2. Select a call.
3. Select an option:
  - **Call**—call the number.
  - **Text**—send a text message.
  - **Go!**—navigate to the location assigned to the number, if available.

## Delete All Calls


1. Touch **Call** > **Call History**.
2. Touch  > **Clear All History**.

## Delete a Call

1. Touch **Call** > **Call History**.
2. Select a call.
3. Touch  > **Delete from Call History**.
4. Touch **Yes**.

## View Related Calls

Related calls are calls made to or received from the same number.


1. Touch **Call** > **Call History**.
2. Select a call.
3. Touch  > **View Related Calls**.

A list of related calls appears displaying the length of each call or a status message.

## Do a Reverse Lookup

This service is available as a paid subscription. Reverse lookup is not available in all areas.

A reverse lookup allows you to search for the address of a phone number that called you.


1. Touch **Call** > **Call History**.
2. Select a call.
3. Touch  > **Reverse Lookup**.

## Receive a Call

Select from the following options when you receive a call:

- **Answer**—touch to answer the call.
- **Ignore**—touch to ignore a call.

**NOTE:** With some mobile phone plans, touching **Ignore** will send the call to your voice mail.

- —double-tap to answer a call when the screen is locked.
- **Power** key—press to ignore a call when the screen is locked.
- **Volume** down key—touch to silence a call.


## Use In-Call Options

When you are on a call, you can perform other tasks. The following options are available on the In-Call page:

 
 
- **Speaker**—activate the speakerphone.
- **Mute**—silence the audio input to the microphone. The other caller will not be able to hear you speak.
- **Add**—select a number to add to the current call when placing a conference call.
- **Hold**—place the current call on hold.
- **End Call**—end the current call.

## End a Call

During a call, your nūvifone screen dims and then fades to black.

1. If the screen is dimmed, double-tap .  
If the screen is black, press and release the **Power** key.
2. Touch **End Call**.

## Redial a Number

1. Touch **Call** > **Dial**.
2. Touch . The last-dialed call appears in the white bar.
3. Touch  again to call the number.

## Set Your Ringtones


You can set a default ringtone and assign different ringtones to contacts.

If you have loaded music onto your nūvifone, the songs are also available as ringtones. For more information on transferring music files to your nūvifone, see [page 59](#).

### Set a Default Ringtone

1. From the Home screen, touch **Settings > Audio > Sounds**.
2. Touch the button under **Phone**.
3. Touch **Ringtones**.
4. Select a ringtone, and touch **OK**.

### Set a Ringtone for a Contact

1. Touch **Call > Contacts**.
2. Select a contact.
3. Touch  > **Edit Contact**.
4. Scroll down to the Personal category, and touch **Ringtone**.
5. Select a ringtone, and touch **OK**.

## Forward a Call

You can forward incoming calls to another number.


1. From the Home screen, touch **Settings > Phone**.
2. Touch the button under **Call Forward**.
3. Touch the button under **Forwarding**.
4. Touch **On > OK**.
5. Select an option:
  - **History**—select a number from your call history.
  - **Contacts**—select a number from your contacts.
  - **Enter Number**—enter a number.




## Use Call Waiting

1. From the Home screen, touch **Settings > Phone**.
2. Touch the button under **Call Waiting**.
3. Touch **On > OK**.


## Make a Conference Call

1. Dial the first phone number.
2. When the caller answers, touch **Add**.
3. Select an option to dial the second phone number.
4. Touch .
5. When the caller answers, touch **Join**.

## Speak Privately During a Conference Call

1. While in a conference call, touch . A list appears with the participating callers.
2. Touch **Private** next to the caller you want to speak privately with. Other members of the conference call can continue to speak to each other.

## Disconnect a Participating Call

1. While in a conference call, touch . A list appears with the participating callers.
2. Touch **Drop** next to the caller you want to disconnect.

## Search for Locations

Use the Search menu to find addresses, Points of Interest (restaurants, hotels, attractions), and other items included in the built-in map data.


**NOTE:** Before you can navigate with your nūvifone, you need to acquire satellites. See [page 11](#).

## Find an Address

**NOTE:** Depending on the version of the built-in map data on your device, the button names and the order of steps could be different than the steps below.

 
1. Touch **Search > Address**.
2. Change the state, country, or province, if necessary.

3. Touch **Spell City**, enter the city/postal code, and touch **Done**. Select the city/postal code in the list. (Not all map data provides postal code searching.) If you are unsure of the city, touch **Search All**.
4. Enter the number of the address, and touch **Done**.
5. Enter the street name, and touch **Done**.
6. Select the correct street in the list, if necessary.
7. Touch the address, if necessary.
8. Touch **Go!**, or touch **View Map** to view the location on the map.

Touch  to save the location or to send a location message.

## Use the Location Page

When you select a location, the Location page appears.

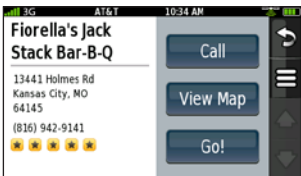

- **Call**—touch to call the location.
- **View Map**—touch to view the location on the map.
- **Go!**—touch to create a route to the location.
- **☰**—touch to save the location or to send the location in a location message.

## Find a Point of Interest

The detailed maps loaded in your nūvifone contain millions of points of interest, such as restaurants, hotels, and auto services.

1. Touch **Search > Points of Interest**.
2. Select a category and a subcategory, if necessary.
3. Select a destination.

## Call a Location

Phone numbers are not included for all locations.

1. Touch **Search**.
2. Touch a category and a subcategory, if necessary.
3. Select a location.
4. Touch **Call**.


## Navigate to a Contact

If you have entered address information for a contact, you can create a route to the contact's address.

1. Touch **Search > Contacts**.
2. Select a contact from the list.
3. Touch **Go!**.

## Search Near Another Location

By default, your nüvifone finds places near your current location.

1. Touch **Search >  > Near**.
2. Select an option:
  - **Where I Am Now**
  - **A Different City**
  - **My Current Route**
  - **My Destination**

My Current Route and My Destination options are only available if you are navigating a route.

## Set a Home Location

Set your home location for the place you return to most often.

1. Touch **Search > Home**.
2. Select an option:
  - **Enter My Address**
  - **Use My Current Location**
  - **Choose from Recently Found**


## Go Home


To navigate home after you have set your home location, touch **Search > Home > Go!**. Your home location is also stored in your Favorites. See [page 22](#) for more information.

## Edit Your Home Location

1. Touch **Search > Home**.
2. Touch  > **Edit**.
3. Select an option:
  - **Change Name**
  - **Attach Picture** or **Change Picture**
  - **Change Map Symbol**
  - **Change Phone Number**
  - **Change Categories**

## Delete Your Home Location

1. Touch **Search > Home**.
2. Touch  > **Edit**.
3. Touch  > **Delete**.
4. Touch **Yes**.

**TIP:** To enter a new home location, touch **Search >  > Set Home Location**. Select an option.


## Search with Yellowpages.com

Businesses listed with Yellowpages.com include ratings based on Yellowpages.com user reviews. A data connection is required for this feature.

1. Touch **Search > Yellowpages.com**.
2. Select a category, or touch **Spell Name**.
3. Select a location.

## Save Favorite Locations

You can save locations in your Favorites so you can quickly find them and create routes to them. Your nūvifone can store about 3,000 favorite locations.

1. After you select a location, touch  > **Save** to save the location to your Favorites.
2. Touch **OK**.

## Find Favorite Locations

1. Touch **Search > Favorites**. Your saved locations are listed by category.
2. Touch **All Categories** to search all your saved locations.

## Find a Favorite Location by Spelling the Name


1. Touch **Search > Favorites**.
2. Select a category, if necessary.
3. Touch **Spell**.
4. Enter the name of the location, and touch **Done**.

## Find Recently Found Locations

Your nūvifone stores the last 50 locations you have found.

1. Touch **Search > Recently Found**.
2. Select a location.

## Clear the Recently Found List

1. Touch **Search > Recently Found**.
2. Touch  **> Clear**.
3. Touch **Yes**.

This process clears the list of recently found locations. These locations will not be deleted from your nūvifone.

## Search the White Pages

This service is available as a paid subscription. You can find names and numbers that are listed in the current AT&T White Pages. A data connection is required for this feature.

### Search by Name in White Pages

1. Touch **Search > White Pages > By Name**.
2. Enter the last name, and touch **Next**.
3. Enter the first name, if necessary, and touch **Done**.

To re-enter the name, touch **Retry**.

### Search by Phone Number in White Pages


1. Touch **Search > White Pages > By Phone Number**.
2. Enter the area code and phone number, and touch **OK**.

## Find Movie Times

This service is available as a paid subscription. Movie times are not available in all areas. A data connection is required for this feature.

1. Touch **Search > Movie Times**.
2. Touch the date to select a new date, if necessary.
3. Touch **Find by Movie Title** or **Find by Theater Name**.
4. Select a movie title and a theatre. A list of show times appears.

### Add a Movie Time to Your Calendar

1. Find a movie.
2. From the Location page, touch  > **Add to Calendar**.
3. Select a movie time, and touch **OK**.

## Find Upcoming Events

This service is available as a paid subscription. Local events are not available in all areas. A data connection is required for this feature.

You can search for upcoming events, including art shows, musical performances, and sporting events.


1. Touch **Search > Upcoming Events**.
2. Select a category.
3. Touch the arrows at the top of the screen to select a different date, if necessary.
4. Select an event to view more information.
  - Touch **View Map** to view the location of the event on the map.
  - Touch **Remind Me** to add the event to your calendar and to receive a reminder.

## Find Cities

1. Touch **Search > Cities**. Nearby cities are listed by distance with the nearest cities listed first.
2. Touch **Spell** to find a city by spelling the name.

## Find Gas Prices


This service is available as a paid subscription. Fuel prices are not available in all areas. A data connection is required for this feature.

1. Touch **Search > Gas Prices**. A list of gas stations near your current location appears.
2. To display prices for a specific fuel type, touch , and select a fuel type.



## Enter Coordinates








If you know the geographic coordinates of your destination, you can navigate to your destination using the latitude and longitude coordinates. This can be especially helpful when geocaching.


1. Touch **Search > Coordinates**.
2. Touch **Format** to change the type of coordinates.
3. Touch a box to enter part of a coordinate.
4. Enter the coordinates, and touch **Next**.
  - —touch **Save** to save the location. Touch **Send Location** to send the coordinates in a location message.

## Find a Location Using the Map

1. Touch **Search > Browse Map**.
2. Touch and drag the map to view different parts of the map.
3. Touch anywhere on the map. An arrow appears pointing at the location you selected.


## Tips for Browsing the Map

- Touch  and  to zoom in and zoom out.
- Touch  to view the two-dimensional (2D) map.
- Touch  to view the three-dimensional (3D) map.
- Touch  to rotate the map around your current location.
- Touch  > **Go!** to navigate to the location.
- Touch  > **Save** to save the location.

- Touch  > **Send Location** to send the coordinates of the selected location in a location message. See [page 37](#) for more information.

## Plan and Save a Route

You can plan and save custom routes that include multiple via points.

1. Touch **Search > Routes > New Route**.
2. Touch **OK** to search for a starting location.
3. Find a location, and touch **Select**.
4. Touch **OK** to search for a destination location.
5. Find a location, and touch **Select**. The nüvifone calculates the route.
6. Touch  for the following options:

- **Remove Points**—select the points to remove, and touch **Remove Points**.
- **Optimally Reorder Points**—allow the nüvifone to reorder the points.

7. Touch . The route is saved.

To add additional points to the route, touch **Add Via Points**.

To change the order of the points in your route, touch **Reorder**.

## Follow Your Route

After you have selected a location, your nüvifone creates a route to the location. Your route is marked with a magenta line. As you travel, your nüvifone guides you to your destination with voice prompts, arrows on the map, and directions at the top of the map. A checked flag marks your destination. If you depart from the original route, your nüvifone recalculates the route and provides new directions.

A speed limit icon could appear as you travel on major roadways. This icon displays the current speed limit of the roadway.

Touch anywhere on the Map page to browse the map.

 


- 1 Touch to view the Next Turn page.
- 2 Touch to view the Turn List page.
- 3 Touch to zoom in and zoom out.
- 4 Touch to return to the Home screen.
- 5 Touch to view the Trip Computer page.
- 6 Touch to view the Where Am I? page.
- 7 Touch to view the Trip Computer page.

## View the Next Turn Page

When you are navigating a route, the Next Turn page shows the turn on the map and the distance and time left before you reach the turn.

From the map, touch the turn indicator in the top left corner. The Next Turn page appears.

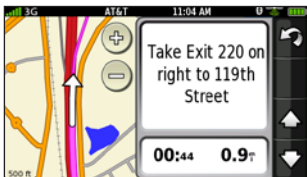

**NOTE:** You can also view the Next Turn page by touching any turn from the Turn List page.

## View the Turn List Page

When you are navigating a route, the Turn List page displays turn-by-turn instructions for your entire route and the distance between turns.

From the map, touch the text bar on the top of the screen. The Turn List page appears.



## View the Entire Route on the Map

1. From the map, touch the text bar on the top of the screen.
2. Touch **Show Map**. The map appears with your route marked in a magenta line.

## View the Trip Computer Page

The trip computer displays your current speed and provides helpful statistics about your trip.

From the map, touch the **Arrival** or **Speed** field.



## Reset the Trip Computer

Reset the trip computer before beginning a trip.


1. From the map, touch the **Arrival** or **Speed** field.
2. Touch **Reset Trip** to reset the information on the trip computer.
3. Touch **Reset Max Speed** to reset the maximum speed.

## Use the Compass


Your nüvifone contains a multi-axis compass that can be used while driving or walking, in portrait or landscape mode. The compass appears on the Trip Computer page. As you travel, the compass rotates to indicate your direction of travel. The bug indicator, which appears as an inverted triangle at the top of the compass, indicates your current heading. The green arrow indicates the bearing to your destination. When the green arrow points at the bug indicator, you are traveling directly to the destination.

1. Touch **View Map**.
2. Touch **Speed** or **Arrival**.


## Calibrate the Compass

1. Touch **View Map**.
2. Touch **Speed** or **Arrival**.
3. Touch  > **Calibrate Compass**.
4. Follow the on-screen steps.

## Take a Detour

1. While navigating a route, touch .
2. Touch **Detour**.

## Add a Stop

1. While navigating a route, touch  > **Search**.
2. Search for the extra stop.
3. Touch **Go!**.
4. Touch **Add as Via Point** to add this stop before your final destination.

## About Usage Modes

There are two usage modes: Automobile and Pedestrian. In Automobile mode, your nüvifone calculates routes for automobiles. These routes obey traffic laws, such as one-way streets. Your nüvifone uses typical automobile speeds when estimating your arrival time.

In Pedestrian mode, your nüvifone calculates routes for walking. These routes avoid highways in favor of smaller streets. Your nüvifone uses typical walking speeds when estimating your arrival time.

Your nüvifone automatically changes between Automobile mode and Pedestrian mode based on the following criteria:

- If you are not navigating a route, and the nüvifone is in the cradle, it is in Automobile mode.


- If you are not navigating a route, and the nüvifone is not in the cradle, it is in Pedestrian mode.
- If you are navigating a route, the nüvifone remains in the mode in which the route was created.
- If you create a route that is longer than 5 miles, the nüvifone uses Automobile mode.




There are separate route preferences for each usage mode. For more information, see [page 75](#).

## View Traffic

### About Traffic

This service is available as a paid subscription. A data connection is required for this feature.


When you are receiving traffic information, the  traffic icon appears in the upper-left corner of the Map page. The icon changes color to indicate the severity of traffic conditions on your route or on the road you are currently traveling.

- —traffic is flowing freely.
- —moderate traffic congestion.
- —very slow or stop-and-go traffic.

**NOTE:** Traffic information and delay times are not available in all areas. For more information, go to [www.garmin.com/products/g60](http://www.garmin.com/products/g60).


### Understand Traffic on Your Route

When calculating your route, the nüvifone examines the current traffic and automatically optimizes the route for the shortest time. If a severe traffic delay occurs on your route while you are navigating, the nüvifone automatically recalculates the route. You might still be routed through traffic if no better alternative routes exist.


If a non-severe traffic delay occurs on your route, the  traffic icon shows how much time the delay has added to your route. This time is already included in your estimated arrival time.



## Use the Traffic Menu

1. From the map, touch  to view the Traffic menu.
2. Select an option:
  - **Show Traffic Map**—view the traffic map, which displays color-coded traffic on nearby roads. To return to the normal map from the traffic map, touch the traffic icon, and touch **Show Normal Map**. When driving into traffic, the normal map will automatically change to the traffic map.
  - **Traffic Search**—view a list of traffic delays. To view details, touch an item in the list.
  - **Traffic On Route**—view the traffic delays on your route, including the estimated time of each delay and the distance to each delay. If there are multiple traffic delays on your route, touch the arrows to view other traffic delays.

## Avoid Traffic Manually

1. From the map, touch the traffic icon.
2. Touch **Traffic On Route**.
3. Touch the arrows to select a traffic delay, if necessary.
4. Touch  > **Avoid** to avoid the selected traffic delay.

You might still be routed through traffic if no better alternative routes exist.



## Change Traffic Avoidance Settings

1. From the Home screen, touch **Settings > Navigation**.
2. Touch **Automobile**.
3. Touch the button under **Avoidances**.
4. Clear the Traffic check box, and touch **OK**.


## Work with Contacts

### Add a Contact




Your nüvifone can store up to 5,000 contacts.

1. From the Home screen, touch **Contacts**.
2. Touch .
3. Select a category, and enter the information.
4. Touch  to save the contact.

### Edit a Contact

1. From the Home screen, touch **Contacts**.
2. Select a contact.
3. Touch  > **Edit Contact**.
4. Select a category to edit information.

### Assign a Picture to a Contact


1. From the Home screen, touch **Contacts**.
2. Select a contact.
3. Touch  > **Edit Contact**.
4. Touch the picture of the contact.
5. Select a picture.
6. Touch  and  to adjust the zoom level.
7. Touch and drag to move the picture.
8. Touch **Select**.

## Assign a Location to an Existing Contact


1. From the Home screen, touch **Contacts**.
2. Select a contact.
3. Touch **Go!**.
4. Select an address type.
5. Search for the location you want to assign to the contact.
6. Touch **Select**.

## Work with the SIM Phone Book


You can export and import contact information to and from the SIM card.

1. From the Home screen, touch **Contacts**.
2. Touch  > **SIM Phone Book**.
3. Select an option.



## Delete a Contact

1. From the Home screen, touch **Contacts**.
2. Select the contact you want to delete.
3. Touch  > **Delete** > **Yes**.

## Delete Multiple Contacts

1. From the Home screen, touch **Contacts**.
2. Touch  > **Delete Contacts**.
3. Check the box next to the contacts you want to delete.
4. Touch **Delete** > **Yes**.

## Delete All Contacts

1. From the Home screen, touch **Contacts**.
2. Touch  > **Delete Contacts**.
3. Touch  > **Select All**.
4. Touch **Delete** > **Yes**.

## Use SMS/Text Messaging

 
### Send a Text Message

1. From the Home screen, touch **Text Message > New Message**.
2. Touch anywhere in the **To:** box to enter recipient information.
3. Touch **Use Dial Pad** to enter the phone number of the recipient, or touch **Add Contact** to select a contact as the recipient.
4. Touch anywhere in the **Message:** box to enter a message.
5. Enter a message, and touch **Done**.
6. Touch **Send**.

### Read a Text Message

When you receive a text message, a number icon appears next to the Text Message icon on the Home screen. The number in the icon indicates the number of unread text messages.


1. From the Home screen, touch **Text Message**.
2. Touch the conversation to read the text message.
3. Touch **Reply** to compose a reply to the message.

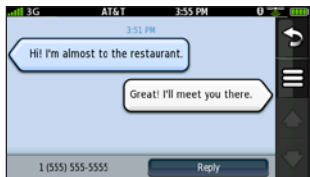


## Send a Location Message

Location messages contain text and GPS information that other nūvifone users can view. Non-nūvifone users receive a plain text message with location information.

**NOTE:** Use caution when sharing your location information with others.

1. From the Home screen, touch **Text Message > New Message**.
2. Touch  > **Insert Location**.
3. Select a location.
4. Select a recipient.
5. Enter a message, if necessary.
6. Touch **Send**.

## Send a Location Message from an Existing Text Message


1. From the Home screen, touch **Text Message**.
2. Select an existing message.
3. Touch  > **Send Location**.
4. Select a location.
5. Enter a message, if necessary.
6. Touch **Send**.

## Use Text Messaging Options

### Call the Sender

1. Select a conversation.
2. Touch  > **Call**.

### Add the Sender to Contacts

1. Select a conversation.
2. Touch  > **Add to Contacts**.
3. Select whether to add the sender as a new contact or to add to existing contact information.

### Forward a Text Message

1. Select a conversation.
2. Select an individual message.
3. Touch **Forward Message**.
4. Enter a recipient.
5. Touch **Send**.

### Delete Text Messages

You can delete individual text messages, entire conversations, or all messages and conversations in your inbox.

#### Delete a Text Message

1. Select a conversation.
2. Select a message marker.
3. Touch **Delete Message**.

The individual message is deleted from the conversation.

#### Delete a Conversation

1. Select a conversation.
2. Touch  > **Delete Conversation**.
3. Touch **Yes**.

#### Delete All Text Messages

1. Touch **Text Message** >  > **Delete All**.
2. Touch **Yes**.

## Use the Camera

### Take a Picture

1. Press the **Camera** key.
2. Press the **Camera** key halfway to focus on the object. A green box appears on the screen. Your nūvifone focuses on the object inside of the box.





3. Press and hold the **Camera** key until you hear the camera click. The picture is saved.




## Add Location Information to a Picture

If your nūvifone is receiving GPS signals when you take a picture, the current GPS location can be assigned to the picture. When you view the picture, you can also navigate to the location, display the location on the map, or save the location as a Favorite.

1. Press the **Camera** key.
2. Touch  > **Accept**, if necessary.
3. Follow the steps to take a picture.




When you view the picture, touch  to navigate to the location, to view the location on the map, or to save the location as a favorite.

## View a Picture






1. Press the **Camera** key.
2. Touch .
3. Select a picture.

Touch the arrows to view additional pictures.

## View a Slideshow

1. Press the **Camera**.
2. Touch .
3. Touch  > **Slideshow**, or touch a picture, and then touch  > **Slideshow**.


## Set Your Wallpaper

1. Press the **Camera** key.
2. Touch .
3. Select a picture.
4. Touch  > **Set as Wallpaper**.
5. Select from the options below to edit the picture.
  - Touch  and  to adjust the zoom level.
  - Touch and drag to move the picture.
  - Touch  to rotate the picture.
6. Touch **Set Portrait**.
7. Repeat the steps to set up the wallpaper for Landscape mode, and touch **Set Landscape**.

The wallpaper image appears when the nūvifone is locked.






## Share a Picture

1. Press the **Camera** key.
2. Touch .
3. Select a picture.
4. Touch **Share**.

Your nūvifone creates an e-mail message with the picture included as an attachment.

## Navigate to a Picture



1. Press the **Camera** key.
2. Touch .
3. Select a picture.
4. Touch .
5. Touch  > **Go!**

## Use the Music Player



You must transfer music files to your nüvifone before playing songs or creating playlists. For more information on transferring files, see [page 59](#).

The music player supports MP3 files.

### Play a Song


1. From the Home screen, touch **Music Player**.
2. Touch .
3. Select a category.
4. Select an option:
  - Select a song or a playlist. The selected song or playlist begins playing.
  - Touch  > **All Songs**. All the songs in the selected category are added to the current playlist.



### Create a Playlist

1. From the Home screen, touch **Music Player**.
2. Touch .
3. Touch **Playlists** > **New Playlist**.
4. Select a category.
5. Select songs to add to the playlist, or touch  > **Select All Songs** to add all songs.
6. Touch **OK**. The playlist is saved with a generic name (for example, "Playlist 1").

Playlists are saved as .m3u files on the nüvifone.

### Play a Playlist

1. From the Home screen, touch **Music Player**.
2. Touch .
3. Touch **Playlists**.
4. Select a playlist.
5. Select a play mode, if necessary:


- —play the songs in the playlist in random order (shuffle).
  - —repeat the playlist after all the songs have played.
6. Select a song to begin playing the playlist.

## Save the Current Playlist



1. From the Music Player, touch the playlist display.

*Playlist display*




2. Touch  > **Save**.
3. Enter a name, and touch **Done**.

## Edit a Playlist

1. From the Home screen, touch **Music Player**.
2. Touch .
3. Touch **Playlists**, and select a playlist.
4. Touch .
5. Select an option:
  - **Rename**
  - **Remove Playlist**
  - **Add Songs**
  - **Remove Songs**

## Browse the Web








### Enter a URL

1. From the Home screen, touch **Web Browser**.
2. Touch .
3. Enter a URL, and touch **Done**.




## Use the Browser

Use the following icons when browsing the Internet.

- —zoom in on the center of the screen.
- —zoom out from the center of the screen.
- —return to the Home screen.
- —refresh the current Web page.
- —stop loading the Web page.
- —enter a URL.
- —return to the previous Web page in your history.


## Tips for Browsing the Web

- Touch and drag the screen to scroll a Web page.
- Touch links, text-entry boxes, and other interactive items to activate them.
- Touch  to view the following options:
  - **Bookmarks**—display a list of bookmarks.
  - **E-mail To**—send the URL to an e-mail recipient.
  - **History**—display a list of Web sites you have visited.
  - **Forward**—advance to the next Web page in your History.

## Set Your Browser Home Page

1. From the Home screen, touch **Settings > Applications > Browser**.
2. Touch the button under **Home Page**.
3. Enter a URL, and touch **Done**.

## Save Bookmarks

1. Navigate to the Web page you want to save.
2. Touch  > **Bookmarks > Add Current Page**.

## Clear Your History

1. From the Home screen, touch **Settings > Applications > Browser**.
2. Touch the button under **History**.
3. Touch **Yes**.

## Use E-mail

Your nüvifone can automatically configure account information for some e-mail accounts.

If additional information is required, your nüvifone prompts you to enter the required information. Account information is available from your e-mail account provider.

**NOTE:** Yahoo!® mail is accessible only if you have subscribed to the Yahoo! Mail Plus service which includes POP access.

## Set Up E-mail




1. From the Home screen, touch **E-mail**.
2. Touch **Add Account**.
3. Enter the e-mail address, and touch **Done**.
4. Enter the e-mail username (if necessary), and touch **Done**.
5. Enter the e-mail password, and touch **Done**.
6. If prompted, follow the prompts to enter e-mail account information from your e-mail account provider.
7. If necessary, touch **Mail Settings** or **SMTP Settings**, and enter the e-mail account information.
8. Touch **Test Settings** to test the account settings.
9. Touch **Save** to save the account settings.

## Send an E-mail Message




1. From the Home screen, touch **E-mail**.
2. Touch **Compose**.
3. If necessary, touch **From:** to select the e-mail account from which you want to send the e-mail message. If you do not select an e-mail account, the e-mail message will be sent from the default e-mail account. For more information on setting your default e-mail account, see [page 50](#).
4. Touch **To:** to enter recipient information.

To enter additional recipients, including carbon (cc) and blind carbon (bcc) copies, select one or more of the following options:

- Touch **To:** > **Add To:** to enter another recipient.
  - Touch **To:** > **Add Cc:** to enter carbon copy recipients.
  - Touch **To:** >  > **Add Bcc:** to enter blind carbon copy recipients.
5. Touch the corresponding boxes to enter a subject and to add an attachment.
  6. Touch **Message** to enter message text, and touch **Done**.
  7. To include your current location information in the message, touch the icon in the lower-right corner.
    - —Location information will be included.
    - —Location information will not be included.
  8. Touch **Send**.

## Check E-mail Messages

When you receive a new e-mail message, a number indicating the number of unread messages appears next to the e-mail icon on the Home screen.



1. From the Home screen, touch **E-mail**.
2. Touch  > **Check E-mail**.
3. Select an e-mail message to view it.
4. Touch **Reply** or **Reply All** to write a response. Touch **Forward** to send the e-mail message to another recipient.

## Set an Interval to Check E-mail Messages

You can have your nūvifone automatically check for new e-mail messages at a set interval.

1. From the Home screen, touch **Settings**.
2. Touch **Applications > E-mail**.
3. Select an e-mail account.
4. Touch **Edit Account Settings**.
5. Touch **Mail Settings**.
6. Touch the button below **Check Interval**.
7. Select an interval, and touch **OK**.


## Delete E-mail Messages

1. From the Home screen, touch **E-mail**.
2. Touch  > **Delete Messages**.
3. Select the e-mail message you want to delete, or touch  > **Select All**.
4. Touch **Delete > Yes**.




## Use E-mail Options

### Assign Options to Composed Messages


From the e-mail composition page, touch  for the following options:

- **Set Importance**—assign an importance of Low, Normal, or High to the e-mail message.
- **Save to Drafts**—save the current message to your Drafts folder without sending it.
- **Send Later**—keep the message in the Outbox until the next time the nūvifone is scheduled to check for e-mail.


### Change E-mail Accounts

1. From the Home screen, touch **E-mail**.
2. Touch  > **Change Folder**.
3. Touch **Change Account**.
4. Select an account, or touch **Add Account** to add an e-mail account.


### Access Your Drafts Folder

1. From the Home screen, touch **E-mail**.
2. Touch  > **Change Folder**.
3. Touch **Drafts**.


### Access Other Folders Within an E-mail Account

1. From the Home screen, touch **E-mail**.
2. Touch  > **Change Folder**.
3. Select a folder to view the contents.

## Search for an E-mail Message

1. From the Home screen, touch **E-mail**.
2. Touch  > **Search Current Folder**.
3. Enter the subject or sender of the e-mail message for which you are searching.
4. Touch **Done**.


## Set Your Default E-mail Account

1. From the Home screen, touch **Settings > Applications > E-mail**.
2. Touch  > **Default Account**.
3. Select an e-mail account.
4. Touch **OK**.

## Edit E-mail Account Settings

1. From the Home screen, touch **Settings > Applications > E-mail**.
2. Select an e-mail account.
3. Touch **Edit Account Settings**.
4. Touch **Mail Settings** or **SMTP Settings** to change e-mail account details.

## Delete an E-mail Account

1. From the Home screen, touch **Settings > Applications > E-mail**.
2. Select an e-mail account.
3. Touch  > **Delete Account**.
4. Touch **Yes**.

## Use Ciao!™

A data connection is required for this feature.

Ciao! periodically sends your location to our partner networks and downloads the most recent location of your friends. This application only submits your location when you tell it to, unless you enable automatic updates. Ciao! is not available in all areas.

**NOTE:** Use caution when sharing your location information with others.

## Register with Ciao!

Before you join Ciao! for the first time, you must register your device.

**NOTE:** If you have registered at <http://my.garmin.com> (see [page 80](#)), you are already registered for Ciao!.

1. From the Home screen, touch **Ciao!**.
2. Read and accept the on-screen messages.
3. Touch **Register**. The Web browser launches.
4. Follow the steps to register your nūvifone. After registering, you receive an SMS/text message for verification.
5. Open the SMS/text message, and click the link to complete the verification process.

## Join Ciao!

After you register your device, you can join Ciao!.

1. From the Home screen, touch **Ciao!**.
2. Read and accept the registration information.
3. Select a location update, **Manual** or **Automatic**.
4. Enter a display name, and touch **Done**.
5. Touch **Complete**. Your location is updated and sent to your friends.

## Invite a Friend

1. From the Home screen, touch **Ciao! > Invite**.
2. Select an option to enter a phone number.
3. Touch the button under **Friend's Country**, and select a country.
4. Touch **Send Invitation**.
5. Select the network your friend is using. If your friend is using Ciao!, you can select any network in the list. Touch **OK**.

## Accept an Invitation

When you receive an invitation, a message appears on the screen.

1. Touch **OK** or **Yes**.
2. Select the invitation in your list of friends.
3. Touch **Accept**.
4. Touch **Yes** to allow the sender to view your location. The sender's location information appears.
5. Touch **Go!** to create a route to the sender's location, or touch **Map** to view the sender's location on the map.

After you accept an invitation from a friend, you become a “trusted” friend on your friend's list, and you can view location information for each other.

## View Trusted Friends

If your list of friends shows the distance to the friend, that friend is “trusted.” The friend has accepted an invitation from you, or you have accepted an invitation from the friend.

1. From the Home screen, touch **Ciao!**.
2. Touch a friend in the list. The location information for the friend appears, including the amount of time since the last location information update.
3. Touch **Go!** to create a route to the friend, or touch **Map** to view the friend's location on the map.

## View Invited Friends

If your friend is “invited,” you have invited the friend, but he or she has not accepted or declined the invitation.

1. From the Home screen, touch **Ciao!**
2. Select an Invited friend in the list.
3. To remove the invitation, touch **Remove Invitation**.



## View Pending Friends

If your friend is “pending,” the friend has invited you, but you have not accepted or declined the invitation.



1. From the Home screen, touch **Ciao!**
2. Select a Pending friend in the list.
3. Touch **Accept** or **Decline**.

## Remove a Friend


You can only remove trusted friends or invited friends.

1. From the Home screen, touch **Ciao!** >  > **Remove**.
2. Select the friends you want to remove, or touch  > **Select All**.
3. Touch **Remove**.
4. Touch **Yes**.



## Hide/Show Your Location

1. From the Home screen, touch **Ciao!** >  > **Hide**. Your current location is hidden from your friends.
2. To stop hiding, touch **Ciao!** >  > **Stop Hiding**.



## View My Details

1. From the Home screen, touch **Ciao!** > **My Details**.
2. To update your current location information, touch **Send Update**.
3. To change your status message, touch **Change Status**, and enter a new status message.
4. Touch  for the following options:
  - **Change Name**—change your display name.
  - **Change Updates**—touch **Auto** to update your location information automatically at regular intervals. Touch **Manual** to update your position only when you touch **Send Update**.

## View Ciao! Networks

1. From the Home screen, touch **Ciao!** >  > **Privacy**.
2. Touch  > **Networks**.
3. Touch a hyperlink to view a network Web site in the Web browser.

## Disable Ciao!

1. From the Home screen, touch **Ciao!** >  > **Privacy**.
2. Touch  > **Disable Ciao!**. All the Ciao! information stored on your device is removed. You no longer send any position updates.

To enable Ciao!, you must join Ciao! again. If you join Ciao! again, you do not need to register your device again. For more information, see [page 52](#).

## Connect to Other Devices


### About Bluetooth Technology

Bluetooth wireless technology establishes a wireless connection between devices, such as another phone with Bluetooth technology and the nūvifone. To pair and connect, both devices must be turned on and be within 10 meters of each other.

### Activate Bluetooth Technology

1. From the Home screen, touch **Settings > System > Bluetooth**.
2. Touch **Bluetooth Off**.
3. Touch **On > OK**.

### Make Your nūvifone Discoverable

1. From the Home screen, touch **Settings > System > Bluetooth**.
2. Touch  **> Discoverable**.
3. Touch **On > OK**.

### Pair with a Device

The first time you use two devices together, you must “pair” them by establishing a relationship using a PIN/passkey.

1. Verify that the device you want to pair with is in pairing mode.
2. On the nūvifone Home screen, touch **Settings > System > Bluetooth**.
3. Touch **Add Device**. An hourglass icon appears, indicating that the nūvifone is scanning for devices. If you do not see an hourglass icon, touch **Scan**.
4. Select the device you want to add, and touch **Yes**.



5. Enter the passkey of the device, and touch **OK**.

**NOTE:** The passkey for the nūvifone is **1234**.

After the initial pairing, the two devices can connect automatically each time you turn them on.

### Connect to a Paired Device

You must pair with a device before you are able to connect to it.


1. From the Home screen, touch **Settings > System > Bluetooth**.
2. Select a paired device, and touch **Connect Device**.

### Remove a Paired Device

1. From the Home screen, touch **Settings > System > Bluetooth**.
2. Select a paired device, and touch **Remove Pairing**.

### Change Your Friendly Name

A friendly name identifies your nūvifone on devices with Bluetooth technology.

1. From the Home screen, touch **Settings > System > Bluetooth**.
2. Touch  > **Friendly Name**.
3. Enter a friendly name, and touch **Done**.

### Deactivate Bluetooth Technology

1. From the Home screen, touch **Settings > System > Bluetooth**.
2. Touch **Bluetooth On**.
3. Touch **Off > OK**.

## Synchronize Your nüvifone

By synchronizing your nüvifone with your computer, you can transfer your Microsoft® Outlook® contacts and calendar events to your nüvifone contact list and calendar.

You must download and install nüvifone Sync Agent on your computer before synchronizing with your computer.

### Download and Install nüvifone Sync Agent

Go to [www.garmin.com/syncagent](http://www.garmin.com/syncagent) to learn how to download nüvifone Sync Agent.

**NOTE:** nüvifone Sync Agent software is not compatible with Mac® computers.

## Synchronize With Your Computer

1. Verify that you have downloaded and installed nüvifone Sync Agent software on your computer.
2. Connect the nüvifone to your computer using a mini-USB cable.
3. Touch **No** when asked if you want to enter mass storage mode.
4. Touch **Tools** > **Synchronize**.

## Transfer Files

You can transfer files, such as MP3s and JPEGs, to your nüvifone.

1. If necessary, insert a microSD card in the memory card slot on the side of the nüvifone.
2. Connect the nüvifone (not the cradle) to your computer using a mini-USB cable.
3. Touch **Yes** to change to mass storage mode.  
Two additional drives (volumes) appear in the list of drives on your computer. One is the available storage in the internal memory of the nüvifone. The other is the memory card inserted into the nüvifone.
4. Double-click the My Computer icon (Windows® computers) or the mounted-volume icon (Mac® computers) on your computer.
5. Copy and paste the files you want to transfer into the Garmin folder.


**NOTE:** Your nüvifone cannot send or receive phone calls or text messages while in mass storage mode.

## Set Up a Wi-Fi Connection

### Turn On Wi-Fi


1. From the Home screen, touch **Settings > System > Wi-Fi**.
2. Touch **Wi-Fi Off**.
3. Touch **On > OK**.

### Connect to a Network


1. From the Home screen, touch **Settings > System > Wi-Fi**.
2. Select a network.  indicates networks that require an encryption key.
3. Enter an encryption key, if necessary, and touch **Done**.

## Add a Network

If the network you want to connect to is not listed, you can manually add it to your list.

1. From the Home screen, touch **Settings > System > Wi-Fi**.
2. Touch  > **Add**.
3. Touch the button under **Network Name**, enter a name or SSID, and touch **Done**.
4. Touch the button under **Security**, select a security type, and touch **OK**.
5. Enter a password and select a WEP Key Type, if necessary.
6. Touch **OK**.

## Ignore a Network

1. From the Home screen, touch **Settings > System > Wi-Fi**.
2. Select a network.
3. Touch  > **Forget this network**.
4. Touch **Yes**. The network is removed from the list of Known Networks.

## Turn Off Wi-Fi

1. From the Home screen, touch **Settings > System > Wi-Fi**.
2. Touch **Wi-Fi On**.
3. Touch **Off > OK**.

## View the Weather Forecast

This service is available as a paid subscription. A data connection is required for this feature.


Your nūvifone provides current local weather conditions and a six-day forecast.

Weather information is updated periodically.

1. From the Home screen, touch **Weather**.
2. To view a detailed forecast, select a day.




## View a Weather Forecast for Another Location

1. From the Home screen, touch **Weather**.
2. Touch  > **Weather Near**.
3. Select an option.

**NOTE:** You must add a location to your Favorites before you can search for a weather forecast by **A Favorite**. For more information on adding favorites, see [page 21](#).



## Update Weather Manually

1. From the Home screen, touch **Weather**.
2. Touch  > **Update Weather**.



## Use the Calendar

Use the calendar to schedule appointments, meetings, and other events. You can also set the calendar to remind you of your appointments. If you use Outlook on your computer, you can synchronize appointments between your nūvifone and your computer.

### View the Calendar




1. From the Home screen, touch **Calendar**. The current month appears, with the current date circled in red.
2. Touch  or  to change the month.
3. Touch **Today** to return to the current day.
4. Touch **Agenda** to view your upcoming appointments.
5. Touch **Month** to return to the calendar view.

## Schedule an Appointment


1. From the Home screen, touch **Calendar**.
2. Touch  or  to change the month.
3. Select the date on the calendar, and touch **New**.
4. Touch **Subject**, and enter a subject.
5. Touch **Location**, and select an option.
6. Select a start time and an end time.
7. Touch **Reminder**, and select a time.
8. Select how often you want the appointment to recur:
  - Touch **Repeat**, and select an option.

- Touch **Repeat End**, and select the date on which you want the appointment to stop recurring.
9. Touch **Notes**, and enter a note.
  10. Touch **Save**.


## View an Appointment

1. From the Home screen, touch **Calendar**.
2. Touch  or  to change the month.
3. Select the date on the calendar, and touch **Agenda**.
4. Select an appointment to view details.
5. Touch the weather icon to view the weather forecast for the date of the appointment, if available.
6. If the appointment includes location information, touch  > **Go!** to create a route to the appointment.

## View Free Time

1. From the Home screen, touch **Calendar**.
2. Select the date on the calendar, and touch **Agenda**.
3. Touch  > **Show Free Time**.



## Delete an Appointment

1. From the Home screen, touch **Calendar**.
2. Select a date on the calendar, and touch **Agenda**.
3. Select an appointment.
4. Touch  > **Delete**.

## Use the Tools

### Use Where Am I?

The Where Am I? page contains information about your current location, including the nearest hospitals, police stations, and fuel. This is a helpful feature if you need to tell emergency personnel your location.

1. From the Home screen, touch **Tools > Where Am I?**
2. Touch an icon to view the nearest locations in that category.
3. Touch  > **Satellite Info** to view GPS signal information.
4. Touch  > **Save Location** to save your current location.

### Use the Calculator

From the Home screen, touch **Tools > Calculator** to use the calculator.

## Use the Clock

### View Different Time Zones

The nüvifone automatically detects your time zone. However, you can view the current time in a different time zone, if needed.

**NOTE:** Viewing the time zone of a different city does not change the time displayed on your nüvifone.

1. From the Home screen, touch **Tools > Clock**.
2. Touch a city.
3. Enter all or part of a city name, and touch **Done**.
4. Select the city from the list, and touch **Select**.

To change the time zone displayed on your nüvifone, see [page 72](#).




## Set an Alarm

1. From the Home screen, touch **Tools > Clock > Alarm**.
2. Touch **Add Alarm**.
3. Touch **Alarm Time**, and select an alarm time.
4. Touch **Ringer**, and select a ringer, if necessary.
5. Touch **Repeat**, and select how often you want the alarm to repeat. To set the alarm for one time only, touch **Never**.
6. Touch **Repeat End**, and select an end date, if necessary.
7. Touch **Save**.
8. When the alarm sounds, touch **Snooze** to hear the alarm again in five minutes, or touch **Dismiss**.

## Disable an Alarm

Touch an alarm in the list, and touch **Disabled**.

## Delete an Alarm

Touch an alarm in the list, and touch  **> Delete > Yes**.

## View the World Map

The map displays areas of day and night across the world.




From the Home screen, touch **Tools > Clock > World Map**.

## Use the Stop Watch

1. From the Home screen, touch **Tools > Clock**.
2. Touch **Stop Watch**.
3. Touch **Start** to start the timer.
4. Touch **Lap/Split** to record the lap time and the split time.
5. Touch **Stop** to stop the timer.
6. Touch the Lap and Split times to view details.
7. Touch **Reset** to reset the lap time and the split time.


## Check Flight Status

A data connection is required for this feature.

1. From the Home screen, touch **Tools > Flight Status**. A list of airports near your current location appears. Major airports are listed first, and all other airports are sorted by distance.
2. To view flight information from an airport near another city, touch  > **New City**, enter all or part of the city name, and select a city.
3. Select an airport.
4. Select an option:
  - —touch **View Map** to view the airport on the map, **Save** to save it as a favorite, **Send Location** to send the location, or **Go!** to create a route to the airport.
  - **Check Flight Number**—enter a flight number, and touch **OK**. Select a flight.
- **Search Arrivals**—select an airline, and select a flight.
- **Search Departures**—touch **By Destination City, By Airport Code, or All Departures**. Enter the appropriate data, and select a flight.
5. If your flight has multiple connections, touch  > **Next Leg**, and select the next flight.

## Use the Converter

### Convert Units


1. From the Home screen, touch **Tools > Converter**.
2. Touch the button next to **Convert**. Select the type of items to be converted, and touch **OK**.
3. Touch a unit of measurement, select the unit type, and touch **OK**.
4. Touch a number, enter the number of units to be converted, and touch **OK**.
5. To clear the number of units, touch  > **Clear**.

### Automatically Update the Currency Rates

This service is available as a paid subscription. A data connection is required for this feature.

1. From the Home screen, touch **Tools > Converter**.
2. Touch the button next to **Convert**.
3. Touch **Currency > OK**.
4. Touch **Update**. The nūvifone downloads the current conversion rates.

### Manually Update Conversion Rates


1. From the Home screen, touch **Tools > Converter**.
2. Touch the button next to **Convert**.
3. Touch **Currency > OK**.
4. Touch  > **Custom**.
5. Touch the currency button at the top of the screen, select a currency, and touch **OK**.
6. Touch a conversion rate.
7. Enter a new conversion rate, and touch **OK**.
8. Touch **Save**.

## Use Notes

### Write a Note

1. From the Home screen, touch **Tools > Notes > New**.
2. Enter the note text, and touch **Done**.

### Send a Note

1. From the Home screen, touch **Tools > Notes**.
2. Select a note in the list.
3. Touch  > **Send**.
4. Touch **SMS** or **E-mail**.
5. Enter the required information, and touch **Send**.

## Work with Checklists


### Create a Checklist

1. From the Home screen, touch **Tools > Checklist > New Checklist**.
2. Enter a new checklist name, touch **Done**.


### Edit a Checklist

1. From the Home screen, touch **Tools > Checklist**.
2. Select a checklist.
3. Touch **Add/Remove Items**.
4. Edit the checklist:
  - Touch an item to check it or uncheck it.
  - Touch **New Item**, enter the new item, and touch **Done**.


## Use a Checklist

1. From the Home screen, touch **Tools > Checklist**.
2. Select a checklist.
3. Select items in the checklist.
4. Touch .

## Remove Items from a Checklist

1. From the Home screen, touch **Tools > Checklist**.
2. Select a checklist.
3. Touch **Add/Remove Items**.
4. Touch  > **Delete Items**.
5. Select the items you want to remove.
6. Touch **Delete > Yes**.

## Add Items From a Different Checklist

1. From the Home screen, touch **Tools > Checklist**.
2. Select a checklist.
3. Touch  > **Copy List Items**.
4. Select the list you want to copy from.
5. Select the items you want to copy.
6. Touch **Copy**.

## Customize Your nüvifone

### Change General Settings

1. From the Home screen, touch **Settings > System > General**.
2. Change the following settings:
  - **Airplane Mode**—touch **On** to deactivate the telephone, network, and Bluetooth technology features. You cannot send or receive new e-mail or SMS/text messages. You can continue using other features of the nüvifone, and you can manually activate Wi-Fi and Bluetooth technology, if needed.
  - **Distance Units**—touch **Miles** or **Kilometers**.
  - **Temperature Units**—touch **Fahrenheit (°F)** or **Celsius (°C)**.

- **Safe Mode**—touch **On** to activate safe mode, which prevents you from searching for locations when your vehicle is in motion.
- **GPS Simulator**—touch **On** to simulate GPS functions, including simulating routes, when you are not receiving GPS signals.
- **Connected Services Feedback**

### Change Security Settings

#### Change Device Security Settings

Use these settings to require a PIN to unlock the nüvifone.

1. From the Home screen, touch **Settings > System > Security > Device**.
2. Change the following settings:


- **Locking**—prevent the nüvifone from being used unless you enter a PIN. Enter a PIN, and touch **OK**.
- **PIN**—touch **Change** to change your PIN.

## Reset Your PIN

If you forget the PIN to unlock your nüvifone, you can reset the PIN.

**NOTE:** This process restores all settings to factory defaults and deletes all user-entered information. Items that you have saved on your device (such as Favorites) are erased. Map data is not erased. Deleted information cannot be recovered.

1. Remove the battery and the SIM card.
2. Reinstall the battery. Your nüvifone will turn on.
3. Touch **OK**.
4. Touch **Emergency Call**.

5. Enter “\*GARMIN#1234#” on the touch keypad.
6. Touch . Your nüvifone will restart.

You can reinstall your SIM card at any time.

## Change SIM Card Security Settings

Use these settings to require a PIN to enable all non-emergency features of the nüvifone. You can still use the nüvifone to contact emergency services without a PIN. You can remove the SIM card to use the non-telephone features of the nüvifone.

1. From the Home screen, touch **Settings > System > Security > SIM Card**.
2. Change the following settings:
  - **SIM PIN Protection**—activate SIM PIN protection.
  - **PIN2**—touch **Change** to change your PIN.

If you forget your SIM PIN, contact your mobile service carrier to obtain a Personal Unblocking Key (PUK).

## Change Language Settings

1. From the Home screen, touch **Settings > System > Language**.
2. Change the following settings:
  - **Voice**—select a language to use for all voice prompts and messages. Touch **Preview** to hear a sample of the voice.

- **Text**—change all on-screen text to the selected language. Changing the text language does not change the language of map data, such as street names, or user-entered data.
- **Keyboard**—select a language for the default keyboard.

## Change Date/Time Settings


1. From the Home screen, touch **Settings > System > Date/Time**.
2. Change the following settings:
  - **Date Format**
  - **Time Format**
  - **Time Zone Selection**



## Change Audio Settings

### Turn On Vibrate

1. From the Home screen, touch **Settings > Audio > Vibrate**.
2. Select an option. Touch **When Muted** to set the nūvifone to vibrate with no sound when the volume has been muted.
3. Touch **OK**.

If vibrate is on, the  vibrate icon appears when the nūvifone screen is locked.

### Change Sound Settings

1. From the Home screen, touch **Settings > Audio > Sounds**.
2. Touch a button to set a sound for a notification type.
3. Select a sound category.
4. Touch **Preview** to listen to the selected sound.
5. Touch **OK**.

### Change Your Ringtone

1. From the Home screen, touch **Settings > Audio > Sounds**.
2. Touch the button under **Phone**.
3. Touch **Ringtones**.
4. Select a ringtone.
5. Touch **Preview** to listen to the selected sound.
6. Touch **OK**.

### Change Mixer Settings

1. From the Home screen, touch **Settings > Audio > Mixer**.
2. Change the following settings:
  - **Navigation**—change the volume level of navigation prompts.
  - **Music**—change the volume of MP3 playback.

## Change Proximity Points Settings

Proximity points are included with custom POIs. Go to [www.garmin.com/poiloader](http://www.garmin.com/poiloader) for more information.

1. From the Home screen, touch **Settings > Audio > Proximity Points**.
2. Change the following settings:
  - **Proximity Alerts**—select to hear an audio alert when you approach proximity points.
  - **TourGuide**—select to automatically play the audio when you approach a TourGuide point.

## Change Phone Settings

1. From the Home screen, touch **Settings > Phone**.
2. Change the following settings:
  - **Data Connection**—select a data connection activation preference. Enter this information as provided by your phone carrier.

**NOTE:** Data charges apply if **On Demand** or **On** are selected.

- **Call Forward**
- **Call Waiting**
- **Send My Caller ID**—select a preference for sending caller ID information when you make phone calls. Touch **Set by Network** to send caller ID information according to the settings of your network provider.
- **My Number**
- **Voice Mail Number**

- **TTY**—touch **On** to enable TTY (teletypewriter) mode.

## Change Navigation Settings

### Change Navigation Settings Based on Usage Mode

You can use different navigation settings for Automobile usage mode and Pedestrian usage mode.

1. From the Home screen, touch **Settings > Navigation**.
2. Touch **Automobile** or **Pedestrian**.
3. Change the following settings:
  - **Route Preference**—select a preference for calculating routes.
  - **Avoidances**—select the types of roads and maneuvers you want the nüvifone to attempt to avoid when creating routes. (Only available in Automobile usage mode.)

- **Map Detail**—select the level of detail you want the map to display. More detail may result in slower map drawing.
- **Map View**—select the perspective of the Map page. Track Up displays the map in two dimensions (2D) with your direction of travel at the top. North Up displays the map in 2D with North at the top. 3D displays the map in 3D, Track Up orientation (default).
- **Vehicle**—select a vehicle to represent your position on the map. Go to [www.garmingarage.com](http://www.garmingarage.com) for more vehicles.
- **Trip Log**—touch **Show** to display the trip log on the map.

## Change Application Settings

### Change E-mail Mail Settings

1. From the Home screen, touch **Settings > Applications > E-mail**.
2. Select an account.
3. To validate SSL certificates prior to sending or receiving e-mail, select the **Validate SSL Certificates** check box.
4. Touch **Edit Account Settings**.
5. Touch **Mail Settings**.
6. Change the following settings:
  - **User name**
  - **Password**
  - **Mail Server**
  - **Mail Port**
  - **Encryption**
  - **Mail Protocol**
  - **Check Interval**
  - **Base Folder**

### Change E-mail SMTP Settings

1. From the Home screen, touch **Settings > Applications > E-mail**.
2. Select an account.
3. Touch **Edit Account Settings**.
4. Touch **SMTP Settings**.
5. Change the following settings:
  - **E-mail Address**—edit the e-mail address.
  - **Display Name**—enter a display name. This name does not have to match your e-mail address.
  - **SMTP Server, SMTP Port, SMTP Username, SMTP Password, SMTP Authentication, SMTP Encryption**—enter this information as provided by your e-mail account provider.


- **Reply To**—enter a name that will appear when a recipient receives an e-mail message from you.
- **Use Signature**—touch **Yes** to include a signature in messages sent from the selected e-mail account.
- **Signature**—enter an e-mail signature.

## Change Browser Settings

1. From the Home screen, touch **Settings > Applications > Browser**.
2. Change the following settings:
  - **Home Page**—enter a URL to set your home page.
  - **JavaScript**—touch **On** to allow JavaScript.
  - **Accept Cookies**—touch **Yes** to accept cookies.
  - **Cookies**—touch **Clear** to clear cookies.
  - **History**—touch **Clear** to clear the browser history.
  - **Cache**—touch **Clear** to clear the browser cache.

## Change the Main Menu Order

You can customize the order of the scrolling icons on the Home screen.

1. From the Home screen, touch **Settings > Applications > Main Menu Order**.
2. Touch a menu item.
3. Touch the position in the list to which you want to move the item. The item is inserted before the selected item.
4. Touch  > **Restore** to restore the original main menu order.


## Change Display Settings

1. From the Home screen, touch **Settings > Display**.
2. Change the following settings:
  - **Brightness**—change the brightness of the screen. Decreasing the brightness can save battery power.
  - **Color Mode**—touch **Daytime** for a light background, **Nighttime** for a dark background, or **Auto** to automatically switch between the two based on the sunrise time and the sunset time for your current location.
  - **Auto Lock**—select a time. The screen automatically locks if the nūvifone is inactive for the selected length of time.


- **Screen Shot**—activate to take a picture of the nüvifone screen. Touch the **Camera** key to take a picture of a screen. Screen shots are saved in the Garmin\ Screenshot directory on the nüvifone.

## Restore Settings

### Restore Individual Settings

1. From the Home screen, touch **Settings**.
2. Select the setting you want to restore.
3. Touch  > **Restore**.


### Restore All Settings

1. From the Home screen, touch **Settings**.
2. Touch  > **Restore**.

## Clear All User Data




**NOTICE:** This process restores all settings to factory defaults and removes all user data. Any items that you have saved on your nüvifone, such as Favorites, photos, and contacts, are erased. Map data is not erased. Deleted information cannot be recovered.

1. From the Home screen, touch **Settings**.
2. Touch  > **Master Clear**.

## Appendix

### Access AT&T Service Numbers

Use the AT&T service numbers to manage your account, including checking your bill balance, paying your bill, and contacting customer care.

1. Touch **Call > Contacts**.
2. Touch  > **AT&T Service Numbers**.
3. Select an item.


Depending on the item selected, you will either receive a text message with the requested information or your nūvifone will call the phone number listed with the item.

### Register Your Product

Register your product at <http://my.garmin.com> to help us better support you. Keep the original sales receipt, or a photocopy, in a safe place.

**NOTE:** If you have registered for Ciao! (see [page 51](#)), you are already registered at <http://my.garmin.com>.

### View Software Information

1. From the Home screen, touch **Settings**.
2. Touch  > **About**.
3. Touch **Copyrights** to view a list of copyrights.
4. Touch a copyright to view more information.



## **nüMaps Guarantee™**

To receive one free map update (if available), register your nüvifone at [www.garmin.com](http://www.garmin.com) within 60 days of acquiring satellites and driving with your nüvifone. You are not eligible for the free map update if you register by phone or wait longer than 60 days after the first time you drive with your nüvifone.

## **Additional Maps**

You can purchase additional maps for your nüvifone. To see a list of maps that are compatible with your nüvifone, go to [www.garmin.com](http://www.garmin.com).

## **Update the Software**

Go to [www.garmin.com](http://www.garmin.com) to download the latest software update.

## **Reset the nüvifone**


If the nüvifone stops functioning, turn off the nüvifone, and then turn on the nüvifone.

## **About GPS Satellite Signals**

Your nüvifone must acquire GPS (Global Positioning System) satellite signals to navigate. The nüvifone automatically attempts to acquire satellite signals.

If you are indoors, near tall buildings or trees, or in a parking garage, your nüvifone might not acquire satellites. To acquire satellite signals more quickly, take your nüvifone outside, to an area free from tall obstructions.

## About the Battery

The  battery icon in the status bar indicates the status of the internal battery. To increase the accuracy of the battery gauge, fully discharge the battery and then fully charge it; do not unplug the nüvifone until it is totally charged.

### Maximize the Battery Life

- Turn down the backlight at **Settings > Display**. Touch the button under **Brightness**.
- Lock your nüvifone if you are not using it. See [page 9](#) and [page 70](#) for more information.
- Do not leave your nüvifone in direct sunlight. Avoid prolonged exposure to excessive heat.

## Replace the Battery



---

**WARNING:** Only use the correct battery type. Using an incorrect battery may present a risk of explosion.

---

If you need to replace the battery in the nüvifone, use a Garmin-approved lithium-ion battery. For more information on purchasing a replacement battery, go to [www.garmin.com](http://www.garmin.com).



---

**WARNING:** Do not use a sharp object to remove the battery. A sharp object may puncture the battery which may present a risk of fire, chemical burn, electrolyte leak, and/or injury.

---

 
Contact your local waste disposal department for information on properly disposing of the battery and device.

## Change the Fuse in the Vehicle Power Cable

If your device does not charge in your vehicle, you may need to replace the fuse located at the tip of the vehicle power cable. The vehicle power cable is an optional accessory.

**NOTE:** When replacing the fuse, do not lose any of the small pieces and make sure they are put back in the proper position.

1. Unscrew the end piece, and remove it.
2. Remove the fuse (glass and silver cylinder), and replace it with a 1A fast blow fuse of the same size.
3. Ensure that the silver tip is located in the end piece. Screw on the end piece.

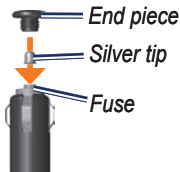


## Mount on Your Dashboard

Use the enclosed mounting disk to mount your device to the dashboard and comply with certain state and local regulations.

**NOTE:** The permanent mounting adhesive is extremely difficult to remove after it is installed.

1. Clean and dry the dashboard where you are placing the disk.
2. Remove the backing from the adhesive on the bottom of the disk.
3. Place the disk on the dashboard.
4. Remove the clear plastic cover from the top of the disk.
5. Place the suction cup mount on top of the disk. Flip the lever down (toward the disk).

## Troubleshooting

Problem/Question	Solution/Answer
My nūvifone will not acquire satellites.	<ul style="list-style-type: none"><li>• Ensure the data connection is turned on. From the Home screen, touch <b>Settings &gt; Phone &gt; Data Connection &gt; On</b>.</li><li>• Ensure that the GPS simulator is turned off. From the Home screen, touch <b>Settings &gt; System &gt; General &gt; GPS Simulator &gt; Off</b>.</li><li>• Ensure that you are receiving satellite signals. Touch <b>View Map</b>. Touch the vehicle icon. Touch  &gt; <b>Satellite Info</b>.</li><li>• Verify that the GPS antenna is unobstructed. You must be outdoors or in a vehicle and have a clear view of the sky. Solid materials (except untinted glass), buildings, and dense trees can block satellite signals.</li><li>• Ensure that the GPS has enough time to initialize. When the GPS is turned on for the first time, it may take a few minutes to initialize.</li></ul>
My nūvifone will not turn on.	<ul style="list-style-type: none"><li>• Charge the battery.</li><li>• Replace the battery. See <a href="#">page 82</a> for more information.</li></ul>

Problem/Question	Solution/Answer
I need to turn off the wireless features of my nūvifone (for example, for an airplane flight).	From the Home screen, touch <b>Settings &gt; System &gt; General &gt; Airplane Mode &gt; On</b> .
My nūvifone will not charge.	The battery might have exceeded the maximum charging temperature. If the nūvifone is mounted, remove it from the mount and place it somewhere out of direct sunlight.

## Specifications

**Physical size (W × H × D):**

2.29 × 4.41 × 0.57 in.  
(58.1 × 112 × 14.6 mm)

**Weight:** 4.83 oz. (137 g)

**Display:** 3.5 in. diagonal, 272 × 480 pixels; WQVGA display with white backlight and touchscreen

**Case:** Not waterproof (IP51)

**Operating Temperature range:**  
from 5°F to 131°F (from -15°C to 55°C)

**Charging Temperature range:**  
from 32°F to 113°F (from 0°C to 45°C)

**Connector:** Mini-USB for power or computer, 2.5 mm audio for headphones

**Battery type:** User-replaceable 1200 mAh lithium-ion battery

**Battery life:** 4 hours talk time, 250 hours standby time, depending on usage and settings

**Charge time:** Approximately 3 hours

**Power input:** DC input using mini USB connector or DC vehicle power using vehicle power cable (accessory)

**Usage:** 3 W max.

**GPS receiver:** High-sensitivity

**Acquisition times\*:**

Warm: <1 sec.

Cold: <38 sec.

Factory Reset: <45 sec.

\*Average acquisition times for a stationary receiver with a clear view of the sky.

**Frequency Band:** 3G  
850/1900/2100; 2G  
850/900/1800/1900

**Frequency Band for NA:** 3G

850/1900; 2G 850/1800/1900

**Other connectivity:** Wi-Fi,

Bluetooth 2.0+EDR; 802.11

b/g; mini USB 2.0

**Operating System:** Linux®**Camera/Pictures:** 3.0 MP camera**Data storage:** Internal memory and optional removable microSD card. Data stored indefinitely.**Computer interface:** Plug-and-play USB mass storage

# Index

## Symbols

2D map view 75

3D map view 75

## A

additional maps 81

address 18

airplane mode 70

alarm clock

delete 65

disable 65

set 65

alerts

for proximity

points 74

anti-theft feature 71

appointment

delete 63

make 62

navigate to 63

save local event as 24

save movie time as 23

view 63

AT&T service

numbers 80

audio settings 73–74

avoid

edit custom

avoidances 75

road types 75

theft 71

traffic 33

## B

backlight

adjust to save

battery 82

brightness 78

battery

about 82

charge 7

install 6

maximize life 82

replace 82

Bluetooth 56–57

brightness 78

browse the map 25, 27

browse the web 44–45

## C

calendar 62–63

call 12

a location 19

answering 14

forwarding 74

muting 15

caller ID 74

call history 13

call options 15–16

call waiting 17, 74

camera 39–41

screen shot 79

Ciao! 51–55

accept invite 53

disable 55

hide location 54

invite 52

join 52

register 51

remove a friend 54

view invited

friends 54

view networks 55



- view pending
  - friends 54
- view trusted
  - friends 53
- cities, find 24
- clock
  - change time zone 64
  - in status bar 5
- compass 30
- calibrate 30
- conference call 17
  - add a call 15, 17
  - disconnect a
    - participating call 17
  - speak privately 17
- contacts
  - add 34
  - assign a location to 35
  - assign a picture to 34
  - call 12
  - delete 35
  - edit 34
  - import/export from SIM 35
  - navigate to 20
  - set a ringtone for 16
- conversion tool 67
- coordinates 25
- cradle 10
- custom avoids 75
- customer support 80
- custom POIs 74
- D**
  - delete
    - alarm 65
    - all user data 79
    - call history 13
    - e-mail 48
    - home location 21
    - items from
      - checklist 69
    - recently-found 22
    - text message 38
  - detour 30
  - display settings 78
- E**
  - e-mail 46–50
    - change mail settings 76
  - change SMTP settings 76
  - delete 48
  - send blind carbon copy 47
  - send carbon copy 47
  - set importance 49
  - set interval to check 48
  - emergency assistance 64
  - emergency mode 71
- F**
  - Favorites
    - finding 22
    - saving 21
  - files 59
  - find locations. *See* search for locations
  - flight status 66

forward  
  calls 16  
  e-mail message 48  
  text message 38  
free map update 81  
fuse, change 83

**G**  
GPS  
  acquire signal 81  
  simulate 70

**H**  
headphone jack 1  
hold a call 15  
home  
  phone number 21  
  set a location 20  
home location 20  
  edit 21  
Home screen  
  change menu order 78

**I**  
import contacts 35  
incoming call 14

Internet  
  browse 44  
  connection icon 4

**K**  
keyboard  
  language mode 72

**L**  
language settings 72  
lithium-ion battery  
  replace 82  
local events 24  
location messages 37  
Location page 19  
lock  
  the nüvifone 70  
lock the phone 9

**M**  
make a phone call 12  
map  
  2D 25  
  3D 25  
  additional 81  
  browse 25

  rotate 25  
  settings 75–76  
  update 81  
  view 18  
  zoom in, zoom out 25  
map detail 75  
maximum speed, reset 29  
microSD card  
  remove 8  
microSD card, install 8  
mount  
  on dashboard 83  
  on windshield 10  
movie times 23  
  add to calendar 23  
mute  
  phone call 15

**N**  
navigation 27–31  
  settings 75–76  
notes 68  
nüMaps Guarantee 81

**O**

output, audio  
    headphone jack 1

**P**

pair a mobile phone 56  
pay your bill 80  
pedestrian navigation  
    mode 31  
phone 12–17  
    settings 74–75  
picture 39–41  
PIN  
    Bluetooth 57  
    nūvifone 71  
    reset 71  
playlist 42–43  
play music 42  
Points of Interest (POIs)  
    view 19  
proximity point,  
    settings 74–75  
proximity points  
    alerts 74

**R**

recalculate route 27  
recently found  
    locations 22  
register 80  
reply  
    to an e-mail  
        message 48  
    to text message 36  
reset  
    maximum speed 29  
    trip computer 29  
restore settings 79  
ring settings 73  
ringtone  
    set 16, 73  
    set for a contact 16  
rotate screen 9  
route  
    add a stop 30  
    next turn 28  
    take a detour 30  
    turn list 28  
    view on map 28

routes

    take a detour 30

**S**

safe mode 70  
satellite signals 81  
save your current  
    location 64  
screen  
    brightness 78  
    color mode 78  
    lock 9  
    orient 9  
    scroll 9  
    use the touch screen 2  
screen shot 79  
scrolling icons 3  
search for locations 18–  
    26  
    address 18  
    gas prices 24  
    navigate to a  
        contact 20  
    Point of Interest 19  
    recently found 22

- spell name 22
- using Local Search 21
- White Pages listings 23
- security settings 70–71
- settings 70–79
  - restore 79
- SIM card
  - import and export 35
- SIM card, install 6
- slideshow 40
- software
  - update 81
  - view information 80
- sound settings 73
- speakerphone 15
- specifications 86
- speed limit 27
- status bar 4
- stop watch 65
- synchronize 58
- system settings 70

**T**

- text message 36–38
  - delete, all 38
  - delete,
    - conversation 38
  - delete, single 38
- time settings 72
- time zone 72
- tools 64–69
- TourGuide 74
- traffic 32–33
- transfer files 59
- trip computer 29
  - reset 29
  - reset trip 29
- trip computer page
  - reset maximum speed 29
- turn list page 28

**U**

- upcoming events 24
- update
  - map 81
- update software 81

- usage mode 31
- user data, delete 79

**V**

- vibrate
  - turn on 73
- voice mail 12
- volume 1

**W**

- wallpaper 40
- weather 61
- web browser 44–45
  - save bookmarks 45
  - set the home page 45
  - settings 77
- Where Am I? 64
- White Pages listings 23
- Wi-Fi
  - set up 59
- world map 65

**Y**

- Yellowpages.com listings 21





CE0682

[www.att.com/mobility](http://www.att.com/mobility)  
**1.866.mobility**

September 2009

Part Number 190-01063-00 Rev. B

Printed in China

Download from [Www.Somanuals.com](http://Www.Somanuals.com). All Manuals Search And Download.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>