



nüvi® 2405/2505 series owner's manual



© 2011 Garmin Ltd. or its subsidiaries

All rights reserved. Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of Garmin. Garmin reserves the right to change or improve its products and to make changes in the content of this manual without obligation to notify any person or organization of such changes or improvements. Go to www.garmin.com for current updates and supplemental information concerning the use of this product.

Information in this document is subject to change without notice. Garmin reserves the right to change or improve its products and to make changes in the content without obligation to notify any person or organization of such changes or improvements. Go to the Garmin Web site (www.garmin.com) for current updates and supplemental information concerning the use and operation of this and other Garmin products.

Table of Contents

Getting Started	1	Using Photo Navigation	15
Connecting the Device to Vehicle Power.....	1	Setting a Simulated Location.....	15
About myDashboard.....	2	Saving Locations	16
About Sleep Mode.....	4	Voice Command	18
Adjusting the Screen Brightness	4	About Voice Commands	18
Adjusting the Volume.....	4	Navigation	21
About Automatic Volume	5	Starting a Route.....	21
Status Bar Icons	5	Following an Automobile Route.....	22
Satellite Signals.....	6	About Exit Services	23
Using the On-screen Buttons	7	Avoiding Road Features	24
Using the On-screen Keyboard	7	Navigating Off Road	24
About Shortcuts.....	8	Pedestrian Routes.....	24
Finding Locations	8	Map Pages	26
About Locations.....	9	Customizing the Map.....	26
About Search Tools	11	Viewing Turns.....	27
Saving a Home Location	14	Viewing Current Location Information	30
Finding Recently Found Places.....	14	Hands-Free Phone Calls	30
Finding Parking.....	15	About Hands-Free Calling	30
		Placing a Call.....	32

Using In-Call Options	33	Using the Language Guide.....	49
Saving a Home Phone Number.....	34	Traffic.....	50
Using the Apps	34	Disabling Live Traffic	50
Using Help.....	34	Traffic Data	51
About Smartphone Link.....	34	Traffic Receiver	51
About Garmin Live Services.....	36	Traffic on Your Route.....	52
About ecoRoute	37	Traffic in Your Area	53
Viewing myGarmin Messages.....	40	Understanding Traffic Data.....	53
Viewing the Weather Forecast	40	About Traffic Cameras.....	54
About Audiobooks.....	42	Traffic Subscriptions	54
Planning a Trip.....	44	Data Management.....	55
Viewing Pictures.....	45	File Types	56
Viewing Previous Routes and Destinations.....	46	About Memory Cards.....	56
Using the World Clock	46	Transferring Files from Your Computer	56
Setting an Alarm	46	Deleting Files	57
Finding Parking.....	47	Customizing the Device.....	58
Finding Your Last Parking Spot.....	47	Map and Vehicle Settings.....	58
Using the Calculator	47	Navigation Settings.....	59
Converting Units	47	Display Settings.....	60
About Offers	48		

Bluetooth Settings	60	Troubleshooting	70
Traffic Settings.....	61	Index	72
Units and Time Settings.....	62		
Language and Keyboard Settings	62		
Proximity Alerts Settings.....	63		
Device Settings.....	63		
Restoring Settings	63		
Appendix	64		
Power Cables	64		
Caring for Your Device.....	64		
Erasing User Data	65		
Changing the Fuse in the Vehicle Power Cable	66		
Mounting on Your Dashboard	66		
Removing the Device, Cradle, and Mount.....	67		
Updating Maps	67		
Purchasing Additional Maps	68		
Safety Cameras.....	68		
Custom Points of Interest	69		
Purchasing Accessories	69		

Getting Started

WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

- 1 Connect the device to vehicle power (page 1).
- 2 Mount the device (page 1).
- 3 Register the device (page 3).
- 4 Check for updates.
 - Software updates (page 3).
 - Free map update (page 3).

Connecting the Device to Vehicle Power

WARNING

This product contains a lithium-ion battery. To prevent the possibility of personal injury or product damage caused by battery exposure to extreme heat, remove the device from the vehicle when exiting or store it out of direct sunlight.

Before you use your device on battery power, you should charge it.

- 1 Plug the vehicle power cable ① into the USB port on the device ②.
- 2 Snap the mount ③ onto the suction cup ④.
- 3 Press the suction cup to the windshield, and flip the lever ⑤ back toward the windshield.
- 4 Fit the bottom of your device into the mount.
- 5 Tilt your device back until it snaps into place.



- 6 Plug the other end of the vehicle power cable into a power outlet in your vehicle.
- 7 If necessary, connect the external antenna to the traffic receiver and secure it to the windshield using the suction cups.

About myDashboard

Use myDashboard to register your device, check for software and map updates, access product manuals and support, and more.

Setting Up myDashboard

- 1 Connect the USB cable ① to the USB port ② on the device.



- 2 Connect the USB cable to the USB port on your computer.
- 3 Go to www.garmin.com/dashboard.
- 4 Follow the on-screen instructions.

Registering the Device

- 1 Open myDashboard ([page 2](#)).
- 2 Follow the on-screen instructions.

Updating the Software

- 1 Open myDashboard ([page 2](#)).
- 2 Under Software Updates, click **Update Now**.
- 3 Follow the on-screen instructions.

nüMaps Guarantee™

If you register through myDashboard, your device could be eligible for one free map update within 90 days of first acquiring satellites while you drive. Go to www.garmin.com/numaps for details and terms and conditions.

Updating Maps

- 1 Open myDashboard ([page 2](#)).
- 2 Register the device ([page 3](#)).
- 3 Under Map Updates, click **Update Now**.
If a free map update is no longer available, click **Buy Now**.
- 4 Follow the on-screen instructions.

Turning Off the Device

You can turn off the device completely.

- 1 Hold the **Power** key  for 3 seconds.



NOTE: If you hold the **Power** key for less than 3 seconds, the device enters sleep mode ([page 4](#)).

- 2 Select **Off**.

Resetting the Device

You can reset your device if it stops functioning.

Hold the **Power** key for 10 seconds.

About Sleep Mode

Use sleep mode to conserve battery power when your device is not in use. Sleep mode uses very little power, and a battery charge lasts for weeks when your device is in sleep mode.

Entering Sleep Mode

Press the **Power** key.



Exiting Sleep Mode

While the device is in sleep mode, Press the **Power** key.

Adjusting the Screen Brightness

- 1 Select **Settings > Display > Brightness**.
- 2 Use the slider bar to adjust the brightness.

Adjusting the Volume

- 1 Select **Volume**.
- 2 Select an option:
 - Use the slider bar to adjust the volume.
 - Select  to mute the device.
 - Select  > **Audio Mixer** and use the slider bars to adjust the volume for navigation prompts, phone, and media.

About Automatic Volume

NOTE: Automatic volume is not available on all models.







Your device can increase or decrease the volume automatically based on the level of background noise.

Enabling Automatic Volume


- 1 Select **Volume** >  > **Automatic Volume**.
- 2 Select **Enabled**.

Status Bar Icons

The status bar is located at the top of the main menu. The status bar icons display information about features on the device. You can select some icons to change settings or view additional information.

	GPS signal status.
	Bluetooth® technology status (appears when Bluetooth is enabled). See page 30 .
	Transportation mode indicator.
	Current time.
	Battery status.
	Smartphone Link status (appears when connected to Smartphone Link). See page 35 .

Satellite Signals



After the device is turned on, it begins acquiring satellite signals. The device may need a clear view of the sky to acquire satellite signals. When at least one of the  bars is green, your device has acquired satellite signals.

For more information about GPS, go to www.garmin.com/aboutGPS.

Viewing GPS Signal Status

Hold  for three seconds.

Transportation Modes

	Automobile mode
	Pedestrian mode

Routing and navigation are calculated differently based on your transportation mode.

For example, in Automobile mode, the estimated time of arrival is calculated using the speed limit of the roads on the route. Pedestrian mode calculates time of arrival based on walking speed.


NOTE: Pedestrian routes do not include highways. If you have cityXplorer™ maps loaded on your device, pedestrian routes may include public transit ([page 25](#)).

Choosing a Transportation Mode








Select  or .

Battery Information

After the device is connected to power, it begins to charge.

 



 

 in the status bar indicates the status of the internal battery. To increase the accuracy of the battery gauge, you should fully discharge the battery and then fully charge it. Do not unplug the device until it is fully charged.

Using the On-screen Buttons

- Select  to return to the previous screen.
- Hold  to quickly return to the main menu.
- Select  or  to see more choices.
- Hold  or  to scroll faster.
- Select  to see a menu of options for the current screen.

Using the On-screen Keyboard

See “Language and Keyboard Settings” to change the keyboard layout ([page 62](#)).

- Select a character on the keyboard to enter a letter or number.
- Select  to add a space.
- Select  to delete an entry.
- Select  to delete a character.
- Select  to select the keyboard language mode.
- Select  to enter special characters, such as punctuation marks.
- Select  to change character capitalization.

About Shortcuts


You can add shortcuts to the Where To? menu. A shortcut can point to a location, a category, or a search tool.

Adding a Shortcut Icon

The Where To? menu can contain up to 36 shortcut icons.

- 1 Select **Where To? > Add Shortcut**.
- 2 Select an item.

Removing a Shortcut

- 1 Select **Where To >  > Remove Shortcut(s)**.
- 2 Select the shortcut to remove.
- 3 Select the shortcut again to confirm.

Finding Locations

The device offers many methods for finding locations.

- By category ([page 9](#))
- Near another location ([page 10](#))
- By spelling the name ([page 12](#))
- By address ([page 12](#))
- Using the map ([page 13](#))
- Using recently found locations ([page 14](#))
- Using coordinates ([page 13](#))
- Using the map ([page 13](#))
- Using photos ([page 15](#))
- Using saved locations ([page 16](#))

About Locations

The detailed maps loaded in your device contain locations, such as restaurants, hotels, and auto services. You can use the Categories function to browse for nearby businesses and attractions.

Finding a Location by Category


- 1 Select **Where To?**.
- 2 Select a category, or select **Categories**.
- 3 If necessary, select a subcategory.
- 4 Select a location.

Searching Within a Category

To narrow your search results, you can search within some categories.

- 1 Select **Where To?**.
- 2 Select a category, or select **Categories**.
- 3 If necessary, select a subcategory.
- 4 Select the search bar ①.




- 5 Enter all or part of the name.
- 6 Select .

Finding a Location Using the Search Bar

You can use the search bar to search for locations by entering a category, brand name, address, or city name.

- 1 Select **Where To?**.
- 2 Select the search bar.
- 3 Enter a search term.
Suggested search terms appear below the search bar as you type.
- 4 Select an option:
 - To search for a type of business, enter a category name, such as “movie theaters” or “coffee shops.”

- To search for a business by name, enter all or part of the name.
 - To search for an address near you, enter the street number and street name.
 - To search for an address in another city, enter the street number, street name, city, and state.
 - To search for a city, enter the city and state.
 - To search for coordinates, enter latitude and longitude coordinates.
- 5** Select an option:
- To search using a suggested search term, select the term.
 - To search using the text you entered, select .
- 6** If necessary, select a location.



Changing the Search Area

By default, your device finds locations closest to your current location. You can find a location near another city or location.

- 1** Select **Where To? > Searching Near**.
- 2** Select an option.
- 3** If necessary, select a location.

Reporting a Closed or Missing Location



If your search results include an outdated or incorrect location, you can report the error to Garmin and remove the location from future searches.

- 1** Find a location ([page 8](#)).
- 2** Select a location from the list.
- 3** Select .
- 4** Select  **> Edit**.
- 5** Select **Report as Closed** or **Report as Missing**.

This information is sent to Garmin when you connect to Smartphone Link or when you connect your device to myGarmin using your computer ([page 35](#)).

Editing Location Information

You can change the address or phone number for a location that appears in the search results.

- 1 Find a location ([page 8](#)).
- 2 Select a location from the list.
- 3 Select .
- 4 Select  > **Edit**.
- 5 Select **Address** or **Phone Number**, and enter the new information.

Rating a Point of Interest

You can assign a star rating to a point of interest.

- 1 Find a location ([page 8](#)).
- 2 Select  > .

- 3 Select the stars to rate the point of interest. The star rating updates on your device.

About Search Tools


Search tools allow you to search for cities, addresses, intersections, or coordinates. By default, the address search tool appears in the Where To? menu. To search for cities, intersections, and coordinates, you must add those search tools to the Where To? menu ([page 8](#)).

Finding Fuel Stations and Prices

Before you can use this feature, you must subscribe to the Fuel Price service, and your device must be connected to a supported phone running Smartphone Link ([page 34](#)). This feature is not available in all areas.

You can find nearby fuel stations and compare fuel prices.

- 1 Select **Where To? > Fuel Prices**.

- 2 If necessary, select  > **Fuel Type**, select a fuel type, and select **Save**.
- 3 Select a fuel station.

Finding an Address


NOTE: The order of the steps may change depending on the map data loaded on your device.

- 1 Select **Where To? > Address**.
- 2 Enter information as prompted by the on-screen instructions.
- 3 If necessary, select **Searching Near**, and enter a different city or postal code.
- 4 If necessary, select the address.

Finding a City

Before you can find a city, you must add the city search tool to the Where To? menu ([page 8](#)).

- 1 Select **Where To? > Categories > Cities**.
- 2 Select **Enter Search**.

- 3 Enter a city name, and select .
- 4 Select a city.


Finding an Intersection

Before you can find an intersection, you must add a shortcut to the intersection search tool ([page 8](#)).

- 1 Select **Where To? > Categories > Intersections**.
- 2 Select a state or province.
NOTE: If necessary, select **State or Country** to change the country, state, or province.
- 3 Enter the first street name, and select **Next**.
- 4 If necessary, select the street.
- 5 Enter the second street name, and select **Next**.
- 6 If necessary, select the street.
- 7 If necessary, select the intersection.

Finding a Location Using Coordinates

You can find a location using latitude and longitude coordinates. This method can be helpful when geocaching.


- 1 Select **Where To? > Categories > Coordinates**.
- 2 If necessary, select  > **Format**, select the correct coordinate format for the type of map you are using, and select **Save**.
- 3 Select the latitude coordinate.
- 4 Enter the new coordinate, and select **Done**.
- 5 Select the longitude coordinate.
- 6 Enter the new coordinate, and select **Done**.
- 7 Select **View on Map**.

Finding a Location by Browsing the Map

Before you can find places included in the map data, such as restaurants, hospitals, and fuel stations, you must enable the map layer for places along the road ([page 26](#)).

- 1 Select **View Map**.
- 2 Select the screen.
- 3 Drag and zoom the map to display the area to search.

Location markers appear on the map for places along the road.

- 4 If necessary, select , and select a category icon to view only a specific category of places.
- 5 Select an option:
 - Select a location marker.
 - Select a point, such as a street, intersection, or address location.
- 6 If necessary, select the location description to view additional information.

Finding a Location Using Quick Search

After you have performed a search for a point of interest, certain categories may display a

Quick Search list that displays the last four destinations you selected.

- 1 Select **Where To?**.
- 2 Select a category, or select **Categories**.
- 3 If applicable, select a destination from the Quick Search list.
- 4 If necessary, select the appropriate destination.

Saving a Home Location

You can set your home location for the location you return to most often.


- 1 Select **Where To?** >  > **Set Home Location**.
- 2 Select **Enter My Address, Use My Current Location**, or **Recently Found**.

The location is saved as “Home” in the Saved folder ([page 16](#)).

Going Home

Select **Where To?** > **Go Home**.

Editing Your Home Location Information

- 1 Select **Where To?** > **Saved** > **Home**.
- 2 Select  > **Edit**.
- 3 Enter your changes.
- 4 Select **Done**.

Finding Recently Found Places

Your device stores the last 50 locations you have found.

- 1 Select **Where To?** > **Recent**.
- 2 Select a location.

Clearing the List of Recently Found Places

Select **Where To?** > **Recent** >  > **Clear** > **Yes**.

Finding Parking

You can find detailed parking information and pricing information.

- 1 Select **Where To? > Categories > Parking.**
- 2 Select a parking location.

Using Photo Navigation

You can upload pictures onto your device or memory card that include location information and create routes to the pictured locations.

- 1 Connect your device to your computer ([page 56](#)).
- 2 Go to <http://connect.garmin.com/photos>.
- 3 Follow the instructions on the Web site to select and load pictures.
- 4 Disconnect the device from the computer.
- 5 Turn on the device.
- 6 From the main menu, select **Where To? > Saved > Photos.**

A list of pictures with location information appears.

- 7 Select a picture.

Setting a Simulated Location



If you are indoors or not receiving satellite signals, you can use the GPS to set a simulated location.

- 1 Select **Settings > Navigation.**
- 2 Select **GPS Simulator.**
- 3 Select **View Map.**
- 4 Select an area on the map.
The address of the location appears at the bottom of the screen.
- 5 Select the address.
- 6 Select **Set Location.**

Saving Locations

You can save locations so you can quickly find them and create routes to them.

Saving a Location

- 1 Find a location ([page 9](#)).
- 2 Select a location from the list.
- 3 Select .
- 4 Select  > **Save**.
- 5 If necessary, enter a name, and select **Done**.

Saving Your Current Location



- 1 From the map, select the vehicle icon.
- 2 Select **Save**.
- 3 Enter a name, and select **Done**.
- 4 Select **OK**.

Starting a Route to a Saved Location

- 1 Select **Where To? > Saved**.

- 2 If necessary, select a category, or select **All Categories**.
- 3 Select a location.
- 4 Select **Go!**.

Editing a Saved Location

- 1 Select **Where To? > Saved**.
- 2 If necessary, select a category.
- 3 Select a location.
- 4 Select .
- 5 Select  > **Edit**.
- 6 Select an option:
 - Select **Name**.
 - Select **Phone Number**.
 - To assign categories to the Favorite, select **Categories**.
 - To save a photo with the Favorite, select **Assign Photo** ([page 45](#)).

- To change the symbol used to mark the Favorite on a map, select **Change Map Symbol**.



7 Edit the information.

8 Select **Done**.

Assigning Categories to a Saved Location

You can add custom categories to organize your saved locations.

NOTE: Categories appear in the saved locations menu after you have saved more than 12 locations.


- 1 Select **Where To? > Saved**.
- 2 Select a location.
- 3 Select .
- 4 Select  **> Edit > Categories**.
- 5 Enter one or more category names, separated by commas.

Suggested categories appear below the text bar as you type. You can select a suggested word to use the suggestion.

6 Select **Done**.

Sharing a Saved Location


If you save the location of a business that is not in the map data, you can share the location with Garmin so that it can be added to future map updates and shared with the Garmin community. Shared locations are sent to Garmin when you connect your device to myGarmin using your computer.

- 1 Select **Where To? > Saved**.
- 2 If necessary, select a category.
- 3 Select a location.
- 4 Select .
- 5 Select **Share Place**.
- 6 Enter one or more categories that apply to the location, and select **Done**.

- 7 Select **Share**.

Deleting a Saved Location

NOTE: Deleted locations cannot be recovered.

- 1 Select **Where To? > Saved**.
- 2 Select  **> Delete Saved Places**.
- 3 Select the box next to the saved locations to delete, and select **Delete**.

Voice Command

About Voice Commands

NOTE: Voice Command is not available on all models, or for all languages and regions.

Voice Command allows you to use your device by saying words and commands. The Voice Command menu provides voice prompts and a list of available commands.

Setting your Wakeup Phrase

The wakeup phrase is a word or phrase you can say to activate Voice Command. The default wakeup phrase is **Voice Command**.

TIP: You can reduce the chance of accidental Voice Command activation by using a strong wakeup phrase.

- 1 Select **Apps > Voice Command > Customize Phrase**.
- 2 Enter a new wakeup phrase.
The device indicates the strength of the wakeup phrase as you enter the phrase.
- 3 Select **Done**.

Activating Voice Command

Say your wakeup phrase.

The Voice Command menu appears.

Voice Command Tips

- Speak in a normal voice directed at the device.
- Reduce background noise, such as voices or the radio, to increase the accuracy of the voice recognition.
- Speak commands as they appear on the screen.
- Respond to voice prompts from the device as needed.
- Increase the length of your wakeup phrase to reduce the chance of accidental Voice Command activation.
- Listen for two tones to confirm when the device enters and exits Voice Command mode.

Starting a Route Using Voice Command

You can say the names of popular, well-known locations.

- 1 Say your wakeup phrase ([page 18](#)).
- 2 Say **Find Place**.



- 3 Listen for the voice prompt, and speak the name of the location.

A list of locations appears.



- 4 Say the line number.



- 5 Say **Navigate**.

Finding an Address

- 1 Say **Voice Command**.
- 2 Say **Find Address**.
- 3 Speak the entire address.

Muting Instructions

You can disable the voice prompts for Voice Command without muting the device.

- 1 Select **Apps > Voice Command >** .
- 2 Select **Mute Instructions > Enabled**.

Disabling Voice Command

You can disable Voice Command, which prevents you from accidentally activating Voice Command while speaking.

- 1 Select **Apps > Voice Command >** .
- 2 Select **Voice Command > Disabled**.

Navigation

Starting a Route

- 1 Search for a location ([page 8](#)).
- 2 Select a location.
- 3 Select **Go!**.
- 4 If necessary, select an option.
 - Select **Drive**.
 - Select **Walk**.
 - Select **Public Transit** to calculate a route that combines public transit and walking.
NOTE: You must have cityXplorer™ maps loaded to navigate using public transit ([page 25](#)).
- 5 If necessary, select a route.

Starting a Route to a Saved Location

- 1 Select **Where To? > Saved**.
- 2 If necessary, select a category, or select **All Categories**.
- 3 Select a location.
- 4 Select **Go!**.

Using Multiple Route Preview

- 1 Search for a location.
- 2 Select a location.
- 3 Select **Routes** and, if necessary, select **Drive** ([page 9](#)).
- 4 Use the on-screen buttons to select a route
- 5 Select **Go!**.

Following an Automobile Route

The route is marked with a magenta line. A checkered flag marks your destination.

As you travel, the device guides you to the destination with voice prompts, arrows on the map, and directions at the top of the map. If you depart from the original route, the device recalculates the route and provides new directions.




Using the Navigation Map

- 1 From the main menu, select **View Map**.
- 2 If the zoom controls are hidden, select the map to display the zoom controls.
- 3 Select the map to switch to browsing mode. Map buttons appear.
- 4 Select an option:
 - To zoom in or out, select or .
 - To rotate the map view, select .
 - To switch between North Up and 3-D view, select .
 - To add or remove map layers, select .
 - To view specific location categories, select and select a category icon.
 - To center the map on your current location, select .

- To view shortcuts for map and navigation features, select .

Adding a Point to a Route

Before you can add a stop to a route, you must be navigating a route in Automobile mode.

- 1 While navigating a route, select  to return to the main menu.
- 2 Select **Where To?**.
- 3 Search for the location ([page 9](#)).
- 4 Select **Go!**.
- 5 Select **Add to Active Route**.



Taking a Detour

While navigating an automobile route, you can use detours to avoid obstacles ahead of you, such as construction zones.

NOTE: If the route you are currently navigating is the only reasonable option, your device might not calculate a detour.

From the map, select  > **Detour**.

Stopping the Route




From the map, select  > .

About Exit Services




While you navigate a route, you can find gas, food, lodging, and restrooms near upcoming exits.





Services are listed under tabs by category.

Navigating to an Exit

- 1 From the map, select  > **Exit Services**.
- 2 Use  and  to select an exit.
- 3 Select  > **Go!**.

Finding Exit Services

- 1 From the map, select  > **Exit Services**.
- 2 Use  and  to select an upcoming exit.
- 3 Select an exit service tab:

- To view nearby gas stations, select .
 - To view nearby restaurants, select .
 - To view nearby lodging, select .
 - To view nearby restrooms, select .
- 4 Select a point of interest.

Avoiding Road Features

- 1 Select **Settings** > **Navigation** > **Avoidances**.
- 2 Select the road features to avoid on your routes, and select **Save**.

Avoiding Transit Types

NOTE: Transit types are available when cityXplorer maps are loaded ([page 25](#)).

- 1 Select **Settings** > **Navigation** > **Public Transit**.
- 2 Select the transit type to avoid on your routes.

- 3 Select **Save**.

Navigating Off Road

If you are not following roadways as you navigate, you can use Off Road mode.

- 1 Select **Settings** > **Navigation**.
- 2 Select **Calculation Mode** > **Off Road** > **Save**.

The route will be calculated as a straight line to the location.

Pedestrian Routes

Following a Pedestrian Route

In Pedestrian mode, your route is displayed on a two-dimensional map.

If you have cityXplorer maps installed, the device calculates a route that uses a combination of public transit options, such as riding a bus or subway, and walking.

NOTE: cityXplorer maps are not included with the device. Go to <http://my.garmin.com> to purchase cityXplorer maps.

NOTE: You can change the types of public transit and limit the distance spent walking during a pedestrian route ([page 59](#)).




Using the Pedestrian Navigation Map

See [page 22](#) for more map functions.



- Select ① to switch between sections of the route.
- Select ② to view the route itinerary.

About Map Icons

- When you are navigating in Pedestrian mode,  indicates your approximate position and your direction of travel on the map.
- The circle around  indicates the accuracy of your position on the map. A smaller circle means the displayed position is more accurate.
- The yellow icons indicate the navigation method used in each section of the route. For example, when you see , board a bus at that point in the route.
- The black dots on the map are public transit stops along your route.

Enabling Transit Types

NOTE: Transit types are available when cityXplorer maps are loaded ([page 25](#)).

- 1 Select **Settings > Navigation > Public Transit**.


- 2 Select the transit type to include in your routes, and select **Save**.

Map Pages

Customizing the Map

Customizing the Map Layers

You can customize which data appear on the map, such as icons for points of interest and road conditions.

- 1 From the map, select .
- 2 Select **Map Layers**.
- 3 Select which layers you want to include on the map, and select **Save**.

Viewing the Trip Log

Your device keeps a trip log, which is a record of the path you have traveled.

- 1 Select **Settings > Map and Vehicle > Map Layers**.
- 2 Select the **Trip Log** check box.

Changing the Map Data Field

- 1 From the map, select the data field in the lower left-hand corner.
- 2 Select a type of data to display.
- 3 Select **Save**.


Changing the Map Perspective

- 1 Select **Settings > Map and Vehicle > Driving Map View**.
- 2 Select an option:
 - Select **Track Up** to display the map in two dimensions (2-D), with your direction of travel at the top.
 - Select **North Up** to display the map in 2-D with North at the top.

- Select **3-D** to display the map in three dimensions.

Changing the Tools on the Map

Map tools appear as buttons on the map, which provide quick access to device functions. For example, you can add a button to take a detour, adjust the brightness, or view exit services. You can select up to three tools to display on the map.

- 1 From the main menu, select **Settings > Map and Vehicle > Map Buttons**.
- 2 Select an option:
 - To add a tool, select , and select a tool.
 - To remove a tool, select the tool, and select **Remove**.
 - To reset to the default tools, select **Reset to Defaults**.
- 3 Select **Save**.

Changing the Map Dashboard


- 1 Select **Settings > Map and Vehicle > Dashboards**.
- 2 Use the arrows to select a dashboard.
- 3 Select **Save**.

Viewing Turns

Viewing a List of Turns


When you are navigating a route, you can view all of the turns and maneuvers for your entire route and the distance between turns.

- 1 Select the text bar on the top of the map.
- 2 Select a turn.

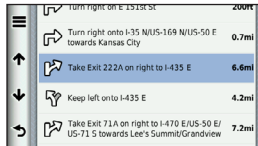

The details for the turn appear. If available, an image of the junction appears for junctions on major roadways.


Viewing the Entire Route on the Map

- 1 While navigating an automobile route, select the navigation bar at the top of the map.
- 2 Select  > Map.

Viewing the Next Turn


While navigating an automobile route, a preview of the next turn, lane change, or other maneuver appears in the upper-left corner of the map. The preview includes the distance to the turn or maneuver and the lane in which you should be traveling, if available.

From the map, select  to view the next turn on the map.

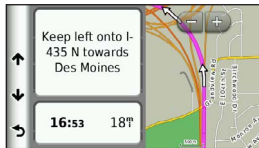

Viewing Junctions

 While navigating an automobile route, you can view the junctions on major roadways. When you approach a junction in a route, the image of that junction appears briefly, if available.

From the map, select  to view the junction, if available.



Viewing Traffic Alerts

While you navigate an automobile route, a traffic alert may appear in the navigation bar.


Select the alert to view more information.

Viewing Trip Information


The trip information page displays your present speed and provides statistics about your trip.

TIP: If you make frequent stops, leave the device turned on so it can accurately measure elapsed time during the trip.

From the map, select  > **Trip Computer**.

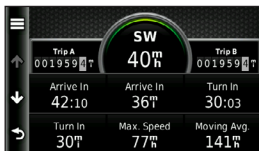

Resetting Trip Information

- 1 From the map, select  > **Trip Computer**.
- 2 Select **Reset Field(s)**.
- 3 Select an option:
 - When not navigating a route, select **Select All** to reset every data field, except the speedometer, on the page.
 - Select **Reset Trip Data** to reset the information on the trip computer.
 - Select **Reset Max. Speed** to reset the maximum speed.
 - Select **Reset Trip B** to reset the odometer.

Viewing Current Location Information

Use the Where Am I? page to view information about your current location. This feature is helpful if you need to tell emergency personnel your location.

From the map, select  > **Where Am I?**

Finding Nearby Services

- 1 From the map, select  > **Where Am I?**
- 2 Select **Hospitals**, **Police Stations**, or **Fuel** to view the nearest locations in that category.

Hands-Free Phone Calls

About Hands-Free Calling

Using Bluetooth® wireless technology, your device can connect to your mobile phone to become a hands-free device. To determine whether your mobile phone with Bluetooth technology is compatible with your device, go to www.garmin.com/bluetooth.

Your phone may not support all of the hands-free phone features your device provides.

Enabling Bluetooth Wireless Technology

- 1 Select **Settings** > **Bluetooth**.
- 2 Select **Bluetooth**.

Pairing Your Phone

Before you can use hands-free calling, you must pair your device with a compatible mobile phone.

Pairing your phone with your device allows your phone and device to recognize each other and connect quickly.

- 1 Place your phone and your device within 33 ft. (10 m) of each other.
- 2 On your device, enable Bluetooth wireless technology ([page 30](#)).
- 3 Select an option:
 - Select **Add Phone**.
 - If you have already paired a different phone, select **Phone** > **+**.
- 4 On your phone, enable Bluetooth wireless technology.
- 5 On your device, select **OK**.
A list of nearby Bluetooth devices appears.

- 6 Select your phone from the list, and select **OK**.
- 7 If necessary, on your phone, confirm that the device is allowed to connect.
- 8 If necessary, enter the device Bluetooth PIN (**1234**) into your phone.

Disconnecting Your Phone

- 1 Select **Settings** > **Bluetooth**.
- 2 Select **Phone** > **None** > **Save**.

Your phone is disconnected from your device but remains paired with your device.

Tips After Pairing the Devices

- After the initial pairing, the two devices can connect automatically each time you turn them on.
- When your phone is connected to your device, you can make phone calls.

- When you turn on the device, it tries to connect to the last phone to which it was connected.
- You might need to set your mobile phone to connect to the device automatically when it is turned on.

Receiving a Call

When you receive a call, select an option:

- Select **Answer**.
- Select **Ignore** to ignore the call.

Placing a Call

Dialing a Number

- 1 Select **Phone** > **Dial**.
- 2 Enter the number.
- 3 Select **Dial**.

Calling a Contact in Your in your Phone Book

Your phone book is loaded from your phone to the device each time your phone and the device connect. It may take a few minutes for the phone book to be available. Some phones do not support this feature.

- 1 Select **Phone** > **Phone Book**.
- 2 Select a contact.
- 3 Select **Call**.

Calling a Point of Interest

- 1 Select **Phone** > **Browse Categories**.
- 2 Select a point of interest ([page 9](#)).
- 3 Select **Call**.

Using the Call History

Your call history is loaded from your phone to the device each time your phone and the device connect. It may take a few minutes for the call history to be available. Some phones do not support this feature.

1 Select **Phone** > **Call History**.

2 Select a category.

A list of calls appears, with the most recent calls at the top.

3 Select a call.

Using In-Call Options

1 While on a call, select .

2 Select an option:

- To transfer audio to your phone, select **Handset**.

TIP: You can use this feature if you want to turn off your device and remain on the call, or if you need privacy.

- To display a keypad, select **Keypad**.

TIP: You can use this feature to use automated systems, such as voice mail.

- To mute the microphone, select **Mute**.
- To hang up, select **End Call**.

Saving a Home Phone Number

TIP: After you save a home number, you can edit the home number by editing “Home” in your list of saved locations ([page 16](#)).

Select **Phone** >  > **Set Home Number**, enter your phone number, and select **Done**.

Calling Home

Before you can call home using the Call Home button, you must enter a phone number for your home location.

Select **Phone** > **Call Home**.

Using the Apps

Using Help

Select **Apps** > **Help** to view information about using the device.

Searching Help Topics

Select **Apps** > **Help** > .

About Smartphone Link

Smartphone Link is a phone application that allows your device to download live data using your phone data connection. Your device transfers data from Smartphone Link using Bluetooth wireless technology.

Connecting to Smartphone Link provides access to Garmin Live Services. Garmin Live Services provides free and subscription-based plans to view live data on your device, such as traffic data, weather, and fuel prices

Saved locations and recently found locations are synchronized with your phone each time your device connects to Smartphone Link.

Downloading Smartphone Link

Smartphone Link supports phones running Android™ operating system version 2.1 or newer.

Download Smartphone Link from the application market on your supported phone. See your phone owner's manual for information on downloading and installing applications.

Connecting to Smartphone Link

Before you can connect to Smartphone Link, you must download and install the Smartphone Link application on your phone.

- 1 Start Smartphone Link on your phone.
- 2 From your device, select **Settings** > **Bluetooth**, and select the **Bluetooth** check box.


- 3 From your phone, select **Bluetooth Settings**.

- 4 From your phone, enable Bluetooth wireless technology, and scan for nearby Bluetooth devices.

See the owner's manual for your phone for more information.

- 5 From your phone, select your device from the list of nearby devices.

- 6 Follow the on-screen instructions on your phone and on your device to confirm the pairing request.

 appears in the status bar on your device when Smartphone Link is connected.

Sending a Location from Your Phone to Your Device

Smartphone Link is registered as a navigation application on your phone.

- 1 From your phone, select the button to start navigating to a location (see the owner's manual for your phone).
- 2 Select Smartphone Link from the application menu.

The next time you connect your device to your phone, the location is transferred to the recently found items on your device.

Disabling Hands-Free Calling While Connected to Smartphone Link

While the device is connected to the phone and receiving Garmin Live Services, you can disable hands-free calling.

- 1 Select **Apps > Smartphone Link**.
- 2 Select your phone.

- 3 Clear the **Hands-Free Calling** check box.


About Garmin Live Services

NOTE: Smartphone Link supports phones running Android operating system version 2.1 or newer.

Before you can use Garmin Live Services, your device must be connected to a supported phone running Smartphone Link ([page 35](#)).

Connecting to Smartphone Link provides access to Garmin Live Services. Garmin Live Services provides free and subscription-based plans to view live data on your device, such as traffic data, weather, and fuel prices.

Some Garmin Live Services, like Weather, are available as separate apps on your device. Other Garmin Live Services, like Live Traffic, enhance the existing navigation features on your device. Features that require access to Garmin Live Services display the Smartphone Link

symbol  and appear only when the device is connected to Smartphone Link.

Subscribing to Garmin Live Services

You must subscribe to Garmin Live Services using the Smartphone Link app on your phone.

- 1 Start the Smartphone Link app on your phone ([page 35](#)).
- 2 Select **Garmin Live Services**.
A list of services and subscription prices appears.
- 3 Select a service.
- 4 Select the price.
- 5 Select **Subscribe**.
- 6 Follow the on-screen instructions.

About ecoRoute

The ecoRoute™ feature calculates the fuel economy and the fuel price of navigating to a destination, and offers tools for improving fuel efficiency.

The data provided by the ecoRoute feature is an estimate only. The data is not actually read from the vehicle, unless you are using the ecoRoute HD accessory. To receive more-accurate fuel reports for your specific vehicle and driving habits, calibrate the fuel economy ([page 38](#)).

ecoRoute HD Accessory

When connected to the ecoRoute HD accessory, your device can receive real-time vehicle information, such as error messages, RPM, and battery voltage. Your device includes data read from the vehicle by the ecoRoute HD accessory when calculating ecoRoute data.

Go to www.garmin.com/ecoroute for compatibility and purchasing information.

Setting up the Vehicle Profile

The first time you use the ecoRoute features, you must enter vehicle information.

- 1 Select **Apps** > **ecoRoute™**.
- 2 Enter fuel and mileage information.

Changing the Fuel Price

- 1 Select **Apps** > **ecoRoute™** > **At the Pump**.
- 2 Enter the current price of fuel, and select **Next**.
- 3 Select **Yes**.

Calibrating the Fuel Economy

You can calibrate the fuel economy to receive more-accurate fuel reports for your specific vehicle and driving habits. You should calibrate when you fill up your fuel tank.


- 1 Select **Apps** > **ecoRoute™** > **At the Pump**.
- 2 Enter the current fuel price.

- 3 Enter the amount of fuel the vehicle has used since the last time the fuel tank was filled.
- 4 Enter the distance you have travelled since the last time the fuel tank was filled.
- 5 Select **Next**.
The device calculates the average vehicle fuel economy.
- 6 Select **Save**.

About the ecoChallenge

ecoChallenge helps you maximize the vehicle fuel economy by scoring your driving habits. The higher your ecoChallenge scores, the more fuel you have saved. The ecoChallenge collects data and calculates a score whenever your device is moving and in Automobile mode.

Viewing ecoChallenge Scores

- View your current score in the  ecoChallenge icon on the map.

- Select  to view detailed scores.

About the ecoChallenge Score

- **Current**—displays the score for your current driving activity.
- **Overall**—displays an average of the speed, acceleration, and braking score.
- **Speed**—displays your score for driving your vehicle at the optimal speed for conserving fuel (45–60 mph for most vehicles).
- **Acceleration**—displays your score for smooth and gradual acceleration. You lose points for rapid acceleration.
- **Braking**—displays your score for smooth and gradual braking. You lose points for hard braking.

Removing the ecoChallenge Score From the Map

Select  >  > **Settings > Hide > Save.**

Resetting the ecoChallenge Scores

- 1 Select **Apps > ecoRoute > Vehicle Profile.**
- 2 Select **Reset.**

Viewing Fuel Economy Information

You can view your fuel consumption, your total fuel cost, and your average fuel economy.

- 1 Select **Apps > ecoRoute > Fuel Economy.**
- 2 Select a section of the graph to zoom in.

Mileage Reports

Mileage reports provide the distance, the time, the average fuel economy, and the fuel cost of navigating to a destination.

A mileage report is created for every route that you drive. If you stop a route on the device, a mileage report is created for the distance you traveled.

Viewing a Mileage Report

You can view saved mileage reports on the device.

TIP: You can access mileage reports in the Reports folder on the device drive or volume ([page 56](#)).

- 1 Select **Apps > ecoRoute™ > Mileage Report**.
- 2 Select a report.

Resetting ecoRoute Information

- 1 Select **Apps > ecoRoute™ > Vehicle Profile**.
- 2 Select  > **Reset**.

Viewing myGarmin Messages

Before you can use this feature, your device must be connected to a supported phone running Smartphone Link ([page 35](#)). This feature is not available in all areas.

You can view messages from myGarmin, such as notifications for software and map updates.

- 1 Select **Apps > myGarmin**.

If you have unread messages, the number of unread messages appears on the myGarmin icon.

- 2 Select a message subject.
The full message appears.

Viewing the Weather Forecast

Before you can use this feature, your device must be connected to a supported phone running Smartphone Link ([page 35](#)). This feature is not available in all areas.

- 1 Select **Apps > Weather**.

The forecast for your current location appears.

- 2 Select a day.
The detailed forecast for that day appears.

Viewing Weather Near a Different City

- 1 Select **Apps > Weather > Current Location**.
- 2 Select an option:
 - To view weather for a favorite city, select a city in the list.
 - To add a favorite city, select **Add City**, and enter a city name.

Viewing the Weather Radar

You can view an animated, color-coded radar map of current weather conditions, as well as a weather icon on the map. The weather icon changes to show weather in the vicinity, such as rain, snow, and thunderstorms.

- 1 Select **Apps > Weather**.
- 2 If necessary, select a city.
- 3 Select **☰ > Weather Radar**.

Viewing Weather Alerts

While you are traveling with your device, weather alerts may appear on the map. You can also view a map of weather alerts near your current location or near a selected city.

- 1 Select **Apps > Weather**.
- 2 If necessary, select a city.
- 3 Select **☰ > Weather Alerts**.

Checking Road Conditions

- 1 Select **Apps > Weather**.
- 2 If necessary, select a city.
- 3 Select **☰ > Road Conditions**.

About Audiobooks






The device can play audiobooks from Audible.com. This feature requires a subscription to Audible.com. Go to www.audible.com/garmin to activate a free 30-day trial subscription.



Loading Audiobooks onto Your Device

Before you can load audiobooks onto your device, you must subscribe to Audible.com. Go to www.audible.com/garmin for more information.

- 1 Connect your device to your computer ([page 2](#)).
- 2 On your computer, log in to your Audible.com account.
- 3 Follow the instructions from Audible.com.


Playing an Audiobook

- 1 Select **Apps > Audible**.
- 2 Select **Browse**.
- 3 Select an option:
 - Select **Titles**.
 - Select **Authors**.
 - Select **Narrators**.
- 4 Select a book.
- 5 Select an option to control playback:
 - To add a bookmark, select .
 - To pause playback, select .
 - To resume playback, select .
 - To move quickly forward or backward in the book, use the slider bar at the top of the page.
 - To go to the next chapter, select .
 - To go to the previous chapter, select .


- To fast forward, hold .
- To rewind, hold .

Adding a Bookmark

When you play an audiobook, the player automatically resumes the audiobook from the point where you last stopped. You can add a bookmark to mark a certain spot in the audiobook.


While playing an audiobook, select  > **Add Bookmark**.

Resuming Playback from a Bookmark


- 1 While playing an audiobook, select .
- 2 Select a bookmark.

Renaming a Bookmark

By default, the device names a bookmark using the time stamp of the bookmark. You can rename a bookmark.

- 1 While playing an audiobook, select  > **Rename Bookmarks**.
- 2 Select a bookmark.
- 3 Enter a name, and select **Done**.

Deleting a Bookmark

- 1 While playing an audiobook, select  > **Delete Bookmarks**.
- 2 Select a bookmark.


Planning a Trip

You can use the trip planner to create and save a trip with multiple destinations.

- 1 Select **Apps** > **Trip Planner**.
- 2 Select **+**.
- 3 Select **Select Start Location**.
- 4 Search for a location ([page 9](#)).
- 5 Select **Select**.
- 6 To add additional locations, select **+**.
- 7 Select **Next**.
- 8 Enter a name, and select **Done**.

Editing a Trip Itinerary

- 1 Select **Apps** > **Trip Planner**.
- 2 Select a saved trip.

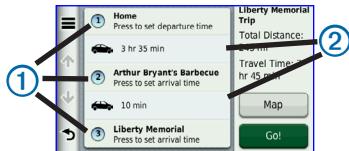


- 3 Select an option:
 - Select **1** to change the arrival or departure time.
 - Select **1** > **Duration** to record how long you will stay at a location.
 - Select **2** to change the transportation mode or route preference for that portion of the trip.
 - Select **Map** to view the trip on the map.

Navigating to a Saved Trip

- 1 Select **Apps** > **Trip Planner**.
- 2 Select a saved trip.
- 3 Select **Go!**.
- 4 If prompted, select a route ([page 21](#)).

Editing a Saved Trip


- 1 Select **Apps** > **Trip Planner**.
- 2 Select a saved trip.
- 3 Select .
- 4 Select an option:
 - Select **Rename Trip**.
 - Select **Edit Destinations** to add and delete locations, or to change the order of locations.
 - Select **Delete Trip**.
 - Select **Optimize Order** to arrange the stops on your trip in the most-efficient order.

Viewing Pictures

View pictures that you have stored in the device or on a memory card. See [page 55](#) for more information about loading pictures on the device.


- 1 Select **Apps** > **Picture Viewer**.
- 2 Use the arrows to scroll through the images.
- 3 Select a picture.

Viewing a Slideshow

- 1 Select **Apps** > **Picture Viewer**.
- 2 Select .


While a slideshow is playing, you can select the screen to stop the slideshow.

Setting a Picture as Wallpaper

- 1 Select **Apps** > **Picture Viewer**.
- 2 Select a picture.
- 3 Select  > **Set as Wallpaper**.

- 4 Use the on-screen buttons to adjust the wallpaper.
- 5 Select **Save**.

Deleting Pictures

- 1 Select **Apps > Picture Viewer**.
- 2 Select a picture.
- 3 Select  **> Delete > Yes**.

Viewing Previous Routes and Destinations

Before you can use this feature, you must enable the travel history feature ([page 63](#)).

You can view your previous routes and places you have stopped on the map.

Select **Apps > Where I've Been**.

Using the World Clock

- 1 Select **Apps > World Clock**.
- 2 If necessary, select a city, enter a city name, and select **Done**.

Viewing the World Map

Select **Apps > World Clock > **.

Nighttime hours appear in the shaded area of the map.

Setting an Alarm

- 1 Select **Apps > Alarm Clock**.
- 2 Set a time.
- 3 Select the **Alarm On** check box.

Finding Parking

Before you can use this feature, you must subscribe to the Dynamic Parking service, and your device must be connected to a supported phone running Smartphone Link (page 35). This feature is not available in all areas.

You can find detailed parking information, including parking availability in nearby garages, and pricing information.

- 1 Select **Apps** > **Parking**.
- 2 Select a parking location.


Finding Your Last Parking Spot

When you remove your device from the vehicle mount while the device is on, your current location is saved as a parking spot.

Select **Apps** > **Last Spot**.

Saving a Parking Spot

- 1 Select **Apps** > **Last Spot**.

- 2 Select  > **Save**.
- 3 If necessary, enter a name.

Using the Calculator

Select **Apps** > **Calculator**.

Converting Units

- 1 Select **Apps** > **Unit Converter**.
- 2 If necessary, select the button next to **Convert**, select a measurement category, and select **Save**.
- 3 If necessary, select a unit button, select a unit of measurement, and select **Save**.
- 4 Select the field below the unit you want to convert.
- 5 Enter the number, and select **Done**.

Setting Currency Conversion Rates Manually

You can update the currency conversion rates manually so that you are always using the most-current rates.

- 1 Select **Apps > Unit Converter**.
- 2 Select the button next to **Convert**.
- 3 Select **Currency**, then select **Save**.
- 4 If necessary, select a currency button, select a different currency, and select **Save**.
- 5 Select the button at the bottom of the screen that displays the currency conversion rate.
- 6 Select the box next to a currency.
- 7 Enter a value, and select **Done**.
- 8 Select **OK**.

About Offers

If your device package includes a traffic receiver, you will receive location-relevant offers and coupons. Ad-based traffic information is available only in North America.


NOTE: The traffic receiver must be connected to external power and you must be in a coverage area to receive ad-based traffic information.

See our privacy statement at www.garmin.com/privacy.

Viewing Offers

CAUTION

Do not attempt to write down coupon codes while driving.

- 1 Select an offer that appears on the screen to search for the nearest location related to that offer.
- 2 If available, select  to view a coupon code.

- 3 Write down the code and present it when you arrive at the location.

Viewing an Offer List

Select **Apps > Offers** to view a list of the offers you have received.

Disabling Traffic and Offers

To disable offers, you must disable traffic.

- 1 Select **Settings > Traffic**.
- 2 Select the **Live Traffic** check box.


Using the Language Guide

Use the Language Guide to look up and translate words or phrases.



Select **Apps > Language Guide**.

Selecting Languages in the Language Guide



You can select the languages you want to translate when translating words and phrases.

- 1 Select **Apps > Language Guide > Words and Phrases**.
- 2 Select  **> Language**.
- 3 Select **From**, select the language to translate from, and select **Save**.
- 4 Select **To**, select the language to translate to, and select **Save**.

Translating Words and Phrases

- 1 Select **Apps > Language Guide > Words and Phrases**.
- 2 Select a category and subcategories.
- 3 If necessary, select , enter a keyword, and select **Done**.
- 4 Select a word or a phrase.
- 5 Select  to listen to the translation.

Using a Bilingual Dictionary

- 1 Select **Apps > Language Guide > Bilingual Dictionaries**.
- 2 Select a dictionary.
- 3 If necessary, select , enter a word, and select **Done**.
- 4 Select a word.
- 5 Select  to listen to the translation.

Traffic

NOTICE

Garmin is not responsible for the accuracy or timeliness of the traffic information.

Traffic information may not be available in all areas or countries.

A traffic receiver is included in some packages, and is an optional accessory for all models. It is built into the vehicle power cable. The powered

traffic receiver and the device must be in data range of a station transmitting traffic data to receive traffic information. You do not need to activate the subscription included with your traffic receiver.

For information about traffic receivers and coverage areas, go to www.garmin.com/traffic.

Disabling Live Traffic

- 1 Select **Settings**.
- 2 Clear the **Live Traffic** check box.

The device no longer receives live traffic data, but automobile routes still avoid potentially congested areas using trafficTrends, if enabled ([page 62](#)).

Traffic Data


When the receiver is within a traffic coverage area, your device will begin displaying traffic information.

The traffic receiver and the device may need to be in data range of an FM station transmitting traffic information.

- 1 Connect the traffic receiver to an external power source.
- 2 Connect the traffic receiver to the device.

NOTE: Heated (metallized) windshields could degrade the performance of the traffic receiver.

Traffic Receiver

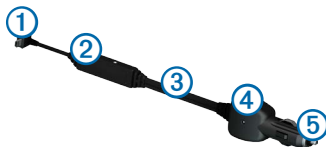

①	Mini-USB connector
②	External antenna connector
③	Internal antenna
④	Power LED
⑤	Vehicle power adapter


About the Traffic Icon

When you are receiving traffic information, a traffic icon appears on the map. The traffic icon changes color to indicate the severity of traffic conditions.

Color	Severity	Meaning
Green	Low	Traffic is flowing freely.
Yellow	Medium	Traffic is moving but there is a delay. There is moderate traffic congestion.
Red	High	Traffic is not moving or moving slowly. There is a severe delay.
Gray	No Signal	Traffic information is not available.


Traffic on Your Route

When calculating your route, the device examines the current traffic and automatically optimizes the route for the shortest time. If a severe traffic delay occurs on your route while you are navigating, your device automatically recalculates the route.

The traffic icon  changes color to indicate the severity of traffic conditions on your route or on the road you are currently traveling.

Your device may route you through a traffic delay if a better alternative route does not exist. The delay time is added into your estimated time of arrival automatically.



Viewing Traffic on Your Route

- 1 While navigating a route, select .
- 2 Select **Traffic on Route**.


A list of traffic events appears, organized by their location on the route.

- 3 Select an event.

Manually Avoiding Traffic on Your Route

- 1 From the map, select .
- 2 Select **Traffic On Route**.
- 3 If necessary, use the arrows to view other traffic delays on your route.
- 4 Select  > **Avoid**.

Taking an Alternate Route

- 1 While navigating an automobile route, select .
- 2 Select **Alternate Route**.
- 3 Select a route.



Viewing Traffic on the Map

The traffic map shows color-coded traffic flow and delays on nearby roads.


- 1 From the map, select .
- 2 Select **Traffic Conditions**.

Traffic in Your Area

Searching for Traffic Delays


- 1 From the map, select .
- 2 Select **Traffic Conditions** > .
- 3 Select an item in the list.
- 4 If there is more than one delay, use the arrows to view additional delays.

Viewing a Traffic Incident on the Map

- 1 From the map, select .
- 2 Select **Traffic Conditions**.
- 3 Select a traffic icon.

Understanding Traffic Data

The traffic legend explains the icons and colors used on the traffic map.

- 1 From the map, select .
- 2 Select **Traffic Legend**.

About Traffic Cameras

Before you can use this feature, you must subscribe to the PhotoLive service, and your device must be connected to a supported phone running Smartphone Link (page 35). This feature is not available in all areas.

Traffic cameras provide live images of traffic conditions on major roadways and intersections. You can save cameras that you want to view regularly.

Saving a Traffic Camera

- 1 Select **Apps > MyCameras**.
- 2 Select **Add Camera**.
- 3 Select a road.
- 4 Select an intersection.
- 5 Select **Save**.

Viewing a Traffic Camera

Before you can view a traffic camera, you must save a traffic camera.

- 1 Select **Apps > myCameras**.
- 2 Select a camera.

Traffic Subscriptions

Subscription Activation

You do not need to activate the subscription included with your FM traffic receiver. The subscription activates automatically after your device acquires satellite signals while receiving traffic signals from the pay service provider.

Lifetime Subscriptions

Some models include subscriptions to lifetime features.

LT	This model includes a lifetime traffic subscription and a traffic receiver.
LMT	This model includes a nüMaps Lifetime™ subscription, lifetime traffic subscription (page 67), and a traffic receiver.

Adding a Subscription

You can purchase traffic subscriptions for other regions or countries.

- 1 From the main menu, select **Settings > Traffic**.
- 2 Select an option:
 - For non-North American units, select **Subscriptions > +**.
 - For North American units, select **+**.
- 3 Write down the FM traffic receiver unit ID.
- 4 Go to www.garmin.com/fmtraffic to purchase a subscription and get a 25-character code.

The traffic subscription code cannot be reused. You must obtain a new code each time you renew your service. If you own multiple FM traffic receivers, you must obtain a new code for each receiver.

- 5 Select **Next** on the device.
- 6 Enter the code.
- 7 Select **Done**.

Data Management

You can store files, such as JPEG image files, on your device. The device has a memory card slot for additional data storage.

NOTE: The device is not compatible with Windows® 95, 98, Me, Windows NT®, and Mac® OS 10.3 and earlier.

File Types

The device supports the following file types:

- JPEG and JPG image files ([page 45](#))
- Maps and GPX waypoint files from MapSource® ([page 68](#))
- GPI custom POI files from Garmin POI Loader ([page 69](#))

About Memory Cards

You can purchase memory cards from an electronics supplier, or purchase pre-loaded Garmin mapping software. In addition to map and data storage, the memory card can be used to store files such as maps, images, geocaches, routes, waypoints, and custom POIs.

Installing a Memory Card

The device supports microSD™ and microSDHC memory cards.

- 1 Insert a memory card into the slot on the device.
- 2 Press it in until it clicks.

Transferring Files from Your Computer

- 1 Connect the device to your computer ([page 2](#)).

Your device and memory card appear as removable drives in My Computer in Windows and as mounted volumes on Mac computers.



NOTE: Some computers with multiple network drives cannot display nüvi drives. See your operating system help file to learn how to map the drives.

- 2 On your computer, open the file browser.

- 3 Select the file.
- 4 Select **Edit > Copy**.
- 5 Open the **Garmin** or memory card drive or volume.
- 6 Select **Edit > Paste**.

The file appears in the list of files in the device memory or on the memory card.

Disconnecting the USB Cable

- 1 Complete an action:
 - For Windows computers, double-click the eject icon  in your system tray.
 - For Mac computers, drag the volume icon to the **Trash** .
- 2 Disconnect the cable from your computer.

Deleting Files

NOTICE

If you do not know the purpose of a file, do not delete it. Your device memory contains important system files that should not be deleted.

- 1 Open the **Garmin** drive or volume.
- 2 If necessary, open a folder or volume.
- 3 Select a file.
- 4 Press the **Delete** key on your keyboard.

Customizing the Device

- 1 Select **Settings**.
- 2 Select a setting category.
- 3 Select the setting to change it.

Map and Vehicle Settings

Select **Settings** > **Map and Vehicle**.

- **Vehicle**—changes the icon to represent your position on the map. Go to www.garmin.com for more icons.
- **Driving Map View**—sets the perspective on the map.
- **Pedestrian Map View**—sets the perspective on the map.
- **Map Detail**—sets the level of detail on the map. More detail may cause the map to draw slower.
- **Map Theme**—changes the color of the map data.

- **Map Buttons**—sets which buttons are included on the map. You can include up to three buttons on the map.
- **Map Layers**—sets the data that appears on the map ([page 26](#)).
- **Dashboards**—sets the map dashboard layout.
- **myMaps**—sets which installed maps the device uses.

Enabling Maps

TIP: To purchase additional map products, go to www.garmin.com/maps.

- 1 Select **Settings** > **Map and Vehicle** > **myMaps**.
- 2 Select a map.

Navigation Settings

Select **Settings > Navigation**.

- **Calculation Mode**—sets route preference.
- **Avoidances**—sets road features to avoid on a route.
- **Custom Avoidances**—allows you to avoid specific roads or areas.
- **Advanced Detours**—sets the length of a detour.
- **Limit Walking**—controls the maximum walking distance included in a pedestrian route.
- **Public Transit**—enables or disables transit types.
- **Safe Mode**—disables all functions that require significant operator attention and could become a distraction while driving.

- **GPS Simulator**—stops the device from receiving a GPS signal, and saves battery power.

Route Preferences

Select **Settings > Navigation > Calculation Mode**.

The route calculation is based on road speeds and vehicle acceleration data for a given route.


- **Faster Time**—calculates routes that are faster to drive but can be longer in distance.
- **Shorter Distance**—calculates routes that are shorter in distance but can take more time to drive.
- **Less Fuel**—calculates routes that could use less fuel than other routes.
- **Off Road**—calculates a direct line from your location to your destination.

Display Settings

Select **Settings** > **Display**.

- **Orientation**—changes to landscape or portrait mode.
- **Color Mode**—sets a light background (**Day**), a dark background (**Night**), or automatically switches between the two based on the sunrise time and the sunset time for your current location (**Auto**).
- **Brightness**—changes the brightness of the screen. Decreasing the brightness can save battery power.
- **Display Timeout**—sets the amount of idle time before your device enters sleep mode.
- **Screenshot**—allows you to take a picture of the device screen. Screenshots are saved in the **screenshot** folder of the device storage.

Capturing Screenshots

- 1 Select **Settings** > **Display** > **Screenshot** > **Enabled**.
- 2 Select  to take a screenshot.

The picture bitmap file is saved in the **screenshots** folder on the device drive ([page 56](#)).



Bluetooth Settings

Select **Settings** > **Bluetooth**.

- **Bluetooth**—enables the Bluetooth component.
- **Add Phone** or **Phone**—manages connections between your device and mobile phones with Bluetooth wireless technology.
- **Friendly Name**—allows you to enter a friendly name that identifies your nüvi on devices with Bluetooth technology.

Managing the Bluetooth Device List

You can add, disconnect, or delete phones that your device detects while Bluetooth is enabled.

- 1 Select **Settings** > **Bluetooth** > **Phone**.
- 2 Select an option:
 - Select a phone for your device to connect with.
 - Select  to add a phone to the menu.
 - Select  to delete a phone from the device memory.
 - Select **None** to drop your current connection.

Disabling Bluetooth

- 1 Select **Settings** > **Bluetooth**.
- 2 Select **Bluetooth**.

Traffic Settings

Select **Settings** > **Traffic**.

- **Traffic**—enables traffic and offers.
- **Subscriptions**—lists current traffic subscriptions.
- **trafficTrends™**—see [page 62](#).

Purchasing Traffic Subscriptions

You can purchase additional subscriptions or a renewal if your subscription expires. Go to www.garmin.com/fmtraffic.

Viewing Traffic Subscriptions

Select **Settings** > **Traffic** > **Subscriptions**.

trafficTrends

When the trafficTrends feature is enabled, your device records historic traffic data and uses that data to calculate more-efficient routes. This information is sent to Garmin when you connect your device to myGarmin™ using your computer.

NOTE: Different routes may be calculated based on traffic trends for the day of the week or the time of day.

Disabling trafficTrends

To prevent your device from recording or sharing traffic data, you must disable trafficTrends.

Select **Settings > Traffic > trafficTrends**.

Units and Time Settings

Select **Settings > Units and Time**.

- **Current Time**—sets the device time.
- **Units**—sets the unit of measure used for distances.
- **Time Format**—allows you to select a 12-hour, 24-hour, or UTC display time.

Language and Keyboard Settings

Select **Settings > Language**.

- **Voice Language**—sets the language for voice prompts.
- **Text Language**—sets all on-screen text to the selected language.
NOTE: Changing the text language does not change the language of user-entered data or map data, such as street names.
- **Keyboard Language**—sets the language for your keyboard.

- **Keyboard Layout**—sets the keyboard layout.

Proximity Alerts Settings

Select **Settings** > **Proximity Alerts**.

- **Audio**—sets the tone of an alert.
- **Alerts**—alerts you when you approach custom safety cameras.

Device Settings

Select **Settings** > **Device**.


- **About**—displays the software version number, the unit ID number, and information about other software features.
- **EULAs**—displays the end-user license agreements that apply to your choice.

NOTE: You need this information when you update the system software or purchase additional map data (page 68).

- **Position Reporting**—allows the device to collect your speed, direction, and location information and share it with strategic partners and service providers.
- **Keep Travel History**—allows the device to record information for the, Where I've Been (page 46), and Trip Log (page 26) features.
- **Clear Travel History**

Restoring Settings

You can restore a category of settings or all settings to the factory default values.

- 1 Select **Settings**.
- 2 If necessary, select a settings category.
- 3 Select  > **Restore**.

Appendix

Power Cables

Your device can be powered three ways.

- Vehicle power cable
- USB cable
- AC adapter (optional accessory)

Caring for Your Device

NOTICE

Avoid dropping your device and operating it in high-shock and high-vibration environments.

Do not expose the device to water.

Contact with water can cause this device to malfunction.

Do not store the device where prolonged exposure to extreme temperatures can occur, because it can cause permanent damage.

Never use a hard or sharp object to operate the touchscreen, or damage may result.

Cleaning the Outer Casing

NOTICE

Avoid chemical cleaners and solvents that can damage plastic components.

- 1 Clean the outer casing of the device (not the touchscreen) using a cloth dampened with a mild detergent solution.
- 2 Wipe the device dry.

Cleaning the Touchscreen

- 1 Use a soft, clean, lint-free cloth.
- 2 If necessary, use water, isopropyl alcohol, or eyeglass lens cleaner.
- 3 Apply the liquid to the cloth.
- 4 Gently wipe the screen with the cloth.

Avoiding Theft

- Remove the device and mount from sight when not in use.
- Remove the residue left on the windshield by the suction cup.
- Do not keep your unit in the glove compartment.
- Register your device at <http://my.garmin.com>.

Erasing User Data

NOTE: This process erases all items you have saved to the device.

- 1 Turn the device on.
- 2 Hold your finger on the lower-right corner of the device screen.
- 3 Keep your finger pressed until the pop-up window appears.
- 4 Select **Yes** to clear all user data.

All original settings are restored.

Extending the Battery Life

- Keep your device away from extreme temperatures.
- Put the device in sleep mode ([page 4](#)).
- Decrease the screen brightness ([page 4](#)).
- Do not leave your device in direct sunlight.
- Decrease the volume ([page 4](#)).
- Disable offers and traffic ([page 49](#)).
- Disable Bluetooth ([page 61](#)).
- Shorten the display timeout time ([page 60](#)).

Changing the Fuse in the Vehicle Power Cable

NOTICE

When replacing the fuse, do not lose any of the small pieces and make sure they are put back in the proper position. The vehicle power cable does not work unless it is assembled correctly.

If your device does not charge in your vehicle, you may need to replace the fuse located at the tip of the vehicle adapter.

- 1 Unscrew the end piece ①.

TIP: You may need to use a coin to remove the end piece.

- 2 Remove the end piece, the silver tip ②, and the fuse (glass and silver cylinder) ③.

- 3 Install a 1 A or 2 A fast-blow fuse.



NOTE: The required fuse for your cable is listed after "output" on the back of the vehicle power adapter.

- 4 Place the silver tip in the end piece.
- 5 Screw the end piece back into the vehicle power cable.

Mounting on Your Dashboard

NOTICE

The permanent mounting adhesive is extremely difficult to remove after it is installed.

Use the enclosed mounting disk to mount your device to the dashboard and comply with certain state regulations.

- 1 Clean and dry the dashboard where you are placing the disk.
- 2 Remove the backing from the adhesive on the bottom of the disk.
- 3 Place the disk on the dashboard.

- 4 Remove the clear plastic cover from the top of the disk.
- 5 Place the suction cup mount on top of the disk.
- 6 Flip the lever down (toward the disk).

Removing the Device, Cradle, and Mount

Removing the Device from the Cradle

- 1 Press up on the tab on the top of the cradle.
- 2 Tilt the device forward.

Removing the Cradle from the Mount

- 1 Turn the cradle to the right or left.
- 2 Apply pressure until the socket on the cradle releases the ball on the mount.

Removing the Suction Cup Mount from the Windshield

- 1 Flip the lever on the suction cup mount toward you.
- 2 Pull the tab on the suction cup toward you.

Updating Maps

You can update the maps on your device. For more information, go to www.garmin.com/mapupdates, and select **Map Update User Guide**.

About nüMaps Lifetime

Some models include subscriptions to nüMaps Lifetime, which provides quarterly map updates for the life of your device.

Go to www.garmin.com/us/maps/numaps_lifetime for terms and conditions.

LM	This model includes a nüMaps Lifetime subscription.
LMT	This model includes a lifetime traffic subscription, nüMaps Lifetime subscription, and a traffic receiver.

Purchasing Additional Maps

- 1 Go to your device product page on the Garmin web site (www.garmin.com).
- 2 Click the **Maps** tab.
- 3 Follow the on-screen instructions.

Safety Cameras

CAUTION

Garmin is not responsible for the accuracy of, or the consequences of using, a custom POI or safety camera database.

Safety camera information is available in some locations. Check <http://my.garmin.com> for availability. For these locations, the nüvi includes the locations of hundreds of safety cameras. Your nüvi alerts you when you are approaching a safety camera and can warn you if you are driving too fast. The data is updated at least weekly, so you always have access to the most up-to-date information.

You can purchase a new region or extend an existing subscription at any time. Each region that you purchase has an expiration date.

Custom Points of Interest

Custom POIs are customized points on the map. They can contain alerts that let you know if you are near a designated point or if you are traveling faster than a specified speed.

Installing a POI Loader

You can create or download custom POI lists and install them on your device using POI Loader software.

- 1 Go to www.garmin.com/extras.
- 2 Click **Services > POI Loader**.
- 3 Install the POI Loader onto your computer.

Using the POI Loader Help Files

For more information on the POI Loader, refer to the help file.

With the POI Loader open, click **Help**.

Finding Extras

- 1 Select **Where To? > Categories > Custom POIs**.
- 2 Select a category.

Purchasing Accessories

Go to <http://buy.garmin.com>.

Troubleshooting

Problem	Solution
My device is not acquiring satellite signals	<ul style="list-style-type: none">• Verify the GPS simulator is turned off (page 59).• Take your device out of parking garages and away from tall buildings and trees.• Remain stationary for several minutes.
The suction cup will not stay on my windshield.	<ol style="list-style-type: none">1 Clean the suction cup and windshield with rubbing alcohol.2 Dry with a clean, dry cloth.3 Mount the suction cup (page 1).
The device does not charge in my vehicle.	<ul style="list-style-type: none">• Check the fuse in the vehicle power cable (page 66).• Verify the vehicle is turned on and is supplying power to the power outlet.• Your device can only charge between 32°F and 113°F (between 0°C and 45°C). If the device is placed in direct sunlight or in a hot environment, it cannot charge.
My battery does not stay charged for very long.	To maximize the time between changes, turn down the backlight (page 60).
My battery gauge does not seem accurate.	Allow the unit to fully discharge, and fully charge it (without interrupting the charge cycle).
How do I know my device is in USB mass storage mode?	When your device is in USB mass storage mode, a picture of a device connected to a computer is shown on the device screen. Also, you should see two new removable disk drives listed in My Computer .

<p>The device is connected to the computer, but it will not go into mass storage mode.</p>	<ol style="list-style-type: none"> 1 Disconnect the USB cable from your computer. 2 Turn off the device. 3 Plug the USB cable into a USB port on your computer and into your device. The device automatically turns on and goes into USB mass storage mode. 4 Verify your device is connected to a USB port and not a USB hub.
<p>I cannot see any new removable drives in my list of drives.</p>	<p>If you have several network drives mapped on your computer, Windows can have trouble assigning drive letters to your device drives. Refer to your operating system Help file to learn how to map or assign drive letters.</p>
<p>My phone will not connect to the device.</p>	<ul style="list-style-type: none"> • From the main menu, select Settings > Bluetooth. The Bluetooth field must be set to Enabled. • Turn on your phone and bring it within 33 feet of the device. • Go to www.garmin.com/bluetooth for more help.

Index

Symbols

2-D, 3-D map view 27

A

accessories 69

adding a stop 23

addresses 12

alerts

 safety camera 68

audiobook 42

 bookmark 43

 loading 42

 playing 42

automatic volume 5

 enabling 5

avoiding

 public transit types 24, 25

 theft 65

 traffic 53

B

battery 70

Bluetooth technology 30–76

 friendly name 60

 pairing with phone 31

 settings 60

brightness 60

C

calculator 47

calls

 answering 32

 hanging up 33

 home 34

 muting 33

caring for your device 64

category

 searching within 9

charging your device 1, 70

cityXplorer maps 21, 24

cleaning your device 64

computer, connecting 2

converting

 currency 48

 units 47

coordinates 13

current location, saving 16

customizing the device 58–65

custom POIs 69

D

dashboard disk 66

deleting

 all user data 65

 character 7

 files 57

 pictures 46

 recent finds list 14

 saved locations 18

 trips 45

detailed maps 56, 58

detours 23

display settings 24, 25

display timeout 60

driving directions 27

E

- ecoRoute 37–40
 - calibrate fuel economy 38
 - ecoChallenge score 38
 - fuel economy information 39
 - mileage report 39
 - vehicle profile 37

editing

- change categories 17
- change map symbol 17
- destinations 45
- home location 14
- saved locations 17
- saved trip 45

extras 69

F

- feedback on POI's 10
- files
 - deleting 57
 - supported types 56
- finding locations
 - by address 12
 - by coordinates 13

- recent selections 14
- saved locations 16
- using photos 15
- using search bar 9

- fuel prices 11
- fuel stations 11
- fuse, changing 66

G

- Garmin Live Services 36
 - subscribing 37
- geocaching 13
- go home 14
- GPS
 - settings 59
 - simulator 15

H

- help 34
- historical traffic 62
- home
 - phone number 34
 - setting a location 14

J

- JPEG image files 56
- junction view 28

K

- keyboard 7
 - language mode 7, 63

L

- latitude and longitude 13
- locations 9

M

- map buttons 27
- maps
 - adding 68
 - detail level 58
 - errors 10
 - purchasing 68
 - theme 58
 - view 26
- MapSource 56, 68
- mass storage mode 55
- measurements, converting 47

- memory card 56
- mileage report 39
- mounting the device
 - on dashboard 66
 - on windshield 70
 - removing from mount 67
- mute
 - phone call 33
- myDashboard 2
- myGarmin messages 40
- myTrends
 - enabling 63

N

- navigation 22
 - off road 24
 - pedestrian 24
 - photo 15
- nearby services 30
- next turn 28
- nüMaps Lifetime 67

O

- offers 48
 - disabling 49
 - viewing 49
- off-road navigation 24, 59
- on-screen buttons 7

P

- pairing a mobile phone 31
- parking 15, 47
 - last spot 47
 - saving 47
- pedestrian mode
 - settings 24, 25
- photo navigation
 - loading pictures 15
- picture viewer 45
- PIN
 - Bluetooth 31
- points of interest
 - finding 9
 - POI loader 56
- protecting your device 64

- public transit
 - avoidances 24, 25
 - city maps 25

R

- recalculating routes 23
- recently found locations 14
- registering the device 3
- removing the mount 67
- renaming trips 45
- resetting
 - home location 14
 - the max speed 29
 - trip data 29
- routes
 - off road 24, 59
 - stopping 23

S

- safe mode 59
- satellite signals 6
- Saved Locations 16–17
- saving
 - your current location 16

- school zone database 69
- screen
 - brightness 60
- screenshots 60
- sending a location 36
- settings 58–76
- Smartphone Link 34
 - connecting 35
- software
 - version 63
- speech recognition 18
- storing the device 64
- system settings 59

T

- text language 63
- time settings 62
- tools 34–39
- Track Up 26
- traffic 50–76
 - activating a subscription 54
 - adding traffic subscriptions 61
 - cameras 54
 - icons 51

- incidents 52
 - receiver 51
 - trafficTrends 62
- traffic alerts 29
- transportation mode 6
- trip computer 29
- trip log 26
 - enabling 63
- trip planner 44
- troubleshooting 70
- turn-by-turn directions 27
- turn list 27

U

- unit converter 47
- unit ID 63
- updating
 - maps 3
 - software 3
- USB 70
- user data, deleting 65

V

- voice command

- activating 18
- icons and tones 19
- navigating with 19
- tips for using 19
- wakeup phrase 18
- voice language 62
- voice mail 33
- volume
 - adjusting 4
 - audio mixer 4
 - automatic 5

W

- weather 40
 - radar 41
- Where Am I? 30
- Where I've Been
 - enabling 63
- Where To? menu 8
 - customization
 - shortcut icon, adding 8
 - shortcut icon, removing 8
- world clock 46

www.garmin.com/support



913-397-8200
1-800-800-1020



00 32 2672 5254



0180 5 / 42 76 46 - 880
0180 5 / 42 76 46 - 550



00800 4412 454
+44 2380 662 915



0808 2380000
+44 (0) 870.8501241



00 45 4810 5050



00 39 02 3669 9699



00 35 1214 447 460



1-866-429-9296



00 358 19 311 001



0800-0233937



00 902 00 70 97



43 (0) 3133 3181 0



00 33 1 5517 81 89



815 69 555



00 46 7744 52020

Garmin International, Inc.

1200 East 151st Street,
Olathe, Kansas 66062, USA

Garmin (Europe) Ltd.

Liberty House, Hounsdown Business Park
Southampton, Hampshire, SO40 9LR UK

Garmin Corporation

No. 68, Zhangshu 2nd Road, Xizhi Dist.
New Taipei City, 221, Taiwan (R.O.C.)

Garmin®, the Garmin logo, MapSource®, and nüvi® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. cityXplorer™, ecoRoute™, myGarmin™, nüMaps Guarantee™, nüMaps Lifetime™, nüvi® and trafficTrends™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc., and any use of such name by Garmin is under license. Windows® is a registered trademarks of Microsoft Corporation in the United States and/ or other countries. Mac® is a registered trademark of Apple Computer, Inc. microSD™ is a trademark of SD-3C, LLC. Audible.com® and AudibleReady® are registered trademarks of Audible, Inc. © 1997–2005 Audible. Android is a trademark of Google Inc."



© 2011 Garmin Ltd. or its subsidiaries

Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>