Using the Weather Radio

The Weather Radio provides a constant update of weather conditions, which is helpful while outdoors or planning a trip. Seven Weather Radio channels are available. For more information about the Weather Radio, refer to the Owner's Manual.

To turn the Weather Radio on:

- 1. Open the Radio Page by pressing the Page button.
- 2. Highlight the Option Menu button and press the Thumb Stick In
- 3. Highlight Use Weather Radio and press the Thumb Stick In.

My ID KELLY Channel Code 1 " 3D Accuracy: 28 Feet ±Å[™]

⊕•d⊫ot•G

Radio Page with Weather Radio On

 
B

Marking a Waypoint

Marking a waypoint is simply capturing your current location and storing it in the unit's memory. The unit must be turned on and tracking satellites to mark a waypoint.

To mark a waypoint:

- 1. Press the **Thumb Stick** In and hold it until the Shortcuts Menu is displayed.
- 2. Highlight Mark Waypoint and press the Thumb Stick In to display the Mark Waypoint Page shown below.



- Mark Waypoint Page
- 3. Highlight the Name field and press the Thumb Stick In. Enter a new name. When finished, highlight **OK** then press the Thumb Stick In
- 4. Highlight the Symbol field and press the Thumb Stick In. Choose a symbol then press the Thumb Stick In to accept the selection
- 5. Highlight the **OK** button at the bottom of the page and press the Thumb Stick In to save the wavpoint

Navigating with Your Rino 130

You can navigate to a waypoint, city, exit, or a contact's location. Using optional detailed maps, you can also navigate to points of interest, addresses, and intersections.

To begin navigation using Find 'N Go:

- 1. Press the **Thumb Stick** In to display the Shortcuts Menu.
- 2. Highlight Find 'N Go and press the Thumb Stick In.
- 3. Highlight Wavpoints and press the Thumb Stick In. Select the desired option (by **Nearest** or by **Name**), and press the Thumb Stick In.
- 4. Highlight the desired waypoint and press the Thumb Stick In
- 5. With the Waypoint Page displayed, highlight the Goto button at the bottom of the page and press the Thumb Stick In to begin navigation. The Navigation Page automatically opens to guide you to your destination. See below for more information

Navigation Page

The two main components of the Navigation Page are the compass ring and the pointer. As you move, the compass ring rotates showing

your current direction of travel at the top of the display. The pointer points toward your destination. When the pointer is aligned with the vertical line at the top of the compass ring, you are on a direct course toward your destination. The unit has to be moving to navigate. If you are standing still or moving very slowly, the navigation data may not be accurate.

Using Contacts

The first time you receive a signal from another Rino user, the New Contact page is displayed. From the New Contact page you can



that position, select **OK** to add them to your contact list, or press the Page/Quit button to disregard the contact. Every time you receive signals from contacts, your map is updated showing their new position. A Track Log of their movement is created and New Contact Page shown on your map.

show the user's location on your Map, Goto

Sending a Location

You can send any location that you have available in your Find 'N Go menu. These may be waypoints, contacts, cities, exits, or any other data that is loaded in the unit. Below are the steps to send a waypoint.

To send a location (waypoint) using Find 'N Go:

- 1. Press the **Thumb Stick** In and hold it until the Shortcuts Menu is displayed, or press the **Page** button until the Main Menu is displayed.
- 2. Highlight Find 'N Go and press the Thumb Stick In. Highlight Waypoints and press the Thumb Stick In. Select Nearest or By Name and press the Thumb Stick In.
- 3. Highlight the waypoint that you want to send and press the Thumb Stick In to display the Waypoint Review page.
- 4. Highlight the **Option Menu** button **I** and press the **Thumb** Stick In.
- 5. Select Send Location and press the Thumb Stick In



The location is sent to all Rinos on the same channel and squelch code as you. They can then choose to Goto that location, view the location on the map (Map), or save the location (OK).

Using Peer-to-Peer Positioning

The Rino's most unique feature is Peer-to-Peer positioning, sending the location of one Rino unit to other Rino units. Peer-to-Peer positioning allows you to track the movement of other Rino users and even navigate to their location

To send your location:

Press and release either the Call or Talk button. Your Rino 130 automatically sends out its location. Other Rino users monitoring the same channel and squelch code receive this information.

Polling a Location

If you have not heard from a contact in a while and would like to know that contact's current location, you may "poll" the contact's location. This will update that contact's location in your Rino 130.

To poll a location:

- 1. Press the **Thumb Stick** In and hold it until the Shortcuts Menu is displayed, or press the Page button until the Main Menu is displayed.
- 2. Highlight Find 'N Go and press the Thumb Stick In. Highlight Contacts and press the Thumb Stick In.
- 3. Highlight the contact that you want to poll and press the Thumb Stick In to display the Contact Review page.
- 4. Highlight the Option Menu button and press the Thumb Stick In.
- 5. Select **Poll Location** and press *Polling a contact's location* the Thumb Stick In.

Sending a Note

You can send a note to communicate silently with other Rino 130 users on the same channel and squelch code that you are using. This can be a Saved Note or a new note. (This feature is not available on Rino 110 units.)

To send a note:

- 1. Press the Thumb Stick In to display the Shortcuts Menu.
- 2. Select the Send Note option.
- 3. To create a new note or edit an existing note, press the Thumb Stick In when the Edit Note field is highlighted. Enter your note using the data entry keyboard. Select OK when complete.

To use a Saved Note, select the desired note from the Saved Note list and press the Thumb Stick In.

Select Send to send the note to all Rino 130 users on the same channel and squelch code that you are using. Select Save to save the note for future use. Select Clear to erase the note.

If you have further questions or just want to learn more about the operation of Rino 130, refer to the Owner's Manual, which provides detailed information about all of your Rino 130's features.



Navigation Page

Navigation

Send Location



Rino[®] 130

Quick Start Guide

~rino

GARMIN

2 2 2

. . . .

.

....

. . . .

Power button:

- Press and hold to turn the unit On/Off
- · Press to adjust contrast and backlighting

Call button:

- Press to send out Call Tone
- Sends position when released (if enabled)

Talk button:

- Press and hold to talk
- Sends position when released (if enabled)

Page/Ouit button:

- · Press to cycle through main pages
- Used to quit or escape menu items

Volume (V) button:

• Press to open volume control window

Speaker -

Step-by-Step Instructions to Get You Started

(Turn this page and begin with Step 1)



Thumb Stick

- Press In to enter highlighted options and to confirm messages
- Move Up. Down. Right or Left to move through lists. highlight fields. on-screen buttons. icons. enter data. or move the map panning arrow
- Press In and hold to display Shortcuts Menu.

Zoom/Map (Z) button:

- From the Map Page, press to open Zoom control window
- From anv other page, press to display Map Page

Microphone:


 Hold unit 3–4 inches away when talking

1 Installing the Batteries

The Rino 130 operates on three "AA" Alkaline batteries (not included) located in the back of the unit. Rechargeable batteries may also be used. See the Rino 130 Owner's Manual for setting battery type. The unit is factory set to use Alkaline batteries. Stored data is not lost when the batteries are removed

To install batteries:

1. Remove the battery cover on the back of the unit. Turn the D-ring 1/4 turn counter-clockwise and pull the cover off.

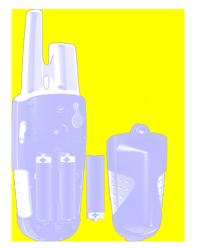


- 2. Insert batteries observing the polarity reference molded into the unit housing. Orient the negative (-) battery terminal toward the spring.
- Reinstall the battery cover by inserting the bottom hinge clip and closing the cover. Turn the D-ring 1/4 turn clockwise.

Notes on battery use:

- · When replacing batteries, use only new or fully recharged batteries. Rechargeable batteries may typically display less capacity than Alkaline batteries.
- Do not mix different types of batteries together.
- Remove the batteries from the unit if you do not plan to use it for several months. Follow the battery manufacturer's instructions for proper care and disposal of used batteries.
- · Extensive use of backlighting, WAAS, and/or FRS or GMRS will significantly reduce battery life.

2 Viewing the Main Pages

All of the information you need to operate the Rino 130 can be found on six default main pages (or display screens). Simply press and release the **Page** key to cycle through the Radio Page. Map Page, Navigation Page, Altimeter Page, Trip Computer, and Main Menu Page. You can also access the Main Pages by pressing the on-screen Main Page Menu button

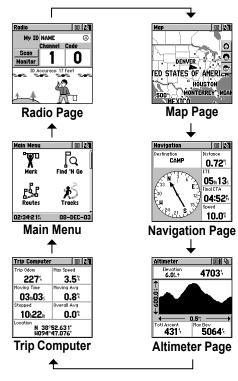

While these six Main Pages provide you with different types of information, they all share common features like Option Menus and a Main Page Menu. Access the Option Menu and Main Page Menu by using the **Thumb Stick** to highlight the on-screen button. Then press the **Thumb Stick** In.

Main Page Menu button

Radio	[目] [2]
	Ortion Manu hutton

Option Menu button

Initializing the GPS

Before the Rino 130 can be used for navigation, the GPS receiver must be initialized. Initialization allows the Rino 130 to receive and store satellite information and begin using the satellites for navigation. The initialization is automatic and should only take a few minutes

To initialize the unit (acquire satellites):

- 1. Take the Rino 130 outside where it has an unobstructed view of the sky and turn it on. Radio
- 2. The unit begins to search for satellite signals. "Tracking Satellites" is displayed while the unit is initializing.

The first time you use your Rino 130, initialization should take no more than five minutes

3. When the GPS is initialized and ready for navigation, the message "3D Accuracy" is displayed on the Radio Page.

If for some reason the unit is not able to gather the necessary satellite information, refer to the Rino 130 Owner's Manual.

Use the **Thumb Stick** like a joystick that you control with your thumb. Move the Thumb Stick Up, Down, Right, or Left. Press the Thumb Stick In to select an item on the screen, much like pressing the Enter button on a computer keyboard.

Sometimes you will need to spell out things using the **Thumb Stick** and an on-screen keyboard. To enter characters with the on-screen keyboard, press the Thumb Stick Up, Down, Left, or Right to highlight the desired character (letter, number, or a space). Press the Thumb Stick In to select that highlighted character. Choose Back

۵	R	C	4	Þ	Back	1	2	3	to delete the character to the
		F						6	
		K			Shift	7	8	9	are finished entering charac
		P				0	-	+	ters, highlight OK and press
S	Т	U	Ų	₩	XYZ&	•	,		the Thumb Stick In.
Ex	ат	ple	e of	an	on-screen	key	bo	ara	

2. Select one of the thirty-eight (38) available codes. Press the Thumb

O Changing the Name and Symbol

The My ID (name) and symbol (icon) identify you to other Rino users.

To change the unit ID/name:

- 1. Highlight the My ID field and press the Thumb Stick In to activate the field and display the keyboard.
- 2. Highlight Clear, then press the Thumb Stick In to clear the default ID.
- 3. Enter an ID. or name, up to ten (10) characters long.
- 4. When you have entered your new ID, highlight OK and then press the Thumb Stick In.

To change the user symbol:

- 1. Highlight the face symbol to the right of the My ID field. Press the Thumb Stick In to show a list of available face symbols.
- 2. Highlight the desired symbol from the list of selections.
- 3. Press the Thumb Stick In to select that symbol.

 
are using so they can communicate with you. To select a channel:

- 1. Highlight the Channel field and press the Thumb Stick In.
- 2. Select an available channel and press the Thumb Stick In to accept the selection.


To select a squelch code:

- 1. Select the **Code** field and press the Thumb Stick In.
- Stick In to accept the selection.





4 Entering Data

 



G Setting Up the Radio

Select a channel and squelch code to transmit on. Be sure to tell the other members of your group what channel and squelch code you

> ⊙•dPl®l⊛ E 9 My ID KELLY Channel Code Scan Ionitor 0 3D Acc 2 20 Feet Selecting the channel



My ID field Symbol field

7 Transmitting with the Rino 130

The Rino 130 can transmit to and receive messages from other FRS radio users on the same channel and squelch code. To use all of the features of the Rino, communicate with other Rino units.

To transmit on your Rino 130:

- 1. Press and hold the **Talk** button and speak in a normal voice into the microphone area on the front of the Rino 130 from a distance of about 3-4 inches.
- 2. When you are finished talking, release the Talk button. Your location is updated on all receiving Rinos.
- 3. If you want to call another user or update your location on another Rino, press and release the Call or Talk button.

Adjusting Volume and Backlight

If you need to adjust the volume, press the V (Volume) button on the front of the unit to display an adjustment slider. To change the volume, press the Thumb Stick Up or Down to raise or lower the slider. When you have the proper level set, press the V button or press the Thumb Stick In.

If lighting conditions make it hard for you to see the display screen, you can adjust the contrast or turn on the backlight.

To turn on the backlight and adjust the screen contrast:

- 1. With the unit on, briefly press and release the **Power** button to display the Backlight and Contrast adjustment.
- 2. Press the Power button or press Up or Down on the Thumb Stick to turn the Backlight on or off. A light bulb symbol appears on the top Status Bar when the backlight is on.

The backlight remains on until the set timeout period is completed or the Power button is pressed again. The unit is factory set to timeout 15 seconds after the last button press.

- 3. Move the **Thumb Stick** to Left (Lighter) or Right (Darker) to adjust the contrast.
- 4. Press the **Thumb Stick** In to close the Backlight and Contrast window.

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com