

# Keyboard Removal Guide

Gateway NV53A / NV55C / NV59C Series

Removal may vary slightly from model to model


[excelcomputerinc.com](http://excelcomputerinc.com) / [laptopking.com](http://laptopking.com)




First, remove the battery.



Next, push back the 4 tabs (NV53A and NV59C) as shown (photo 1) to unlock the keyboard. The NV55C has 6 tabs. You can use a small flathead screwdriver or similar tool. Photo 2 shows a closeup of one of the tabs. The tabs are above the 'F4', 'F8', 'F12' and 'DEL' keys on the NV53A and NV59C models. Additional tabs 'ESC' and 'Speaker Up Volume' are on the NV55C model. Now, just pull upward on the keyboard and lay it on its face to gain access to the keyboard cable.

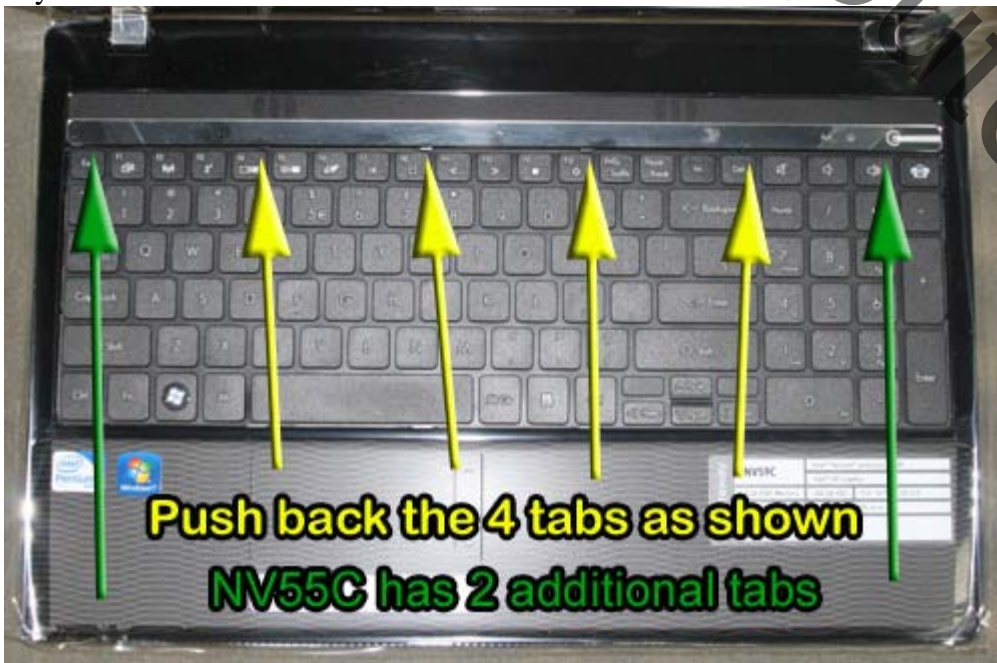

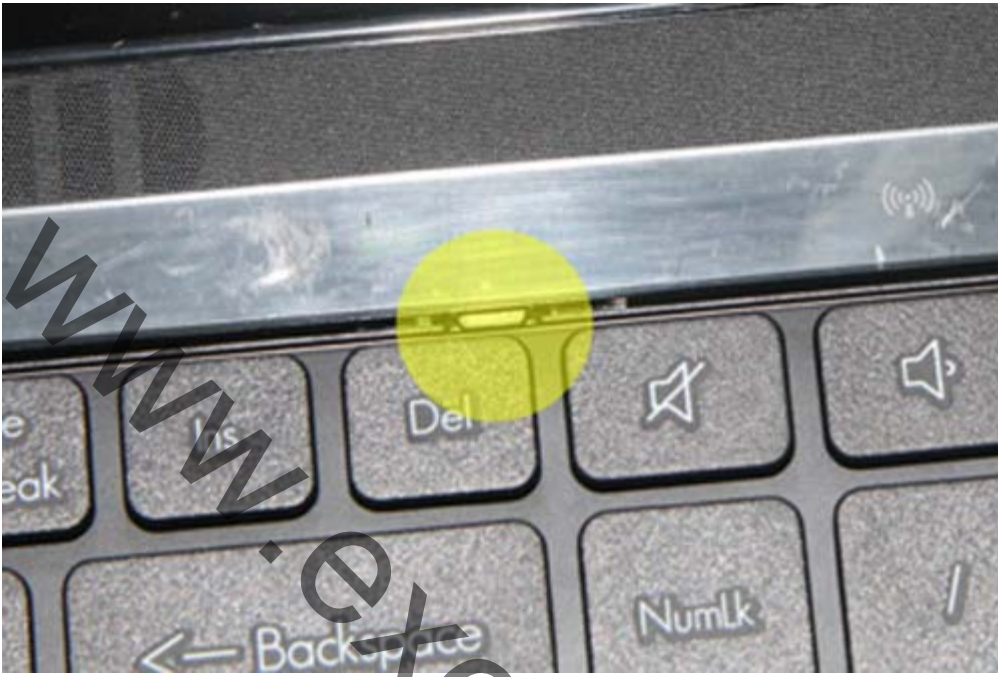

This final step is unlocking the keyboard cable from the motherboard. To do this move the black clip approx. 1/32" towards you. The cable will then slide out of the connector.



Your done! Reverse procedure to install your new keyboard.

**Please note the NV52 NV53 NV54 NV56 NV58 NV59 NV73 NV78 NV79 keyboard is NOT COMPATIBLE with the NV53A NV59C NV73A NV79C models.**



Presented by Excel Computer, Inc and Laptopking.com

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>