


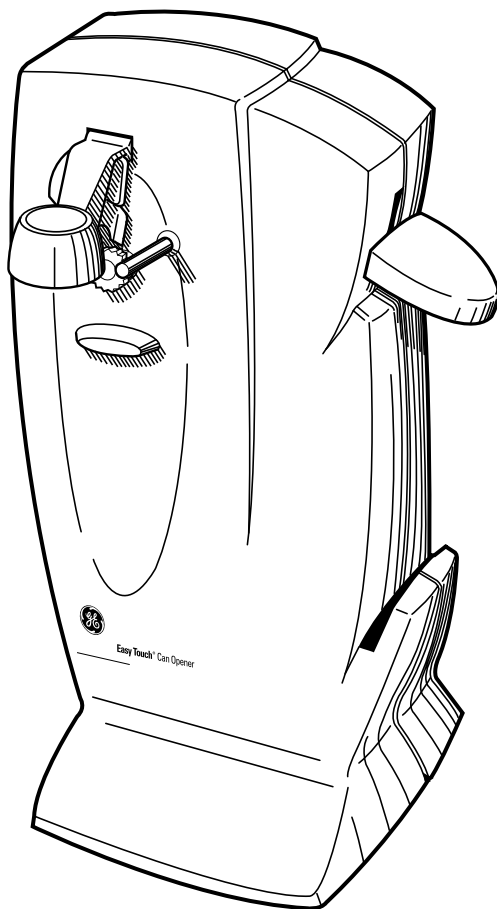

# *Easy Touch<sup>®</sup> Can Opener*

---



**Item Stock Number**

**GE106613**

*UPC:*

*681131066136*

**Item Stock Number**

**GE106693**

*UPC:*

*681131066938*

***For product service, call customer service at (877) 207-0923***

GE106613: 681131066136 • GE106693: 681131066938

Download from [www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. To protect against risk of electrical shock, do not immerse cord, plug or motor unit in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Call Customer Service (see warranty) to return for examination, repair, or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by manufacturer may cause fire, electric shock or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or contact hot surfaces, including the stove.
10. Do not open pressurized (aerosol-type) cans or cans of flammable liquids, such as lighter fluids.

## SAVE THESE INSTRUCTIONS!

### Consumer Safety Information

**THIS APPLIANCE IS INTENDED FOR HOUSEHOLD USE ONLY.**


This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit,

contact a qualified electrician. Do not attempt to defeat this safety feature.

**CAUTION: To reduce the risk of electric shock, do not immerse the can opener in water.**

### Parts and Features

- 1** Piercing Lever
- 2** Cutting Blade
- 3** Feed Wheel
- 4** Can Rest
- 5** Magnet

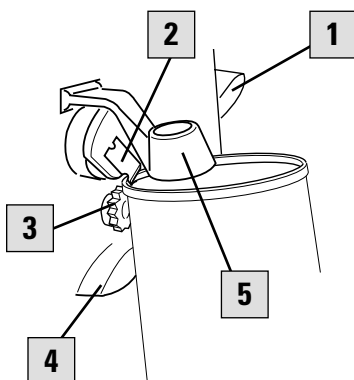

# How to Open Cans

1. Plug cord into 120 volt, AC outlet.
2. Raise piercing lever, tilt can so that the rim of the can rests on the edge of the feed wheel, lower the lever until the blade pierces the can.
3. Press lever down all the way to pierce lid and start cutting action. "Power Pierce" feature: When you press lever, motor will start rotating can for easier piercing.
4. Let go of lever and can opener will continue cutting and will stop automatically when can has been

opened. (It is normal for motor to occasionally continue cutting action for a few seconds after lid has been completely severed.)


5. To remove can, grasp can firmly and raise lever. Carefully slide lid from magnet and dispose of properly.

**PLEASE NOTE: To open cans over 2 lbs., hold top of can opener to stabilize it. Unit will not open rimless cans. If there is a dent in the rim of the can, open other end. Never open or eat the contents of a dented, bulging or punctured can.**

# How to Sharpen Knives

**Do not attempt to sharpen hollow ground blades or those with serrated edges.**

1. Be sure knife is clean and free of grease.
2. Place heel of knife into the guide slot located on the side of the can opener. Lightly draw the blade towards you, applying a slight downward pressure. Repeat this procedure four to five times to put on a "factory sharp" edge.

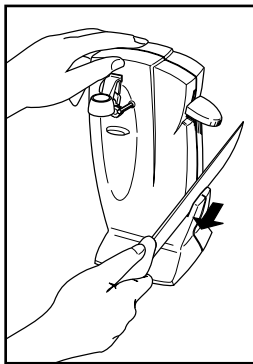

# How to Clean Blade Assembly

**Never submerge can opener in water.**

1. Unplug cord.
2. Wipe can opener with a damp cloth. Clean around blade area with toothpick or cotton swab if necessary.

**HINT: Cutting mechanism may collect food or paper from can labels, and should be cleaned frequently to maintain optimum performance.**

# Two Year Limited Warranty

## What does your warranty cover?

- Any defect in material or workmanship.

## For how long after the original purchase?

- Two years.

## What will we do?

- Provide you with a new, or at our option, a reconditioned unit.
- The exchange unit is warranted for the remainder of your product's original two-year warranty period.

## How do you make a warranty claim?

- Return product to nearest WAL★MART store or ship unit via UPS Ground Service CUSTOMER SERVICE DEPARTMENT 233 Fortune Blvd, Milford MA 01757
- All parts of this product are guaranteed for a period of two years as follows:
  - Within the first 24 months from date of purchase, subject to the conditions below, manufacturer will repair or replace the product if it is defective in workmanship providing it is returned to manufacturer, freight prepaid, with PROOF OF PURCHASE and date, together with \$5.00 for return shipping and handling charges.
- Carefully pack the item in its original carton or other suitable box to avoid damage in shipping. We recommend using the original carton and packing materials.
- Before packing your unit for return, be sure to enclose: your name, full address with zip code and telephone number, a dated sales receipt or PROOF OF PURCHASE (if the unit was a gift, provide a statement and the date received), your \$5.00 check for return shipping and handling, and the model number of the unit and the problem you are having. (Enclose in an envelope and tape directly to the unit before the box is sealed).
- Manufacturer recommends you ship the package U.P.S. ground service for tracking purposes.
- All shipping charges must be prepaid

by you.

- Ship to:  
CUSTOMER SERVICE DEPARTMENT  
233 Fortune Blvd,  
Milford MA 01757
- Shipping and handling charges: \$5.00

## What does your warranty not cover?

- Customer instruction. This instruction manual provides information regarding operating instructions and user controls. For additional information, ask your dealer.
- Commercial use.
- Damage from misuse, abuse, or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.

## How does state law relate to this warranty?

- This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

## What if you purchased this product in the USA and encounter a problem while using it outside the USA?

- Follow the shipping directions provided for warranty claims.

For products purchased outside the United States and Canada, see dealer for warranty. WAL★MART Stores, Inc. Bentonville, AR 72716



is a trademark of General Electric Company and is used under the license by WAL★MART Stores, Inc. Bentonville, AR 72716

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>