 




Coffee Grinder Moulin à café Molinillo de café

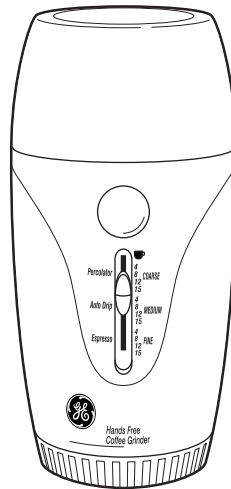

**READ BEFORE USE
LIRE AVANT L'UTILISATION
LEA ANTES DE USAR**

840146500

169028

**For Customer Assistance, call Customer Service at
1-877-207-0923 (US) or 1-877-556-0973 (Canada)**

Pour l'assistance à la clientèle au Canada : 1-877-556-0973

**Para comunicarse con Asistencia al Cliente en México: 01-800-343-7378
Le invitamos a leer cuidadosamente este instructivo antes de usar su aparato.**

WARNING

Shock Hazard

- Do not immerse this appliance in water or other liquid.
- This appliance has a polarized plug (one wide blade) that reduces the risk of electrical shock. The plug fits only one way into a polarized outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or using an adaptor. If the plug does not fit, reverse the plug. If it still does not fit, have an electrician replace the outlet.

IMPORTANT SAFEGUARDS

When using your flatiron, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. To protect against risk of electrical shock, do not put unit, cord or plug in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Call our toll free customer service number for information on examination, repair or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces including stove.
10. Check grinding chamber for presence of foreign objects before using.
11. Do not use appliance for other than intended purpose.
12. Do not remove cover until blade has completely stopped rotating.

SAVE THESE INSTRUCTIONS!

Other Consumer Safety Information

This product is intended for household use only.A

PARTS AND FEATURES

Cover

Grinding Chamber

ON/OFF Button

 
Grind Setting Switch

Body

Base with Cord Wind

Storage Container*


Cleaning Brush*

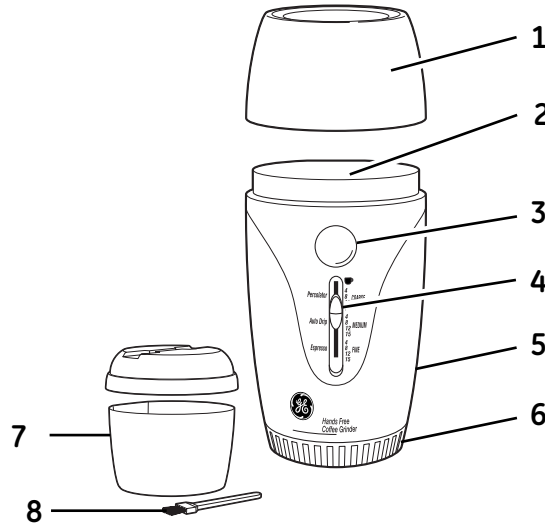


* on select models

HOW TO USE YOUR GRINDER

 1. Before first use, clean coffee grinder.
2. Remove cover by turning counter-clockwise to the unlock position, then lift straight up. (illus. A)

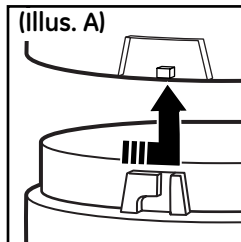

 
3. Using measurements on cover, fill with desired amount of coffee beans and pour into grinding chamber or scoop beans directly into grinding chamber.
4. Lock cover onto grinder. Align tab on lid with unlock symbol on the back of grinder. Then turn lid clockwise to the lock position. (illus. B)

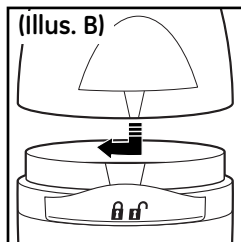

5. Hold the plug and pull slowly to release the stored cord. Plug into outlet.

TO DRY IRON

 6. Move the grind setting switch to the amount to be ground and desired fineness of grind. (Illus. C)

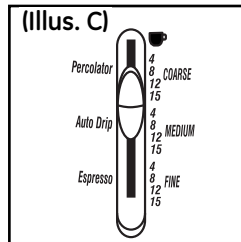

7. Press and hold ON/OFF button. Release button once grinder begins. The grinder will stop automatically when grinding is complete. To stop grind cycle at anytime, push ON/OFF button. When ON/OFF button is pressed again, grinder will start from the beginning of the timed cycle.
8. When finished unplug grinder, clean grinding chamber, and rewind cord. Store cleaning brush in lid of storage container.
- NOTE:** The grinder will only operate with cover in the locked position.

GRINDING TIPS

- For best flavor, store coffee beans in an airtight container.
- Grind beans immediately before brewing.
- When grinding more than 12 scoops of coffee beans, pour beans into cover, then turn grinder upside down and lock onto the cover. Be sure to align tab on lid with the unlock symbol.
- Grinding times will vary by amount and fineness setting:

COARSE	9 to 13 seconds	(Perc, French Press)
MED	14 to 17 seconds	(Auto Drip)
FINE	25 to 28 seconds	(Espresso)
- To ensure optimal grinding performance allow your coffee grinder to cool for at least one minute between uses.
- Coffee flavor and strength is a personal preference. Vary the type of coffee beans, amount of coffee and fineness of grind to find the flavor you prefer.
- To grind amounts not on controls, select the next closest amount listed.

HOW TO CLEAN YOUR GRINDER

1. Unplug from outlet before cleaning.
2. Use the soft cleaning brush to clean around blades. Carefully wipe grinding chamber with a soft, damp cloth. Use care around sharp blades.
3. Rinse and dry cover. Wipe grinder with damp cloth.
4. Hold grinder and turn base in the direction of the arrow to rewind cord.
5. The storage container and brush should be washed in hot, soapy water. Rinse and let dry.

Do not immerse coffee grinder in water or other liquid.

CUSTOMER SERVICE

If you have a claim under this warranty, please call our Customer Assistance Number. For faster service please have model, series, and type numbers ready for operator to assist you. These numbers can be found on the bottom of your appliance.

MODEL: _____ **TYPE:** _____ **SERIES:** _____

Customer Assistance Number 1-877-207-0923 (US) or 1-877-556-0973 (Canada)

Keep these numbers for future reference!

For more information, please visit us at www.walmart.com

Two-Year Limited Warranty

What does your warranty cover?

- Any defect in material or workmanship.

For how long after the original purchase?

- Two years.

What will we do?

- Provide you with a new one.
- For those items still under warranty but no longer available, WAL-MART reserves the right to replace with a similar GE branded product of equal or greater value.

How do you make a warranty claim?

- Save your receipt.
- Properly pack your unit. We recommend using the original carton and packing materials.
- Return the product to your nearest WAL-MART store or call Customer Assistance at 1-877-207-0923 (US) or 1-877-556-0973 (Canada)

What does your warranty not cover?

- Parts subject to wear, including, without limitation, glass parts, glass containers, cutter/strainer, blades, seals, gaskets, clutches, motor brushes, and/or agitators, etc.
- Commercial use or any other use not found in printed directions.
- Damage from misuse, abuse, or neglect, including failure to clean product regularly in accordance with manufacturer's instructions.

How does state law relate to this warranty?

- This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.
- THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTY OR CONDITION, WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, INCLUDING, WITHOUT LIMITATION, ANY STATUTORY WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.
- WAL-MART, GE, AND THE PRODUCT MANUFACTURER EXPRESSLY DISCLAIM ALL RESPONSIBILITY FOR SPECIAL, INCIDENTAL, AND CONSEQUENTIAL DAMAGES OR LOSSES CAUSED BY USE OF THIS APPLIANCE. ANY LIABILITY IS EXPRESSLY LIMITED TO AN AMOUNT EQUAL TO THE PURCHASE PRICE PAID WHETHER A CLAIM, HOWEVER INSTITUTED, IS BASED ON CONTRACT, INDEMNITY, WARRANTY, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY, OR OTHERWISE. SOME STATES OR PROVINCES DO NOT ALLOW THIS EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL LOSSES SO THE FOREGOING DISCLAIMER MAY NOT APPLY TO YOU.

What if you encounter a problem with this product while using it outside the country of purchase?

- The warranty is valid only in the country of purchase and you follow the warranty claim procedure as noted.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>