

5 CUP DIGITAL COFFEE MAKER



Model Number:
169208
UPC: 681131692083

Customer Assistance
1 877 207 0923 (US)
1 877 556 0973 (Canada)



Thank you for purchasing this GE appliance.

In keeping with the GE ecomagination initiative, please consider the option to recycle the packaging material and donate any appliance you are no longer using.

To read more about GE's ecomagination commitment, visit:
ge.ecomagination.com

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to prevent the risk of fire, electric shock, burns, or other injuries or damages.

- **Read all instructions before use.**
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electrical shock and injury to persons do not immerse cord, plugs, or the appliance in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow it to cool before putting on or taking off parts and before cleaning the appliance.
- Do not operate appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Call our toll-free customer assistance number for information on examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injuries to persons.
- Do not use outdoors or in a damp area.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect the appliance, turn control to "off", then remove plug from wall outlet.
- Do not use this appliance for anything other than its intended use.
- Do not touch the warming plate **(8)** when the coffee maker is on.
- Scalding may occur if the lid **(2)** is removed during the brewing cycles.
- Never leave the empty carafe **(15)** on the warming plate **(8)** when the coffee maker is on. Otherwise the carafe **(15)** is liable to crack.
- Do not set a hot carafe **(15)** on a cold surface.
- Do not use a cracked carafe **(15)** or a carafe having a loose or weakened handle.
- Do not clean carafe **(15)** with cleansers, steel wool pads, or other abrasive material.
- To reduce the risk of fire or electric shock, do not remove the bottom cover on the appliance. No user serviceable parts inside. Call our toll-free customer assistance number for repair.
- The carafe **(15)** is designed for use with this appliance. It must never be used on a range top.

IMPORTANT SAFEGUARDS

- **Warning:** Hot Steam.
- **Caution:** To reduce the risk of scalding, do not open lid when coffee is brewing.
- **Warning:** To reduce the risk of fire or electric shock, do not remove bottom cover. No user-serviceable parts inside. Repair should be done by authorized service personnel only.
- **Caution:** Risk of injury – replace the carafe within 30 seconds while brewing.
- **Warning:** After brewing is finished turn off the appliance.

SAVE THESE INSTRUCTIONS!

ADDITIONAL SAFEGUARDS

This appliance is for **HOUSEHOLD USE ONLY**.

DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

EXTENSION CORDS

 
A short power-supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply cord or extension cord is used,

- 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and
- 2) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be tripped over, snagged, or pulled on unintentionally (especially by children).

POLARIZED PLUG









This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

PARTS





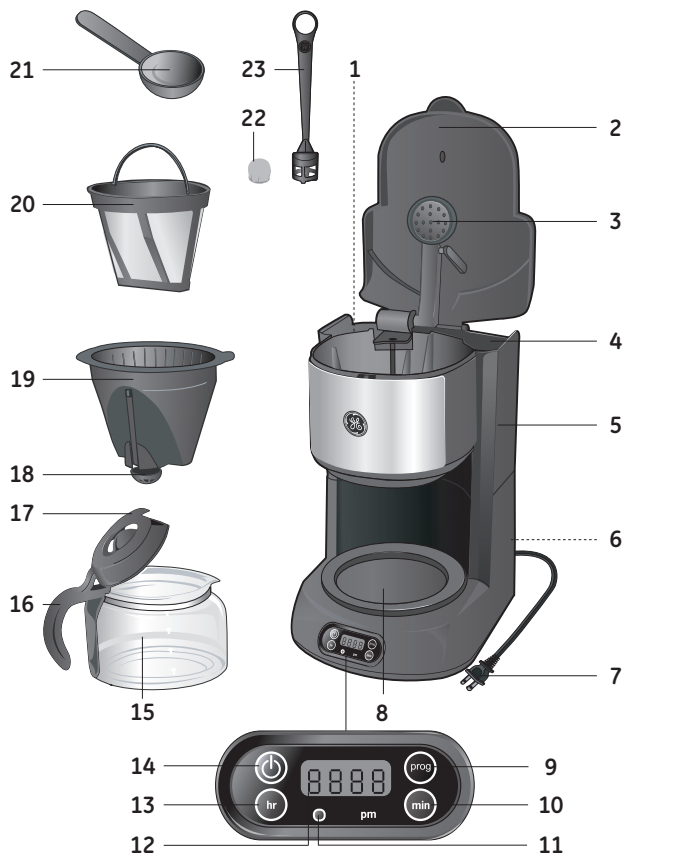


- | | | |
|--------------------------|--|-------------------------|
| 1. Water-level indicator | 9. prog key | 17. Carafe lid |
| 2. Lid | 10. min key | 18. Drip stop valve |
| 3. Drip head | 11. pm indicator | 19. Filter basket |
| 4. Water tank | 12. LCD display | 20. Permanent filter |
| 5. Housing | 13. hr key | 21. Measuring spoon |
| 6. Power cord storage | 14. On/off key  | 22. Charcoal filter |
| 7. Power cord with plug | 15. Carafe | 23. Water filter holder |
| 8. Warming plate | 16. Grip handle | |

        ILLUSTRATIONS

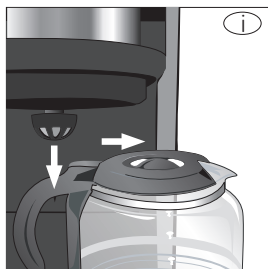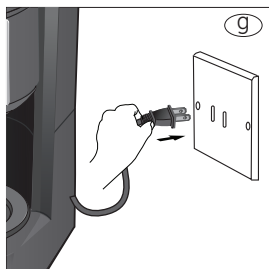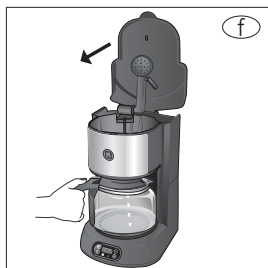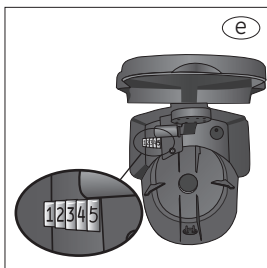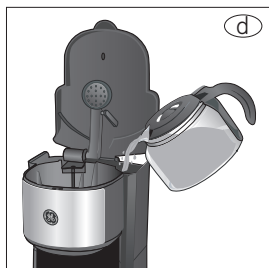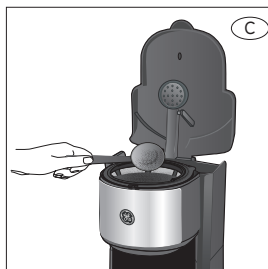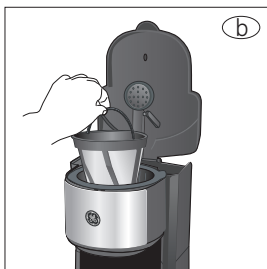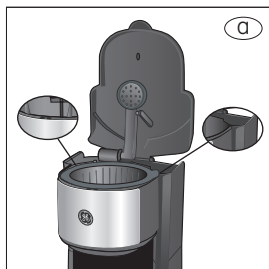

ILLUSTRATIONS

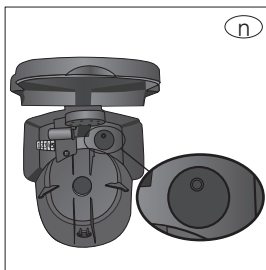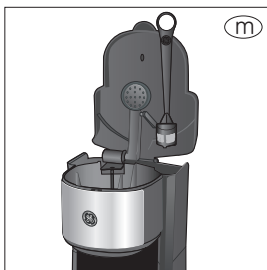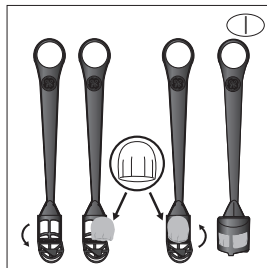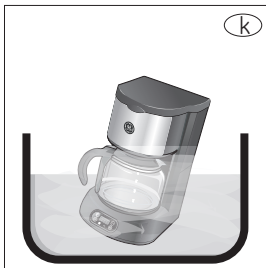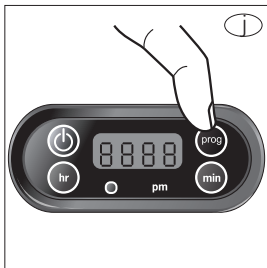     

OPERATION

Before first use

- Remove packaging materials, labels and stickers from the coffee maker.
- Clean the coffee maker thoroughly before using for the first time (↳ *Cleaning*).

Note: To clear the coffee maker of any residue, fill to the maximum water level mark **(1)** on the side of the tank **(4)** with fresh water. Run a full brewing cycle. Repeat this procedure at least once.

Using the coffee maker

Use this coffee maker to brew coffee only.

- Remove the power cord **(7)** from the cord storage **(6)**.
- Open the lid **(2)** and insert the water filter holder **(23)** with the charcoal filter **(22)** (↳ *Inserting and replacing charcoal filter*).
- Place the filter basket **(19)** in the coffee maker. Make sure the tab of the filter basket **(19)** fits in the opening of the coffee maker (*ill. (a)*).
- Insert the permanent filter **(20)** or a number 2 cone paper filter into the filter basket **(19)** (*ill. (b)*). Do not use the permanent filter with a paper filter as water will not flow through the paper filter and the filter basket **(19)** correctly."
- Add the desired amount of ground coffee into the filter **(20)** (*ill. (c)*). For 5 cups of coffee add 4 to 5 measuring spoons **(21)** of coffee into the filter **(20)**, according to your taste.
- Fill the carafe **(15)** with the desired amount of water.
- Pour the water from the carafe **(15)** into the water tank **(4)** (*ill. (d)*). Check the water level indicator **(1)** inside the water tank **(4)** (*ill. (e)*). Do not overfill the coffee maker.
- Close the lid **(2)** and place the carafe **(15)** on the warming plate **(8)** (*ill. (f)*).
- Insert the power plug **(7)** into a suitable 120V AC wall outlet (*ill. (g)*).

Setting time

- Press **hr (13)** to set hours.
- Press **min (10)** to set minutes.

Note: The time setting will be deleted if you unplug the coffee maker from the outlet.

Starting brewing manually

- Press on/off key **(14)** once to start the manual brewing cycle (*ill. (h)*). The on/off key will flash blue while the coffee is brewing. When all coffee has run through, the keep-warm function is activated. The on/off key now continuously lights blue.

 
OPERATION

- This coffee maker has a pause-and-pour function. When removing the carafe (15) the drip stop valve (18) will prevent coffee from leaking onto the warming plate (8) (ill. (i)).
- Hot water continues to flow into the filter basket (19) and may overflow if the carafe (15) is not returned to the warming plate (8) within 30 seconds. Make sure the carafe (15) is fully seated on the warming plate (8) within 30 seconds when using the pause and pour function.
- Brewing process starts automatically. After brewing is finished, the warming plate (8) will keep the coffee heated for one hour.
- Press the on/off key (14) to turn the coffee maker off. Unplug the coffee maker from the wall outlet if the coffee maker is not going to be used for an extended period of time. The cord can be stored in the cord storage (6).

Setting and activating the program function

Set the brewing time so that fresh brewed coffee is ready when you want it.

The display

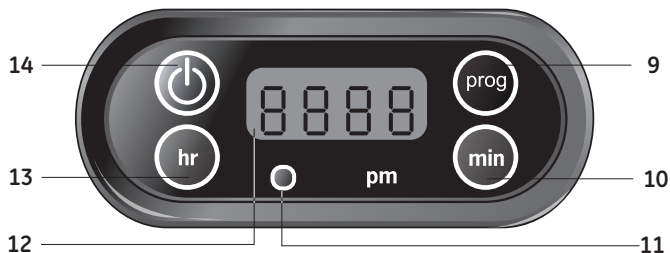

Name	Function
9 prog key	Sets and saves program
10 min key	Sets minutes (time/program)
11 pm indicator	Indicates times from 12:00pm to 11:59pm
12 LCD display	Shows current time/program time (12h display)
13 hr key	Sets hours (time/program)
14 ⏻ key	Turns off/on, starts manual brewing cycle

OPERATION

Note: Program setting is only possible when clock time is set.

- Press **prog (9)** once (*ill. ①*) and operate **hr (13)** and **min (10)** buttons (↳ *Setting time*) to set the program start time.
- Press **prog (9)** again to save settings.

Note: The program will be stored automatically if no button is operated for 5 seconds and the clock time will again be displayed.

- To change or view program settings press **prog (9)** again. The program start time appears on the LCD display **(12)** for 5 seconds. Press **hr (13)** and **min (10)** to modify the program (↳ *Setting time*).
- Press **prog (9)** to activate the program. **prog** button **(9)** lights up and the LCD display **(12)** shows program start time for 5 seconds. Brewing will start after the program start time is reached.

Note: Program activation is only possible when the on/off key **(14)** is turned off.

Note: When program function is running, the **prog** button **(9)** light will go out. You can deactivate the program before it starts by pressing **prog (9)** for 3 seconds. The **prog (9)** button flashes 5 times to indicate the deactivation.

Note: The program function, if already set, will be deleted if you unplug the coffee maker from the outlet. The coffee maker will need to have the time and program modes reset.

Automatic shut-off

- The coffee maker will shut off automatically after one hour of operation.
- The coffee maker will turn on the next day at the same time, if
→ the appliance remains connected to the outlet, and if
→ the program function is active. The **prog** button **(9)** is lit to indicate active status.
- Please make sure to refill the coffee maker with coffee and water for next use.

Warning: The coffee maker is hot during operation. Handle hot coffee carefully.

Warning: Always turn coffee maker off when not in use.

OPERATION

Warning! Never switch on the coffee maker when there is no water inside the water tank **(4)**. Dry operation of the coffee machine may damage the appliance.

Warning! Burn hazard: To avoid accidental contact with hot steam and boiling water:

- Never open the lid **(2)** while brewing, and
- Wait a minimum of 5 minutes before opening the lid **(2)**.

CLEANING

Proper maintenance will ensure years of service from your appliance. Clean the appliance after every use. This appliance contains no user serviceable parts and requires little maintenance. Leave servicing or repairs to qualified personnel.

Warning: Unplug the appliance and let it cool down completely before cleaning.

Caution: Do not immerse the coffee maker, or the power cord with plug **(7)** into water or any liquids (*ill.* **(k)**). Do not use abrasive pads or alcohol.

- Remove the carafe **(15)**, the permanent filter **(20)** and the filter basket **(19)** from the coffee maker.
- Clean the housing **(5)** and warming plate **(8)** with a clean, damp cloth.
- Use baking soda or a mild cleaning agent to remove stains on the carafe **(15)**. If stains are hard to remove, fill the carafe **(15)** with hot water and add 2 tablespoons of dishwasher detergent. Leave the carafe **(15)** with the water/detergent mixture overnight and clean afterwards.
- Make sure all parts are completely dry after washing and before use.
- After cleaning, reassemble the coffee maker.

Caution: The carafe **(15)** is dishwasher-safe. Wash carafe **(15)**, carafe lid **(17)**, filter basket **(19)** and permanent filter **(20)** in hot, soapy water. Rinse and dry.

Note: Do not dry the inside of the water tank **(4)** with a cloth, as lint may remain.

CLEANING

Inserting and replacing charcoal filter

- **Assembly:** Open the water filter holder (23) and insert the charcoal filter (22). Make sure to align the charcoal filter's (22) flat bottom inside the water filter holder (23) as shown in the illustration (ill. ①).
- **Inserting:** Insert the water filter assembly (22, 23) into the water tank (4) (ill. ②). The head of the water filter holder (23) should be fully inserted into the water tank (ill. ③).

Note: After 60 brewing cycles the charcoal filter (22) should be replaced. You can replace the charcoal filter (22) before reach 60 cycles (especially if your household's water hardness is above normal).

Note: Replacement water charcoal filters are available at WAL-MART stores.

- **Replacing:** Remove the water filter assembly (22, 23) from the water tank (4) (ill. ④). Insert a new charcoal filter into the water filter holder (23) (ill. ⑤). Reinsert the water filter assembly (22, 23) into the water tank (ill. ⑥/⑦). Fill water tank (4) with clean water and run one brewing cycle to rinse the coffee maker.

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
Coffee leaks around filter basket (19)	Filter basket (19) is not seated correctly. Coffee is ground too finely. This will clog the filter.	Insert filter basket (19) correctly. Clean the filter. Use another type of coffee.
Coffee maker does not brew or heat.	Power cord (7) is not firmly plugged into a power outlet.	Insert power plug (7) into a power outlet.
Water does not run through.	No water in the water tank (4) . The filter is blocked or coffee grounds are too fine or tamped down too hard.	Fill the water tank (4) . Clean the filter and try coarser coffee.
Water runs through too quickly.	Coffee grounds too coarse.	Try finer coffee.
<i>ERR</i> message appears on display (12) when prog key (9) is pressed.	The time must be set prior to using the program function.	Set the current time.

If additional assistance is needed, please contact our Customer Assistance at 1.877.207.0923 (U.S.) or 1.877.556.0973 (Canada).

TECHNICAL DATA

Rated voltage: 120V ~60Hz
Rated current: 5.4A
Rated power input: 650W

CUSTOMER ASSISTANCE

If you have a claim under this warranty, please call our Customer Assistance Number. For faster service, please have the model number and product name ready for the operator to assist you. This number can be found on the bottom of your appliance and on the front page of this manual.

Model Number: _____ **Product Name:** _____

Customer Assistance Number 1.877.207.0923 (U.S.) or 1.877.556.0973 (Canada).

Keep these numbers for future reference!

For more information, please visit us at WWW.GEHOUSEWARES.COM

Two-year limited warranty

What does your warranty cover?

- Any defect in material or workmanship.

For how long after the original purchase?

- Two years.

What will we do?

- Provide you with a new one.
- For those items still under warranty but no longer available, WAL-MART reserves the right to replace with a similar GE branded product of equal or greater value.

How do you make a warranty claim?

- Save your receipt.
- Properly pack your unit. We recommend using the original carton and packing materials.
- Return the product to your nearest WAL-MART store or call Customer Assistance at 1-877-207-0923 (U.S.) or 1-877-556-0973 (Canada).

What does your warranty not cover?

- Parts subject to wear, including, without limitation, glass parts, glass containers, cutter/strainer, blades, seals, gaskets, clutches, motor brushes, and/or agitators, etc.
- Commercial use or any other use not found in printed directions.
- Damage from misuse, abuse, or neglect, including failure to clean product regularly in accordance with manufacturer's instructions.

How does state law relate to this warranty?

- This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.
- This warranty is in lieu of any other warranty or condition, whether express or implied, written or oral, including, without limitation, any statutory warranty or condition of merchantability or fitness for a particular purpose.
- WAL-MART, GE and the product manufacturer expressly disclaim all responsibility for special, incidental, and consequential damages or losses caused by use of this appliance. Any liability is expressly limited to an amount equal to the purchase price paid whether a claim, however instituted, is based on contract, indemnity, warranty, tort (including negligence), strict liability, or otherwise. Some states or provinces do not allow this exclusion or limitation of incidental or consequential losses, so the foregoing disclaimer may not apply to you.

What if you encounter a problem with this product while using it outside the country of purchase?

- The warranty is valid only in the country of purchase and if you follow the warranty claim procedure as noted.



is a trademark of General Electric Company and is used under the license by Wal-Mart Stores Inc., Bentonville, AR 72716

Marketed in Canada by:

Wal-Mart Canada Corp.
1940 Argentia Road, Mississauga,
Ontario L5N 1P9

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>