

CUSTOMER ASSISTANCE

If you have a claim under this warranty, please call our Customer Assistance Number. For faster service, please have the model, type and series numbers ready for the operator to assist you. These numbers can be found on the bottom of your appliance.

MODEL : _____ TYPE : _____ SERIES : _____

Customer Assistance Number 1-877-207-0923 (US) or 1-877-556-0973 (Canada)

Keep these numbers for future reference!

For more information, please visit us at www.walmart.com

TWO-YEAR LIMITED WARRANTY

What does your warranty cover?

- Any defect in material or workmanship.

For how long after the original purchase?

- Two years.

What will we do?

- Provide you with a new one!
- For those items still under warranty but no longer available, WAL-MART reserves the right to replace with a similar GE branded product of equal or greater value.

How do you make a warranty claim?

- Save your receipt.
- Properly pack your unit. We recommend using the original carton and packing materials.
- Return the product to your nearest WAL-MART store or call Customer Assistance at 1-877-207-0923 (US) or 1-877-556-0973 (Canada)

What does your warranty not cover?

- Parts subject to wear, including, without limitation, glass parts, glass containers, cutter/strainer, blades, seals, gaskets, clutches, motor brushes, and/or agitators, etc.
- Commercial use or any other use not found in printed directions.
- Damage from misuse, abuse, or neglect, including failure to clean product regularly in accordance with manufacturer's instructions.

How does state law relate to this warranty?

- This warranty gives you specific legal

rights, and you may also have other rights which vary from state to state or province to province.


- THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTY OR CONDITION, WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, INCLUDING, WITHOUT LIMITATION, ANY STATUTORY WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.
- WAL-MART, GE AND THE PRODUCT MANUFACTURER EXPRESSLY DISCLAIM ALL RESPONSIBILITY FOR SPECIAL, INCIDENTAL AND CONSEQUENTIAL DAMAGES OR LOSSES CAUSED BY USE OF THIS APPLIANCE. ANY LIABILITY IS EXPRESSLY LIMITED TO AN AMOUNT EQUAL TO THE PURCHASE PRICE PAID WHETHER A CLAIM, HOWEVER INSTITUTED, IS BASED ON CONTRACT, INDEMNITY, WARRANTY, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY OR OTHERWISE. SOME STATES OR PROVINCES DO NOT ALLOW THIS EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL LOSSES SO THE FOREGOING DISCLAIMER MAY NOT APPLY TO YOU.

What if you encounter a problem with this product while using it outside the country of purchase?"

- The warranty is valid only in the country of purchase and you follow the warranty claim procedure as noted.



Solid Double Burner

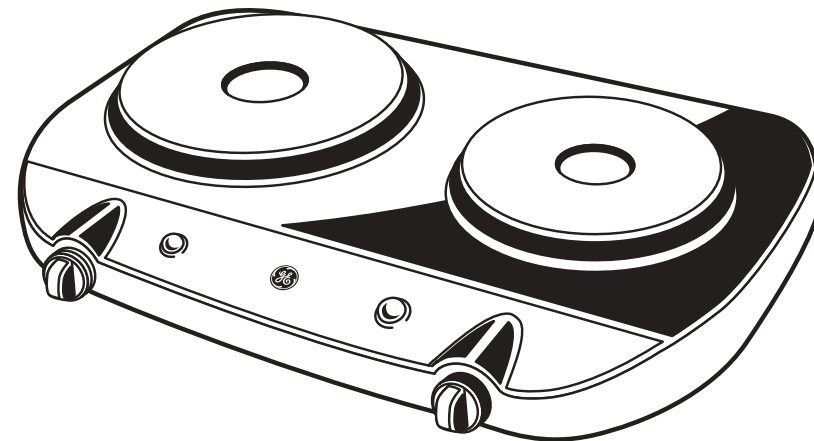

Item Stock Number

169062

UPC: 681131690621



is a trademark of General Electric Company and is used under the license by WAL-Mart Stores, Inc., Bentonville, AR 72716

9100430000128/169062

MARKETED IN CANADA BY:
Wal-Mart Canada Corp.
1940 Argentia Road,
Mississauga, Ontario L5N1P9

Printed in China

**For product service, call customer service at
1-877-207-0923 (US) or 1-877-556-0973 (Canada)**

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS.**
2. Do not touch hot surfaces. Use handles or knobs.
3. Move or lift the Electric Buffet Range by its sides after it has cooled completely.
4. To protect against electrical shock, do not immerse cord, plugs, or Housing Unit in water or other liquids.
5. Close supervision is necessary when any appliance is used by or near children.
6. Do not use appliance unattended.
7. Unplug from the wall outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
8. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Call Customer Service (see warranty) to return for examination, repair, or adjustment.
9. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
10. Do not use outdoors.
11. Do not let cord hang over the edge of the table or counter, or touch hot surfaces.
12. Do not place on or near a hot gas or electric burner, or in a heated oven.
13. Extreme caution must be used when moving any pot or pan containing hot oil or other hot liquids from this appliance.
14. Do not use this appliance for anything other than it's intended use. This appliance is for household use only.
15. To disconnect, turn Temperature Control Knobs to OFF, then remove plug from wall outlet.


SAVE THESE INSTRUCTIONS

This appliance is for **HOUSEHOLD USE ONLY**.

No user-serviceable parts inside. Do not attempt to service this product.

This appliance must be grounded while in use to protect the operator from electrical shock. The appliance is equipped with a 3-conductor cord and a 3-prong grounding-type plug to fit the proper grounding-type receptacle. The appliance has a plug that looks like sketch A. If you do not have a grounded outlet as shown, call a qualified electrician. Do not attempt to modify the plug in any way.

SAVE THESE INSTRUCTIONS (CONT.)

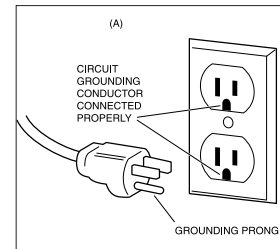


AN EXTENSION CORD MAY BE USED WITH CARE; HOWEVER, THE MARKED ELECTRICAL RATING SHOULD BE AT LEAST AS GREAT AS THE ELECTRICAL RATING OF THE APPLIANCE. Use only 3-wire extension cords which have 3-prong grounding-type plugs and 3-pole cord connectors that accept the plug from the appliance. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by

children or tripped over unintentionally. Examine the extension cord before using and replace if damaged. Do not abuse the extension cord and do not yank on any cord to disconnect. Keep cord away from heat and sharp edges. Do not immerse unit in water or other liquids. No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

KNOW YOUR ELECTRIC BUFFET RANGE

- 1 Burner Rings
- 2 Solid Burners
- 3 Housing Unit
- 4 Non-Skid Feet
- 5 Temperature Control Dials
- 6 Indicator Lights

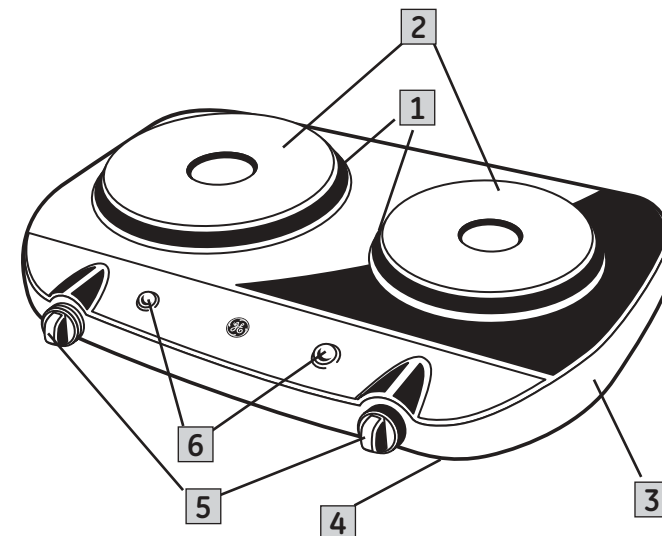

OPERATING INSTRUCTIONS

Before plugging in your BUFFET RANGE, check to ensure that the electrical circuit is not overloaded with other appliances. This unit should always be operated on a separate 120 volt, 60 Hz, AC circuit. Be certain that your BUFFET RANGE is resting level on the countertop. There are 2 burner rings on this unit. The larger burner is rated at 900 watts. The smaller burner is rated at 600 watts. Use the larger burner for fast cooking, and use the smaller burner for simmering or warming.

NOTE: Avoid using pans that are unstable and easily tipped.

1. Place unit on a flat surface.
NOTE: Be sure to leave 4 to 6 inches of space above and around the unit for proper ventilation.
2. Plug unit into electrical outlet. Turn Temperature Control Dials from OFF (**○**) to selected setting (I = Low, II = Medium, III = High). The Indicator Light will glow when the burner is ON.
CAUTION: Do not touch while in use.
3. When using a pot or pan, place it in the center of the burner. It is recommended that you use a pot or pan that is the same size as the burner.
4. When cooking is complete turn Temperature Control Dial(s) to the OFF position. The Indicator Light will stop glowing when the burner is OFF.
5. When not in use, unplug unit to assure that it is off. This helps prevent accidental burns.

IMPORTANT POINTS TO REMEMBER WHEN OPERATING

- Before the BUFFET RANGE is used for the first time, it should be heated up at maximum setting for approximately 4 minutes without a pot. During this curing process, the protective coating is hardened and obtains its maximum strength.
- The BUFFET RANGE may smoke the first time it is used – it is not defective and the smoke will burn off within a few minutes.
- Do not leave the unit ON without any pots/pans on the Solid Burners after the curing process.
- Do not use as a portable heater.
- Make sure the power supply cord does not touch hot elements or cooking utensils.
- For daily cooking, wipe excess water/condensation off pots, lids and utensils prior to use.
- Make sure that hot pots/pans do not touch the Housing Unit – these could damage the surface finish.
- The larger burner is rated at 900 watts. The smaller burner is rated at 600 watts. Use the larger burner for fast cooking, and use the smaller burner for simmering or warming.

CLEANING INSTRUCTIONS

Reasonable care will ensure many years of service from your unit. Avoid dropping items on the Burner Rings and Solid Burners.

1. Turn Temperature Control Dial(s) OFF.
2. Always unplug unit from electrical outlet and allow to cool before cleaning.
3. NEVER IMMERSE UNIT IN WATER OR OTHER LIQUIDS.
4. For easy cleaning, the Burners are sealed. Do not attempt to separate Burners from the unit.
5. Use a damp, soapy cloth or sponge to clean the surface of the Solid Burners, Burner Rings, Non-Skid Feet and Housing Unit. NEVER USE HARSH ABRASIVE OR STEEL WOOL PADS ON ANY PART OF THE BURNER.
6. Thoroughly wipe soap from Solid Burners and Burner Rings.
7. There are no user serviceable parts. Any servicing other than cleaning should be performed by an authorized service center.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>