Model 28111 Series **DECT 6.0 Cordless** Handset Speakerphone System User's Guide



Your new GE telephone system is EXPANDABLE up to a total of 4 handsets (by purchase of optional Model 28110 handset with charge cradle)

Equipment Approval Information

ompliance with parts 15 and 68. FCC Rules and Regulations and the Technical Requirements for Telephone Terminal Equipment published by ACTA

Notification to the Local Telephone Company

On the bottom of this equipment is a label indicating among other information, the US number and Ringer Equivalence Number (REN) for the equipment. You must, upon request, provide this information to vour telephone company The REN is useful in determining the number of devices you may connect to your telephone line and

still have all of these devices ring when your telephone number is called. In most (but not all) greas, the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

• This equipment may not be used on coin service provided by the telephone company • Party lines are subject to state tariffs, and therefore, you may not be able to use your own telephone

equipment if you are on a party line. Check with your local telephone company. Notice must be given to the telephone company upon permanent disconnection of your telephone

• If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this product does not disable your alarm equipment. If you have questions about what

will disable alarm equipment, consult your telephone company or a qualified installer. US Number is located on the cabinet bottom.

REN Number is located on the cabinet bottom.

2 Rights of the Telephone Company

Should your equipment cause trouble on viour line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action.

the telephone company may temporarily discontinue service immediately. In case of such temporary discontinuance, the telephone company must: (1) promptly notify you of such temporary discontinuance: (2) afford you the opportunity to correct the situation; and (3) inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and

00015922 (Rev. 2 Dom E) Printed in China

THOMSON THOMSON 🏗

10330 North Meridian St Indianapolis IN 46290-1024 © 2006 Thomson Inc rademark(s) ® Registered Marca(s) Reaistrada(s

Thomson Inc.

The telephone company may make changes in its communications facilities, equipment, operations or procedures where such action is required in the operation of its business and not inconsistent with FCC Rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain

Interference Information

This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the ECC Rules. These limits are designed to provide reasonable protection against harmful This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in

accordance with the instructions, may cause harmful interference to radio communications. However, there is no augrantee that interference will not occur in a particular installation Privacy of Communications may not be ensured when using this product

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is "receiving"
- Reorient or relocate and increase the separation between the telecommunications equipment and receiving antenna. Connect the telecommunications equipment into an outlet on a circuit different from that to which the
- If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet. "How To Identify and Resolve Radio/TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402. Please specify stock number

Notice: The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Hearing Aid Compatibility (HAC)

s telephone system meets FCC standards for Hearing Aid Compatibility.

Licensing

receiving antenna is connected.

004-000-00345-4 when ordering copies.

his equipment complies with ECC RF radiation exposure limits set forth for an uncontrolled environmen This equipment should be installed and operated with a minimum distance of 20 centimeters between the

with the belt clip supplied with this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines

PREVENT FIRE OR FLECTRICAL SHOCK HAZARD, DO NOT RODUCT TO RAIN

OR MOISTURE.


instructions that should always be followed. Refer to the IMPORTANT SAFETY INSTRUCTIONS provided with this product and save them for future reference

IMPORTANT: Because cordless phones operate on electricity, you should have at least one phone in your home that isn't cordless, in case the power in your home goes out.

Before You Begin

Battery compartment

Parts Checklist (for 28111xx1 model)

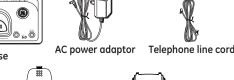

Wall mount bracket

battery pack

FCC RF Radiation Exposure Statement

radiator and your body. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines when used

Introduction

CAUTION: When using telephone equipment, there are basic safety

Make sure your package includes the items shown here.



For Model 28111xx2 there will be ONE additional handset, charge cradle, belt clip, battery Base Layout

For Model 28111xx3 there will be TWO additional handsets, charge cradles, belt clips, battery packs and covers than shown above

For **Model 28111xx4** there will be **THREE** additional handsets, charge cradles, belt clips, battery packs and covers than shown above

Telephone Jack Requirements

To use this phone you need an R J11C type modular telephone jack which might look like the one pictured here, installed in your home. Modular If you don't have a modular jack, call your local phone company to

Installation

Digital Security System

find out how to get one installed.

Your cordless phone uses a digital security system to protect against false ringing, unauthorized access, and charges to your phone line.


INSTALLATION NOTE: Some cordless telephones operate at frequencies that may cause or receive interference with nearby TVs, microwave ovens, and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV. microwave ovens, or VCR. If such interference continues, move the cordless telephone farther away from these appliances

Certain other communications devices may also use the 1.9GHz DECT frequency for communication, and, if not properly set, these devices may interfere with each other and/or your new telephone. If you are concerned with interference, please refer to the owner's manual for thes devices on how to properly set channels to avoid interference. Typical devices that may use the 1.9GHz DECT frequency for communication include wireless audio/video senders, wireless computer networks, multihandset cordless telephone systems, and some long-range cordless telephone systems.

Important Installation Guidelines • Avoid sources of noise and heat, such as motors, fluorescent lighting, microwave ovens,

- heating appliances and direct sunlight.
- Avoid areas of excessive dust, moisture and low temperature Avoid other cordless telephones or personal computers.
- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for • Never touch non-insulated telephone wires or terminals, unless the telephone line has
- been disconnected at the network interface. • Use caution when installing or modifying telephone lines.

Handset Layout

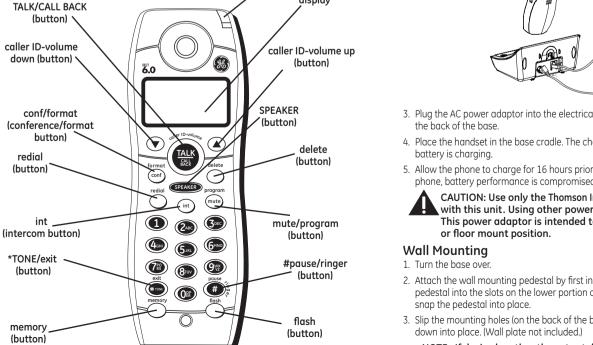

Visual Message Waiting

Indicator (VMWI)




Installing the Phone

Installing the Handset Battery

NOTE: You must connect the handset battery before use.

CAUTION: To reduce the risk of fire or personal injury, use only the Thomson Inc. approved Nickel-metal Hydride (Ni-MH) battery model 5-2721, that is compatible with this unit.


- 1. Locate battery and battery door which are packaged together inside a plastic bag and are separate from the handset
- 2. Locate the battery compartment on the back of the handset. 3. Plug the battery pack cord into the jack inside the compartment
- NOTE: To ensure proper battery installation, the connector is keyed and can be inserted only one way.

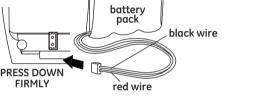

- 4. Insert the battery pack.
- 5. Close the battery compartment by pushing the door up until it snaps into place. Base Station

cordless telephone on a level surface, such as a desktop or tabletop, or you may mount it

- . Choose an area near an electrical outlet and a telephone wall jack (RJ11C), and place your
- Plug one end of the telephone line cord into the TEL LINE jack on the back of the base and

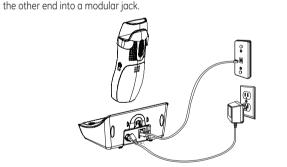

- 3. Plug the AC power adaptor into the electrical outlet and the DC connector into the jack on the back of the base
- 4. Place the handset in the base cradle. The charge/in use indicator turns on, verifying the battery is charging. 5. Allow the phone to charge for 16 hours prior to first use. If you don't properly charge the

CAUTION: Use only the Thomson Inc. 5-2715 power adaptor that came with this unit. Using other power adaptors may damage the unit. This power adaptor is intended to be correctly orientated in a vertical or floor mount position.

Wall Mounting


2. Attach the wall mounting pedestal by first inserting the tabs on the open edge of the pedestal into the slots on the lower portion of the back of the base. Then push down and

NOTE: If desired, gather the extra telephone line and power adaptor cord

and store inside the wall mounting bracket.

snap the pedestal into place. 3. Slip the mounting holes (on the back of the base) over the wall plate posts, and slide the unit down into place. (Wall plate not included.)

Programming the Telephone

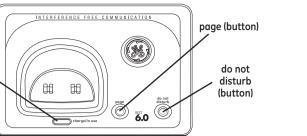

The system uses a menu structure to give you access to all of the built-in features. You may program the following items in main menu: Room Monitor and Handset Setup.

Programming Functions

4 respectively.

NOT be on the cradle.

SPEAKER button once

From the Handset Setup Menu:

Handset Name

rom the Handset Setup Menu

default setting is HANDSET #.

letter T: press the 4 key twice for the letter H

delete one character at a time.

the handset name shows in the display

1. Make sure your phone is **OFF** (not in talk mode).

Reaistration. Dereaistration and Default Settina.

in the display. The default setting is 1ENG.

and the selected language shows in the display

2. Press the mute/program button to go to the main menu.

3. Press caller ID-volume (▼ or ▲) button to scroll to *HANDSET SETUP*.

time to exit the sub-menu and return to the menu.

volume (or ▲) button to scroll to the desired language

Handset Setup

The handset displays the handset number and user name.

Room Monitor (applicable only with additional handsets) 1. Make sure your phone is **OFF** (not in talk mode).

2. Press the mute/program button to go to the main menu.

the speakerphone to monitor sound from the receiving handset.

USER NAME

HANDSET X

- 3. Press caller ID-volume (▼ or ▲) button to scroll to **ROOM MONITOR**.
- 4. Press mute/program button to enter **ROOM MONITOR** menu, **ROOM MONITOR EXTENSION?** shows in the display.
 - > ROOM MONITOR EXTENSION?

6. The receiving handset will turn on the microphone and the originating handset will turn on

NOTE: For room monitoring mode to work, the originating handset must

NOTE: While in room monitoring mode, the handsets will emit an alert

press the SPEAKER button to quit room monitor and answer the call.

CALL BACK button once. Switch back to speakerphone by pressing the

NOTE: Press the *TONE/exit button on the handset to exit room monitor mode.

4. Press mute/program button to confirm and you may program the following items: Language

Handset Name, Ringer Tone, Ringer Volume, VIP Melody, Key Tone, Area Code, Tone/Pulse,

NOTE: During programming, you may press the *TONE/exit button at any

2. Press mute/program button to enter the menu. SET LANGUAGE ▶ 1ENG 2FRA 3ESP shows

3. Use the touch tone pad on the handset to select 1ENG, 2FRA, 3ESP, or use the caller ID-

4. Press the mute/program button to save your selection. You will hear a confirmation tone

Press the caller ID-volume (▼ or ▲) button to scroll to the HANDSET NAME sub-menu.

2. Press mute/program button to enter the menu. **HANDSET NAME** shows in the display. The

3. Use the touch-tone pad to enter a name (up to 15 characters). More than one letter is stored in each of

the number keys. For example, to enter Bill Smith, press the 2 key twice for the letter B. Press the 4 key 3

times for the letter I. Press the 5 key 3 times for the letter L. Press the 5 key 3 times for the second letter

L, and press the 1 key to insert a space between the first and last name. Press the 7 key 4 times for the

letter S: press the 6 key once for the letter M: press the 4 key 3 times for the letter I: press the 8 key for the

NOTE: If you make a mistake, use the delete button to backspace and

Press the caller ID-volume (or ▲) button to scroll to the SET LANGUAGE sub-menu.

NOTE: While in room monitoring mode, the originating handset can

be switched to monitor by handset earniece by pressing the TALK/

tone approximately every 5 seconds if there is an incoming call. You may

5. Use the touch tone pad to enter the handset name/number to be monitored This feature allows you to assign a specific melody to someone you want to get your attention when the person calls. When a VIP melody is assigned and that person calls, the unit rings the NOTE: When this phone system is expanded (up to 4 handsets by normal ring for the first ring and then follows with VIP melody ring. You may choose from ten purchase of optional Model 28110 handset with recharge cradle), different polyphonic melodies and may store up to 10 VIP records handsets are named HANDSET 1, HANDSET 2, HANDSET 3 and HANDSET

VIP Melody

- NOTE: This feature ONLY works when the following conditions are met. 1. You have subscribed to Caller ID 2 You have your Caller ID record previously transferred to the memory
- (Refer to Storing CID Records in Internal Memory). NO USER memory will show in the display to remind the user to do CID record transfer first

Storing VIP Melody From the Handset Setup Menu:

From the Handset Setup Menu:

The default setting is 01

an incomina call.

From the Handset Setup Menu

display. The default setting is HI.

(or ▲) button to scroll to your selection.

the new volume setting shows in the display.

Ringer Volume

- 1. Press the caller ID-volume (▼ or ▲) button to scroll to VIP MELODY sub-menu. 2. Press mute/program button to select **VIP MELODY** feature and then display VIP 1 record.
- -If VIP1 does NOT contain any specific number/records, it will display **EMPTY**. 3. Press caller ID-volume (▼ or ▲) button to select the specific VIP melody memory location (10 VIP locations) that does not contain any record.
- 4. Press mute/program button to display **SELECT MEMORY**.
- NOTE: If the memory location does not contain any CID memory records and you are trying to mark a specific record as VIP MELODY, then SELECT MEMORY will not be displayed. Instead, NO USER MEMORY will display in prompt to alert the user.
- 5. Press caller ID-volume (▼ or ▲) button to view the records from memory to be selected as VIF 6. Press mute/program button to confirm and then display **VIP MELODY 01** to wait for the melody tone selection
- 7. Press caller ID-volume (▼ or ▲) button to select from melody 01 to melody 10 (a testing tone is generated while making melody selection)
- 8. Press mute/program button to confirm.
- NOTE: If the desired number/record was previously stored in any one of the ten VIP melody records, DUPLICATE NUMBER shows in the display.
- Changing a Stored VIP Melody Record Use the Storing VIP Melody procedure to change the number of a selected record and replace
- the old phone number with new phone number. When REPLACE VIP#? shows in the display, you must press mute/program button on the
- handset to confirm replacement

Reviewing And Deleting Stored VIP Melody Record Press the caller ID-volume (▼ or ▲) button to scroll to VIP MELODY sub-menu.

- 2. Press mute/program button to select **VIP MELODY** feature and then display VIP 1 record. 3. Use the caller ID-volume (▼ or ▲) button to scroll to the desired VIP Melody Record.
- 4. If you want to delete the information, press the delete button on the handset while the entry displays. The display shows **DELETE VIP#?**.

5. Press delete again to confirm. You will hear a confirmation tone and VIP# DELETED shows

in the display. **Kev Tone**

1. Press the caller ID-volume (▼ or ▲) button to scroll to the **KEY TONE** sub-menu.

- 2. Press mute/program button to enter the menu. **SET KEY TONE** > **10N 2 OFF** shows in the display. The default setting is 10N.
- Press the mute/program button to save your name. You will hear a confirmation tone and 3. Use the touch tone pad on the handset to select 1 or 2, or use the caller ID-volume (▼ or ▲) button to scroll to your selection Download from Www.Somanuals.com. All Manuals Search And Download.

From the Handset Setup Menu:

4. Press the mute/program button to confirm and the key tone setting shows in

1. Press the caller ID-volume (▼ or ▲) button to scroll to the *RINGER TONE* sub-menu.

2. Press mute/program button to enter the menu. **SET RINGER TONE 01** shows in the display.

3. Use the caller ID-volume (▼ or ▲) button to scroll to the desired setting (1 through 20). You

4. Press the mute/program button to save your selection. You will hear a confirmation tone

NOTE: You must have the Ringer Volume set to ON for ring tone to signal

1. Press the caller ID-volume (▼ or ▲) button to scroll to the **RINGER VOLUME** sub-menu.

3. Use the touch tone pad on the handset to select 1, 2 or 3, or use the caller ID-volume

NOTE: If you turn the ringer OFF, the ringer off icon shows in the display.

2. Press mute/program button to enter the menu. SET RINGER > 1HI 2LO 30FF shows in the

4. Press the mute/program button to save your selection. You will hear a confirmation tone ar

You may choose from ten different ringer tones and ten different melodies.

will hear a sample of the ringer tone/melody you select.

and the selected ringer tone shows in the display.

Area Code From the Handset Setup Menu:

From the Handset Setup Menu:

selection shows in the display

From the Handset Setup Menu

the display. The default setting is "1 TONE".

in the display. The default setting is 2NO

▲) button to scroll to **1YES** or **2NO**.

base during registration process

start from the beginning step.

(▼ or ▲) button to scroll to **1YES** or **2NO**.

4. Select NO. if you do not want to de-register.

seconds, then **CONFIRM? 1YES 2NO** appears in the display.

a handset be registered again unless absolutely necessary.

Tone/Pulse

Registration

near the base.

From the Handset Setup Menu

- 1. Press the caller ID-volume (▼ or ▲) button to scroll to the **AREA CODE** sub-menu.
- 2. Press mute/program button to enter the menu. **SET AREA CODE - -** shows in the display.
- The default setting is - -3. Use the touch-tone pad to enter your 3-digit area code.
- 4. Press the mute/program button to confirm. You will hear a confirmation tone and the new

1 Press the caller ID-volume (▲ or ▼) button to scroll to the **TONE PULSE** sub-menu

3. Use the touch-tone pad or caller ID-volume (▲ or ▼) to enter **1 TONE** or **2 PULSE**.

4. Press the mute/program button to confirm. You will hear a confirmation tone and your

Press the caller ID-volume (▼ or ▲) button to scroll to the REGISTRATION sub-menu.

3. Use the touch-tone pad to select 1 for YES or 2 for NO. Or use the caller ID-volume (▼ or

4. If you select YES, press the mute/program button, HOLD BASE PAGE FOR 5 SECONDS, THEN

PRESS HANDSET PROGRAM shows in the display. (Your handset should be held near the

5. Press and hold the page button on the base unit until the charge/in use indicator flashes.

NOTE: IF you are re-registering the handset through the handset menu:

to rename your handset you must go to the Handset Name Section and

De-registration cancels registration. During the de-registration process, keep the handset

WARNING: It is not recommended that a handset be de-registered unless

telephone features cannot be used until the handset is re-registered.

absolutely necessary because once a handset is de-registered, that handset's

rename your handset. (Refer to Step 3 & 4 of Handset Name Section)

Your packaged handset(s) are pre-registered and ready to use. It is not recommended that

2. Press mute/program button to enter the menu. TONE/PULSE > 1TONE 2PULSE shows in

- area code shows in the display. 3. Use the touch-tone pad to select **1YES** or **2NO**, or use the caller ID-volume (\checkmark or \blacktriangle) button NOTE: To restore the default setting to - - -, press and release delete to move the cursor to 1YES or 2NO. when SET AREA CODE shows in the display. NOTE: If you choose YES all the settings in the programmable menu are
 - returned to factory default setting. 4. Press the mute/program button to save your selection. You will hear a confirmation tone.

Telephone Operation

1. Press the caller ID-volume (▼ or ▲) button to scroll to the **DEFAULT SETTING** sub-menu.

Visual Indicators

Charae/In Use Indicator on Base

The charge/in use indicator on the base will flash to glert you to an incoming call. during paging, or if you have a message waiting from your service provider. The indicator will remain lit when a handset is in the base charging or when the line is in use.

TALK/CALL BACK Indicator on Handset The TALK/CALL BACK and SPEAKER indicator buttons flash when you receive a call and

remain lit during a call.

- VMWI Indicator on Handset 2. Press the mute/program button to enter the menu. **REGISTRATION 1YES** > **2NO ---**shows IMPORTANT: In order to use this unit's Visual Message Waiting Indicator
 - The VMWI indicator on the top of the handset flashes when you receive a new message from vour service provider.

(VMWI) feature, you must subscribe to this service from your phone company.

Speakerphone Operation NOTE: If you are using the speakerphone, remain close to handset so the

- party you are speaking to can hear you. Press the handset mute/program button. **REGISTERING** shows in the display. **HANDSET X** If you are using the handset and want to switch to the speakerphone, press the SPEAKER **REGISTERED** shows in the handset display, where X is the handset number. You may now button, press SPEAKER again to end conversation
 - If you are using the speakerphone and want to switch to the handset, press the TALK/ CALL BACK button, press TALK/CALL BACK again to end conversation

Makina a Call

- 1. Press the TALK/CALL BACK or SPEAKER button. Dial the desired number.
- Dial the number first, then press the TALK/CALL BACK or SPEAKER button.
- 1. Press the caller ID-volume (▼ or ▲) button to scroll to the **DEREGISTRATION** sub-menu. Press the caller ID-volume (▼ or ▲) button to select the desired record, then press the 2. Press the mute/program button to enter the menu. DEREGISTRATION 1YES → 2NO --TALK/CALL BACK or SPEAKER button
- shows in the display The default setting is 2NO. 2. When finished, press the TALK/CALL BACK or SPEAKER button to hang up. 3. Use the touch-tone pad to select 1 for YES or 2 for NO. Or use the caller ID-volume NOTE: You may enter up to 32 pre-dial digits.
 - NOTE: If you want to delete the pre-dial number you entered, press the delete button until all of the digits are erased.

After you press the TALK/CALL BACK button on the handset, the built-in call timer shows on the

If you place the handset in the cradle while the handset is off the hook (during a call), the call is

There are two ways to set the ringer to HI/LO/OFF. One is the traditional way as described in

the Programming Functions; Handset Setup; Ringer Volume menus. The other one is this short

display and counts the length of time of the call in minutes and seconds

2. Press the #pause/ringer button to display SET RINGER 1HI 2LO 3OFF

Answering Calls

Auto Standby

automatically disconnected.

Ringer HI/LO/OFF (Shortcut)

1. Make sure the phone is **OFF** (not in talk mode).

- 1. When the phone rings, press the SPEAKER button on the handset 5. If you select YES, press the mute/program button and MOVE NEAR TO BASE displays for 2
- Pick up the handset and press the TALK/CALL BACK button. 6. Press the touch-tone pad to select 1 for YES or 2 for NO, or use the caller ID-volume (▼ or When finished, press SPEAKER or TALK/CALL BACK to hang up ▲) button to scroll to 1YES or 2NO.
- NOTE: Adjust the handset volume by pressing the caller ID-volume 7. If you select YES, press the mute/program button to confirm. **DE-REGISTER...** shows in the (or ▲) button during a call. display. You will hear a confirmation tone. Then **HANDSET X DEREGISTERED** shows in the display to confirm the handset is deregistered Call Timer
- NOTE: When you complete the de-registration process, HANDSET NEEDS REGISTRATION shows in the display. To use the handset, you MUST re-register the handset using the Registration process.

If one or more handsets becomes lost, you should de-register all handsets to ensure proper

Global De-registration

system operation. Follow the steps below to de-register all handsets at the same time. WARNING: It is not recommended that a handset be de-registered unless

absolutely necessary because once a handset is de-registered, that handset's telephone features cannot be used until the handset is re-registered.

3. Continue to hold the Page button until the charge/in use light flashes rapidly.

- 1. Disconnect power from the base by pulling the plug out of the back of the unit.
- 2. Press and hold the Page button and while holding the Page button reconnect the power.

Follow the steps below to return to the factory default settings

5. Press and release the page button on the base once. All handsets are de-registered and HANDSET NEEDS REGISTRATION shows in the display.

Default Settina

the display. The default setting is 2NC

4. Release the Page button.

From the Handset Setup Menu

Flash/Call Waitina As you become familiar with this system, you may prefer to use the system's original settings If you subscribe to the combined Call Waiting Caller ID service from your local telephone

- call, you will hear a beep to indicate another call is waiting on the line and Caller ID information for the waiting call shows on the handset display. 2. Press the mute/program button to enter the menu. **DEFAULT SETTING 1YES 2NO** shows in • To connect to the waiting call, press the flash button on the handset, and your original call
 - To switch between the two calls, press the flash button.

TIP: Do not press the TALK/CALL BACK button on the handset to activate a custom calling service, such as call waiting, or call will disconnect.

Last Number Redia You may redial a number up to 32 digits long. To guickly redial the last number you dialed:

1. Press the TALK/CALL BACK button.

2. Press the redial button

- Press the redial button first, then use the caller ID-volume (✓ or ▲) button to select the - Press the caller ID-volume (🍝) to review the oldest call and scroll toward the most recent
- Press the caller ID-volume (▼) to review the newest call and scroll to older calls (lower

3. Use the touch tone pad on the handset to select 1, 2 or 3, or use the caller ID-volume

4. Press #pause/ringer button again to save and display the new selection for a few seconds.

company, you will receive Caller ID information (if available) on Call Waiting calls. During a phone

(▼ or ▲) button to scroll to your selection. HI is the default setting.

- NOTE: You may choose from three last dialed numbers 4. Press the TALK/CALL BACK button. The number dials automatically
- If you get a busy signal and want to keep dialing the number, press the redial button to quickly redial the number.

handsets must be registered. If your handset is not registered, follow the instructions in the

Press the *TONE/exit button to exit a menu function and return to the standby screen

The page feature helps you locate a misplaced handset. To send and receive pages, all

Registration section of this manual

- Handset Paging (applicable only with additional handsets) 1. Make sure the phone is OFF (not in talk mode).
- 2. Press and release the int button on a handset. **PAGING EXTENSION?** shows in the display.
- 3. Use the touch-tone pad to enter the handset number you want to page. (1= to page Handset 1, 2=to page handset 2, etc., and 5=to page all handsets) 4. To cancel the page, press the *TONE/exit, int, or TALK/CALL BACK button on the originating

1. Press the page button on the base. All handsets beep for two minutes, and **PAGING FROM**

To have a private, off-line conversation, use the MUTE feature. The party on the telephone line

When the handset is **ON** (in talk mode) you may adjust the receiver volume by pressing the

In the standby mode, press the do not disturb button on the base. The DND indicator will light

handset, or press the *TONE/exit button on the receiving handset.

- Base Paging Use the base-only to page all registered handsets at the same time.
- **BASE** shows on each handset's display. 2. To cancel the page, press the page button on the base, or press the TALK/CALL BACK button

or the *TONE/exit button on each handset.

cannot hear you, but you can hear them. 1. Press the mute/program button. The handset display shows MUTE ON.

2. Press the mute/program button to cancel and return to your phone conversation. Receiver Volume Control

maximum or minimum volume level is reached, the phone beeps twice. VOL 1 is minimum and

Do Not Disturb (DND) DND allows you to mute the ringer on all handsets.

and **DO NOT DISTURB** shows in handset display. To cancel, press the do not disturb button again.

VOL 4 is maximum.

Intercom Operation (applicable only with additional handsets

The intercom feature allows you to have a conversation with another registered handset without tying up the telephone line, allowing you to still receive incoming calls.

Makina an Intercom Call

- 1. Make sure the handset is OFF (not in talk mode).
- 2. Press the int button on the handset.
- Use the touch-tone pad to select the handset you want to page.
- NOTE: To cancel page, press the int button again or the *TONE/exit button on the sending handset.
- 4. Wait for the person at the receiving handset to press the int button.
- NOTE: If the receiving handset does not answer within two minutes, the intercom call is automatically canceled. The originating handset displays
- When finished, press the *TONE/exit button or int button on either handset to deactivate the intercom.

NOTE: The system is expandable up to 4 handsets (by purchase of optional Model 28110 handset with recharge cradle) When 4 handsets are registered, the system can handle 2 separate intercom operations at once, for example, 1st handset intercoms with 2nd handset while 3rd handset intercoms with 4th handset

Receiving an Intercom Call

When you receive an intercom call, your handset beeps. To answer the call press the int button or TALK/CALL BACK button.

Advanced Intercom Features

Receiving an Incoming Call During an Intercom Call If you receive a telephone call during an intercom call, the intercom call is immediately terminated and both handsets ring. Either handset user may press the TALK/CALL BACK button

Using Intercom with External Telephone Calls During a telephone call, you may use the intercom/paging function to page another handset

and have an off line private (two-way) intercom conversation. You may also have a three-way conversation between the external caller and the handsets, or you may transfer the external telephone call to another handset

NOTE: Before you intercom/page another handset, you must decide whether you want to create a two-way or a three-way conversation.

Two-Way Calling

1. During an external call, press the int button, and use the touch-tone pad to enter the handset number you want to call.

NOTE: The receiving handset presses the int button to answer the intercom call. Both intercom users may speak privately. The external caller will not hear the intercom conversation.

When finished press the *TONE/exit button or **int** button to end the intercom call return to the talk mode, and resume your original telephone conversation.

Three-Way Calling

1. During an external call, press the int button. LINE ON HOLD EXTENSION? shows in

- 2. Use the touch-tone pad to select Handset #. You will hear a paging tone and **PAGING** shows in the originating handset's display
- NOTE: PAGING FROM... shows in the display on the receiving handset, and the receiving handset presses the int or TALK/CALL BACK button to answer the intercom
- . When the receiving handset connects, press the conf/format button on the originating handset to conference with the receiving handset and the external caller. **CONFERENCE** shows in the display on the originating and receiving handse

NOTE: A handset can enter conference mode directly by pressing TALK/ CALL BACK on the second handset during a call.

Transferring External Calls to Other Handsets During an external call, you may transfer the external call to another handset.

1. Press the int button on the originating handset to put an external call on hold, and then

- page the receiving handset. Use the touch-tone pad on the handset to select Handset #. You will hear a paging tone.
- **PAGING** shows on the originating handset's display, and **PAGING FROM...** shows on the receiving handset's display.
- 3. When the receiving handset connects, press the TALK/CALL BACK button on the originating handset to transfer the call.

4. Press the TALK/CALL BACK button on the originating handset to transfer the call. If the receiving handset does not answer within 30 seconds, the originating handset rings back and displays **CALLBACK**. If the originating handset does not answer within 20 seconds, the call is automatically dropped.

Caller ID (CID)

IMPORTANT: In order to use this unit's Caller ID features, you must subscribe to either the standard Name/Number Caller ID Service or Call Waiting Caller ID Service. To know who is calling while you are on the phone, you must subscribe to Call Waiting Caller ID Service.

This unit receives and displays information transmitted by your local phone company. This information can include the phone number, date, and time; or the name, phone number, date,



Call Waiting Caller ID

Provided you subscribe to Call Waiting Caller ID service from your phone company: if you receive an incoming call and you are using the GF multi handset system, a been indicates the presence of a Call Waiting call on the line. The Call Waiting Caller ID information will be displayed and stored in the history of all handsets in the system.

• When you hear the call waiting beep in the handset receiver, press the flash button to put the current call on hold and answer the incoming call. Press flash again to return to the

Receiving CID Records

When you receive a call, the Caller ID information is transmitted between the first and second ring. The Caller ID information appears on the display while the phone rings, giving you a chance to monitor the information and decide whether or not to answer the call

Storing CID Records (In CID Memory)

If you are not at home or cannot answer, your telephone's Caller ID memory stores the data for the 40 most recent calls you received so you can see who called while you were unavailable When the 41st call is received, the oldest Caller ID record (1st call) is automatically deleted.

You may review the stored information at any time. Calls received since your last review show as **NEW** in the display. Calls that have not been previously reviewed but were received from the same number more than once show as **REPT** in the display.

Reviewing CID Records

As calls are received and stored, the display is updated to let you know how many calls have been received. To scroll CID records:

- 1. Make sure the phone is **OFF** (not in talk mode).
- 2. Press the caller ID-volume (▼) button to review the newest CID record.
- 3. Press the caller ID-volume () button to review the oldest CID record first.

Dialing a CID Number

- 1. Make sure the phone is **OFF** (not in TALK mode). 2. Use the caller ID-volume (▼ or ▲) button to display the desired record.
- 3. Press the TALK/CALL BACK or SPEAKER button. The number dials automatically
- NOTE: Depending on (a) how the incoming caller's phone number is formatted when it is received, and (b) whether or not you previously preprogrammed your local area code into the set up menu, you may need to adjust the format of the incoming caller's stored phone number before making the call, press the conf/format button to adjust the number, and

Available formats include

Number of digits

Eleven digits	long distance code "1 " +3-digit area code +7-digit telephone number.	1-317-888-8888
Ten digits	3-digit area code + 7-digit telephone number.	317-888-8888
Seven digits	7-digit telephone number.	888-8888

Storing CID Records in Internal Memory

You may also store CID information in the phone's internal memory.

NOTE: It is important that you format CID records correctly BEFORE storing in internal memory as you cannot reformat CID records stored

1. Make sure the phone is **OFF** (not in talk mode).

- 2. Use the caller ID-volume (▼ or ▲) button to scroll to the desired CID record.
- 3. Press the Memory button to display SELECT memory 01-50.
- 4. Use the touch-tone pad to enter a memory location to store the number in that memory location You will hear a confirmation tone
- NOTE: If the memory location is occupied, REPLACE MEMO? is displayed,
- and you must confirm replacement by pressing the memory button. NOTE: Press the *TONE/exit button once to keep the previous setting
- NOTE: If the selected CID record contains any information that is nonnumeric, the unit will not allow this record to transfer to the internal user memory. The handset will display UNABLE TO STORE.

To Replace a Stored CID Record

(making no changes) and return to the menu.

- 1. Repeat steps 1 through 3 in Storing CID Records in Internal Memory. After you enter the memory location, **REPLACE MEMO?** shows in the display.
- 2. Press the Memory button again, and the new CID record replaces the old memory in that location. You will hear a confirmation tone.

Deleting a CID Record

- 1. Make sure the phone is **OFF** (not in TALK mode). 2. Use the caller ID-volume (▼ or ▲) button to display the CID record you want to delete
- 3. Press the delete button. The display shows **DELETE CALL ID?**
- 4. Press the delete button to erase the record showing in the display. The display shows
- NOTE: Press the *TONE/exit button to return to the standby mode without

deleting any CID records. Deleting All CID Records

- 1. Make sure the phone is **OFF** (not in TALK mode).
- 2. Use the caller ID-volume (▼ or ▲) button to display any Caller ID record.
- 3. Press and hold the delete button until **DELETE ALL?** shows in the display. 4. Press delete button to erase all of the current CID records. The display shows **DELETED**
- followed by **NO CALLS**. NOTE: Press the *TONE/exit button to return to the standby mode without

deleting any CID records.

Memory

Each handset can store up to fifty 20-digit numbers with up to 15-character names in memory for quick dialing. This memory feature is in addition to the CID memory log, which stores up to 40 CID records in each handset.

Storing a Name and Number in Memory

- 1. Make sure the phone is **OFF** (not in talk mode). 2. Press the memory button to display SELECT MEMORY 01-50.
- 3. Press the desired memory location button (01 through 50) or use the caller ID-volume (▼ or ▲) button to scroll to desired the memory location

NOTE: If the memory location is occupied, the memory location number and stored name and telephone number shows in the display. If the memory location is empty, EMPTY shows in the display.

- 4. Press the memory button. The display shows **ENTER NAME**.
- 5. Use the touch-tone pad to enter a name (up to 15 characters). More than one letter is stored in each of the number keys. For example, to enter Bill Smith, press the 2 key twice for the letter B. Press the 4 key 3 times for the letter I. Press the 5 key 3 times for the letter 1 Press the 5 key 3 times for the second letter L and press the 1 key to insert a space between the first and last name. Press the 7 key 4 times for the letter S: press the 6 key once for the letter M; press the 4 key 3 times for the letter I; press the 8 key for the letter T press the 4 key twice for the letter H

NOTE: If you make a mistake press the delete button to backspace and erase the wrong character(s) or number(s).

6. Press the memory button to confirm and save the record. The display shows **ENTER** 7. Use the touch-tone pad to enter the telephone number (up to 20 digits, including pauses

(press #PAUSE button), and press the memory button again to save the record. The unit beeps to confirm NOTE: The system treats PAUSES as delays or spaces in the

dialina seauence

Storing the Last Number Dialed

8. To enter another name and number in a different memory location, return to step 2 and repeat the process

- You may transfer all three redial numbers into internal user memory.
- 1. Make sure the phone in **OFF** (not in TALK mode).
- 2. Press redial button to display the most recent redial number.
- 3. Use the caller ID-volume (▼ or ▲) button to scroll to desired redial number. 4. Press memory button to display **SELECT MEMORY 01 - 50**.

- 5. Use touch-tone pad to enter two digit desired memory location (01 through 50). Display will
- show **FNTFR NAMF** 6. Follow step 5 in the "Storing a Name and Number in Memory" section to enter name.
- NOTE: If the memory location is occupied. REPLACE MEMO? is displayed, and you must confirm replacement by pressing the memory button.
- Press memory button to save
- 8. To enter another name and number in a different memory location, return to step 2 and repeat the process NOTE: If the redial number has more than 20 digits, it cannot be stored in

Inserting a Pause in the Dialing Sequence (of a Stored

Press the #pause/ringer button on the handset's touch-tone pad to insert a delay in dialing sequence when a pause is needed to wait for a dial tone (for example, after you dial 9 for an outside line or to wait for a computer access tone) Each pause counts as one digit in the

Reviewing Records Stored in Memory

- 1. Make sure the phone is **OFF** (not in talk mode).
- 2. Press the memory button to display SELECT MEMORY 01-50.
- Press the caller ID-volume (▼ or ▲) buttons to scroll the records, or use the handset's touch-tone pad to enter the memory location number.

Changing Records Stored in Memory Follow the procedure for Storing Names and Numbers in Memory, except replace a stored

telephone number with a new one

Deleting Records Stored in Memory

- 2. Press the memory button to display **SELECT MEMORY 01-50**.
- 3 Press the caller ID-volume (▼ or ▲) button to scroll to the record you want to delete or use

Make sure the phone is OFF (not in talk mode).

- the touch-tone pad to enter the desired memory location. 4. Press the delete button to mark the record for deletion. The display shows **DELETE?**
- 5. Press the delete button to delete the record. **DELETED** shows in the display.
- NOTE: If you don't want to change or delete a record, simply press the *TONE/exit button, or wait for one minute to exit the review mode automatically.
- Dialing a Number from Memory 1. Make sure the phone is **ON** (in talk mode) by pressing the TALK/CALL BACK or SPEAKER
- 2. Press the memory button to display MEMO # -3. Use the touch tone pad to enter the memory location number. The number dials automatically

The Number For

- 1. Make sure the phone is **OFF** (not in talk mode).
- 2. Press the memory button to display **SELECT MEMORY 01-50**. 3. Press the memory location for the phone number you want to dial, or use the caller ID-
- volume (▼ or ▲) button to scroll to the number you want to dial. 4. Press the TALK/CALL BACK or SPEAKER button. The number dials automatically.

Chain Dialing from Memory

Use this feature to make calls from records stored in memory which require a sequence of numbers, such as a calling card number used for a frequently called long distance number he following example shows how you can store each part of the dialing sequence and use chain dialing to make a call through a long distance service:

ong Distance Access Number Authorization Code Frequently called long distance number

- I. Make sure the phone is **ON** (in talk mode) by pressing the TALK/CALL BACK or SPEAKER 2. Press the memory button, and then press 07
- 3. When you hear the access tone, press the memory button, and then press 08.
- 4 At the next access tone press the memory button and then 0

HANDSET NAME

Memory Location

HANDSET NEEDS Indicates you must register a non-registered handset prior to use.

Download from Www.Somanuals.com, All Manuals Search And Download

Belt Clip and Optional Headset

Connecting the Belt Clip

- 1. To attach the belt clip, insert the sides of the belt clip into the slots on each side of
- Snap the ends of the belt clip into place.

Connecting an Optional Headset to the Handset

- Each handset can be used with an optional headset hands free operation. Connect the headset to the headset jack on the side of the handset. The handset
- receiver and microphone are disabled when the headset is connected. Adjust the headset to rest comfortably on top of your head and over your ear. Move the microphone to approximately two to three inches from your mouth
- 3. Press the TALK/CALL BACK button to answer a call or make calls using the headset. 4. To return to normal operation, unplug the headset from the jack.

Chanaina the Battery CAUTION: To reduce the risk of fire or personal injury, use only the

listed in the User's Guide.

• Keep batteries out of the reach of children.

rechargeable battery (or batteries)

• Remove batteries if storing over 30 days.

Display Messages

you set up and use your phone.

RIOCKED CALL /

NAME / NUMBER

CHARGING..

DELETE ALL?

FND OF LIST

ENTER NAME

ENTER TEL NUMBR

DELETE CALL ID?

DUPLICATE NUMBER

Thomson Inc. approved Nickel-metal Hydride (Ni-MH) battery model 5-2721, that is compatible with this unit. 1. Make sure the telephone is **OFF** (not in TALK mode) before you replace battery.

- 2. Remove the battery compartment door.
- 3. Disconnect the battery plug from the jack inside the battery compartment and remove the UNKNOWN CALLER/ battery pack from the handset NAME/NUMBER 4. Insert the new battery pack and connect the cord to the jack inside the battery
- compartment. 5. Put the battery compartment door back on.
- 6. Place handset in the base or handset charge cradle to charge. **Allow the handset** A long warbling tone (with ringer on) battery to properly charge (for 16 hours) prior to first use or when you install a new Three short beeps (several times) battery pack. If you do not properly charge the phone, battery performance will be compromised One beep every 7 seconds

Battery Safety Precautions

• Do not burn, disassemble, mutilate, or puncture. Like other batteries of this type, toxic

NOTE: The RBRC seal on the battery used in your Thomson Inc. product

For more information go to the RBRC web site at www.rbrc.org

or call 1-800-8-BATTERY or contact a local recycling center.

indicates that we are participating in a program to collect and recycle the

he following messages shows the status of the phone, provides Caller ID information, or help

it can resume normal function

stored in the phone's memor

Indicates the person is calling from a number which is blocked

Indicates the handset needs to charge for a period of time before

Prompt asking if you want to erase the CID record showing on

Prompt asking if you want to erase one of the 50 records

selected in any one of TEN VIP melody records before

DUPLICATE NUMBER shows in the display.

Under VIP melody feature, if the desired number/record was

Indicates that there is no additional information in CID memory.

Prompt telling you to enter a name in one of the 50 memory

Prompt telling you to enter a telephone number in one of the

Indicates call or calls which have not been reviewed.

Prompt asking if you want to erase all CID records.

- Telephone Solutions materials could be released which can cause injury. No dial tone • To reduce the risk of fire or personal injury, use only the Nickel-metal Hydride battery
 - Check or repeat installation steps: Make sure the base power cord is connected to a working electrical outlet

Caller information is interrupted during transmission or the

Displays on handset while the line is in use

Indicates the battery needs to be charged.

Indicates CID record is from a long distance cal

Indicates there are no CID records in memory.

The gudio link between handsets is established

same number was received more than once.

Indicates handset is searching for the base.

the CID information was not sent

Indicates the handset is in speakerphone mode

to the base.

Handset Sound Signals

Troubleshootina Guide

phone line is excessively noisy. Indicates no CID information was

received, you are not subscribed to CID service, or CID service is

Indicates voice mail has not been retrieved from service provider.

Indicates voice mail has been retrieved from service provider

Indicates the memory location contains no user memories and

the user is trying to mark a specific user record for VIP MELODY.

Indicates handset is too far away from the base. Move closer

Someone pressed the page button on the base or int button

Indicates a repeat call message. Indicates a new call from the

Indicates incoming call is from an area not serviced by CID or

Meaning

Page signal

Signals an incoming call

Low battery warning

XX represents the number of new CID records not reviewed.

- Make sure the telephone line cord is connected to the base and the wall jack. • Connect another phone to the same jack. If it doesn't work, the problem might be your wiring or local service.
- The handset may be out of range of the base. Move closer to the base. • Make sure the battery is properly charged (for 16 hours).
- Make sure the battery pack (in the handset) is properly installed. • The handset should beep when you press the TALK/CALL BACK button, and the charge

indicator on the base should be lit when the handset rests in the cradle. If not, the

- battery may need to be charged. • Place handset in charge cradle for at least 20 seconds to reset the unit
- landset does not rind • Make sure the handset ringer software switch is set to on.
- The handset may be out of range of the base. Move closer to the base. • You may have too many extension phones on your line. Try unplugging some extensions.
- Check for a dial tone You experience static, noise, or fading in and out

appliance. If necessary, relocate the base.

• The handset may be out of range of the base. Move closer to base. Make sure base is not plugged into an electrical outlet with another household

• Charge the battery (for 16 hours).

INCOMPLETE DATA

LINE IN USE

LONG DISTANCE

NEW VOICE MAIL

NEW CALL XX

NO CALLS

MSG WAITING OFF

NO USER MEMORY

ROOM MONITORING

OUT OF RANGE

PAGING or

RFPT

SPKR

PAGING FROM

SEARCHING

LOW BATTERY

- Clean the charging contacts on the cordless handset and base charge cradle with a soft cloth or an eraser
- See solutions for "No dial tone" on previous page. Replace the battery.

Did you program the memory location keys correctly? • Did you follow proper dialing sequence? Prompt telling you to enter the user name for the registered

Memory dialing doesn't work

Unit locks up and no communication between the base and cordless handset Unplug the power adaptor from the electrical outlet and the back of the base Remove the handset battery. Wait for 30 seconds and plug the power adaptor back into the base

and electrical outlet. Reconnect the battery and charge for 16 hours.

Charge Indicator on the Base Flashes

• Provided your phone company offers voice messaging service and you subscribe to it, the charge indicator on the base flashes when the phone is not in use to indicate there is message waiting. It's stops flashing after the message has been reviewed.

Caller ID Solutions No Display

Charge the battery (for 16 hours). Or replace the battery

telephone company to receive CID information

• Make sure the unit is connected to a non-switched electrical outlet. Disconnect the nower adaptor from the base and reconnect it

• The unit displays this message if it detects anything other than valid Caller ID

information during the silent period after the first ring. This message indicates the presence of noise on the line

• You must be subscribed to the standard Name/Number Caller ID service from your local

Thomson Inc. 11721 B Alameda Ave. If you experience any of the following problems, even after recharging the battery, you may

- need to replace the battery pack: Short talk time
- Poor sound quality Limited range Charge indicator fails to turn on

General Product Care

o keep your unit working and looking good, follow these guidelines

 Installation and setup service adjustments • Avoid dropping the handset, as well as other rough treatment to the phone.

- Clean the phone with a soft cloth.
- Never use strong cleaning agents, paint thinner, abrasive powder, alcohol, or other chemical products to clean the unit. Doing so will damage the finish.
- Periodically clean the charge contacts on the handset and base with a clean nencil eraser

• Retain the original packaging in case you need to ship the phone at a later date.

Causes of Poor Reception

- Aluminum siding. • Foil backing on insulation.
- Heating ducts and other metal construction that can shield radio signals.
- You're too close to appliances such as microwaves, stoves, computers, etc.
- Atmospheric conditions, such as strong storms. Base is installed in the basement or lower floor of the house
- Base is plugged into AC outlet with other electronic devices • Baby monitor is using the same frequency.
- Handset battery is low.

• You're out of range of the base. Service

If trouble is experienced with this equipment, for repair or warranty information, please contact customer service at 1-800-448-0329. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved

Changes or modifications not expressly approved by Thomson Inc. could void the user's authority to operate this product. For instructions on how to obtain service, refer to the warranty included in this guide or call customer service at 1-800-448-0329.

This product may be serviced only by the manufacturer or its authorized service agents

Or refer inquiries to: Thomson Inc.

P O Box 1976

Purchase date

Manager, Consumer Relations

Indianapolis, IN 46206

Attach your sales receipt to the booklet for future reference or jot down the date this product was purchased or received as a gift. This information will be valuable if service should be required during the warranty period.

Name of store

Limited Warranty What your warranty covers:

• Defects in materials or workmanship.

For how long after your purchase:

One year, from date of purchase


IMPORTANT: If you have purchased an extra handset apart from your original purchased unit you may find a detailed description of its functions

in the User's Guide provided with your original purchased unit.

his phone is EXPANDABLE up to a total of 4 handsets (by additional purchase of the option

Instructions For Optional/Additional

If you have purchased an extra handset that is not of the same type as vour original handset you may still use the original User's Guide to help explain the new handsets basic functions and options

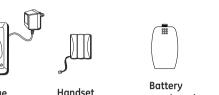

battery pack


NOTE: You must connect the handset battery before use.

- Thomson Inc. approved Nickel-metal Hydride (Ni-MH) battery model 5-2721, that is compatible with this unit.
- Locate battery and battery door which are packaged together inside a plastic bag and are senarate from the handset 2. Locate the battery compartment on the back of the handset

- 4. Insert the battery pack.

Extra Charging Cradle

. Plug the AC power adaptor of the extra charging cradle into the electrical outlet. NOTE: This power adaptor is intended to be correctly orientated in a

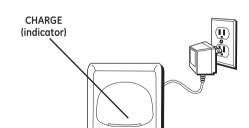

2. Place the handset in the extra charging cradle. The charge indicator turns on, verifying the battery is charging.

Registration


Allow the phone to charge for 16 hours.

YOU MUST REGISTER THE HANDSET TO THE MAIN BASE BEFORE USE! After the optional handset has charged for 16 hours on the extra charger, HANDSET NEEDS

HANDSET PROGRAM shows in the display. (Your handset should be held near the base during registration process.

Press the handset mute/program button. **REGISTERING** shows in the display. **HANDSET X REGISTERED** shows in the handset display, where X is the handset number. You may now rename your handset. (Refer to Step 3 & 4 of Handset Name Section)


Model 28110 handset with charge cradle).

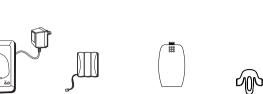

Installing the Handset Battery

CAUTION: To reduce the risk of fire or personal injury, use only the

- 3. Plug the battery pack cord into the jack inside the compartment
- can be inserted only one way.
- 5. Close the battery compartment by pushing the door up until it snaps into place.

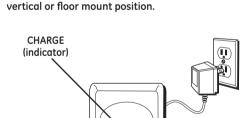

REGISTRATION shows in the display. Press the mute/program button. HOLD BASE PAGE FOR 5 SECONDS, THEN PRESS

Press and hold the page button on the base unit until the charge/in use indicator flashes?

(The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.)

- What we will do-• Provide you with a new or, at our option, a refurbished unit. The exchange unit is under
- warranty for the remainder of the original product's warranty period.
- How you get service: Properly pack your unit Include any cables etc. which were originally provided with the
- product. We recommend using the original carton and packing materials. • "Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period, must be presented to obtain warranty service.
- For rental firms, proof of first rental is also required. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to:

Socorro Texas 79927

- Pay any charges billed to you by the Exchange Center for service not covered by the • Insure your shipment for loss or damage. Thomson Inc. accepts no liability in case of
- damage or loss A new or refurbished unit will be shipped to you freight prepaid

Products which have been modified or incorporated into other products

• Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. Any additional information, should be obtained from your

 Batteries. • Damage from misuse or neglect

What your warranty does not cover

Product Registration

Limitation of Warranty:

- Products purchased or serviced outside the USA. Acts of nature, such as but not limited to lightning damage
- Please complete and mail the Product Registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not NOTE: To ensure proper battery installation, the connector is keyed and required for warranty coverage.
- The warranty stated above is the only warranty applicable to this product. All other
- warranties, express or implied (including all implied warranties of merchantability or
- fitness for a particular purpose) are hereby disclaimed. No verbal or written information given by Thomson Inc., its agents, or employees shall create a guaranty or in any way
- increase the scope of this warranty • Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. Thomson Inc. shall not be liable for incidental or consequential damages

are governed by the laws of the state of Indiana. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular

Accessory Information

purpose on this product is limited to the applicable warranty period set forth above How state law relates to this warranty • Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations or

resulting from the use of this product or arising out of any breach of any express or

implied warranty on this product. This disclaimer of warranties and limited warranty

exclusions may not apply to you. • This warranty gives you specific legal rights, and you also may have other rights that vary from state to state. If you purchased your product outside the USA:

This warranty does not apply. Contact your dealer for warranty information.

MODEL NO

5-2716

C Power adaptor 5-2715 5-2717 5-2425

To place order, have your Visa, MasterCard, or Discover Card ready and call toll-free 1-800-338-0376. A shipping and handling fee will be charged upon ordering. We are required by law to collect appropriate sales tax for each individual state, country, and locality to which the merchandise is being sent. Items are subject to availability. Prices are subject to change

Parts Checklist Make sure your package includes the items shown here. Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com