Model 25942 Series 5.8 GHz Cordless **Handset Answering** System Úser's Guide



Equipment Approval Information Your telephone equipment is approved for connection to the Public Switched Telephone Network and

is in compliance with parts 15 and 68. FCC Rules and Regulations and the Technical Requirements for Telephone Terminal Equipment published by ACTA.

1 Notification to the Local Telephone Company

On the bottom of this equipment is a label indicating, among other information, the US number and Ringer Equivalence Number (REN) for the equipment. You must, upon request, provide this information to your telephone company

The REN is useful in determining the number of devices you may connect to your telephone line and still have all of these devices ring when your telephone number is called. In most (but not all) areas the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

- This equipment may not be used on coin service provided by the telephone company • Party lines are subject to state tariffs, and therefore, you may not be able to use your own telephone equipment if you are on a party line. Check with your local telephone company.
- Notice must be given to the telephone company upon permanent disconnection of your telephone from your line. • If your home has specially wired alarm equipment connected to the telephone line, ensure the
- nstallation of this product does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer. US Number is located on the cabinet bottom

REN Number is located on the cabinet bottom

2 Rights of the Telephone Company

Should your equipment cause trouble on your line which may harm the telephone network the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately. In case of such temporary discontinuance, the telephone company must: (1) promptly notify you of such temporary discontinuance: (2) afford you the opportunity to correct the situation; and (3) inform you of your ht to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68. FCC Rules and Regulations.

Visit the GE website at: www.GE.com/phones

00019461 (Rev. 5 Dom E) 08-16 Printed in China

101 West 103rd Stree ndianapolis IN 46290-1102 © 2008 Thomson Inc. rademark(s) ® Registered Marca(s) Registrada(s)

he telephone company may make changes in its communications facilities, equipment, operations or procedures where such action is required in the operation of its business and not inconsistent with FCC Rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing to allow you to maintain uninterrupted service.

Interference Information

his device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device,

pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection agginst harmful interference in a residential installation his equipment generates, uses, and can radiate radio frequency energy and, if not installed and

used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

interference by one or more of the following measures

- "receiving" the interference)
- Reorient or relocate and increase the separation between the telecommunications equipment and receiving antenna.
- which the receiving antenna is connected.

If these measures do not eliminate the interference please consult your dealer or an experienced tock number 004-000-00345-4 when ordering copies.

could void the user's authority to operate the equipmen

his telephone system meets FCC standards for Hearing Aid Compatibility

Licensina

FCC RF Radiation Exposure Statement

centimeters between the radiator and your body. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

EXPOSETHIS PRODUCT TO RAIN

Introduction


Wall mount

CAUTION: When using telephone equipment, there are basic safety instructions that should always be followed. Refer to the IMPORTANT SAFETY INSTRUCTIONS provided with this product

IMPORTANT: Because cordless phones operate on electricity, you should have at least one phone in your home that isn't cordless, in

Before You Beain

Make sure your package includes the items shown here.

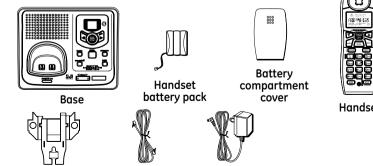


and cover than shown above

For **Model 25942xx3** there will be **TWO** additional handsets, charge cradles, battery packs and covers than shown above.

packs and covers than shown above.

Telephone Jack Requirements

To use this phone, you need an RJ11C type modular telephone jack, which might look like the one pictured here, installed in vour home. If you don't have a modular jack, call your local phone company to find out how to get one installed.

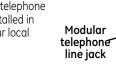

Installation

Digital Security System

Your cordless phone uses a digital security system to protect against false ringing, unauthorized access, and charges to your phone line.


frequencies that may cause or receive interference with nearby TVs, microwave ovens, and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV, microwave ovens, or VCR, If such interference continues, move the cordless telephone farther away from these appliances.


computer networks, multi-handset cordless telephone systems, and some long-range cordless telephone systems.

Important Installation Guidelines

- ovens, heating appliances and direct sunlight
- Avoid areas of excessive dust, moisture and low temperature
- Avoid other cordless telephones or personal computers.
- designed for wet locations.
- Never touch non-insulated telephone wires or terminals, unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.

Handset Layout

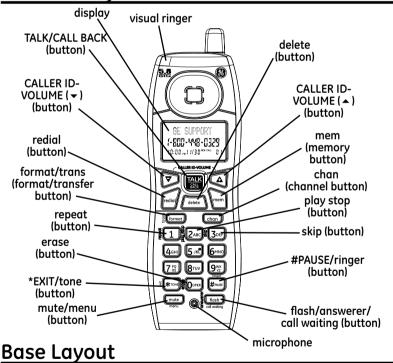

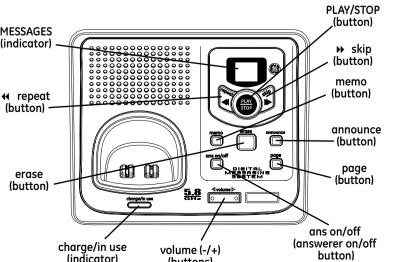

Installing the Phone


Installing the Handset Battery

NOTE: You must connect the handset battery before use. CAUTION: To reduce the risk of fire or personal injury, use only

the Thomson Inc. approved Nickel-Cadmium (Ni-Cd) battery model 5-2729 or Nickel-Metal Hydride (Ni-MH) battery model 5-2522, which are compatible with this unit.


- 1. Locate battery and battery door which are packaged together inside a plastic bag
- and are separate from the handset 2. Locate the battery compartment on the back of the handset
- 3. Plug the battery pack cord into the jack inside the compartment. **PUT IN MAINBASE** shows in the display

NOTE: To ensure proper battery installation, the connector is keyed and can be inserted only one way.

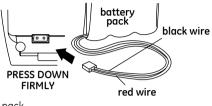

- 4 Insert the battery pack
- 5. Close the battery compartment by pushing the door up until it snaps into place.

1. Choose an area near an electrical outlet and a telephone wall jack (RJ11C), and place your cordless telephone on a level surface, such as a desktop or tabletop, or you may mount it on the wall.

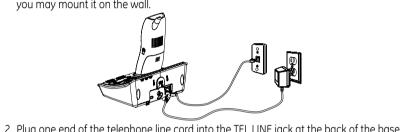

- and the other end into a modular jack
- 4. Place the handset in the base cradle. The charge/in use indicator turns on, verifying the battery is charging. The unit will take 20 seconds to register and verify its security code. **READY** shows in the display

UNAVAILABLE when the TALK/CALL BACK button is pressed. You must then place all handsets on the main base cradle for 20 seconds to re-register

5. Allow the phone to charge for 16 hours prior to first use. If you don't properly charge the phone, battery performance is compromised

only the 5-2836 (gray) or 5-2760 (black) power adaptor listed in the user's guide. This power adaptor is intended to be correctly orientated in a vertical or floor mount position.

Wall Mounting

1. Turn the base ove

- 3. Slip the mounting holes (on the back of the base) over the wall plate posts, and slide the unit down into place. (Wall plate not included.)

NOTE: If desired, gather the extra telephone line and power adaptor cord and store inside the wall mounting pedestal

Answering System Setup

Before you begin the set up process, you must turn on the answering system.

The MESSAGES indicator lights when the answering system is **ON**. The indicator blinks when you have new messages.

NOTE: The answering system displays "--" when it is OFF.

Setting the Voice Prompt Language The default voice prompt language is English.

To change the answering system's voice prompt language, press and hold the skip button for two seconds. The unit announces "SELECCIONADO ESPANOL" (Spanish NOTE: To change to English, press and hold the skip button again for

2 seconds. The unit announces "ENGLISH SELECTED" NOTE: In remote access mode, the system follows the selected

Voice Time/Day Stamp

.. Make sure the answering system is **ON**.

3. Press key [8] to enter Time/Day set menu on handset.

7. Press #PAUSE/ringer button to confirm the setting.

and eliminate as much background noise as possible.

2. Press and hold the announce button on the base.

4. Release the button when you finish your announcement

button and release it when you hear the beep.

Reviewing the Announcement

3. Press key [9] to enter Ring to Answer menu on handset.

Make sure the answering system is ON.

3. Begin speaking after you hear the beep.

Sample Outgoing Announcement

I'LL GET BACK TO YOU. THANKS

Rings to Answer

6. To set AM/PM, press the CALLER ID-VOLUME (▲ or ▼) button.

Use the speaker volume (- / +) buttons to adjust speaker volume on the base to a

For best results when recording, you should be about nine inches from the microphone

NOTE: If you choose not to record an outgoing announcement, a default

announcement plays instead. To return to the default announcement after

you have recorded your own outgoing announcement, press the announce

"HI, THIS IS (USE YOUR NAME HERE), I CAN'T ANSWER THE PHONE RIGHT NOW, SO

PLEASE LEAVE YOUR NAME, NUMBER AND A BRIEF MESSAGE AFTER THE TONE, AND

comfortable level. L1 is the minimum speaker volume and L8 is the maximum.

Recording the Outgoing Announcement

4. To set Hour, key in [00]-[12].

Speaker Volume

5 To set Minutes key in [00]-[59]

- 2. Press flash/answerer/call waiting button on the handset to enter answerer remote
- 1. Press the mute/menu button until **RINGER** > 1 ON shows in the display. 10N is the default 2. Use the CALLER ID-VOLUME (▲ or ▼) button or the touch-tone pad on the handset
 - to scroll to 1 ON or 2 OFF.
 - 3. Press mute/menu to save.
 - NOTE: If you turn the ringer off, RINGER OFF shows on the display.

Ringer Tone You can choose from 3 ring tones.

1. Press the mute/menu button until **RINGER TONE** ▶ 01 shows in the display.

Ringer ON/OFF

- 01 is the default 2. Use the CALLER ID-VOLUME (▲ or ▼) button or the touch-tone pad on the handset
- to select from **01** to **03**. 3. Press mute/menu to save.

Tone/Pulse

- 1. Press the mute/menu button until > 1 TONE 2 PULSE shows in the display. 1 TONE is the default
- to scroll to 1 TONE or 2 PULSE.
- Press mute/menu to save.

Default Setting

- You may return handset settings to the factory default setup using this menu.
- 2. Use the CALLER ID-VOLUME (\blacktriangle or \blacktriangledown) button on the handset to scroll to **YES** or **NO**. NOTE: If you choose YES, all settings in the programmable menu return to the factory defaults

Cordless Phone Basics

Charae/In Use Indicator

charged. The handset visual ringer and base indicator flash when you receive a call.

Answering a Call

- 1. When the phone rings, pick up the handset and press the TALK/CALL BACK button. 2. When finished, press the TALK/CALL BACK button again or place the handset on the
- base cradle to hang up.

1. Pick up the handset and press the TALK/CALL BACK button. Wait for the dial tone.

- The call timer starts counting minutes and seconds in the display. 2. Dial a telephone numbe
- base cradle to hang up. NOTE: In case of power failure, the handset may display UNAVAILABLE when the TALK/CALL BACK button is pressed. You

Pre-dialina

- 2. Dial a telephone number (the number you dial shows in the display).
- correct number. 3. Press the TALK/CALL BACK button on that handset. The number automatically dials
- and the call timer starts counting the minutes and seconds in the display. 4. When finished, press the TALK/CALL BACK button again to hang up.
- NOTE: You may enter up to 32 pre-dial digits.

While the phone is **ON** (in TALK mode), press the redial button to redial the last number you dialed (up to 32 digits).

Flash

Use the flash/answerer/call waiting button to activate custom calling services such as call waiting, which are available through your local phone company. TIP: Do not use the TALK/CALL BACK button to activate custom

calling services such as call waiting or you'll hang up the phone.

channel to improve reception and reduce noise or static on the line. Press and release the chan button to move to the next clear channel.

Press the *EXIT/tone button to cancel any command you initiated.

This feature assists in locating a misplaced handset.

Press the page button on the base. The handset beeps continuously for about 2 minutes until you press the TALK/CALL BACK button on the handset or the page button on the base

NOTE: You may still page the handset when the ringer is off.

Ringer ON/OFF Shortcut

Apart from the setting in the main menu, there is a shortcut to set the ringer. Make sure the phone is **OFF** (not in talk mode). 1. Press the #PAUSE/ringer button to go to the **RINGER ON/OFF** menu.

- **RINGER** ▶ 1 ON shows in the display. 10N is the default.
- 2. Use the CALLER ID-VOLUME (▲ or ▼) button or the touch-tone pad on the handset to scroll to 1 ON. or 2 OFF.
- 3. Press the #PAUSE/ringer button to save your selection. You will hear a confirmation

Volume

When the phone is **ON** (in TALK mode) press the CALLER ID-VOLUME (▲ or ▼) button to adjust the listening level. Choose from five volume settings. **VOL 1** is the lowest volume and **VOL 5** is the highest volume.

NOTE: The phone will automatically reset VOL 5 to VOL 4 after you hang up.

Mute

Use mute during a phone conversation to speak privately and off-line with a third party.

- 1. Press the mute/menu button. **MUTE** shows in the display. The party on the telephone will not hear you.
- 2. Press the mute/menu button when finished.

Temporary Tone

This feature is useful only if you have pulse (rotary) service. Temporary Tone Dialing enables pulse (rotary) service phone users to access touch tone services offered by banks, credit card companies, etc. For example, when you call your bank you may need to enter your bank account number. Temporarily switching to touch tone mode allows vou to send vour number

- 1 Dial the telephone number and wait for the line to connect
- 2. When your call is answered, press the *EXIT/tone button on the handset to temporarily change from pulse dialing to tone dialing.
- 3. Follow the automated instructions to get the information you need. 4. Hang up the handset and the phone automatically returns to pulse (rotary)
- dialing mode. **Call Transfer** (applicable only with additional handsets) During an external call, you may transfer the external call to another handset.
- 1. Press the format/trans button on the originating handset. *TRANSFERRING* shows in the display. All registered handsets will be paged 2. Press the format/trans button or TALK/CALL BACK on receiving handset to answer
- NOTE: To cancel the call transfer, you may press *EXIT/tone button or the format/trans button on the originating handset.
- NOTE: If there is no answer within 2 minutes after transferring the call, then the handsets will be rung back (callback). If no handset answers within 30 seconds, then the external call will be

Caller ID (CID)

number, date, and time

IMPORTANT: In order to use this unit's Caller ID features, you must subscribe to either the standard Name/Number Caller ID Service or Call Waiting Caller ID Service. To know who is calling while you are

on the phone, you must subscribe to Call Waiting Caller ID Service. This unit receives and displays information transmitted by your local phone company. This information can include the phone number, date, and time; or the name, phone

FRED PAGE Caller ID name 317-555-1234 — Caller ID phone number 10:28 PM 10/20 NEW CALL # 03 — Caller ID record number

Date Caller status; NEW or REPT Call Waiting Caller ID

Provided you subscribe to Call Waiting Caller ID service from your phone company; if

you receive an incoming call and you are already on the phone, a beep indicates the presence of a Call Waiting call on the line. Only the handset that is in use at the time of the call will display and store the Call Waiting Caller ID information. • When you hear the call waiting beep in the handset receiver, press the flash/answerer/

If you are not at home or cannot answer your telephone's Caller ID memory stores the

data for the 40 most recent calls you received so you can see who called while you

call waiting button to put the current call on hold and answer the incoming call. Press flash/answerer/call waiting again to return to the original call.

Receiving CID Records When you receive a call, the Caller ID information is transmitted between the first and

second ring. The Caller ID information appears on the display while the phone rings, giving you a chance to monitor the information and decide whether or not to answer Storing CID Records (In CID Memory)

were unavailable. When the 41st call is received, the oldest Caller ID record (1st call) is automatically deleted You may review the stored information at any time. Calls received since your last review show as **NFW** in the display Calls that have not been previously reviewed but were

received from the same number more than once show as **REPT** in the display. Reviewing CID Records

As calls are received and stored, the display is updated to let you know how many calls have been received. To scroll CID records:

- 1. Make sure the phone is **OFF** (not in talk mode).
- 2. Press the CALLER ID-VOLUME (▼) button to review the newest CID record. 3. Press the CALLER ID-VOLUME () button to review the oldest CID record first.

- Dialing a CID Number 1. Make sure the phone is **OFF** (not in TALK mode).
- 2. Use the CALLER ID-VOLUME (▲ or ▼) button to display the desired record.

3. Press the TALK/CALL BACK button. The number dials automatically. NOTE: Depending on (a) how the incoming caller's phone number is formatted when it is received, and (b) whether or not you previously pre-programmed your local area code into the set up menu, you may need to adjust the format of the incoming caller's stored phone number before making the call, press the format/trans button to

adjust the number, and try again

Eleven digits long distance code "1" 1-317-555-8888 +3-diait area code +7-digit telephone number. Ten digits 317-555-8888 3-diait area code + 7-digit telephone number Seven digits 7-digit telephone number.

NOTE: It is important that you format CID records correctly BEFORE

displayed, and you must confirm replacement by pressing the mem

Storing CID Records in Internal Memory You may also store CID information in the phone's internal memory

storing in internal memory as you cannot reformat CID records

2. Use the CALLER ID-VOLUME (▲ or ▼) button to scroll to the desired CID record. Press the mem button.

NOTE: If the memory location is occupied, REPLACE MEMO? is

NOTE: Press the *EXIT/tone button once to keep the previous setting

(making no changes) and return to the menu.

THOMSON

Privacy of Communications may not be ensured when using this product. If this equipment does cause harmful interference to radio or television recention, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the

• Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is

• Connect the telecommunications equipment into an outlet on a circuit different from that to

radio/television technician for additional suggestions. Also, the Federal Communications Commissio has prepared a helpful booklet, "How To Identify and Resolve Radio/TV Interference Problems." This booklet is available from the U.S. Government Printing Office. Washington, D.C. 20402. Please specify Notice: The changes or modifications not expressly approved by the party responsible for compliance

Hearing Aid Compatibility (HAC)

his equipment complies with ECC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20.

WARNING: TO PREVENT FIRE OR **ELECTRICAL SHOCK** HAZARD, DO NOT

and save them for future reference.

case the power in your home goes out.

Parts Checklist (for 25942xx1 model)

AC powe Telephone line cord

For **Model 25942xx2** there will be **ONE** additional handset, charge cradle, battery pack

For Model 25942xx4 there will be THREE additional handsets, charge cradles, battery

INSTALLATION NOTE: Some cordless telephones operate at

Certain other communications devices may also use the 5.8 GHz / 900 MHz frequency for communication, and, if not properly set, these devices may interfere with each other and/or your new telephone If you are concerned with interference, please refer to the owner's manual for these devices on how to properly set channels to avoid interference Typical devices that may use the 5.8 GHz frequency for communication include wireless audio/video senders, wireless

- Avoid sources of noise and heat, such as motors, fluorescent lighting, microwave
- Never install telephone wiring during a lightning storm. • Never install telephone jacks in wet locations unless the jack is specifically
 - 3. Plug the AC power converter into the electrical outlet and the DC connector into the
 - NOTE: In case of a power failure, the handsets may display

CAUTION: To reduce risk of personal injury, fire, or damage use

2. Attach the wall mounting pedestal by first inserting the tabs on the open edge of the pedestal into the slots on the lower portion of the bottom of the base. Then push down and snap the pedestal into place

his section shows you how to set up your answering system to receive incoming calls. • Press the ans on/off button to turn the answering system **ON** and **OFF**.

language. The voice prompt language cannot be switched remotely.

1. Make sure the answering system is **ON**. 2. Press flash/answerer/call waiting button on the handset to enter answerer remote

4. Use the CALLER ID-VOLUME (▲ or ▼) button to choose 3 rings, 5 rings or Toll saver.

Press and release the announce button to review your outgoing announcement.

5. Press #PAUSE/ringer button to confirm the setting. NOTE: If you select Toll Saver (TS) the unit answers after the 3rd ring if there ARE new messages, OR the unit answers after the 5th ring if

Handset Setup There are eight programmable menus available: Language, Handset Name, Area Code Ringer ON/OFF, Ringer Tone, Tone/Pulse and Default Setting. During programming, you may press the mute/menu button at any time to go to the

next option. To exit the menu, keep the previous setting and return to the standby mode, press the *EXIT/tone button.

Display Language

there ARE NO new messages.

1. Press the mute/menu button until > 1ENG 2FRA 3ESP shows in the display. 1ENG is the default. (ENG stands for English. FRA stands for French. ESP stands for Spanish.)

2. Use the CALLER ID-VOLUME (▲ or ▼) button or the touch-tone pad on the

.. Press the mute/menu button until **ENTER NAME** shows in the display. 2. Use the touch-tone pad to enter the name (up to 15 characters). More than one letter is stored in each of the number keys. For example, to enter the name Bill Smith, press the 2 key twice for the letter B. Press the 4 key 3 times for the letter I. Press the 5 kev 3 times for the letter L. Wait for one second. Press the 5 kev 3 times for the second letter L. Press the 1 key to insert a space between the L and the S. Press the 7 key 4 times for the letter S: press the 6 key once for the letter M: press the 4 key 3 times for the letter I: press the 8 key for the letter T: press the 4

NOTE: If no name is entered, READY shows in the display. Local Area Code

kev twice for the letter H.

3. Press mute/menu again to save.

and delete one character at a time.

the default 2. Use the touch-tone pad on the handset to enter your three digit area code. 3. Press mute/menu again to save.

NOTE: If you make a mistake, press the delete button to erase a

1. Press the mute/menu button until **AREA CODE - - -** shows in the display. - - - is

NOTE: If you make a mistake, use the delete button to backspace

wrong number.

Download from Www.Somanuals.com, All Manuals Search And Download

2. Use the CALLER ID-VOLUME (▲ or ▼) button or the touch-tone pad on the handset

1. Press the mute/menu button until **DEFAULT** > **NO** shows in the display. NO is

3. Press mute/menu to save.

When the charge/in use indicator on the base is lit, the phone is **ON** or the handset is being

- Making a Call
- 3. When finished, press the TALK/CALL BACK button again or place the handset on the

must then place the handset on the main base for 20 seconds to reset the unit.

1. Make sure the phone is **OFF** (not in TALK mode).

While the phone is **OFF** (in standby mode), press the redial button and then the TALK/CALL BACK button to redial the last number.

Channel Button

While talking on the phone, it may be necessary for you to manually change the

1. Make sure the phone is **OFF** (not in talk mode).

4. Use the touch-tone pad to enter a memory location (0-9) to store the number in that memory location. You will hear a confirmation tone.

Available formats include: handset to enter your selection automatically dropped. 3. Press mute/menu again to save. NOTE: If you make a mistake dialing the number, use the delete Number of digits Explanation Example button to backspace and erase the wrong number, and enter the Handset Name

NOTE: If the selected CID record contains any information that is nonnumeric the unit will not allow this record to transfer to the internal user memory. The handset will display UNABLE TO STORE.

To Replace a Stored CID Record

- 1. Repeat steps 1 through 3 in Storing CID Records in Internal Memory. After you enter the memory location **REPLACE MEMO?** shows in the display
- 2. Press the mem button again, and the new CID record replaces the old memory in 3. Press delete again to delete the data. The display shows **DELETED**. that location. You will hear a confirmation tone.

Deleting a CID Record 1. Make sure the phone is **OFF** (not in TALK mode).

- 2. Use the CALLER ID-VOLUME (▲ or ▼) button to display the CID record you want
- 3. Press delete. The display shows **DELETE CALL ID?**.
- 4. Press delete again to erase the record and **DELETED** shows in the display. You will hear a confirmation tone.
- 2 Press the mem buttor
- NOTE: Press the *EXIT/tone button to return to the standby mode. 3. Use the touch-tone pad or the CALLER ID-VOLUME (▲ or ▼) button to scroll to the number vou want to dial.

Deleting All CID Records 1. Make sure the phone is **OFF** (not in TALK mode)

- 2. Use the CALLER ID-VOLUME (▲ or ▼) button to display any Caller ID record.
- 3. Press and hold the delete button until **DELETE ALL?** shows in the display.
- 4. Press delete again to erase all records. You will hear a confirmation tone. The display shows NO CALLS.
 - NOTE: Press the *EXIT/tone key to return to the standby mode.

Memory

Each handset can store up to ten 24-digit numbers with up to 15-character names in memory for quick dialing. This memory feature is in addition to the CID memory log, which stores up to 40 CID records in each handset.

Storing a Name and Number in Memory 1. Make sure the phone is **OFF** (not in TALK mode).

- 2. Press the mem button.
- 3. Press the desired memory location (0 through 9) or use CALLER ID-VOLUME (▲ or ▼) to scroll to the desired memory location.

NOTE: If the memory location is occupied, the memory location number and stored name and telephone number shows in the display. If the memory location is empty. *EMPTY* shows in the display.

4. Press the mem button again. The display shows **ENTER NAME**.

NOTE: If you don't want to enter the name, skip step 5.

5. Use the touch-tone pad on the handset to enter the name (up to 15 characters) and press the memory button to save. More than one letter is stored in each of the number keys. For example, to enter the name Bill Smith, press the 2 key twice for the letter B. Press the 4 key 3 times for the letter I. Press the 5 key 3 times for the letter L. Wait for one second. Press the 5 key 3 times for the second letter L. Press the 1 key to insert a space between the L and the S. Press the 7 key 4 times for the letter S: press the 6 key once for the letter M: press the 4 key 3 times for the letter I: press the 8 key for the letter T; press the 4 key twice for the letter H.

NOTE: If you make a mistake press the delete button to backspace and erase the wrong character(s) or number(s).

6. Press the mem button to save the name. The display shows **ENTER TEL NUMBR**. 7. Use the touch-tone pad to enter the telephone number you want to store (up to

NOTE: The system treats PAUSES as delays or spaces in the dialing

8. Press mem again to store the number. You will hear a confirmation tone.

Storing the Last Number Dialed

1. Repeat steps 1 through 6 in Storing a Name and Number in Memory.

3. Press the mem button to store the number. You will hear a confirmation tone. To replace an old number with a new redial number

- 1. Repeat steps 1 through 6 in Storing a Name and Number in Memory.
- 2. Press the redial button
- 3. Press the mem button, and **REPLACE MEMO?** shows in the display. 4. Press the mem button again to replace the old number with the new number. You
- will hear a confirmation tone Inserting a Pause in the Dialing Sequence of a

Stored Number

If a pause is needed to wait for a dial or access tone, press the #PAUSE/rinaer button t insert a delay in dialing sequence of a stored number (for example, after you dial 9 for an outside line, or to wait for a computer access tone). Pause shows in the display as a P. and each pause counts as one digit in the digling sequence

Changing a Stored Number

- 1. Repeat steps 1 through 7 in Storing a Name and Number in Memory.
- 2. Press the mem button, and **REPLACE MEMO?** shows in the display.
- 3. Press the mem button to store the number. You will hear a confirmation tone

Reviewing and Deleting Stored Numbers

L. Make sure the phone is **OFF** (not in TALK mode).

Chain Dialing from Memory

make a call through a long distance service:

. Make sure the phone is ON (in TALK mode).

or your call may not go through.

2 Press the mem button and then press 7

4. Press the TALK/CALL BACK button. The number dials automatically.

Use this feature to make calls which require a sequence of numbers, such as calling

dialed from memory. The following example shows you how to use chain dialing to

3. When you hear the access tone, press the mem button and then press 8.

TIP: Wait for the access tones before pressing the next mem button,

The messages indicator shows you how many messages you have received, and the

indicator blinks when new messages are received. The answerer must be ON in order

4. At the next access tone, press the mem button and then 9.

card calls to a frequently called long distance number. Each part of the sequence is

- OR -

The Number For

Authorization code

ong distance access number

Frequently called long distance number

- 1. To review stored numbers, press the mem button, and use the CALLER ID-VOLUME key for a desired memory location (0-9)
- Press PLAY/STOP on the handset (the 2 button). The message plays. 2. When the data shows in the display, press the delete button. The display • Press erase (the 0 button) to erase the message during message playback.
 - NOTE: Erased messages cannot be restored.

Memory Location

Dialina a Stored Number

- Use the memo feature to leave a message 1. Make sure the phone is **ON** by pressing the TALK/CALL BACK button. 1. Press and hold the memo button on the base. You must hold the button until you Press the mem button finish recording the memo.
- 3. Press the memory location (0-9). The number dials automatically. 2. Begin speaking after you hear the beep.
 - 3. Release the memo button when finished.

Remote Access

Cordless Handset

Leaving a Memo

You may access the answering system with the cordless handset or from any tone-dial compatible telephone

- 1. Press the flash/answerer/call waiting button to access the answering system. 2. Use the corresponding handset keys just like you would use the base buttons (see Answering System Setup). The button functions are located on the handset. For
- Press the flash/answerer/call waiting button. The display shows **ANSWERER REMOTE**.
- When you are finished listening to your messages, press the flash/answerer/call waiting button again.

Screening Calls from the Handset

example, to play messages:

Use the handset to screen calls even when you can't hear the answering system. When the answering system picks up:

1. Press the flash/answerer/call waiting button to access the answering system. 2. Listen as the caller leaves a message

3. Press the TALK/CALL BACK button to speak to the person or press the flash/ answerer/call waiting button to stop screening the call.

3. Follow the voice menu to use the answering system's remote functions.

TIP: You can bypass the outgoing announcement by pressing any

numbered key on the touch-tone pad while the announcemen

is playing. Then, you can enter your security code to access the

he default security code for accessing the answering system from another location is 1 2

3. You must use the handset to change the security code. With the phone OFF (not in TALK

1. Press the flash/answerer/call waiting button to display **ANSWERER REMOTE**. The

4. Press the *EXIT/tone button again. The unit announces the new code, pauses, beeps,

handset beeps once and announces the Remote Access menu

Press this Rutton

0 (during message playback)

Accessing the Answering System from Another **Answering System Operation** Location ou can access your answering system from any touch-tone phone by entering your

This section discusses the buttons and features on the answering system. 3-digit security code after you hear the outgoing announcement. Messages Indicator 1. Dial the telephone number to which the answering system is connected to.

2. Enter the security code after you hear the tone

Review message

Erase message

Skip message

Play back messages

Turn answerer on/off

Review voice menu option

answering system.

mode), follow these steps:

2. Press the *EXIT/tone button.

3. Enter the new 3-digit security code.

Changing the Security Code

and then announces the menu options again.

Stop message playback

The remote feature lets you perform the following functions

NOTE: The answering system displays "--" when it is turned off.

Screening Calls from the Base

L. Wait for the caller to begin leaving a message (to determine who is calling). 2. To speak to the caller, pick up the handset, and press the TALK/CALL BACK button.

The answering system automatically stops recording when you activate the handset or pick up an extension phone.

TIP: Make sure the volume on the base is set loud enough to hear your incoming calls.

Message Playback

The messages indicator on the base lets you know when you have messages. To play messages, press PLAY/STOP.

While a message is playing, you may do the following:

for the messages indicator to work

- Press PLAY/STOP to stop the message playback
- Press and release ◀ repeat to restart the current message; continue pressing and releasing **∢** repeat to review previous messages.
- Press and release >> skip to go to the next message.

Memory Full

When answering system memory is full the system answers after 10 rings beens and waits for you to enter the 3-digit security code. If you don't enter the security code within 7 seconds, the phone hangs up.

You should erase some messages so the answering system can record new ones.

NOTE: The unit also answers after the 10th ring if it is turned off. To access the answering system, enter your 3-digit security code after you hear the beep.

Erasing Messages


You may erase messages three ways: one message at a time from the base; all messages from the base; or one message at a time from the handset or a phone in another location

To erase one message at a time from the base: • Press PLAY/STOP. The message plays.

- - Press and release the erase button.
 - To erase all reviewed messages from the base:
- Press and hold the erase button until the unit beeps

To erase a message from the handset:



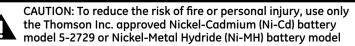

model 5-2729 or Nickel-Metal Hydride (Ni-MH) battery mode

- 5-2522, which are compatible with this unit. 1. Make sure the telephone is **OFF** (not in TALK mode) before you replace battery.
- 2. Remove the battery compartment door. 3. Disconnect the cord attached to the battery pack and remove the battery pack from
- 4. Insert the new battery pack and connect the cord to the jack inside the battery compartment
- 5. Put the battery compartment door back on.
- 6. Place handset in the base to charge. Allow the handset battery to properly charge (for 16 hours) prior to first use or when you install a new battery pack. If you do not properly charge the phone, battery performance will be compromised.

Battery Safety Precautions Do not burn disassemble mutilate or puncture Like other batteries of this type

- toxic materials could be released which can cause injury
- To reduce the risk of fire or personal injury, use only the Nickel-Cadmium (Ni-Cd) or Nickel-Metal Hydride (Ni-MH) battery listed in the User's Guide. • Keep batteries out of the reach of children.
- Remove batteries if storing over 30 days

NOTE: The RBRC seal on the battery used in your Thomson Inc. product indicates that we are participating in a program to collect and recycle the rechargeable battery (or batteries) For more information go to the RBRC web site at www.rbrc.org or call 1-800-8-BATTERY or contact a local recycling center.

Display Messages

The following messages show the status of the phone or help you set up and use your phone ANSWERER REMOTE Indicates the handset is accessing the answering system.

BLOCKED CALL Caller information is blocked from transmission BLOCKED Caller name and number is blocked from transmission. NAME/NUMBER DELETE ALL? Prompt asking if you want to erase all Caller ID records.

DELETE CALL ID? Prompt asking if you want to erase the current Caller ID record that is shown on the display DELETE? Prompt asking if you want to erase one of the 10 numbers stored in the phone's outgoing memory.

Prompt confirming a CID record is erased. DELETED. Indicates a memory location is vacant. **END OF LIST** Indicates there is no additional information in the Caller ID memory log.

ENTER NAME Prompt telling you to name the handset or enter a name for one of the 10 memory locations INCOMPLETE Caller information is interrupted during transmission or

DATA the phone line is excessively noisy LOW BATTERY Indicates the handset battery is low and needs charging.

NEW Indicates call or calls have not been reviewed. NO DATA No Caller ID information was received. NO CALLS Indicates no calls have been received.

PAGING FRM BASE Someone is paging the handset from the base **PUT IN MAINBASE** Indicates the handset needs to be registered before use. Indicates the CID number is a Directory Dial Number (DDN) PRESS TALK KEY and cannot be formatted.

REPT

UNKNOWN

NUMBER

READY Indicates the handset is registered and available for use. Repeat call message. Indicates that a new call from the same number was received more than once

Indicates the call is being transferred from one handset to TRANSFERRING UNABLE TO DIAL Indicates the CID or memory contents cannot be dialed. **UNABLE TO STORE** Indicates the CID or memory contents cannot be stored.

> Indicates the handset is out of range. Or an additional handset is in use Or there has been a base power failure, in which case you must place all handsets on the main base cradle for 20 seconds to re-register.

The incoming call is from an area not serviced by Caller ID or NAME/CALLER caller information is not sent.

Answering System Display Messages

Indicates the total number of messages

The following messages show the status of the answerin system or help you set up and use the system.

CL (blinking) The voice time/day stamp needs to be set. Answering system is turned off. An (blinking) The system is answering a call and

recording an incoming call. F (blinking) Answering system memory is full.

Six bars The system is recording a memo or an (blinkina) announcement LA (Line Access) Answering system is being accessed

remotely from another location. **Handset Sound Signals**

Meaning Sianals an incomina call A long warbling tone (with ringer on) Three short beeps (several times) Paae sianal One long tone Confirmation tone Two short beeps Error tone One beep every 7 seconds Low battery warning

Troubleshooting Tips Caller ID Solutions

Ó-59

- Fully charge (for 16 hours) or replace the battery.
- If you are using AC (electrical) power, make sure that the unit is connected to a non-switched electrical outlet. Unplug the AC power converter from the unit and
- An extension phone may have been lifted as a message is received • To see Caller ID information in your display, you must be subscribed to Caller ID service through your local telephone company.
- The unit displays this message if it detects anything other than valid Caller ID information during the silent period after the first ring. This message indicates the presence of noise on the line

Telephone Solutions Handset can not link

seconds to re-registe

 Check or repeat installation steps • Make sure the base power cord is connected to a working electrical outlet.

• If any handsets become inoperable place it on the main base cradle for 20

• Make sure the telephone line cord is connected to the base unit and the modular phone jack? • Disconnect the base from the wall phone jack and connect another phone to the

same jack. If there is no dial tone on the second phone, the problem might be your

- wiring or local service. • The handset might be out of range of the base. Move closer to the base.
- Make sure the battery is properly charged (for 16 hours).
- Ensure the battery pack is installed correctly • Did the handset beep when you pressed the TALK/CALL BACK button? Did the in

use indicator come on? The battery may need to be charged

• Make sure the ringer is set to ON, this can be done through the handset setup

• You may have too many extension phones on your line. Try unplugging some phones.

See solutions for "No dial tone."

- ou experience static, noise, or fading in and out Change channels
- The handset may be out of range. Move closer to the base. Relocate the base

menu Ringer Volume.

- Charge the battery.
- Make sure base is not plugged into an electrical outlet with another household appliance

- Place handset in base cradle for 20 seconds to reset the security code. If that doesn't work, charge the battery for 16 hours.
- See solutions for "No dial tone."
- Replace the battery

Download from Www.Somanuals.com, All Manuals Search And Download

Out of range

Move closer to the base

Phone with tone service dials out in pulse mode

Make sure phone is in tone dialing mode.

Make sure phone is in pulse dialing mode

Answering System Solutions

• Place the handset on the main base for re-register.

Answering system memory may be full. Erase some messages.

· Answering system memory is full. Erase some messages

• You may have accidently pressed the PLAY/STOP button during playback and

• Heating ducts and other metal construction can shield radio signals.

• Base is installed in the basement or lower floor of the house.

• Base is plugged into an AC outlet with other electronic devices.

To keep your telephone working and looking good, follow these guidelines:

electrical noise (for example, motors or fluorescent lamps).

• Avoid dropping and other rough treatment to the phone.

• Avoid putting the phone near heating appliances and devices that generate

Never use a strong cleaning agent or abrasive powder because this will damage

• Retain the original packaging in case you need to ship the phone at a later date.

You're too close to appliances such as microwaves, stoves, computers, etc.

You must use a tone-dial phone. This phone does not support pulse (rotary) dialing

Phone won't dial out with pulse service

• An additional handset is in use.

Make sure answering system is turned on

Incoming messages are incomplete

Won't respond to remote command:

• Make sure to enter the correct security code.

Causes of Poor Reception

Atmospheric conditions, such as strong storms

• Baby monitor is using the same frequency.

DO NOT expose to direct sunlight or moisture

Handset displays UNAVAILABL

Move closer to the base

Can't hear messages, beep, etc.

Time/Day setting is incorrect

Adjust speaker volume

• Set the time clock.

Answers on 10th ring

stopped the message

Aluminum sidina

Foil backing on insulation.

• Handset battery is low.

• Clean with a soft cloth.

• You're out of range of the base.

General Product Care

- Warranty Assistance If trouble is experienced with this equipment, for warranty information, please
- Make sure you follow the proper dialing sequence.

• Make sure you correctly program the memory location keys.

• Reset the battery. Unplug the battery and plug it in again after five seconds.

• Reset the power supply. Unplug the supply and plug it in again after five seconds.

- the telephone network, the telephone company may require that you disconnect the • You may need to reprogram numbers into memory after a power outage or equipment until the problem is resolved. battery replacement Any unauthorized repairs, changes or modifications not expressly approved by
 - Thomson Inc. could void the user's authority to operate this product. For instructions on how to obtain a replacement unit, refer to the warranty included in this guide or call customer service at **1-800-448-0329**.

Or refer inquiries to:

Thomson Inc.

Manager, Consumer Relations P O Box 1976

Indianapolis, IN 46206 Attach your sales receipt to this booklet for future reference or jot down the date this product was purchased or received as a gift. This information will be valuable if service should be required during the warranty period.

contact customer service at 1-800-448-0329. If the equipment is causing harm to

Purchase Date _____ Name of Store

Limited Warranty What your warranty covers:

 Defects in materials or workmanship For how long after your purchase:

One year, from date of purchase

(The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.)

• Provide you with a new unit. The exchange unit is under warranty for the remainder of the original product's warranty period.

What we will do:

- How you get service: • Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- "Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period, must be presented to obtain warranty service." For rental firms, proof of first rental is also required. Also print vour name and address and a description of the defect. Send via standard UPS or
- its equivalent to: • Did unit hang up? If you take no action for a period of time, it automatically hangs up. Thomson Inc.
 - 11721 B Alameda Ave Socorro, Texas 79927
 - Insure your shipment for loss or damage. Thomson Inc. accepts no liability in case of damage or loss.
 - A new unit will be shipped to you freight prepaid.
 - What your warranty does not cove
 - Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. Any additional information, should be obtained from your dealer.
 - Installation and setup service adjustments.

 - Damage from misuse or neglect
 - Products which have been modified or incorporated into other products. Products purchased or serviced outside the USA

• Acts of nature, such as but not limited to lightning damage.

Product Registration:

• Please complete and mail the Product Registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

Limitation of Warranty: THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS.

PRODUCT ALL OTHER WARRANTIES EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON INC., ITS AGENTS, OR EMPLOYEES SHALL CREATE A GUARANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY

Accessory Information

Handset Replacement Battery	5-2729 (Ni-CD)	5-2522 (Ni-MH)
	GRAY	BLACK
Power Adaptor	5-2836	5-2760
Optional/Additional Handset Cradle	5-2751	5-2752

toll-free 1-800-338-0376. A shipping and handling fee will be charged upon ordering. We are required by law to collect appropriate sales tax for each individual state, country, and locality to which the merchandise is being sent Items are subject to availability. Prices are subject to change without notice.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSFOLIENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED NARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA EXCEPT O THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTARII ITV OR FITNESS FOR A PARTICUL AR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

How state law relates to this warranty:

- Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations or exclusions may not apply to you.
- that vary from state to state

CALL BACK button is pressed on one handset while another handset is in use, UNAVAILABLE shows on the display.



Handset battery pack



Installing the Handset Battery

CAUTION: To reduce the risk of fire or personal injury, use only


and are separate from the handset.

3. Plug the battery pack cord into the jack inside the compartment.

and can be inserted only one way.

5. Close the battery compartment by pushing the door up until it snaps into place.

1. Plug the AC power converter of the extra charging cradle into the electrical outlet.

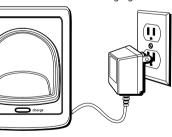

2. Place the handset in the extra charging cradle. The charge indicator turns on,

Registration


NOTE: PUT IN MAINBASE shows on the display if the handset has

seconds to re-register


• This warranty does not apply. Contact your dealer for warranty information.

IMPORTANT: You can only use one handset at a time and there is

NO conference and intercom features for these units. If the TALK/

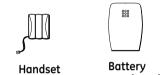



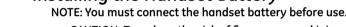

1. Locate battery and battery door which are packaged together inside a plastic bag


2. Locate the battery compartment on the back of the handset.

NOTE: To ensure proper battery installation, the connector is keyed

4. Insert the battery pack.

6. Place the handset in the base to charge.

Extra Charaina Cradle

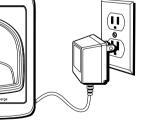

verifying the battery is charging.

YOU MUST REGISTER THE HANDSET TO THE MAIN BASE BEFORE USE!

not been registered. Once a handset has completed registration successfully, READY will show on the handset's display.

UNAVAILABLE when the TALK/CALL BACK button is pressed. You must then place all handsets on the main base cradle for 20

3. Allow the phone to charge for 16 hours.

After the optional handset has charged for 16 hours on the extra charger, place it on the nain base station for 20 seconds, it will then automatically register

NOTE: In case of a power failure, the handsets may display

• This warranty gives you specific legal rights, and you also may have other rights

If you purchased your product outside the USA:

Instructions For Additional Handset(s)

Parts Checklist





Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com