

2-9735





# Cordless Speakerphone User's Guide



# TABLE OF CONTENTS

SECTION	PAGE	SECTION	PAGE
<b>INTRODUCTION</b> .....	3	<b>TELEPHONE MEMORY OPERATION</b> .....	20
A. Parts Checklist .....	3	A. Store a Number into Memory .....	20
B. Cordless Telephone Characteristics .....	4	B. Changing a Stored Number .....	21
C. Setting the Security System .....	4	C. Storing from Redial .....	21
<b>CONTROLS and FEATURES</b> .....	5	D. Pause Function .....	21
A. Cordless Handset Features .....	5	E. Chain Dial from Memory .....	21
B. Telephone Features .....	5	<b>PRODUCT CARE</b>	
C. Base Unit Controls .....	6-7	A. Battery Replacement .....	22
D. Cordless Handset Controls .....	8-9	B. Antenna Replacement .....	23
<b>INSTALLATION</b> .....	10	C. General Product Care .....	23
A. Telephone Outlet Requirements .....	10	<b>IN CASE OF DIFFICULTY</b>	
B. Installation for Desk or Table Top Use .....	10-11	A. Troubleshooting Chart .....	24
C. Wall Mounting the Base Unit (optional) .....	12-13	<b>ACCESSORY ORDER FORM</b> .....	25-26
D. Charging the Battery Pack .....	14	<b>SERVICE</b> .....	27
<b>TELEPHONE OPERATION</b> .....	15	<b>WARRANTY</b> .....	27
A. Making and Receiving Calls Base Unit .....	15	<b>FCC REGISTRATION INFORMATION</b> .....	BACK COVER
B. Making and Receiving Calls Cordless Handset .....	15	<b>RADIO INTERFERENCE</b> .....	BACK COVER
C. Auto Standby .....	16	<b>HEARING AID COMPATIBILITY</b> .....	BACK COVER
D. Automatic Redial .....	16		
E. Fast Redial .....	16		
F. Hold .....	16		
G. Changing Channels .....	17		
H. Temporary Tone Feature .....	17		
I. Page .....	18		
J. Intercom .....	18		
K. Flash .....	19		
L. Distinctive Ring .....	19		
M. Tone Signals .....	19		

**WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.**

	<p><b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN</p>	
<p>THE LIGHTNING FLASH AND ARROWHEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.</p>	<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	<p>THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.</p>
SEE MARKING ON BOTTOM / BACK OF PRODUCT		

## INTRODUCTION

 
Thank you for purchasing a GE Communications Product. Your new telephone is a carefully engineered, high-quality, durable product with natural sound quality, modern features and elegant styling. It is designed to give you the quality and convenience you expect in a telephone.

To familiarize yourself with all the features of your telephone, please read the following instructions carefully. Retain this Guide for future reference.


FCC NUMBER IS LOCATED ON THE BOTTOM OF THE BASE  
REN NUMBER IS LOCATED ON THE BOTTOM OF BASE  
OTHER IMPORTANT INFORMATION ON BACK COVER OF THIS GUIDE

Carefully remove unit from the package. Check this list to be certain all components are included. Remember to save your sales receipt in case you ever need warranty service.

### A. Parts Check List



HANDSET

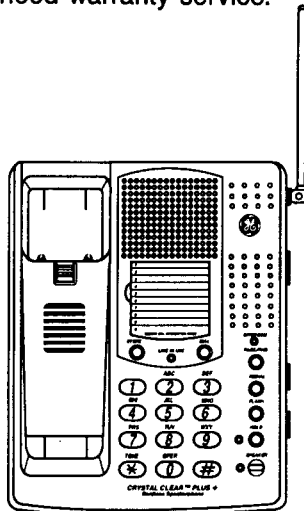 

BASE UNIT WITH BUILT-IN  
SPEAKERPHONE AND  
POWER SUPPLY CORD



TELEPHONE  
LINE CORD

## INTRODUCTION

---

- A cordless telephone offers convenience, ease and mobility during telephone communications. Its use, however, is dependent upon the availability of AC power. Any interruption of electrical power at your location would prevent your placing or receiving calls. Therefore, a cordless telephone **should not** be installed as the only phone in your home.
- “Full Power” means that your telephone is designed to operate at the maximum power allowed by the Federal Communications Commission (FCC).
- The range at which you can use the cordless Handset away from the Base is dependent upon many factors. The telephone Base is like a radio transmitter in that it transmits telephone line signals via radio waves to the Handset. Therefore, the location of the Base is important in order to obtain maximum Handset range for the power allowed.

In some areas, installing the Base on the second floor will provide greater range than a ground floor installation. Reception can be adversely affected by such things as aluminum siding, appliances (refrigerators, stove, etc.), insulation foil backing, heating ducts and other metal construction which acts to shield radio signals.

Atmospheric conditions also play an important role in the performance of your cordless telephone.

- **Always keep the Base antenna raised.**
- Above all, **keep within the range of the Base.**

## B. Cordless Telephone Characteristics

---

Whenever you place the handset on the base unit, the unit automatically selects a security code. This code helps to avoid unauthorized use of your telephone line by another cordless telephone in your area.

**Note:** Whenever a power outage occurs, or batteries are replaced, the **HANDSET** may have to be returned to the **BASE** to reset Security code.

## C. Setting the Security System

## CONTROLS and FEATURES

 
 
- **Crystal Clear™ Noise Reduction Circuitry** – extends the effective range of your cordless telephone and virtually eliminates static and interference.
- **25 Channel Auto Scan** automatically selects a channel most likely to be clear.
- **10 Number Memory Access**
- Convenient push button **Channel Advance**
- **2-Way Page and Intercom:** Use your telephone as an intercom or paging system
- **Auto Standby**
- **Digital Security System** prevents unauthorized communication from other cordless telephones
- **Temporary Tone** allows pulse (rotary) service users to easily access tone services
- **Fast Redial** - just push redial while on-line to redial a number
- **Ringer On/Off**
- **Display Lights** for: – Phone, – Intercom, – Charge
- **Out of Range Warning** tone alerts user that they're too far from base unit
- **Flash** to Activate Custom calling services
- High Performance **Handset Antenna**
- **Memory Index**
- **Hearing Aid Compatible**
- **Consumer Replaceable Battery and Antenna**

### A. Cordless Handset Features

- **Speakerphone** allows for hands-free use anywhere in the room
- **Volume Control** adjusts speakerphone level
- **10 Number Memory** for frequently used numbers
- **2-Way Page and Intercom** use your telephone as an intercom or a paging system
- **Electronic Hold**
- **Tone Pulse Switch** for use with touch tone or pulse dialing services
- **Electronic Memory Back-Up** saves stored memory numbers during power interruptions
- **Temporary Tone** allows pulse (rotary) service users to easily access tone services
- **Flash** to activate custom calling services
- **Ringer Hi/Lo/Off**
- **Fast Redial** – just push redial while on-line to redial a number
- **Display Lights** for: — Line-in-Use, — Intercom, — Hold, — Speakerphone
- **Memory Index**
- **Desk or Wall Mount**
- **FCC Registered**
- **UL Listed**
- **One-Year Limited Warranty**

### B. Telephone Features


# CONTROLS and FEATURES

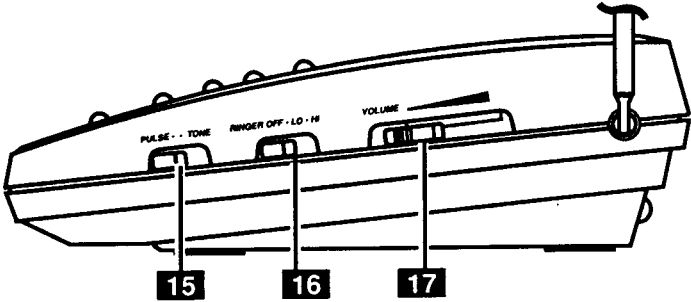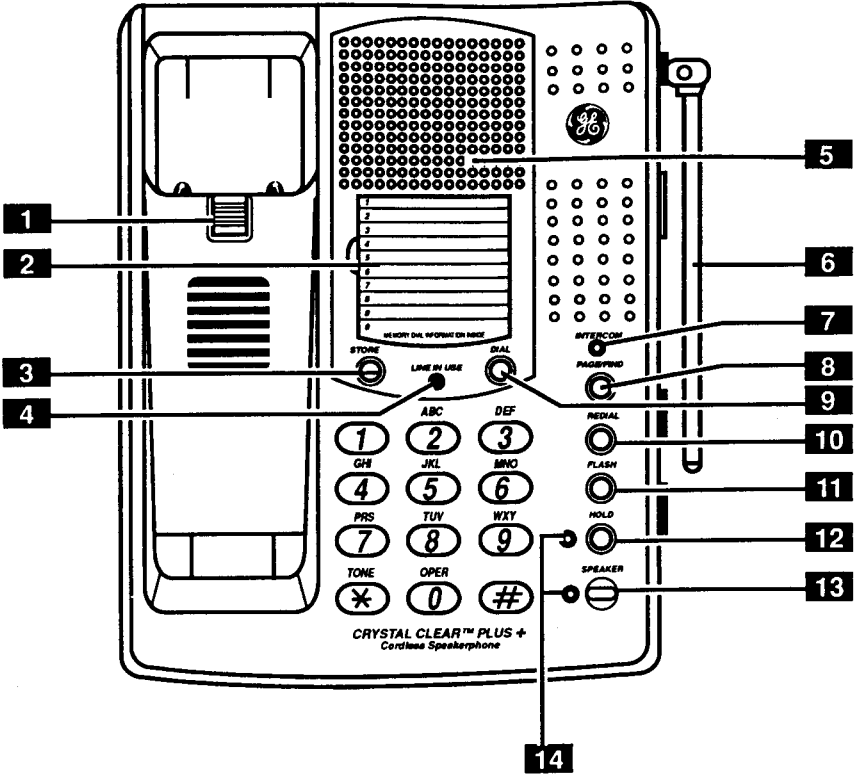

### C. Base Unit Controls

1. **HANDSET HOOK** — Adjustable hook holds Handset to the Base unit when wall mounted.
2. **MEMORY LOG**
3. **STORE BUTTON** — Stores phone number in a memory location
4. **LINE-IN-USE LIGHT** — Lights when the telephone line is in use.
5. **SPEAKER**
6. **HIGH PERFORMANCE BASE ANTENNA**
7. **INTERCOM LIGHT** — When lit, Intercom is "ON".
8. **PAGE/FIND BUTTON** — Pages handset.
9. **DIAL BUTTON** — Used when dialing a number stored in a memory location.
10. **REDIAL BUTTON** — Redials the last number called. Use for normal or fast redial.
11. **FLASH BUTTON** — Activates custom calling services of your local telephone company such as call transfer or call waiting.
12. **HOLD BUTTON** — Puts calling party on "HOLD".
13. **SPEAKER BUTTON** — Activates and deactivates speaker phone.
14. **LIGHTS FOR HOLD FUNCTION AND SPEAKERPHONE FUNCTION**
15. **PULSE/TONE SWITCH** — Sets the dialing mode for either Tone or Pulse (for rotary service).
16. **RINGER HI/LO/OFF SWITCH** — Adjusts the volume of the Ringer (HI, LO, or OFF).
17. **SPEAKER VOLUME CONTROL** — Adjusts the volume of the voice received through the speaker.
 
# CONTROLS and FEATURES

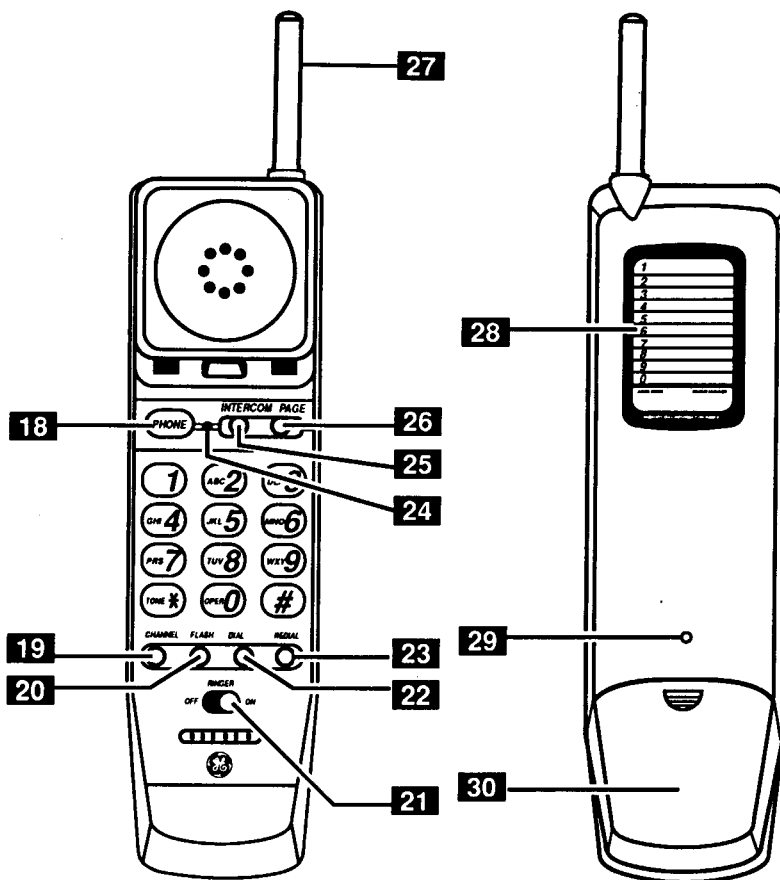



### D. Cordless Handset Controls

18. **PHONE ON/OFF BUTTON**
19. **CHANNEL SELECT BUTTON** — Selects Channel of operation for Handset and Base unit.
20. **FLASH BUTTON**
21. **RINGER ON/OFF SWITCH**
22. **DIAL BUTTON** — Used when dialing a number stored in a memory location.
23. **REDIAL BUTTON** — Redials the last number called. Use for normal or fast redial.
24. **PHONE/INTERCOM LIGHT**
25. **INTERCOM BUTTON**
26. **PAGE BUTTON** — Pages base
27. **HIGH PERFORMANCE HANDSET ANTENNA**
28. **MEMORY LOG**
29. **BATTERY CHARGE LIGHT**
30. **BATTERY COMPARTMENT**

 
## INSTALLATION — DESK or TABLE TOP

A modular (Universal Service Order Code) USOC: RJ11C outlet jack (illustrated) is required.

Installation of this telephone in locations with 4-prong jacks or with hard-wired outlets will require additional Converters (not included). The dealer from whom you purchased your phone or a telephone supply store can advise you regarding the proper Converter.

**Installation Note:** Some cordless telephones operate at frequencies that may cause *interference* to nearby TVs and VCRs; to minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR; and, if interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference.


### A. Telephone Outlet Requirements

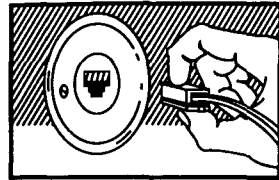

1. Plug *TELEPHONE STRAIGHT CORD* into Modular (RJ11C) wall jack, and into bottom of unit.


**Note:** Mounting bracket must be removed from the back of the telephone base to locate the phone jack.

### B. Installation for Desk or Table Top Use

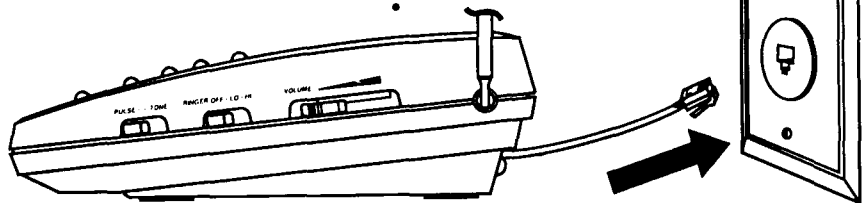 


2. Plug *THE POWER SUPPLY* into an electrical outlet.

 **Note:** **Do not** use an outlet that can be turned on and off by a wall switch. Any interruption in electric power in the base unit will prevent placing or receiving calls from handset or speakerphone.

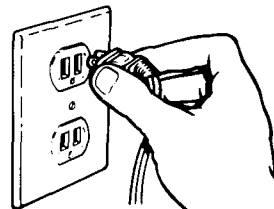


## INSTALLATION — DESK or TABLE TOP

 3. Raise *ANTENNA* on Base.

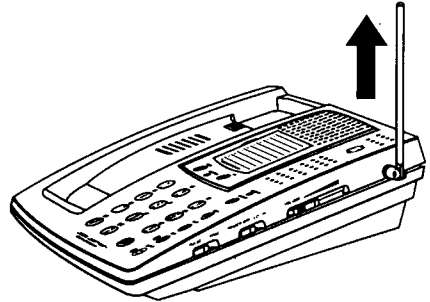

 4. Set *TONE/PULSE* Switch on the Base to the position compatible with your telephone service. (If you're not sure, check with your local telephone company.)

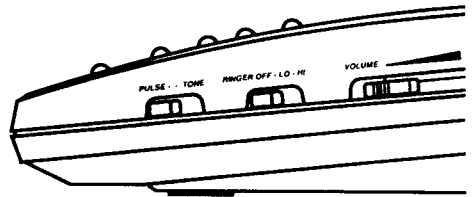


5. **Set the *RINGER* Switch:**  
*HI* = Sound will be loudest.  
*LO* = Sound will be lower.  
*OFF* = Telephone will not ring.

6. Place *HANDSET* in *BASE* to charge battery.

**Notes:** Before initial use of Cordless Handset, battery should be charged for 12 or more hours. See, "Charging the Battery Pack" on the page 14.

 The Ringer switch must be "ON" for the Handset to ring.

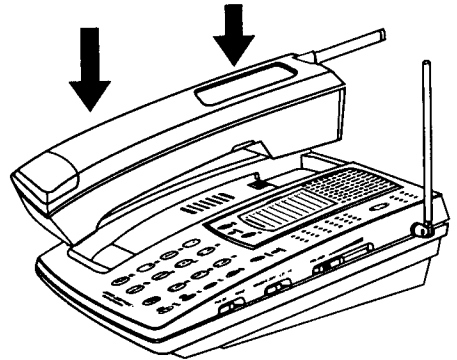


## INSTALLATION — WALL MOUNT (optional)

### 1. **Reverse the Handset Hook**


Firmly slide the *HANDSET HOOK* out of the cradle. Rotate it 180° and slide it back into the cradle.
 
### C. Wall Mounting the Base Unit

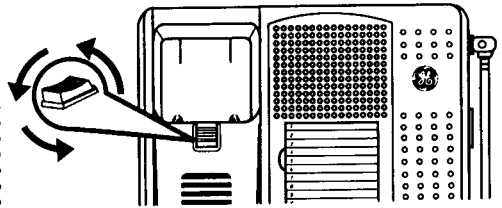

### 2. **Remove the Mounting Bracket**

 
For wall mount installations, press in the two tabs and pull the *MOUNTING BRACKET* from the back of the telephone.

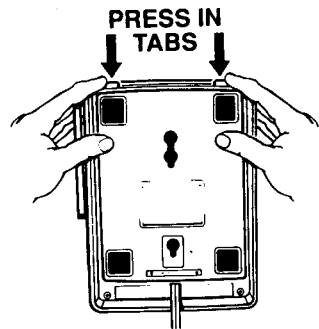


### 3. **Connect the Telephone Line Cord to Base** Plug either end of the *TELEPHONE LINE CORD* into the *PHONE LINE JACK* on the bottom of the telephone.

The Base unit has a Cord Wrap for storage of excess straight line telephone cord and AC power cord. This Cord Wrap is located on the bottom of the Base under the *MOUNTING BRACKET*.

 Wrap excess telephone and *POWER CORD* around pegs as shown in illustration. Leave 3" of *TELEPHONE CORD* unwrapped.

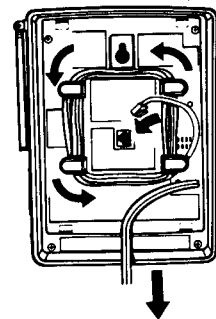

### 4. Reverse the *MOUNTING BRACKET* so the deepest part is at the bottom of the Base. Place modular plug and the 3" of the straight telephone line cord through the opening in the center of the *MOUNTING BRACKET*. Be sure to feed the *AC POWER CORD* through the slot on the bottom of the *MOUNTING BRACKET*.

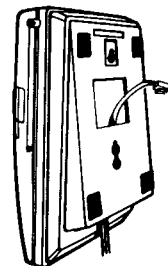 

## INSTALLATION — WALL MOUNT (optional)

- 5. Install the Mounting Bracket so that the Wall Mount Arrows Face Upward**  
Snap the *MOUNTING BRACKET* into the lower set of tab openings in the base of the telephone.

**Note:** Make sure *MOUNTING BRACKET* is positioned as shown to the right.

 
- 6. Connect the telephone line cord to telephone wall jack**

- 7. Mount the Telephone to the Wall Plate**  
Position the telephone against the wall jack plate so that pins of the plate align with key hole slots on the *MOUNTING BRACKET*. Press the telephone against the jack plate so that pins pass through key hole slots in the *MOUNTING BRACKET*. Gently guide the telephone downward to secure the telephone to the jack plate.

**Note:** Be certain that the *AC POWER CORD* and the *TELEPHONE LINE CORD* stay clear of the pins of the wall plate and the keyhole slots on the *MOUNTING BRACKET*.

- 8. Raise the Base Antenna.**  
**Place Handset in Base Unit.**

- 9. Plug in the Power Supply**  
Plug the Power Supply into the AC power outlet.

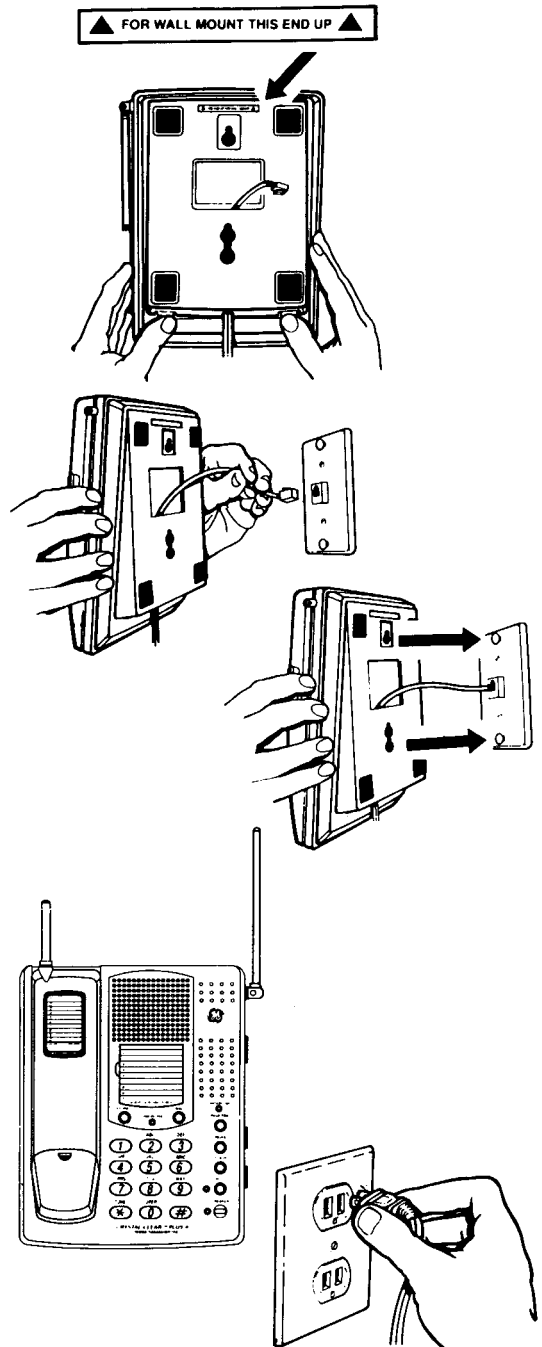

## INSTALLATION

Your GE Cordless Phone comes with a nickel cadmium rechargeable battery pack (located in Handset). It is automatically charged when the Handset is placed in the charging Base Unit. When fully charged, the battery pack provides sufficient power to enable the Handset to be left out of the Base Unit for prolonged periods and still function properly. However, to maintain adequate power, you will need to charge the battery pack every few days by returning the Handset to the Base Unit.

The **BATTERY CONDITION LIGHT** will be on steady when the battery is charging.

 
 
### **To Recharge the Battery**

1. Be sure the **AC LINE CORD** on the Base is plugged into a standard electrical outlet.
2. Place **HANDSET** in the Base Unit.
3. Before initial use, let **charge for 12 hours or more.**

### **IMPORTANT:**

Although you can leave the Handset out of the for extended periods, you will need to **return it to the Base Unit periodically to keep the battery pack charged.** Periodically clean the charging contacts on the Handset and charging Base Unit with a soft cloth.

## D. Charging the Battery Pack.

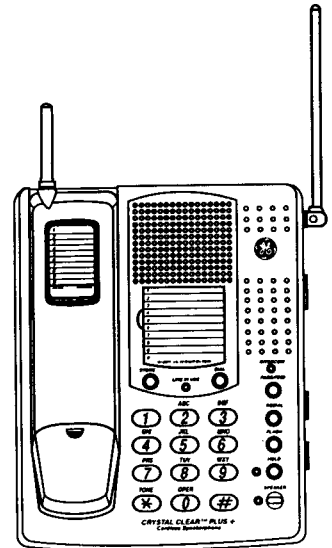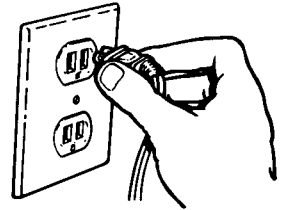


## To Make a Call at Base Unit

1. Press **SPEAKER** button.  
    **SPEAKER** indicator lights.
2. Wait for **DIAL TONE**.
3. **DIAL** phone number.
4. When finished, press **SPEAKER** button again.

## To Receive a Call at Base Unit

1. Press **SPEAKER** button.  
    **SPEAKER** indicator lights.
2. When finished, press **SPEAKER** button again.
 
## A. Making and Receiving Calls Base Unit

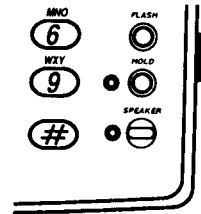

## When the HANDSET is in the CRADLE:

### To Receive a Call

1. Pick up **HANDSET**
2. Press **PHONE** button (phone light will be on).
3. When finished return the **HANDSET** back to the cradle, the phone will be automatically shut off.

### To Make a Call

1. Pick up **HANDSET**.
2. Press **PHONE** button. (phone light will be "ON")
3. Wait for dial tone.
4. Dial telephone number.
5. When finished, press **PHONE** button to hang up or return the handset back to the cradle.

## When the HANDSET is out of the CRADLE:

 
### To Receive a Call

1. Pick-up the **HANDSET**.
2. Press **PHONE** button (phone light will be "ON").
3. When finished, press **PHONE** button to hang up.

### To Make a Call

1. Pick-up the **HANDSET**.
2. Press **PHONE** button (phone light will be "ON").
3. Wait for dial tone.
4. Dial telephone number.
5. When finished, press **PHONE** button to hang up.


## B. Making and Receiving Calls Cordless Handset

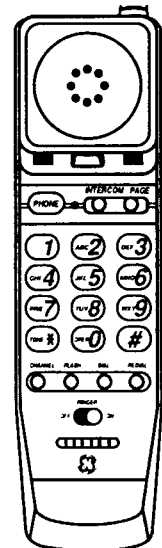

## TELEPHONE OPERATION


You can leave your Cordless Handset with the **Phone** "ON", then place it in the Base. It will automatically hang up.
 
### C. Auto Stand-by



The Handset and Base have **one** Last Number Redial memory. The number will remain in the **REDIAL** memory until another number is dialed.

### D. Automatic Redial

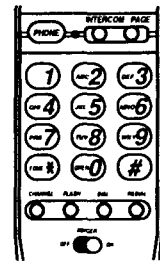 


#### To **REDIAL** from the Handset

1. Pick-up Handset.
2. Press **PHONE** button.
3. Wait for Dial Tone.
4. Press **REDIAL**.

#### To **REDIAL** from the Base

 1. Press **SPEAKER**.
2. Wait for Dial Tone.
3. Press **REDIAL**.

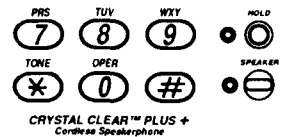

If you want to keep dialing a busy number in rapid succession you can do so with **FAST REDIAL**. When you hear the busy signal, just press the **REDIAL** button. The phone will go off line, on line, then redial the busy number. Press **REDIAL** to try again.

### E. Fast Redial

Enables you to interrupt a conversation temporarily at the **Base** phone and later resume the conversation from this or any other phone on the same line.

#### To place party on **HOLD**

Press **HOLD**.

**HOLD** indicator lights to remind you that your phone is on **HOLD** and **IN USE** indicator will remain on.

 
#### To continue conversation

Pick up any Handset on same line and talk.

The **HOLD** indicator on the Base will go off.

**Note:** You cannot receive any calls on this phone line while the **HOLD** indicator is lit.

### F. Hold

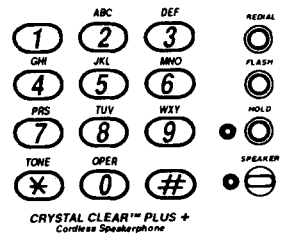



## TELEPHONE OPERATION

Your Cordless Phone allows you to change channels during a conversation should you experience static and/or noise.

 
### To change channels

Press and Release CHANNEL button on Cordless Handset.

Unit will advance to next clear Channel.

**Note:** Phone must be "ON" to change the channels.

## G. Changing Channels

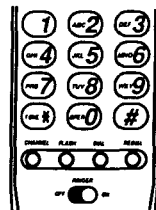



If you have PULSE (rotary) service, you can still access those special services (such as electronic banking, calling cards, telephone answering equipment, etc.) which require tone signals for operation.

Dial the local access number in the normal way. Then, press the "\*" key on either the Base or Handset to activate *TEMPORARY TONE*. Your phone will then generate the required tone signals as you dial the numbers or symbols needed to complete your call.

When finished, hang up. The phone will automatically return to PULSE (rotary) service.

**Note:** The *TEMPORARY TONE* feature is only for use by those who have PULSE (rotary) service. If you have Touch-Tone service, you do not need to use the *TEMPORARY TONE* feature.

## H. Temporary Tone Feature

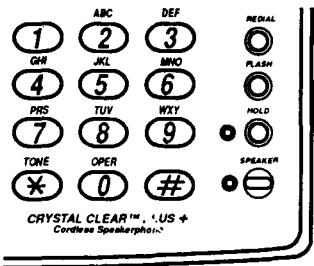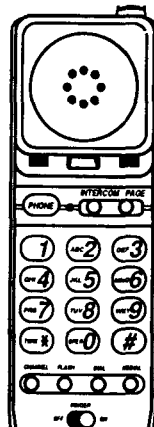  

## TELEPHONE OPERATION

Your Cordless Phone System allows two-way paging. You can signal (Page) the Handset from the Base unit or from Cordless Handset.

### To PAGE Handset from Base

Press **PAGE**.

Each time you press **PAGE** at the Base unit, the Cordless Handsets will sound the **PAGE** signal.

 
### To PAGE Base from Handset

Press **PAGE**.


Each time you press **PAGE** at the Handset, the Base unit will sound the **PAGE** signal.

**Note:** Cordless Handset's Ringer switch must be in "ON" position to receive **PAGE** signal.

## I. Page



(Base)

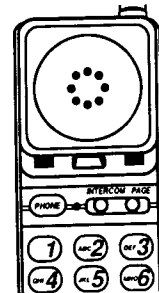 

(Handset)

## J. Intercom

The Intercom Feature of your Cordless Phone allows you to have a two-way conversation between the Cordless Handset and the Base Unit without tying up the telephone line. Since the telephone line is not being used, you can still receive incoming calls.

This feature is handy as a means of responding to a Page from the Base unit.

Intercom is activated and deactivated by using the **INTERCOM** button located on the Cordless Handset.

### To activate **INTERCOM** at **CORDLESS HANDSET**

 
1. Press **INTERCOM** button on Handset.  
Intercom light flashes.  
Intercom is now "ON".
2. Speak into Handset Mic.
3. When finished press **INTERCOM** button.

### To answer a call while in **INTERCOM**

Press **PHONE** button on Cordless Handset.

This ends **INTERCOM** conversation and answers the incoming calls.

**Note:** Handset must be within range of the Base unit in order for **INTERCOM** to function.

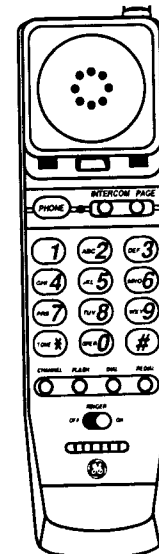


This button is used to activate customer calling services available through your local phone company, such as Call Transfer and Call Waiting, etc. These services generally require an extra monthly fee. If you subscribe to any of these services, please refer to the phone company's instructions on how to use *Flash*.

**Notes:** Do not use the *PHONE* button to try to access calling services because you will hang-up the phone.

Do not use the *FLASH* button to hang-up phone.

### K. Flash

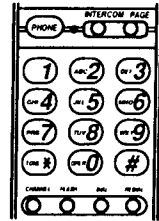 

The Base Unit and the Cordless Handset are capable of receiving the distinctive ringing patterns generated through your local telephone company as a special service. This custom calling service is available only through your local telephone company.

### L. Distinctive Ring

#### **CORDLESS HANDSET**

**A long warbling tone with *RINGER* "ON":** — Signals an incoming call.

**3 long beeps with *RINGER* "ON":** — A *PAGE* signal.

**3 Short beeps from *HANDSET*** — Out of range warning.

### M. Tone Signals

## TELEPHONE MEMORY OPERATION

Your Phone System can store up to ten (10) telephone numbers of up to 24 digits long that can be dialed automatically by both the Base Keypad and the Cordless Handset.

Memory Storage must be programmed with the phone "ON".

**Note:** Storing of the telephone numbers can be done *ONLY* at the Base unit.

### STORING MEMORY

1. Press *SPEAKER* button.
2. Press the *STORE* button on the Base.
3. Dial the number to be stored.
4. Press the *STORE* button.
5. Press a numbered key (0-9. . . Memory Location) on the Base.
6. Press *SPEAKER* button again.
7. Make note of stored number in corresponding location on Memory Directory Card (on back of handset and Base unit).

### CAUTION

#### WHEN MAKING TEST CALLS TO EMERGENCY NUMBERS:

1. Remain on the line and briefly explain to the dispatcher the reason for the call before hanging up.
2. Perform such activities in the off-peak hours, such as early morning hours or late evening.

 
 
### MEMORY DIALING FROM THE BASE

1. Press *SPEAKER* button.
2. Press *DIAL* button.
3. Press the number for the Memory Location.

### MEMORY DIALING FROM THE CORDLESS HANDSET

1. Press *PHONE* button.
2. Press *DIAL* button.
3. Press the number for the Memory Location on the Handset keypad.

### A. Store a Number in Memory

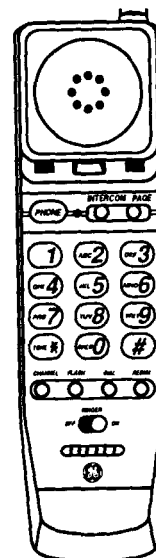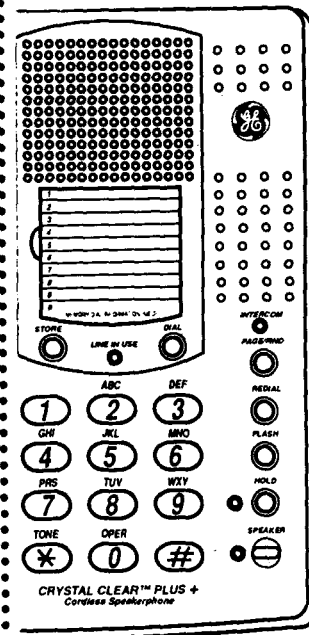

# TELEPHONE MEMORY OPERATION

1. Press *SPEAKER* button.
2. Press *STORE* button.
3. Dial new telephone number.
4. Press *STORE* button again.
5. Press *MEMORY LOCATION* on the handset keypad.
6. Press *SPEAKER* button.

## B. Changing a Stored number

You can easily store into *MEMORY* the last phone number dialed on your Base unit.

1. Press *SPEAKER* button.
2. Press *STORE* button.
3. Press *REDIAL*.
4. Press *STORE* button again..
5. Press *MEMORY LOCATION* on the keypad.
6. Press *SPEAKER* button.

## C. Storing from Redial

Used for storing a momentary delay in the dialing sequence of a **stored** telephone number. This is generally used when a "PAUSE" is needed to wait for a dial tone (e.g. after dialing 9 for an outside line) or a computer tone (e.g. for some long distance services).

At point where pause is required. . . press *DIAL*.

**Note:** Pause can only be used at the Base Unit when storing numbers into memory.

## D. Pause Function

This feature allows you to dial in succession a chain of numbers in different memory locations. This is useful when you must dial more than one number in memory to complete a call, such as with frequent calls via an independent service (e.g. MCI or Sprint).

### **Example:**

### **Memory Location**

 
Local Access Number of Long  
distance company, and 2 or 3  
pauses at end, press .....7  
Authorization Code (ID), press .....8  
Long distance phone number, press .....9

### **To initiate Chain Dialing**

1. Press *DIAL*.
2. Press 7, then wait for the access tone.
3. Press *DIAL*.
4. Press 8, then wait for the access tone.
5. Press *DIAL*.
6. Press 9.

**Note:** When dialing other phone numbers please wait for the dialing to end. For example, press *DIAL*, press 7 (wait for dialing to end) press *DIAL*, press 8 etc.

## E. Chain Dial from Memory

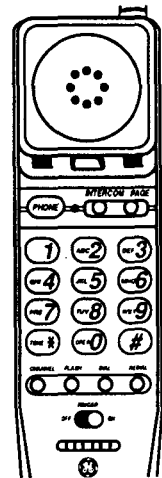

## PRODUCT CARE

A Rechargeable Nickel Cadmium battery pack is installed in each Cordless Handset to provide power for operation.

 
### To Replace Battery

1. Make sure the *PHONE LIGHT* on the *HANDSET* is "OFF".
2. Open *BATTERY COMPARTMENT* on back of *HANDSET* by gently sliding down door.
3. Remove *SCREW* from battery holder. Remove *HOLDER*.
4. Slide *BATTERY PLUG* down and out of plug clip. (Do not pull on the wires.)
5. Lift *BATTERY PACK* out.
6. Properly dispose of Battery Pack.
7. Plug in replacement Battery Pack (GE Cat. BT-12).
8. Replace *BATTERY HOLDER* and screw to secure.
9. Replace *BATTERY COMPARTMENT* Cover.
10. Charge the *HANDSET* in the *BASE* for 12 or more hours before use.

### Battery Safety Precautions





For your safety, please follow these simple precautions:

- Do not recharge, disassemble, mutilate, puncture, wet or dispose of Battery in fire. Like other batteries of this type, if it is burned or punctured, it could release toxic material which could cause injury.
- Keep Battery out of reach of children.
- Replace only with GE Cat. BT-12. Accessory Order Form included in this guide.

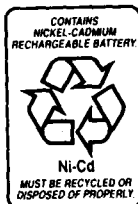

**NOTE:** Numerous states have enacted legislation regarding proper disposal of rechargeable batteries. This product contains a nickel-cadmium rechargeable battery and must be recycled or disposed of properly. Check your Federal, State or Local regulations regarding recycling or disposal.


### A. Battery Replacement

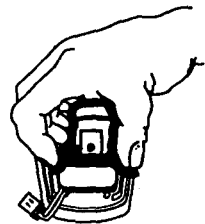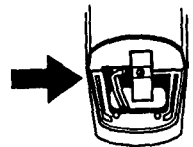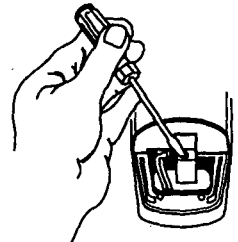    

## PRODUCT CARE

The handset antenna of your GE Cordless Phone is designed for easy replacement in the event it is damaged.

 1. Turn the *BASE* of the antenna counterclockwise.  
Antenna will come loose.
2. Lift out.
3. Insert *RUBBER REPLACEMENT ANTENNA* (GE Cat. #5-4050) and screw into place.

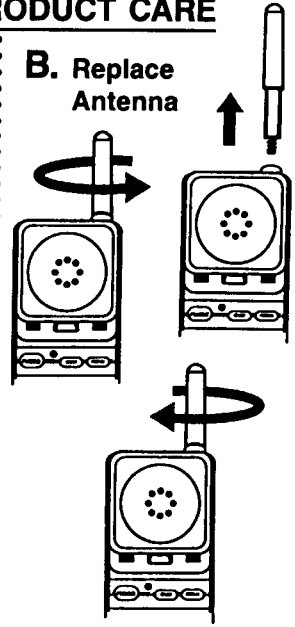

To keep your telephone working and looking good, follow these few simple rules

- Avoid putting telephone near heating appliances or other high temperature sources.
- Try to avoid placing telephone near devices that generate electrical noise. (i.e., motors, fluorescent lamps.)
- Telephone should not be exposed to direct sunlight or moisture.
- Avoid dropping the Handset as well as other rough treatment to the phone.
- Clean telephone with a soft cloth. (Remember to first unplug phone from wall outlet.)
- Never use a strong cleaning agent or abrasive powder, as this will damage the finish.
- Retain the original packaging, should you need to ship the phone at a later date.
- Periodically clean the charge contacts on Handset and Cradle with a soft cloth.

## C. General Product Care



## IN CASE OF DIFFICULTY

In case of difficulty, check the following before seeking service.

### A. TROUBLE CHECKS

PROBLEM	SOLUTION
No Dial Tone	<ol style="list-style-type: none"><li><b>Check Installation</b><ul style="list-style-type: none"><li>— Is <i>BASE POWER CORD</i> connected to a working outlet?</li><li>— Is <i>CHARGING LIGHT</i> lit on <i>HANDSET</i>?</li><li>— Do not use an outlet that can be turned ON and OFF by a wall switch.</li><li>— Is <i>TELEPHONE LINE CORD</i> connected firmly to the base unit and phone outlet?</li><li>— Is <i>BASE ANTENNA</i> raised?</li></ul></li><li>Is <i>CORDLESS HANDSET</i> out of range of the base?</li><li>Make sure <i>BATTERIES</i> are properly charged (12 Hours).</li><li>Is the <i>BATTERY PACK</i> installed correctly (see page 20)?</li><li>Did the <i>CORDLESS HANDSET</i> beep when you pressed the phone button? Did the phone light come on? If not, your cordless may need to be charged.</li><li>Disconnect <i>CORDLESS PHONE</i> and connect another phone to the same jack. If no dial tone, then the problem may be in your wiring or local service.</li><li>Whenever a power outage occurs, or batteries are replaced, the <i>HANDSET</i> must be returned to the <i>BASE</i>.</li></ol>
Dial Tone but can't dial out	<ol style="list-style-type: none"><li>If you have pulse service on your line, your <i>TONE/PULSE</i> Switch on the Base must be set on Pulse.</li></ol>
Handset does not ring	<ol style="list-style-type: none"><li>Make sure <i>RINGER</i> Switch on Handset is "ON".</li><li>Do you have too many extension phones on your telephone line? Try unplugging some other phones.</li><li>Perform checks 1,2,3,4,5,6 and 7 above.</li></ol>
You experience static, noise, or fading in and out	<ol style="list-style-type: none"><li>Is <i>BASE ANTENNA</i> raised?</li><li>Is <i>HANDSET</i> out of range from the <i>BASE</i>? Move closer to <i>BASE</i>.</li><li>Does the <i>BASE</i> need to be relocated?</li><li>Is <i>CORDLESS BASE</i> plugged into an outlet with household appliances? If so move the appliance or telephone.</li><li>Check installation per 1 above. (See 7 above)</li></ol>
Unit beeps.	<ol style="list-style-type: none"><li>Charge <i>BATTERY</i> for 12 hours.</li><li>Clean charging contacts on <i>HANDSET</i> and <i>CRADLE</i> with a soft cloth.</li><li>Check installation per 1 above.</li><li>Replace <i>BATTERY</i>.</li></ol>
Memory Dialing Problems	<ol style="list-style-type: none"><li>Did you program the memory correctly (see page 18)?</li><li>Did you follow proper dialing sequence (see page 18)?</li><li>See 8 above.</li><li>Did you reprogram numbers into memory after power outage or after replacement of battery? (See Page 20)</li></ol>



*To fulfill your communicating needs and enhance your lifestyle, a wide range of GE extension phones, main phones, cordless phones and answering systems is available.*


 
*Just stop by your nearest retailer and ask to see the wide range of GE telephone products.*

*All are carefully engineered to offer you high quality and dependability, modern easy-to-use features, and elegant styling at an affordable price.*

*Should you wish to purchase, insist on the GE brand for all your communicating needs.*



# ACCESSORY ORDER FORM

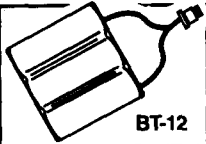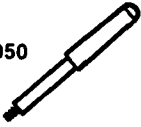CATALOG NUMBER	DESCRIPTION	*PRICE EACH	QUANTITY	TOTAL
 BT-12	NICKEL CADMIUM BATTERY PACK	\$14.95		
 5-4050	RUBBER HANDSET ANTENNA	\$10.95		

**For credit card purchases**

Your complete charge card number, its expiration date and your signature are necessary to process all charge card orders.

Copy your complete account number from your VISA card.

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

My card expires: 

--	--	--	--

Copy your complete account number from your MasterCard.

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

Copy the number above your name on the MasterCard 

--	--	--	--

My card expires: 

--	--	--	--

\_\_\_\_\_  
Authorized Signature

\*Prices are subject to change without notice.

Total Merchandise . . . . . \$ \_\_\_\_\_

Sales Tax . . . . . \$ \_\_\_\_\_

We are required by law to collect the appropriate sales tax for each individual state, county, and locality to which the merchandise is being sent.

Shipping, Handling, and Insurance . . . . . \$ 5.00

Total Amount Enclosed . . . . . \$ \_\_\_\_\_

Use VISA or MasterCard preferably. Money order or check must be in U.S. currency only. No COD or CASH.

All accessories are subject to availability. Where applicable, we will ship a superseding model.

\*Prices are subject to change without notice.

Mail order form and money order or check (in U.S. currency) made payable to Thomson Consumer Electronics, Inc. to:

**Consumer Electronics  
Mail Order Department  
P.O. Box 8419  
Ronks, PA 17573-8419**

This is your return label. Please print clearly.

To: \_\_\_\_\_

Name \_\_\_\_\_

Address \_\_\_\_\_ Apt. \_\_\_\_\_

City \_\_\_\_\_ State \_\_\_\_\_ ZIP \_\_\_\_\_

Please make sure that this form has been filled out completely.

CUSTOMER: CUT ALONG DOTTED LINE. 

**What does your warranty cover?**

- Any defect in material or workmanship.

**For how long after the original purchase?**

- One year.
- The warranty for rental units begins with the first rental.

**What will we do?**

- Provide you with a new, or at our option, a reconditioned unit.
- The exchange unit is warranted for the remainder of your product's original one-year warranty period.

**How do you make a warranty claim?**

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- Include in the package a copy of the sales receipt or other evidence of date of original purchase. If the unit was a gift, provide a statement specifying the date received. Also print your name and address and a description of the defect.
- Ship the unit standard UPS or equivalent to:  
Thomson Consumer Electronics, Inc.  
Product Exchange Center  
32 Spur Drive  
El Paso, Texas 79906
- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- A new or reconditioned unit will be shipped to you prepaid freight.

**What does your warranty not cover?**

- Customer instruction. Your Owner's Manual provides information regarding operating instructions and user controls. For additional information, ask your dealer.
- Installation and set-up service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Product purchased or serviced outside the USA.

**How does state law relate to this warranty?**

- This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**What if you purchased your unit in Canada?**

- Refer to the Canadian Warranty.

---

For products purchased outside the United States and Canada, see dealer for warranty.

---

Thomson Consumer Electronics, Inc.

**SERVICE**

FCC requires this product be serviced only by the manufacturer or its authorized service agents. In accordance with FCC requirements, changes or modifications not expressly approved by Thomson Consumer Electronics could void the user's authority to operate this product. For instructions on how to obtain service, refer to the warranty included in this Guide or call customer service, telephone number: 800-448-0329.

Attach your sales receipt to the booklet for future reference or jot down the date this product was purchased or received as a gift. This information will be valuable if service should be required during the warranty period.

Purchase date \_\_\_\_\_ Name of store \_\_\_\_\_

# FCC REGISTRATION INFORMATION

Your GE telephone equipment is registered with the Federal Communications Commission and is in compliance with parts 15 and 68, FCC Rules and Regulations.

## 1. **Notification to the Local Telephone Company**

On the bottom of this equipment is a label indicating among other information, the FCC Registration number and Ringer Equivalence Number (REN) for the equipment. You must, upon request, provide this information to your telephone company.

The REN is useful to determine the number of devices you may connect to your telephone line and still have all these devices ring when your telephone number is called. In most (but not all) areas, the sum of the REN's of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company.

**NOTES:** This equipment may not be used on coin service provided by the telephone company.

Party lines are subject to state tariffs, and therefore, you may not be able to use your own telephone equipment if you are on a party line. Check with your local telephone company.

Notice must be given to the telephone company upon permanent disconnection of your telephone from your line.

## 2. **Rights of the Telephone Company.**

Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately. In case of such temporary discontinuance, the telephone company must: (1) promptly notify you of such temporary discontinuance, (2) afford you the opportunity to correct the situation and (3) inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and Regulations.

The telephone company may make changes in its communications facilities, equipment, operations of procedures where such action is required in the operation of its business and not inconsistent with FCC Rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain uninterrupted service.

# INTERFERENCE INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is "receiving" the interference).
- Reorient or relocate and increase the separation between the telecommunications equipment and receiving antenna.
- Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.
- Consult the dealer or an experienced radio/TV technician for help.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio/TV Interference Problems". This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402. Please specify stock number 004-000-00345-4 when ordering copies.

# HEARING AID COMPATIBILITY

This telephone system meets FCC standards for Hearing Aid Compatibility.



Model 2-9735A  
349A2993-0001 (Rev 0)  
96-35  
Printed in Malaysia

© THOMSON CONSUMER ELECTRONICS INC.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>