



**GE Interlogix**

---



# Calibur DVMR<sup>e</sup> Triplex<sup>®</sup>

Digital Video Multiplexer Recorder

## User Manual

**WARNING!**

To prevent fire and electric shock, do not expose this product to rain or moisture.



The lightning flash with the arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the products enclosure that maybe of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point, within an equilateral triangle, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



**CAUTION!**

To prevent electric shock, do not remove cover. No user serviceable components inside. Refer servicing to qualified service personnel.



**CAUTION! Lithium Battery**

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.

**ATTENTION**

This product contains a recyclable lithium battery. It may be illegal to dispose of this battery improperly under local, state, or federal laws. Check with your local waste management officials for disposal and recycling options.



**CAUTION!**

**Electrostatic-Sensitive Device!**

**Use proper CMOS and MOSFET handling precautions, including approved grounded wrists straps, etc., to avoid damage to this unit or its internal components, from electric discharge.**

**WARNING!**

This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions in this manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to subpart J of part 15 of FCC rules which are designed to provide reasonable protection against such interference when operated in a commercial environment. This equipment has also been tested and found to comply with the requirements for a CE Class A device and TUV safety standards.

Operation of this equipment in a residential area may cause interference, in which case the user is required to take all measures that are necessary, at the user's expense, to correct the interference.

## **IMPORTANT INFORMATION**

Software and/or firmware is furnished to the purchaser under a license for use on a single system. Software and/or firmware included with this equipment are the sole proprietary property of, confidential to, and copyrighted by GE-Interlogix Kalatel Division, Corvallis, Oregon, USA. The software/firmware are not to be copied or disclosed in any manner without the express written consent of GE-Interlogix.

All information and specifications furnished by GE-Interlogix are believed to be accurate and reliable. No responsibility is assumed by GE-Interlogix for neither its use nor any infringements of rights of third parties that may result from its use. No license is granted by implication or otherwise under any patent or patent rights of GE-Interlogix.

The **CALIBUR™** brand name and product model numbers are the property of GE-Interlogix.

Ó**COPYRIGHT, 2002:** The contents of this manual may not be copied or reproduced in any manner or form without the prior written consent of GE-Interlogix.

# Contents

<b>1</b>	<b>DVMR<sup>®</sup> Triplex Overview .....</b>	<b>6</b>
1.1	Products Featured In This Manual .....	6
1.2	Product Description.....	6
1.3	Passwords.....	7
1.4	Unpacking .....	8
1.5	Installation Environment .....	8
1.6	Associated Equipment.....	8
1.7	The Back Panel .....	9
1.8	Power-Up.....	14
1.9	Minimum Recommended Menu Setup .....	14
<b>2</b>	<b>DMVR<sup>®</sup> Triplex Basic Operations .....</b>	<b>16</b>
2.1	Principal Operating Modes .....	16
2.2	The Front Panel.....	16
2.3	Live Viewing.....	17
2.4	Playback.....	18
2.5	Recording.....	20
2.6	Display Options.....	21
2.7	Active Cameos .....	21
2.8	Sequencing .....	22
2.9	On-screen Indicators .....	23
2.10	Triplex Mode.....	25
<b>3</b>	<b>Menu System Overview.....</b>	<b>27</b>
3.1	Menu Notation In This Manual.....	27
3.2	Accessing The Menu System .....	27
3.3	Available Menus.....	27
3.4	Menus In This Manual.....	28
3.5	Navigating The Menu System.....	28
3.6	Menu Shortcuts.....	28
3.7	The Main Menu.....	29
3.8	Time/Date .....	29
3.9	Sequencing .....	31
3.10	Record .....	31
3.11	Alarms .....	37
3.12	Macro .....	42
3.13	Motion Detection.....	44
3.14	Camera Setup.....	47
3.15	Archive Setup.....	50
3.16	Audio Setup.....	51
3.17	Communications.....	51

3.18	Front Panel Lock.....	53
3.19	Factory Settings.....	53
3.20	Passwords.....	54
3.21	The QuickInstall Menu .....	54
3.22	The Operator Menu .....	55
3.23	The SystemView Menu.....	56
<b>4</b>	<b>Alarms .....</b>	<b>59</b>
4.1	Alarm Input.....	59
4.2	Alarm Output.....	59
4.3	Alarm Acknowledge.....	59
4.4	On-screen Displays During Alarms.....	59
4.5	Alarm Operations During Playback.....	60
4.6	Alarm History Box.....	61
4.7	Searching For Recorded Alarms.....	61
<b>5</b>	<b>Searching .....</b>	<b>62</b>
5.1	Disk Analysis Screen.....	63
5.2	Motion Search.....	63
5.3	Search Filters.....	65
5.4	Search Results.....	65
<b>6</b>	<b>Technical Specifications.....</b>	<b>67</b>
<b>7</b>	<b>RS232 Event Generation/Text Insertion Protocol .....</b>	<b>69</b>
7.1	Message Structure.....	69
7.2	Message Type.....	69
7.3	Event Field .....	69
<b>8</b>	<b>RS232 Remote Control Protocol .....</b>	<b>71</b>
8.1	Front Panel Button Emulation.....	71
8.2	Configuration and Status .....	72
<b>9</b>	<b>Macro Tables.....</b>	<b>73</b>
9.1	Macro Functions Table.....	73
9.2	Scheduled Macro Table.....	74
<b>10</b>	<b>Warranty and Service.....</b>	<b>75</b>
10.1	Factory Service.....	75
10.2	Warranty and Return Information .....	76

# 1 DVMR<sup>e</sup> Triplex Overview

## 1.1 Products Featured In This Manual

**DVMR<sup>e</sup> -4CT:** Digital Video Multiplexer Recorder, Four-Channel, Color, Triplex.

**DVMR<sup>e</sup> -10CT:** Digital Video Multiplexer Recorder, Ten-Channel, Color, Triplex.

**DVMR<sup>e</sup> -16CT:** Digital Video Multiplexer Recorder, Sixteen-Channel, Color, Triplex.

### Key To Model Numbers

1. **DVMR<sup>e</sup>:** Digital Video Multiplexer Recorder, Ethernet capable.
2. **4, 10, or 16:** Maximum number of camera inputs.
3. **C:** Color.
4. **T:** Triplex.

DVMR <sup>e</sup>	16	C	T
1	2	3	4

## 1.2 Product Description

The DVMR<sup>e</sup> Triplex is a video multiplexer capable of recording from multiple cameras to an internal hard drive while simultaneously providing playback. Unlike outdated time-lapse VCRs, the DVMR<sup>e</sup> Triplex records high-resolution pictures. Digital recording improves playback quality over VCRs, and eliminates the hassle of cleaning heads, changing tapes or servicing motors. The unit can also be programmed to record continuously by overwriting the oldest recorded data. Depending on the setup, the DVMR<sup>e</sup> Triplex can store from a few hours to more than 3 years of color images.

Programmable search features eliminate time consuming Fast Forwarding or Rewinding of tapes, searching for critical data. Search for recorded images or events by alarm, time, date, motion, video loss, camera number and ASCII cash register or ATM text.



**Caution!** This products primary purpose is to furnish video multiplexing and recording. Although the unit has alarm handling and motion detection functions, they are considered secondary features. **This unit should not be the only alarm device on site.**

### Features

- Multiplexer functionality with built-in digital recording.
- Triplex simultaneous recording, playback, and live multiscreen viewing.
- Remote programming and control through the RS232, RS485 and Ethernet ports.
- View live or recorded images remotely using WaveReader software.
- Dual multiscreen monitor displays.
- Video motion detection (intrusion and activity).
- Motion search.
- Record speed selectable per camera.
- Displays include full screen, sequenced, picture-in-picture, and multiscreens.
- Alarm Handling with History Log. Pre- and post alarm recording, selectable per camera.
- Archive onto Calibur DVS<sup>e</sup> Disk Array, or RAID, DAT, AIT, or CD-Rs.
- PTZ control via ethernet or POTS, using CBR-KB3/J or KTD-405 keypad.
- Covert camera recording (recording without display).
- Daylight savings time change function.
- Alarm Notification via email and/or TCP/IP dialout notification.

## 1.3 Passwords

Passwords are provided to limit access to menus and certain functions. Two levels of password security are provided:

- **Operator:** Limited menu access, only Operator and System View menus are available.
- **Installer:** Complete menu access.

As a security measure, it is recommended that the Operator and Installer passwords be changed after installation is complete (see section 3.20). Store the passwords in the administrator's secure files.

### Default Passwords

#### Four-Channel Units

Password Type	Access Level	Function	Changeable by user?	Default Password
<b>Operator</b>	Operator	Provides access to the Operator and SystemView menus.	Yes	<b>Press 'ENTER' 4 Times</b>
<b>Installer</b>	Installer	Provides access to all on-screen menus.	Yes	<b>3 4 4 4</b>
<b>Factory Defaults</b>	Installer	Resets the multiplexer to the factory defaults.	No	<b>4 1 1 1</b>
<b>Language</b>	Installer	Provides access to the On-screen Language menu.	No	<b>1 4 1 4</b>
<b>Ethernet Access Reset</b>	Installer	Deactivates the ethernet password, so that the unit may be accessed by any PC equipped with WaveReader.	No	<b>1 1 1 1</b>

#### Ten and Sixteen-Channel Units

Password Type	Access Level	Function	Changeable by user?	Default Password
<b>Operator</b>	Operator	Provides access to the Operator and SystemView menus.	Yes	<b>Press 'ENTER' 4 Times</b>
<b>Installer</b>	Installer	Provides access to all on-screen menus.	Yes	<b>3 4 7 7</b>
<b>Factory Defaults</b>	Installer	Resets the multiplexer to the factory defaults.	No	<b>8 1 1 1</b>
<b>Language</b>	Installer	Provides access to the On-screen Language menu.	No	<b>5 4 1 5</b>
<b>Ethernet Access Reset</b>	Installer	Deactivates the ethernet password, so that the unit may be accessed by any PC equipped with WaveReader.	No	<b>1 1 1 1</b>

## 1.4 Unpacking

Check the package and contents for visible damage. If any components are damaged or missing, do not attempt to use the unit, contact the supplier immediately. If the unit must be returned, it must be shipped in the original packing box.

### Package Contents

- The DVMR<sup>e</sup> Triplex unit.
- The Alarm Interface Circuit Board (P/N 0090-0077).
- Accessory PCB (P/N 0900-0127). Audio equipped models only.
- The User Manual (P/N 0150-0193).
- A WaveReader Software CD (P/N 0151-0005-25W11).
- The WaveReader Software Manual (P/N 0150-0143).
- The Archiving Addendum (P/N 0150-0194).
- WaveWatch User Manual (P/N 0150-0189).
- Power Supply (P/N 4310-0020)
- Power Cord ( **NTSC** P/N 4310-0002) (**PAL** P/N 4310-0001)

## 1.5 Installation Environment

**Power:** Ensure that the installation site's AC power is stable and within the rated voltage of the 12 Volt DC power supply. If the site's AC power is likely to have spikes or power dips, use power line conditioning or an Uninterruptable Power Supply (UPS).

**Ventilation:** Ensure that the location planned for the installation of the unit is well ventilated. Take note of the locations of the cooling vents in the unit's enclosure, and ensure that they are not obstructed.

**Temperature:** Consider the unit's operating temperature (0 to 40 °C) and non-condensing humidity specifications (10% to 80%) before choosing an installation location. Extremes of heat or cold beyond the specified operating temperature limits may cause the unit to fail. Do not install the unit on top of other hot equipment. Leave space between rack mounted units.

**Moisture:** Do not expose the unit to rain or moisture. Moisture can damage the internal components. Do not install the unit near sources of water.

**Chassis:** Other equipment may be placed on top of the unit if it weighs less than 35 pounds (16 kilograms).

## 1.6 Associated Equipment

Associated equipment in a typical security system could contain the following items:


- Two monitors
- A Keyboard (KB3 or KTD405).
- Video cameras: Composite video, 1 volt peak-to-peak.
- Alarm input devices: Pressure sensors, motion detectors, etc.
- Alarm output devices: Buzzers, Sirens, Flashing Lights, etc.
- A PC connected via ethernet cable.



- An external archive device, such as a DVSe, RAID, CD-R, DAT, or AIT drive.

For instructions regarding the connection of the associated security equipment in your system, please consult the instruction manual of the associated equipment.

## 1.7 The Back Panel

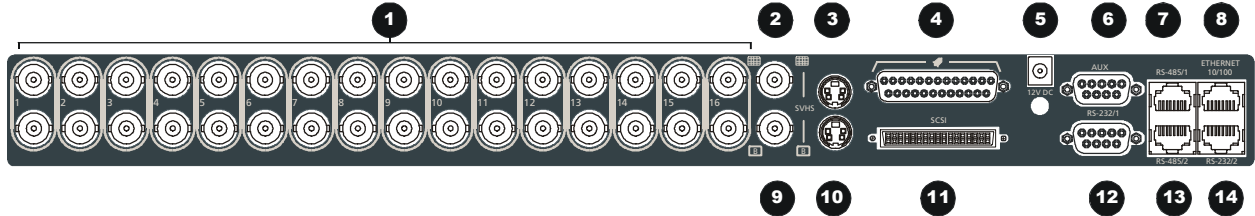

1. **Camera Inputs:** BNC connector, looping. Auto Terminating.
2. **Composite Monitor-A Output:** Composite video output with BNC style connector.
3. **Y/C Monitor-A Output:** Y/C video output with 4-pin mini-DIN style connector.
4. **Alarm I/O:** For connecting alarm inputs, and alarm output relays.
5. **Power Input:** For connecting the power supply.
6. **Aux Port:** For connecting the Accessory PCB for Audio inputs and outputs.
7. **RS485 Port 1 Connector:** For connecting to keyboard and other RS485 devices.
8. **10/100 Ethernet Port:** For connecting to remote PC via ethernet network.
9. **Composite Monitor-B Output:** Composite video output with BNC style connector.
10. **Y/C Monitor-B Output:** Y/C video output with 4-pin mini-DIN style connector.
11. **SCSI Port:** For connecting SCSI compatible archive devices.
12. **RS232 Port 1:** For modem connection and external control of the unit.
13. **RS485 Port 2 Connector:** For connecting to keyboard and other RS485 devices.
14. **RS232 Port 2:** For Event Generation and ASCII Text insertion.

### Camera Inputs

There are two BNC jacks for each camera. Either jack can receive a camera signal. The signal is looped (directly connected to the other jack), making the camera signal available to other equipment.

The camera input connectors are Auto Terminating.

**Cable:** 75-Ohm Coaxial

**Connectors:** BNC

**Auto Terminating:** Yes

**Passive Looping:** Yes



This means that the input signal will automatically be terminated with 75-Ohms unless a 2<sup>nd</sup> cable is connected to the 2<sup>nd</sup> BNC connector of the same camera input. Make sure there is 75-Ohm termination at the end of the video line if the signal is looped through the DVMR<sup>®</sup> Triplex.


Time base correction is performed during digital capture. As a result, cameras do not require synchronization.

See section 3.14 for information about disabling unused camera jacks in the menu system.

## Composite Monitor Output

When connecting directly from the DVMR<sup>®</sup> Triplex to the monitor, select the 75-Ohm impedance setting on the monitor.

**Cable:** 75-Ohm Coaxial  
**Connectors:** BNC

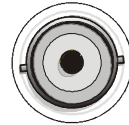

If an additional device is connected to the monitor's looping output, set the termination of the additional device as 75-Ohm, and set the termination of the monitor as Hi-Z (High Impedance).

## Y/C Monitor Output

Y/C video output has a 4-pin mini-DIN style connector. This style of connection is also referred to as SVHS and S-Video.

 
**Cable:** 75-Ohm Coaxial  
**Connectors:** BNC



## Alarm I/O Port

The back panel of the unit is equipped with an Alarm Port (DB-25 style connector).


**Do not attempt to wire directly to the DB-25 connector on the back panel.**

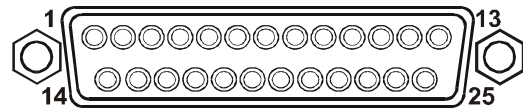

**DB-25 Connector on Back Panel**

Connect the Alarm PCB (supplied with the unit) to the Alarm Port. Wire all alarm inputs to the Alarm PCB per the pin out specifications shown below.

<b>Pin 1:</b> Alarm Input 1.	<b>Pin 13:</b> Alarm Input 13.
<b>Pin 2:</b> Alarm Input 2.	<b>Pin 14:</b> Alarm Input 14.
<b>Pin 3:</b> Alarm Input 3.	<b>Pin 15:</b> Alarm Input 15.
<b>Pin 4:</b> Alarm Input 4.	<b>Pin 16:</b> Alarm Input 16.
<b>Pin 5:</b> Alarm Input 5.	<b>Pin 17:</b> Alarm Output Relay #1.
<b>Pin 6:</b> Alarm Input 6.	<b>Pin 18:</b> Ground.
<b>Pin 7:</b> Alarm Input 7.	<b>Pin 19:</b> Ground.
<b>Pin 8:</b> Alarm Input 8.	<b>Pin 20:</b> Ground.
<b>Pin 9:</b> Alarm Input 9.	<b>Pin 21:</b> Alarm Output Relay #1 Common.
<b>Pin 10:</b> Alarm Input 10.	<b>Pin 22:</b> Alarm Output Relay #2.
<b>Pin 11:</b> Alarm Input 11.	<b>Pin 23:</b> External Alarm Silence and Acknowledge Input.
<b>Pin 12:</b> Alarm Input 12.	<b>Pin 25:</b> Alarm Output Relay #2 Common.

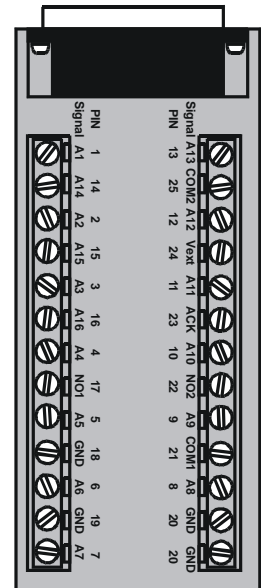

**Alarm PCB**

Active alarm inputs vary by DVMR<sup>®</sup> model. 4 channel units (4CT) have 4 active alarm inputs. 10 channel units (10CT) have 10 active alarm inputs.

## Alarm Input

An alarm condition can be activated by devices such as pressure pads, passive infrared detectors, door switches, or other similar devices.

See section 3.11 for information about configuring the contacts as Normally Open or Normally Closed in the menu system.

**Normally Open, Zero Potential Relay Contact:** Configure in menu as Normally Open.

**Normally Closed, Zero Potential Relay Contact:** Configure in menu as Normally Closed


**TTL Active High:** Configure in menu as Normally Closed.

**TTL Active Low:** Configure in menu as Normally Open.

**Open Collector Active On:** Configure in menu as Normally Open.

**Open Collector Active Off:** Configure in menu as Normally Closed.

<b>High:</b> 5V (12V Tolerant)
<b>Low:</b> Ground
<b>Inputs:</b> 1 per channel.

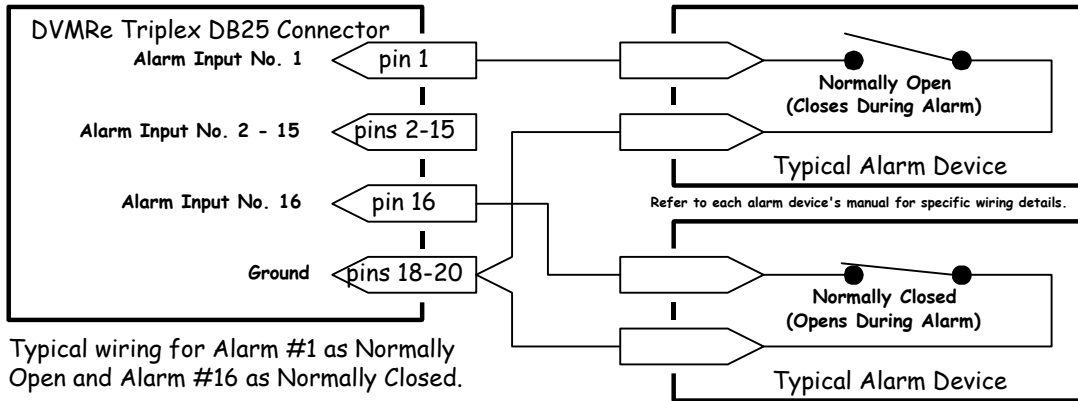

### Normally Open and Normally Closed Connections

### Alarm Relay Output

The alarm relay output is activated when an alarm condition exists. The alarm output is only active for the duration of the alarm.


Alarm relays can be programmed in the menu system to respond to macros, and video loss. See section 3.11 for information about configuring the alarms in the menu system.

<b>Output:</b> Zero potential relay contacts, programmable in menu system as Normally Open or Normally Closed.
--

**Voltage:** 30V (Max)

**Current:** 500mA (Max)

Typical wiring for Alarm Relays. Relays may be programmed Normally Open or Normally Closed.

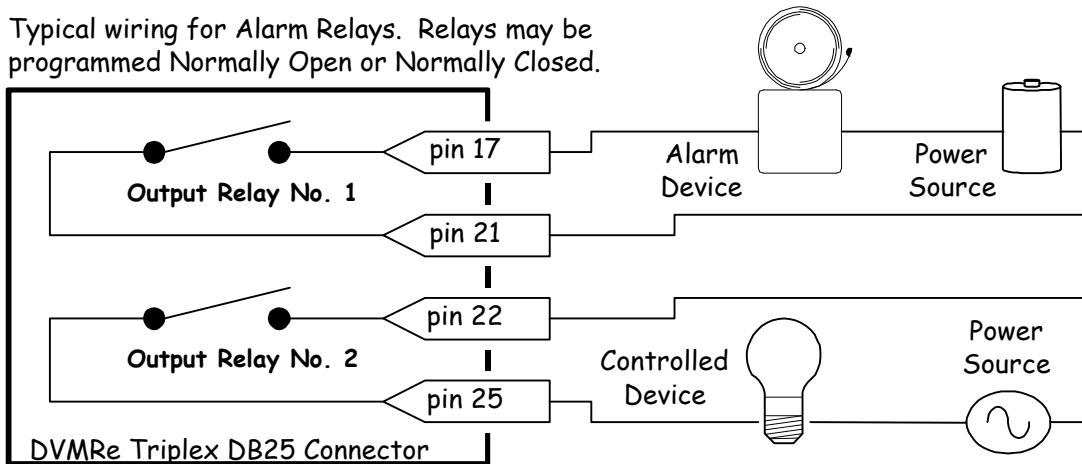

## External Alarm Acknowledge Input

Connect a switch or similar device to ground this pin in order to acknowledge an alarm condition, and silence associated buzzers and relays. Connect from pin 23 to either pin 18, 19, or 20 (ground pins).

**External Device:** Normally Open Zero potential relay contact.



 
All specifications subject to change without notice. GE-Interlogix believes all specifications to be correct at time of printing, but no liability is assumed for omissions or errors.

## AUX Port

The back panel of the unit is equipped with an Aux Port (DB-9 style connector).


**Do not attempt to wire directly to the DB-9 connector on the back panel.**

Connect the Accessory PCB (supplied with the audio equipped models) to the AUX port to access the Audio features. Wire the audio input and output to the Accessory PCB per the pin out specifications shown below.

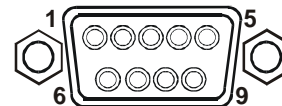

**DB-9 Connector on Back Panel**

- Pin 1:** Not Used.
- Pin 2:** Audio Out.
- Pin 3:** Ground.
- Pin 4:** Audio In.
- Pin 5:** Ground.
- Pin 6:** Not Used.
- Pin 7:** Ground.
- Pin 8:** Not Used.
- Pin 9:** Ground.
- GND:** Ground.

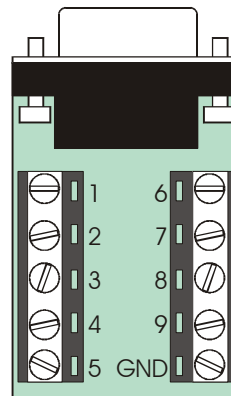

**Accessory PCB**

## RS485 Connector

Shields are grounded at one end, preferably at the DVMR<sup>®</sup> Triplex.

See section 3.16 for information about configuring the RS485 network address settings in the menu system.

**Wire Type:** #24 AWG, twisted pair with shield (2-wire)


**Connector Type:** RJ-45

**Max. Cable Length:** 3200 feet / 1000 meters

## RJ-45 Pin Configuration For RS485 Port

Pin	Use
1	Ground (Shield)
2	Not Connected
3	Network +VE
4	Not Connected

Pin	Use
5	Not Connected
6	Network -VE
7	Ground (Shield)
8	Not Connected

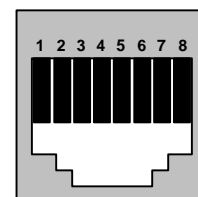

**RJ-45 socket on back panel.**

## Ethernet Port

The cable connection configuration depends on your network configuration:

- For a DVMR<sup>®</sup> Triplex that connects directly to a Hub or Switch, use a straight through connection.
- For a DVMR<sup>®</sup> Triplex that connects directly to a PC, use a cross over connection.

Consult with your MIS personnel for the specific type of configuration. See section 3.16 for information about configuring the ethernet settings in the menu system.

**Wire Type:** Cat 5

**Connector Type:** RJ-45

**Max. Cable Length:** 100 meters / 328 ft.

**Min. Cable Length:** 6 feet / 1.8 meters


**Hub Wiring Configuration:** Straight Through

**PC Wiring Configuration:** Cross Over

## RJ-45 Pin Configuration For Ethernet Port

Pin	Use
1	TX+
2	TX-
3	RX+
4	Not Connected

Pin	Use
5	Not Connected
6	RX-
7	Not Connected
8	Not Connected

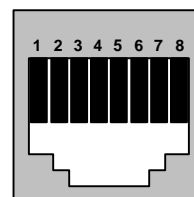

**RJ-45 socket on back panel.**

## SCSI Port

The unit is equipped with a SCSI port for connecting external archive devices. The unit only supports a single SCSI device. The SCSI ID of the archive device must be set to 0.

The SCSI bus must be terminated, otherwise the system will not operate properly.

Additional menu setup may be necessary to configure archive device. See section 3.15.

**Connector:** 50 Pin, High Density SCSI-2.

**Gender (on unit) :** Female

**Compatible devices :** DVSe, RAID, DAT, AIT, CD-R, CD-RW

**SCSI ID :** 0

## RS232 Port 1

 
For a Modem connection or remote control of unit. See section 3.16 for information about configuring the modem settings in the menu system. See section 8 for RS232 Remote Control Protocols.

## DB-9 Pin Configuration For Port 1

Pin	Use
1	DCD
2	RX
3	TX

Pin	Use
4	DTR
5	Ground
6	Not Connected

Pin	Use
7	RTS
8	CTS
9	Not Connected

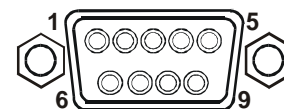

**DB-9 on back panel.**


## RS232 Port 2

For Event Generation and ASCII Text Insertion.

### RJ-45 Pin Configuration For RS232 Port 2

Pin	Use
1	Ground
2	Reserved
3	Not Connected
4	RXD

Pin	Use
5	TXD
6	Not Connected
7	Ground
8	Reserved

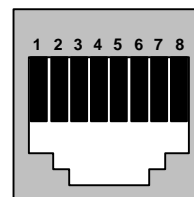

**RJ-45 socket on back panel.**

## 1.8 Power-Up

It is important that the power-up procedures be followed carefully. The unit uses its auto-detect feature to detect camera signals during power-up, and configure itself automatically.

### Power-up procedure

Once the system installation is complete, apply power in the following order:

1. Energize the monitors and all of the cameras.
2. Energize the DVMR<sup>®</sup> Triplex.

Power Supply Input
<b>Voltage:</b> 12 Volt DC
<b>Power:</b> 60 Watt (5 Amp)
<b>Connector:</b> 2.1mm barrel, center positive

Once power is applied to the unit, it will begin its power-up procedure. The unit will begin by displaying the software version on Monitor-A, then the unit will begin recording automatically.

### Check Video Input Quality

Check the picture quality by selecting each camera for full screen display. If the picture quality is poor, check the following items:

- The BNC connections.
- The loop-through terminations.
- The video levels of incoming signals.
- The possibility of ground loops.
- Consult the camera's installation instructions for additional information about proper camera setup.

### Check Record And Playback Quality

Record for at least three minutes at the default record rate. Then play back the recording, selecting each camera for full screen display. Check the playback picture quality.

## 1.9 Minimum Recommended Menu Setup

After installation is complete, it is strongly recommended that, as a minimum, the items in the QuickInstall menu be configured before the unit is used. All the features located in the QuickInstall menu are also found in the Main menu. These items are provided in the separate QuickInstall menu as a convenience for the installer.

For information about accessing and configuring the menu system, see Section 3.

To find detailed information in this manual about configuring each item in the QuickInstall menu, use the following table to locate the main menu location of each item in the QuickInstall menu.

<b>QuickInstall Menu Item</b>	<b>Main Menu Location</b>	<b>Section in Manual</b>
Change the time	Main Menu → Time/Date → Set Time	3.8
Change the date	Main Menu → Time/Date → Set Date	3.8
Edit Camera Titles	Main Menu → Camera Setup → Camera Titles → Edit Titles	3.14
Camera Disable	Main Menu → Camera Setup → Camera Disable	3.14
Record Quality	Main Menu → Record → Record Quality	3.10
Installer Password	Main Menu → Passwords → Installer Password	3.20
Auto Disable Now	Main Menu → Camera Setup → Camera Disable → Auto Disable Now	3.14

# 2 DMVR<sup>e</sup> Triplex Basic Operations


## 2.1 Principal Operating Modes

The DMVR<sup>e</sup> Triplex has three principal modes of operation:

- Live Viewing.
- Playback.
- Recording.

All three of these modes can operate simultaneously. Each mode is discussed in detail later in this section.

## 2.2 The Front Panel

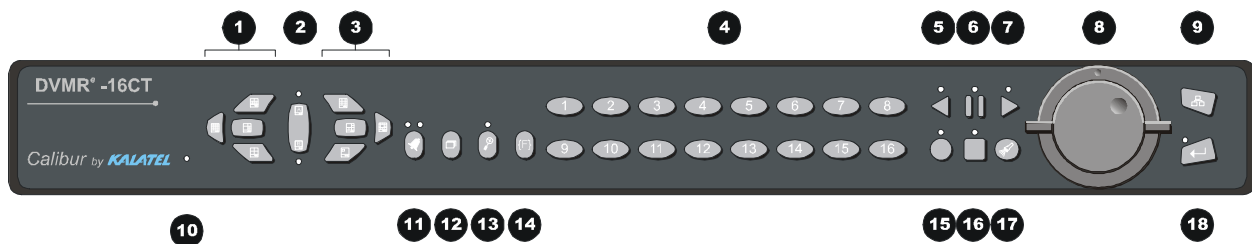


1. **Multiscreen Selection Buttons:** 16, 10, 7, and 4 way.
2. **Monitor Selection Button:** Monitor A or Monitor B.
3. **Multiscreen Selection Buttons:** 13, 9, 6 way, and Picture-in-Picture.
4. **Camera Selection Number buttons:** Camera numbers 1 through 16.
5. **Reverse Play Button:** Playback in Reverse.
6. **Freeze Button:** Freezes camera images on-screen in Live mode. Pauses Playback.
7. **Play Forward Button:** Begins Playback.
8. **Jog/Shuttle:** Controls Playback speed and Menu selections.
9. **Menu Button:** Provides access to on-screen menus.
10. **Power Indicator:** Indicates power on/off condition.
11. **Alarm button:** Allows user to acknowledge and silence alarms.
12. **Sequence Button:** Sequences camera views.
13. **Zoom Button:** Provides a 2X digital zoom.
14. **Function Button:** Used in conjunction with Camera Buttons to run Macros.
15. **Record Button:** Used to Start and Stop Recording.
16. **Stop Button:** To stop Playback and return to Live mode.
17. **Search Button:** Access to stored video data.
18. **Enter Button:** Confirms selection in menus.



## 2.3 Live Viewing
 
### Multiscreen Display

In Live Multiscreen mode, press one of the **Multiscreen** buttons to activate the multiscreen display on Monitor-A or Monitor-B. Live Multiscreens are displayed with gray borders. For detailed information about Multiscreen displays, see section 2.6.

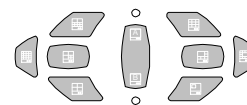

**Multiscreen Buttons**

### Multiscreen Display With Sequencing

If a multiscreen display does not include all of the cameras, the remaining cameras can be sequenced in the bottom right cameo. While in a multiscreen display, press the **Sequence** button to begin sequencing. For detailed information about sequencing, see section 2.8.



**Sequence Button**

### Full Screen Display

Select any camera for Full Screen display by pressing the **Number** button of the desired camera. Pressing the Camera number button again displays the Status Display Box. Pressing the same button a third time displays any associated ATM or cash register ASCII text, see section 2.9.



**Number Button**

### Sequenced Full Screen Display

While in a Full Screen display, press the **Sequence** button to begin full screen sequencing. The sequence list and dwell times are programmable. For detailed information about programming the sequence list see section 2.8. For detailed information about configuring the dwell times in the menu system, see section 3.9.



**Sequence Button**

### Zooming

To activate the 2x digital zoom, select the full screen display of the camera you wish to zoom, then press the **Zoom** button. Zooming will be indicated by the LED located directly above the **Zoom** button. Zooming is also indicated as **ZOOM** on the primary monitor. Zooming works with frozen and non-frozen images. Zoomed images can also be frozen.



**Zoom Button  
with LED**

While Zoomed, rotate the **Jog/Shuttle** to Pan and Tilt across the image. Please note, the camera does not move during digital Pan/Tilt.

Press the **Zoom** button again to cancel the Zoom operations.



If the **Zoom** button is pressed while in a multiscreen display, the camera from the last active cameo is selected for full screen display. Press the **Zoom** button again to activate the Zoom operation.

### Freezing

Pressing the **Freeze** button freezes all camera images on-screen. Full Screen freezing is indicated as **FRZ** on-screen. Multiscreen freezing is indicated as \* (a flashing asterisk) in each frozen cameo.

Individual cameos can be frozen in Active Cameo mode (see section 2.7).

Press the **Freeze** button again or any camera button to cancel Freeze operations.



**Freeze Button**

## Selecting Monitor-B

To control Monitor-B, press the lower part of the **Monitor** button. The Monitor-B LED will light to indicate that the number keypad now controls Monitor-B. Press the upper part of the **Monitor** button again to return the keypad control to Monitor-A.



 
**Monitor Button**

## 2.4 Playback

Playback always displays on Monitor A. Playback multiscreen borders are black, as opposed to the gray borders of the live multiscreens. Monitor B continues to display full or multiscreen live images in playback mode. To begin playback, press the **Play Forward** or **Reverse Play** button.

### Play Forward


When the Play Forward button is pressed, the unit will play forward at the rate the data was recorded. While in Playback mode, the user may change the playback direction, playback speed, etc. To return to Play Forward operations, press the **Play Forward** button.

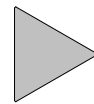

**Play Forward Button**

### Reverse Play

 
To begin reverse playback, press the **Reverse Play** button.

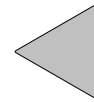

**Reverse Play Button**

### Fast Forward

During playback, rotate the **Shuttle** (the outer dial) clockwise to view data at a higher than normal rate. Increasing the amount of rotation increases the rate of playback.

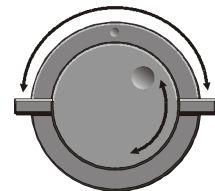

**Jog / Shuttle**

### Rewind

During playback, rotate the **Shuttle** counter-clockwise to view data (in reverse) at a higher than normal rate. Increasing the amount of rotation increases the rate of playback.

### Freeze

During playback, press the **Freeze** button. This feature pauses all full screen and multiscreen images



 
**Freeze Button**

### Single Frame Advance & Single Frame Rewind

During Freeze or Pause mode, rotate the **Jog** (the inner dial) to view the frame directly before or after the frame displayed on-screen.

## Stop Playback


To stop playback and return to Live Multiscreen mode on Monitor A, press the **Stop** button.

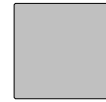

**Stop Button**

## Multiscreen Display

 During Playback, press one of the **Multiscreen** buttons to activate a multiscreen display. The 6-way and PIP multiscreen displays are not available in Playback mode. For detailed information about Multiscreen displays, see section 2.6.

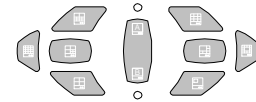

**Multiscreen Buttons**

## Multiscreen Display With Sequencing

If a multiscreen display does not include all of the cameras, the remaining cameras can be sequenced in the bottom right cameo. While in a multiscreen display, press the **Sequence** button to begin sequencing. For detailed information about sequencing, see section 2.8.



**Sequence Button**

## Full Screen Display

Select any camera for Full Screen display by pressing the **Number** button of the desired camera. Pressing the Camera number button again displays the Status Display Box. Pressing the same button a third time displays any associated ATM or cash register ASCII text.



**Number Button**

## Sequenced Full Screen Display

While in a Full Screen display, press the **Sequence** button to begin full screen sequencing. The sequence list and dwell times are programmable. For detailed information about programming the sequence list see section 2.8. For detailed information about configuring the dwell times in the menu system, see section 3.9.



**Sequence Button**

## Zooming

To activate the 2x digital zoom, select the full screen display of the camera you wish to zoom, then press the **Zoom** button. Zooming will be indicated by the LED located directly above the **Zoom** button. Zooming is also indicated as **ZOOM** on the monitor. Zooming works with frozen and non-frozen images. Zoomed images can also be frozen.

While Zoomed, use the **Jog/Shuttle** to Pan and Tilt across the image. Please note, the camera does not move during digital Pan/Tilt.

Press the **Zoom** button again, or another camera button to cancel the Zoom operations.



**Zoom Button  
with LED**



If the **Zoom** button is pressed while in a multiscreen display, the camera from the last active cameo is selected for full screen display. Press the **Zoom** button again to activate the Zoom operation.

## Searching Recorded Data

 
The DVMR<sup>®</sup> Triplex has a powerful search interface feature that allows the user to search for data on the internal hard disk or an external archive device. The user may search the data for previous recording sessions, text insertion, alarm conditions, or for motion in a selectable area of the scene.

Because the search interface is so dynamic, the search interface is covered in detail in a separate section of this manual. See section 5.

## 2.5 Recording

To begin recording, press the **Record** button. Recording will be indicated by the LED located directly above the **Record** button. The unit always starts recording at the end of previously recorded data.

The unit will continue recording until the record button is pressed again.

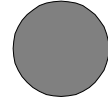


**Record Button**



### Monitor Displays During Recording

Multiscreen Live and Playback display on Monitor A and Monitor B are not affected by recording operations.

**Monitor A**

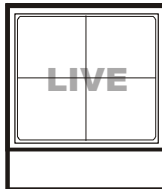


**Monitor B**

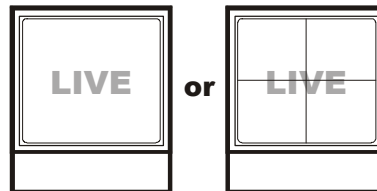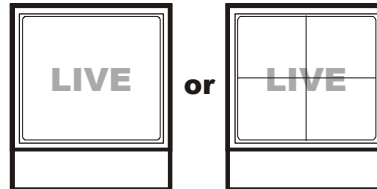

## 2.6 Display Options

### Available Multiscreen Displays

Press the **Multiscreen** buttons to activate the multiscreen display. Pressing the individual multiscreen button will display the corresponding multiscreen.

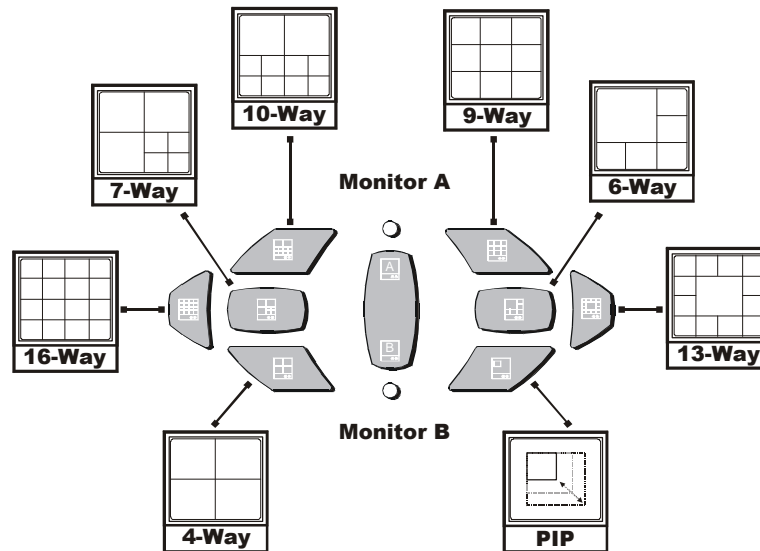

The multiscreen display is limited to the number of camera inputs on the unit.

**Sixteen-Channel unit:** Capable of displaying all multiscreens.

**Ten-Channel unit:** Only capable of displaying 10-way through 4-way multiscreen and PIP.

**Four-Channel unit:** Only capable of displaying 4-way multiscreen and PIP.

The camera assignments for each multiscreen is retained (in non-volatile memory) for both Live and Playback multiscreen mode on Monitor A, as well as Live multiscreen mode on Monitor B.


**PIP:** Use the Jog/Shuttle to adjust the location and size of the PIP display. Please note that the PIP display is only available on Monitor A in Live mode, when Monitor B is in fullscreen display mode.

## 2.7 Active Cameos

 A cameo is defined as any cell within a multiscreen display. Active Cameo mode allows the user to access and edit each cameo individually.

### Entering Active Cameo Mode


While viewing a multiscreen, enter Active Cameo mode by pressing the **Enter** button. Active Cameo mode is indicated on-screen by flashing the number and titles of the active cameo and the LED above the Enter button is lit. By default, the top left cameo is activated.

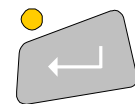

**Enter Button**

### Selecting Cameos

Select a cameo using the **Jog/Shuttle** to navigate the multiscreen. Rotating the Jog selects the next screen up or down a row. Rotating the shuttle selects the next screen in numerical order. The active cameo will always be indicated by the flashing camera number and titles.

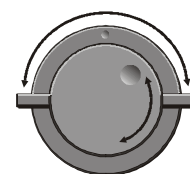

**Jog/Shuttle**

## Selecting Cameras

Display any camera in the active cameo by pressing the **Number** button of the desired camera. Once a camera has been selected, the active cameo advances to the next cameo on the right.



 
**Number Button**

The camera selection only changes the multiscreen currently being displayed. Each multiscreen must be configured separately. Changes to the multiscreen display are saved in non-volatile memory, and will be retained even if power is removed from the unit.

## Freezing

Press the **Freeze** button to freeze the image in the selected cameo. Each frozen cameo is indicated as \* (a flashing asterisk) on-screen.

Press the **Freeze** button again to cancel Freeze operations.

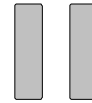

**Freeze Button**

## 2.8 Sequencing

The sequencing feature allows a camera to be displayed briefly on-screen, before advancing to the next camera in the sequence list. The default sequence list displays each camera in numerical order.



**Sequence Button**

## Dwell Time

The dwell time is the amount of time each camera is displayed on-screen before advancing to the next camera. The Full Screen and Multiscreen Dwell Times are separately programmable in the menu system. For detailed information about configuring the dwell times in the menu system, see section 3.9.

## Autolist™ Custom Sequence List

The Autolist™ feature allows the user to create a custom sequence list, controlling the order the cameras are displayed and the dwell time. Separate Autolists may be created for Monitor A (Live and Playback mode) and Monitor B (Live mode). Using the **Monitor** button, select the monitor to be programmed. Then, using a **Number** button, select any camera for full screen display.

 


The unit must be in Full Screen Display mode before starting to create the sequence list. This initial camera is not part the sequence list.

**To begin recording the Autolist™ sequence:** Press the **Alarm** button and **Sequence** button simultaneously. Autolist Program mode is indicated as **PGM** on-screen.

Recording starts when the first camera number is pressed. Press the camera numbers in the order you wish them to appear on-screen. The amount of time between button presses determines the Dwell Time. During sequence list programming, pressing any button other than a **Number** button or the **Sequence** button voids the sequence list.

**To end the recording:** Press the **Sequence** button. The amount of time between pressing the last **Number** button and the **Sequence** button determines the dwell time for the final camera in the sequence list.

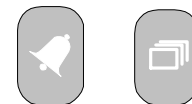

**Alarm Button and Sequence Button**

## Returning To The Default Sequence List

The default sequence list is all cameras in numeric order with a three second dwell time.

To return the unit to the default sequence list, go to the **Main Menu** ® **Sequencing** ® **Full Screen Dwell** menu. Select 03 seconds by rotating the **Jog**, then press the **Enter** button.

**Note:** Any alteration of the dwell time from this menu will cancel the sequence list and return to the default (numeric) order.

## Sequencing In Cameos

While viewing a multiscreen display, additional cameras (cameras not shown in the multiscreen display) can be sequenced in the lower right hand cameo by pressing the **Sequence** button. The sequence list is not programmable, but the dwell time can be adjusted in the menu system. Press the **Sequence** button again to cancel sequencing.

## 2.9 On-screen Indicators

There are five types of on-screen indicators.

**Camera Titles:** Displays the camera number and the camera title.

**Status Indicators:** Displays Time, Date, and Hard Disk record time left.

**Conditional Indicators:** Displays indicators for Freeze, Zoom, Alarm, Motion Detection, Videoloss, Autolist™ Program mode, Macro Record and Macro Playback mode.

**Status Display Box:** Displays Archive Device, Network status and Image Quality Setting (Playback mode only).

**Text Display Box:** Displays ATM/POS Text data.

### Camera Titles

Camera Titles are displayed on either the upper or lower corner of the left hand side of the screen. The camera title can be changed in the menu system (see section 3.14). The user can change display position and color. See below.

### Changing Position And Color Of Title And Status Indicators

**Camera Titles:** To change the color and position of the camera titles, select a camera for full screen display, then press the **Enter** button to advance to the next display setting. Repeatedly pressing the **Enter** button advances the display settings through the sequence shown in the table on the right.

**Status Indicators & Camera Titles:** Select **Camera 1** for full screen display. Using the **Enter** button, cycle through the sequence shown on the right. Each time the position cycle is completed, the unit advances the Status Indicator color. Choose Black, White or Gray.


Position	Color
Top Left	Black
Top Left	White
Top Left	Gray
Bottom Left	Black
Bottom Left	White
Bottom Left	Gray
Title not displayed	

### Status Indicators

Status indicators are displayed on the upper right hand corner of the screen.

Status indicators include:

- Time and Date (these can be turned off in the menu system, see section 3.8). The Time and Date format can also be changed in the menu system.
- Time remaining on Hard Disk(s).

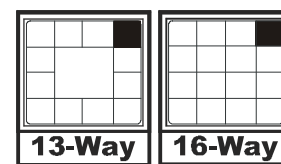

**Small Cameo**

## Conditional Indicators

Condition	Full Screen Indicator	Multiscreen Indicator
Alarm	<b>ALM</b>	<b>A</b> in cameo of camera in alarm
Autolist™ Program mode	<b>PGM</b>	<b>PGM</b>
Freeze	<b>FRZ</b>	* (Asterisk) in frozen cameo
Macro Record mode	<b>F</b> followed by macro number	<b>F</b> followed by macro number
Motion Detection	<b>M</b>	<b>M</b> in cameo w/ motion detection
Videoloss	<b>VDL</b>	<b>V</b> in cameo with videoloss
Zoom	<b>ZOOM</b>	<b>ZOOM</b>

## Status Display Box

A Status Display Box can be viewed by pressing the Camera Number button twice. Status Indicators include:

On Live Fullscreen:

- Archive Status: **Not Connected, Not Ready, Ready, Ejecting, Play**, and *timeleft*. *Timeleft* indicates the amount of time before the archive medium is full (Only available if the unit has Background Archiving turned On).
- Network: Displays all current Network connections. Normal connection is displayed as **ip.ip** or --- if there is no connection. Live connections are displayed as **E1: ip.ip, E2: ip.ip, etc.** (where ip.ip represents the last 2 bytes of the IP Address). POTS connection is displayed as **IP 1.1**.

On Playback Fullscreen:

- All the above, including Image Quality Setting: **High, Medium, Standard**.

## ATM/POS Text Display

Pressing the Camera Number a third time displays an ATM/POS text display. This feature can be used during live viewing mode to verify that the DVMRe Triplex is receiving ATM/POS text, or in Playback mode to review recorded text and video.



## 2.10 Triplex Mode

 
Triplex mode allows the display of both live and playback images to appear on Monitor A simultaneously. Live images have gray borders, while playback images have black borders.

To enter Triplex mode, press the Play Forward button while in Play Forward mode. Alternatively, press the Play Reverse button while in Play Reverse mode. Both the Play Forward LED and the Stop LED turn on to indicate that the unit is in Triplex mode.

Monitor B always switches to a fullscreen live display whenever Triplex mode is entered.

### Play Forward


When in Play Forward mode and the Play Forward button is pressed, the unit will enter the Triplex mode of operation. When Play Forward is pressed again, the unit will revert back into the normal Playback mode. While in the Triplex mode, if reverse play is in progress, the Play Forward button will change the playback direction.

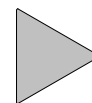

**Play Forward Button**

### Reverse Play

 
When in Reverse Play mode and the Reverse Play button is pressed, the unit will enter the Triplex mode of operation. When Reverse Play is pressed again, the unit will revert back into the normal Playback mode. While in the Triplex mode, if forward play is in progress, the Reverse Play button will change the playback direction.

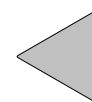

**Reverse Play Button**

### Fast Forward

During Triplex mode, rotate the **Shuttle** (the outer dial) clockwise to view playback images at a higher than normal rate. Increasing the amount of rotation increases the rate of playback. Live images are not affected.

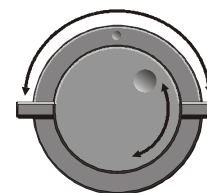

**Jog / Shuttle**

### Rewind

During Triplex mode, rotate the **Shuttle** counter-clockwise to view playback images (in reverse) at a higher than normal rate. Increasing the amount of rotation increases the rate of playback. Live images are not affected.

### Freeze

During Triplex mode, pressing the **Freeze** button pauses all multiscreen images, both Live and Playback.



**Freeze Button**

### Single Frame Advance & Single Frame Rewind

During Freeze or Pause mode, rotate the **Jog** (the inner dial) to view the frame directly before or after the frame displayed on-screen. Only the playback images are affected.

### Stop

 
To stop Triplex mode and return to Live mode on Monitor A, press the **Stop** button.



**Stop Button**

## Multiscreen Display

During Triplex mode, press one of the **Multiscreen** buttons to activate a multiscreen display. The 6-way and PIP multiscreen displays are not available in Triplex mode. For detailed information about Multiscreen displays, see section 2.6. The Live and Playback images in a multiscreen display may be transposed by pressing the multiscreen button that corresponds with the current multiscreen display.

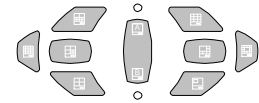

**Multiscreen Buttons**

**E.g.** If the current display is a 13-way multiscreen with the center cameo being a playback image and the rest of the cameos being live images, pressing the 13-way multiscreen button will result in the center cameo being live and the rest of the cameos being playback images.

## Multiscreen Display With Sequencing

The bottom right cameo of any multiscreen will start sequencing when the Sequence button is pressed. If this camera is a playback image, the sequencing will include all the non-displayed playback cameras, and vice versa for a live image.



**Sequence Button**

## Full Screen Display

Select any camera for Full Screen display by pressing the **Number** button of the desired camera. Pressing the Camera number button again displays the Status Display Box. Pressing the same button a third time displays any associated ATM or cash register ASCII text.



**Number Button**

## Sequenced Full Screen Display

While in a Full Screen display, press the **Sequence** button to begin full screen sequencing. The sequence list and dwell times are programmable. For detailed information about programming the sequence list see section 2.8. For detailed information about configuring the dwell times in the menu system, see section 3.9.



**Sequence Button**

## Zooming

To activate the 2x digital zoom, select the full screen display of the camera you wish to zoom, then press the **Zoom** button. Zooming will be indicated by the LED located directly above the **Zoom** button. Zooming is also indicated as **ZOOM** on the monitor. Zooming works with frozen and non-frozen images. Zoomed images can also be frozen.

While Zoomed, use the **Jog/Shuttle** to Pan and Tilt across the image. Please note, the camera does not move during digital Pan/Tilt.

Press the **Zoom** button again, or another camera button to cancel the Zoom operations.



**Zoom Button  
with LED**



If the **Zoom** button is pressed while in a multiscreen display, the camera from the last active cameo is selected for full screen display. Press the **Zoom** button again to activate the Zoom operation.

# 3 Menu System Overview

## 3.1 Menu Notation In This Manual

In the following sections, there are headings like this:

☐ **Main Menu → Time/Date → Set Time**

**Meaning:** From the Main Menu, select Time/Date, then press the **Enter** button. The Time/Date menu will appear. From the Time/Date menu, select Set Time, then press the **Enter** button. A pop-up or pull-down menu will appear.

### Selected Items

Items selected in the menu system are represented in the manual as follows:



 
## 3.2 Accessing The Menu System

Enter the menu system by pressing the **Menu** button. A Password Box will appear on the primary monitor. Enter either the:

- **Operator Password:** Providing limited access to the menu system. Only the Operator and System View menus are available.
- **Installer Password:** Providing complete menu access.


Use the **Number** buttons to enter the appropriate password.

Default passwords are provided in the beginning of this manual, in section 1.

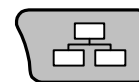

**Menu Button**

## 3.3 Available Menus

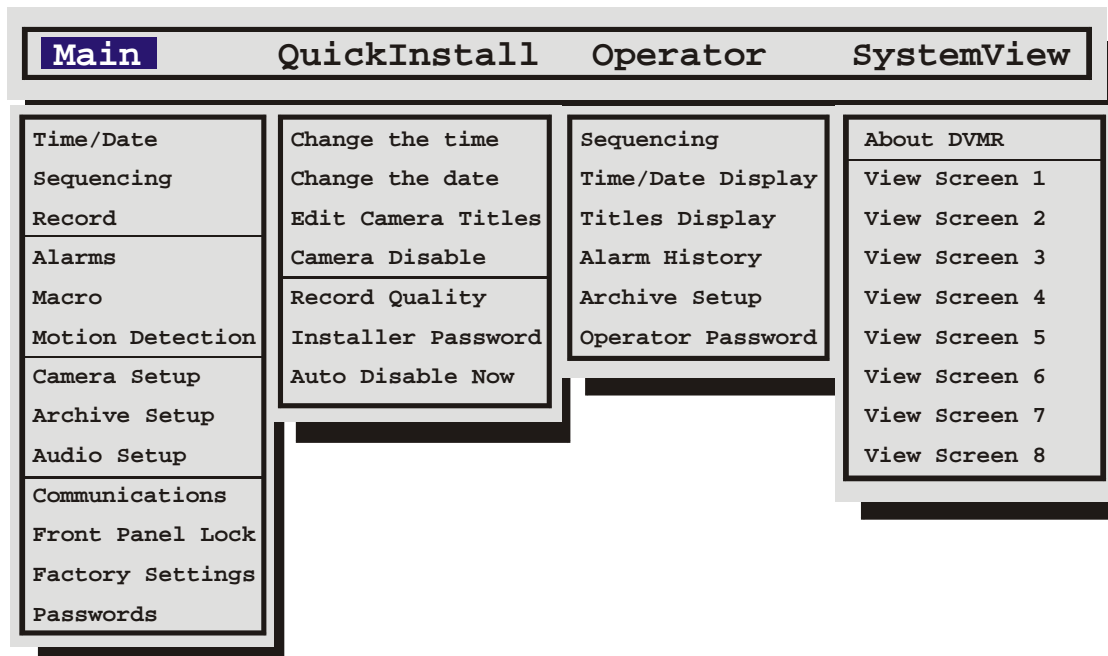

## 3.4 Menus In This Manual

Each menu is covered in detail in this chapter of this manual. Menus and Menu Items appear in the manual in the same order they appear on-screen.

- **Main Menu**
- **QuickInstall Menu**
- **Operator menu**
- **SystemView Menus**

## 3.5 Navigating The Menu System


**Selecting a Menu from the Menu Bar:** When the menu system is first accessed, only the menu bar is displayed. Use the **Shuttle** to select the desired menu.

**Opening the Drop Down Menus:** Rotate the **Jog**.

**Navigating in Menus:** Rotate the **Jog** to highlight items in the drop-down menus.

**Selecting Menu Items:** Hit the **ENTER** button to select the highlighted menu item.

**Exiting Menus:** Press the **Menu** button to exit a menu. From the menu bar, press the **Menu** button to exit the menu system completely.

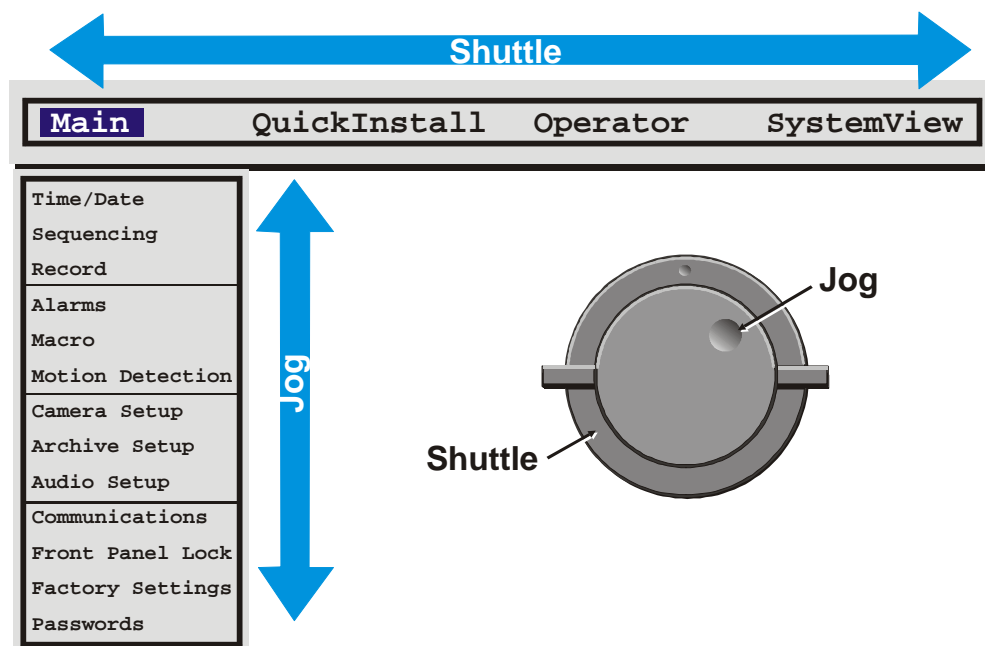

## 3.6 Menu Shortcuts

**Zoom Button:** In menu lists that have 2 settings per camera, the Zoom button will toggle all selections. This provides a quick and easy way to enable or disable all cameras for a particular feature.

**Camera Button:** In menu lists that provide settings per camera, a particular camera may be accessed directly by pressing on the associated camera button. Rotate the Shuttle to modify the setting.

## 3.7 The Main Menu

### Main Menu Overview


The Main menu contains the majority of programmable options for the DVMR<sup>®</sup> Triplex. Each item in the Main menu is described in detail in this section of the manual.

Main menu items appear in this section in the same order they appear in the menu.

## 3.8 Time/Date

Use this menu to specify:


- Which monitors will display the time and date.
- The time format: 12 or 24 hours.
- The date format: MM/DD/YY, YY/MM/DD, or DD/MM/YY.
- The time and date.
- Whether the unit's clock is a master or slave.

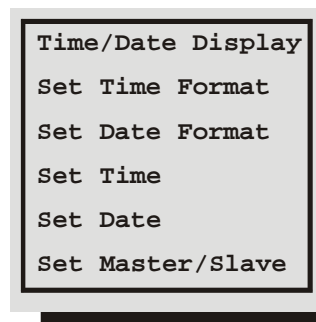

### ☐ Main Menu → Time/Date → Time / Date Display

Use this menu to specify if the time and date will be displayed on:

- Monitor-A.
- Monitor-B.
- Both Monitors.
- Not Displayed

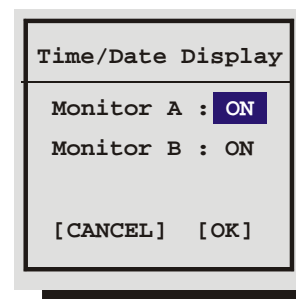

Rotate the **Jog** to navigate, then rotate the **Shuttle** to change the values.

**Save changes and exit the menu:** Select **[OK]**, then press the **Enter** button.

**Exit the menu without making changes:** Press the **Menu** button, or select **[CANCEL]**, then press the **Enter** button.


### ☐ Main Menu ® Time/Date ® Set Time Format

Rotate the **Jog** to set the desired time format. Select from either:

- 12 Hour
- 24 Hour

Press the **Enter** button to confirm the selection and exit the menu.

Press the **Menu** button to exit the menu without making changes.

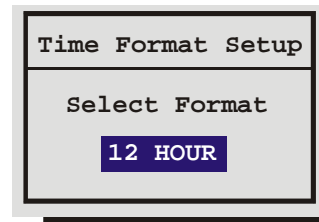


### ❑ Main Menu ® Time/Date ® Set Date Format

Rotate the **Jog** to set the desired date format. Select from either:

- MM/DD/YY
- DD/MM/YY
- YY/MM/DD


Press the **Enter** button to confirm the selection and exit the menu.

Press the **Menu** button to exit the menu without making changes.

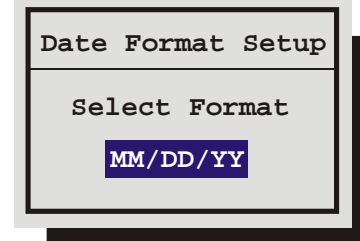


### ❑ Main Menu ® Time/Date ® Set Time

1. Rotate the **Shuttle** to navigate, highlight **HH MM SS**.
2. Press the **Enter** button, the highlighting will move to the row of numbers.
3. Enter the time in Hours, Minutes, and Seconds. Rotate the **Jog** to change the values and the **Shuttle** to navigate.
4. Press the **Enter** button to confirm the selection and exit the edit mode.
5. **To save the changes and exit the menu:** Rotate the **Jog** to select **[OK]**, then press the **Enter** button.
6. **To exit the menu without making changes:** Rotate the **Jog** to select **[CANCEL]**, then press the **Enter** button.

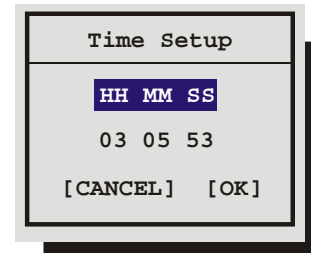

### ❑ Main Menu ® Time/Date ® Set Date


1. Press the **Enter** button, the highlighting will move to the row of numbers.
2. Enter the date in Months, Days, Years. The day of the week is calculated automatically. Rotate the **Jog** to change the values and the **Shuttle** to navigate.
3. Press the **Enter** button to confirm the selection and exit the edit mode.
4. **To save the changes and exit the menu:** Rotate the **Jog** to select **[OK]**, then press the **Enter** button.
5. **To exit the menu without making changes:** Rotate the **Jog** to select **[CANCEL]**, then press the **Enter** button.

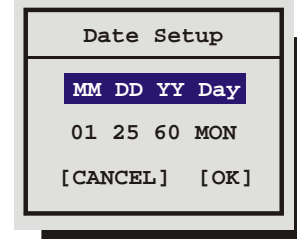

### ❑ Main Menu ® Time/Date ® Set Master / Slave

If several multiplexers are installed and connected via RS485 a network, one of the multiplexers may be set as the master clock. This unit will control the date and time (including daylight savings time) for all of the other units.


Select **One** unit from the RS485 network as the master clock by selecting **YES** in this menu. **All other units must be set as NO (Default).**

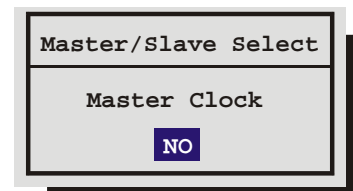

## 3.9 Sequencing

Use this menu to specify:

- The multiscreen dwell time.
- The full screen dwell time.

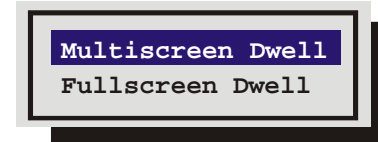


The dwell time is the amount of time each camera is displayed on-screen (while sequencing) before advancing to the next camera.

### ❑ Main Menu ® Sequencing ® Multiscreen Dwell

Rotate the **Jog** to change the desired dwell time (from 1 to 30 seconds).  
The default is 3 seconds.

1. Press the **Enter** button to confirm the selection and exit the menu.
2. Press the **Menu** button to exit the menu without making changes.

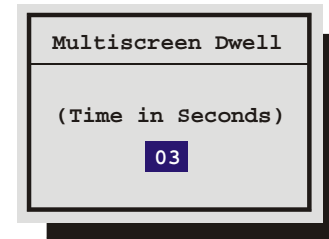

### ❑ Main Menu ® Sequencing ® Fullscreen Dwell

Rotate the **Jog** to change the desired dwell time (from 1 to 30 seconds).  
The default is 3 seconds.

1. Press the **Enter** button to confirm the selection and exit the menu.
2. Press the **Menu** button to exit the menu without making changes.



## 3.10 Record

Use this menu to:


- Specify the record quality: High, Medium, or Standard.
- Specify if a camera is to be used for event recording, time-lapse recording, or both.
- Specify the time-lapse record rate per camera.
- Specify the event record rate per camera.
- Specify the activity record rate per camera.
- Specify the alarm record rate.
- Set the Record Lock feature.
- Perform disk maintenance by Deleting, Un-deleting, or Destroying previously recorded video.
- Specify how the unit will handle data overwrite issues once the hard disk becomes full.



### ❑ Main Menu ® Record ® Record Timer

Use this menu to setup Preset Record Timer Events.

1. Rotate the **Shuttle** to select a timed event from the list.
2. Press the **ENTER** button to enter the **Edit** mode.
3. Rotate the **Shuttle** to navigate to the desired field.
4. Rotate the **Jog** to change the values of the selected field.
5. Press the **Enter** button to exit the **Edit** mode.
6. Rotate the **Jog** to highlight the **[OK]** field and press the **ENTER** button to save the changes.

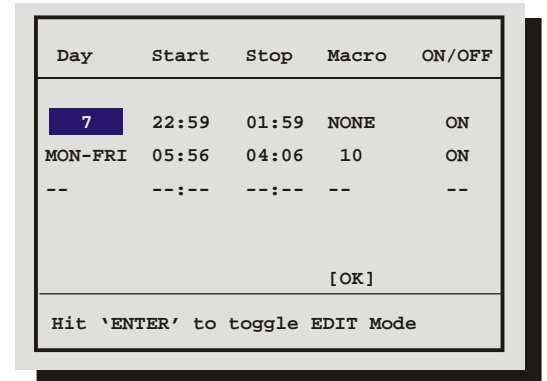


### ❑ Main Menu ® Record ® Record Quality

Use this menu to specify the record quality for each camera. Decreasing the record quality decreases the amount of disk space required to store the images, due to a higher compression scheme.

Record Quality	Picture Quality	Disk Space Needed
High	Excellent	Most
Medium	Good	Medium
Standard	Fair	Least

1. Rotate the **Jog** to navigate, and the **Shuttle** to change the values.
2. To save changes and exit the menu: Select **[OK]**, then press the **Enter** button.
3. Exit the menu without making changes: Press the **Menu** button, or select **[CANCEL]**, and then press the **Enter** button.

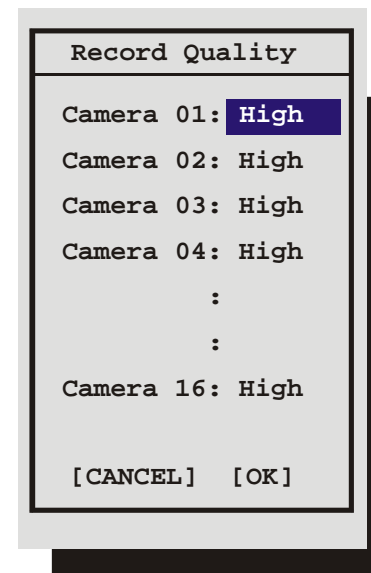


### ❑ Main Menu ® Record ® Event Settings

Use this menu to specify how each camera will record during normal and event conditions.

**TL:** Records at the Time-lapse Record Rate under normal conditions. Does not change record rate during an event.

**Event:** Records during events at the Event Record Rate. Camera does not record under normal conditions.

**Event + TL:** Records at the Time-lapse Record Rate under normal conditions. Records at the Event Record Rate during events.

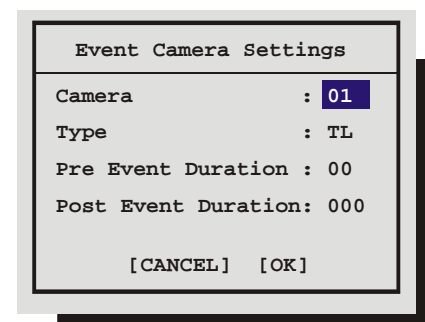





**About Events:** An Event is an action that the unit acknowledges by recording at the Event Record Rate, yet it is not cause for an Alarm. Events may be created two ways, via RS232 text insertion and Activity detection.

**Example of an Event:** A camera is pointed at the front door inside the lobby during business hours. With the Event Camera Settings Type set to Event, the unit does not record while the doorway is empty. When activity motion detection senses that someone is entering or leaving the doorway, the unit begins recording at the Event Record Rate and stops recording when the motion ceases.

**RS232 Event:** See section 7 for information about generating an Event via RS232, and optionally inserting ASCII text to mark the Event.

**Activity Detection Event:** See Setup Parameters in section 3.13 for detailed information about configuring activity detection as an event in the menu system.

**Pre Event Duration:** The unit will record up to 5 seconds of data ahead of the event trigger, at the Event Record Rate. Select from 0 to 5 seconds.


**Post Event Duration:** The unit will record up to 250 seconds after the completion of the Event, at the Event Record Rate. Select from 0 to 250 seconds.

#### □ Main Menu ® Record ® Timelapse Record Rate

The unit records at the Timelapse Record Rate under normal conditions, when there are no alarms, events, or activity present. Record rates are measured in both Pictures Per Second (pps) and Seconds Per Picture (spp).

The maximum record rate per camera is inversely proportional to the number of cameras connected to the unit. The fewer cameras connected, the higher the maximum record rate for each camera, and vice versa. The maximum record rate for multiple cameras is 48pps (NTSC)(40pps PAL). The maximum record rate for a single camera is 30pps (NTSC)(25pps PAL).

The bottom right corner of the menu contains a record duration calculator. The top line indicates the estimated recording time for the unit in Time-lapse record mode only. The bottom line indicates the estimated recording time, taking into consideration the amount of time the unit will spend in Activity, Event, and/or Alarm record mode.

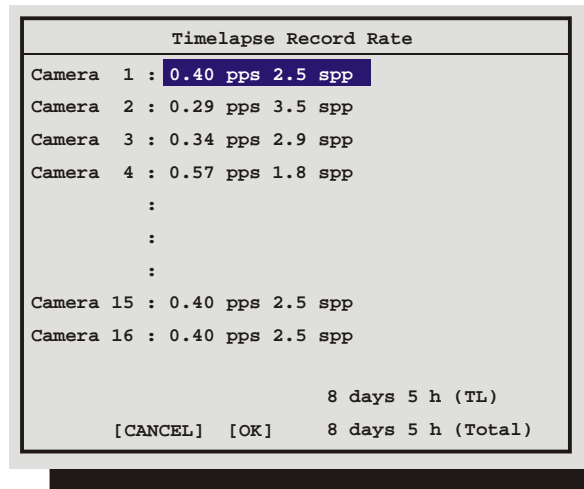

1. Rotate the **Jog** to navigate, and the **Shuttle** to change the values.

2. To save changes and exit the menu: Select **[OK]**, and then press the **Enter** button.
3. To exit the menu without making changes: Press the **Menu** button, or select **[CANCEL]**, then press the **Enter** button.


### ❑ Main Menu ® Record ® Event Record Rate

The unit will record at the Event Record Rate when an Event is activated. Events can be activated by RS232 event generation or activity detection. See **Event Settings** on page 29.

Record rates are measured in both Pictures Per Second (pps) and Seconds Per Picture (spp).

The maximum record rate per camera is inversely proportional to the number of cameras connected to the unit. The fewer cameras connected, the higher the maximum record rate for each camera, and vice versa. The maximum record rate for multiple cameras is 48pps (NTSC)(40pps PAL). The maximum record rate for a single camera is 30pps (NTSC)(25pps PAL).

The bottom right corner of the menu contains a record duration calculator. The top line indicates the estimated recording time of the cameras in Event record mode only. The bottom line indicates the estimated recording time, taking into consideration the amount of time the unit will spend in Time-lapse, Activity, Event, and/or Alarm record mode.

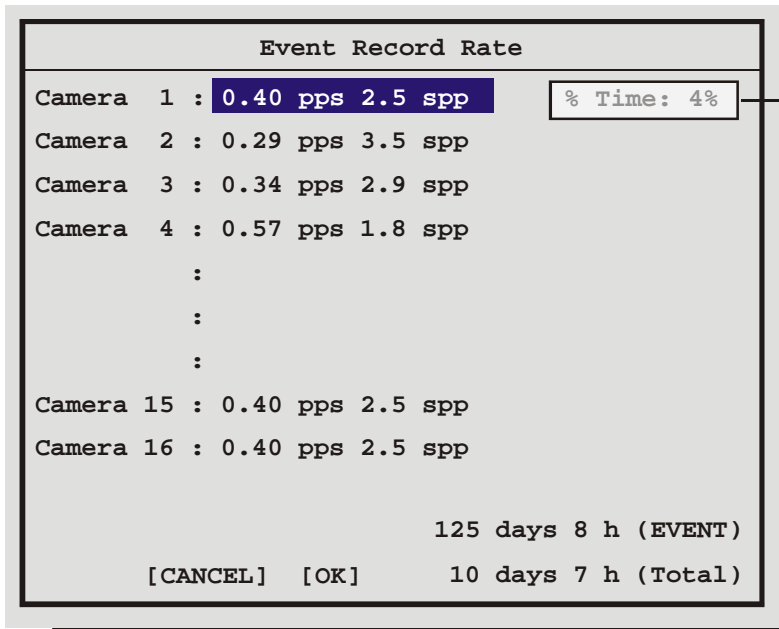

Estimate of the % of time each camera will typically spend in Event mode. For example if you expect to have about 20 total events each day, each lasting 3 minutes on average, then the % of the time will be 4%. (1 hour/24 hours)

1. Rotate the **Jog** to navigate, and the **Shuttle** to change the values.
2. To save changes and exit the menu: Select **[OK]**, and then press the **Enter** button.
3. To exit the menu without making changes: Press the **Menu** button, or select **[CANCEL]**, then press the **Enter** button.


### ❑ Main Menu ® Record ® Activity Record Rate

The unit will record at the Activity Record Rate when the camera is in normal Timelapse Record Mode and activity is detected in the camera scene. Activity should not be linked to Event, in which case the Event Record Rate will be used.

Record rates are measured in both Pictures Per Second (pps) and Seconds Per Picture (spp).

The maximum record rate per camera is inversely proportional to the number of cameras connected to the unit. The fewer cameras connected, the higher the maximum record rate for each camera, and vice versa. The maximum record rate for multiple cameras is 48pps (NTSC)(40pps PAL). The maximum record rate for a single camera is 30pps (NTSC)(25pps PAL).

The bottom right corner of the menu contains a record duration calculator. The top line indicates the estimated recording time of the cameras in Activity record mode only. The bottom line indicates the estimated recording time, taking into consideration the amount of time the unit will spend in Time-lapse, Activity, Event, and/or Alarm record mode.

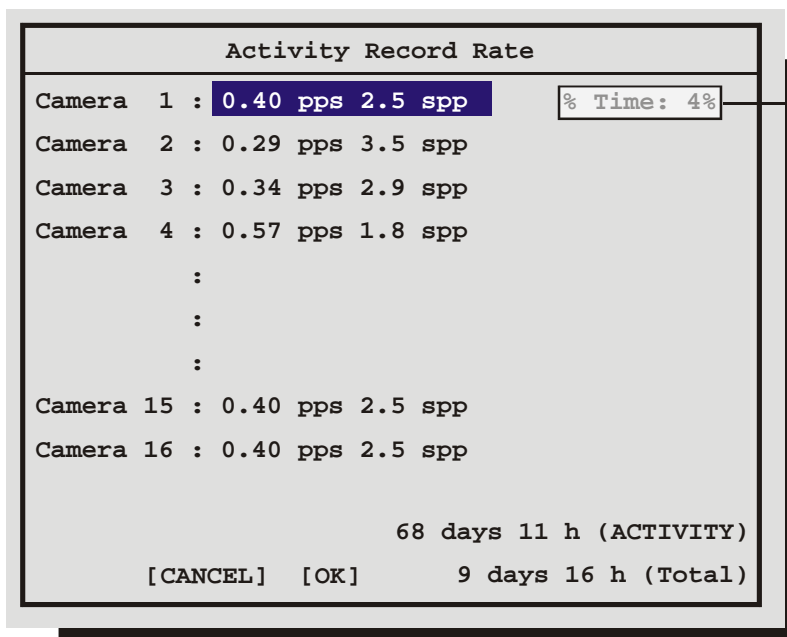


Estimate of the % of time each camera will typically spend in periods of activity. For example if you expect to have about 20 total periods of activity each day, each lasting 3 minutes on average, then the % of the time will be 4%. (1 hour/24 hours)

1. Rotate the **Jog** to navigate, and the **Shuttle** to change the values.
2. To save changes and exit the menu: Select **[OK]**, and then press the **Enter** button.
3. To exit the menu without making changes: Press the **Menu** button, or select **[CANCEL]**, then press the Enter button.

#### ❑ Main Menu ® Record ® Alarm Record Rate

During an alarm, the unit records at the alarm record rate. The bottom of the menu contains a record duration calculator. The top line indicates the estimated recording time of the cameras in Alarm record mode only. The bottom line indicates the estimated recording time, taking into consideration the amount of time the unit will spend in Time-lapse, Activity, Event, and/or Alarm record mode.

The configuration of the Alarm Record Rate is closely associated with the Alarm Record Mode. For detailed information about configuring the Alarm Record Mode, see Alarm Record mode in section 3.11.

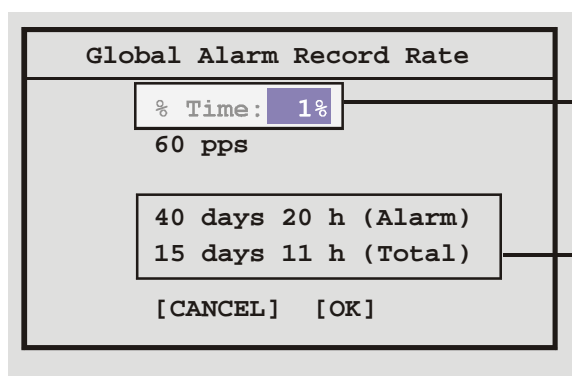


Estimate of the % of time the unit will typically spend in alarm mode. For example if you expect to have about 5 total periods of alarms each day, each lasting 3 minutes on average, then the % of the time will be 1%. (15 min/24 hours)

Record Duration Calculator

1. Rotate the **Jog** to navigate, and the **Shuttle** to change the values.
2. To save changes and exit the menu: Select [OK], and then press the Enter button.
3. To exit the menu without making changes: Press the Menu button, or select [CANCEL], then press the Enter button.

#### ❑ Main Menu ® Record ® Record Mode

Use this menu to specify how the unit will handle data overwrite issues once the hard disk becomes full.

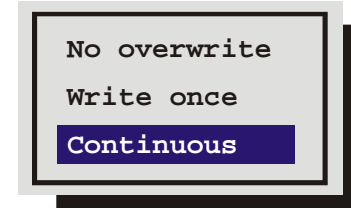

##### No Overwrite:

- Recording starts at the end of the last recording.
- Recording stops when disk becomes full.
- When the hard disk becomes full, the unit displays an on-screen message indicating that the device is full and that the archive device has stopped recording. The user must acknowledge the message by pressing the **Enter** button.

##### Write Once:

- Recording starts at the end of the last recording.
- Recording stops when disk becomes full.
- The user is prompted to authorize overwriting old data.

##### Continuous:

- Recording starts at the end of the last recording.
- Unit overwrites all previously recorded data, overwriting the oldest data first.
- The unit does not stop recording when disk becomes full.

#### ❑ Main Menu ® Record ® Disk Maintenance

Use the Jog to select from the following options, then press the **Enter** button to begin.

**Delete:** Delete all data from the hard disk (with the possibility of restoring it).


**Undelete:** Restore data that has been deleted, but not yet overwritten.

**Destroy:** Erase all data from the hard disk permanently, **without the possibility of restoring it**. Selecting this option brings up a confirmation dialog box.




#### ❑ Main Menu ® Record ® Record Lock

Use this menu to set the Record Lock feature. This feature disables the front panel record button. Setting Record Lock to ON will start the unit recording if it is not currently in the Record mode.

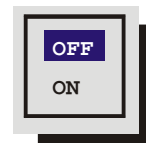

##### ADM (Auto Delete Mode)

The ADM feature prevents the unit from displaying or archiving any search results that are more than thirty days old. This feature may be required by law in some jurisdictions. If required by local authorities, the ADM feature must be turned **On**. Typically this feature is turned **Off**.

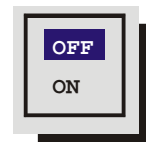


## 3.11 Alarms

Use this menu to configure the alarm handling features of the unit.



**Caution!** The DVMRe Triplex's primary function is to furnish video multiplexing and recording with a multiscreen display. Although the unit has alarm handling and motion detection functions, these are considered secondary features. **This unit should not be the only alarm device on site.**

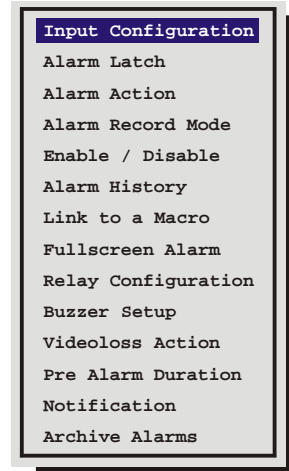

### □ Main Menu ® Alarms ® Input Configuration

Configure the alarm inputs as either Normally Open or Normally Closed.

Configure inputs as follows.

**Normally Open Zero Potential Relay Contact:** Configure in menu as Normally Open.


**Normally Closed Zero Potential Relay Contact:** Configure in menu as Normally Closed

**TTL Active High:** Configure in menu as Normally Closed.

**TTL Active Low:** Configure in menu as Normally Open.

**Open Collector Active On:** Configure in menu as Normally Open.

**Open Collector Active Off:** Configure in menu as Normally Closed.

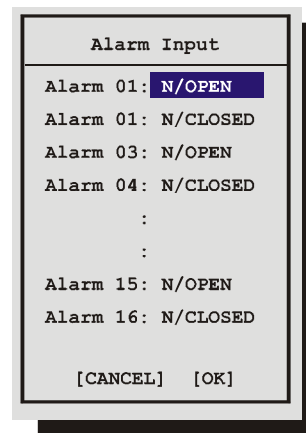

### □ Main Menu ® Alarms ® Alarm Latch

This feature determines how the unit latches alarm conditions.


Selecting from the following options.

**Latched:** The alarm is activated until it is silenced and acknowledged by the user.

**Transparent:** The alarm is active only while receiving alarm input. The alarm condition is canceled when the alarm input ceases.

**Timed Out:** The alarm condition is latched for the amount of time selected in this menu, then it is automatically silenced and acknowledged. If the alarm input exceeds the duration specified in this menu, the unit silences and acknowledges the alarm when the alarm input ceases. Select the timeout duration, the range is from 1 to 250 seconds.

Transparent alarms cannot be silenced and acknowledged. If transparent mode is preferred, but the ability to silence and acknowledge alarms is desired, select Timed Out and set the Alarm Timeout to two seconds.

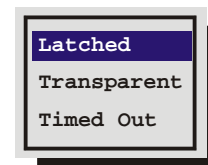

❑ **Main Menu ® Alarms ® Alarm Action**

This menu is not available on 4-channel units. Only the full screen alarm display is available on the 4-channel unit. Therefore, a 4 channel unit will always be limited to the default values in this menu, i.e. no presets linked to alarms and alarm relay is always Relay 1.

**Input:** Select the input you wish to configure.

**Freeze:** Selecting **Yes** will freeze the alarm camera display (quadrant 1) at the time the alarm is activated.

**Cameras:** This setting determines the four cameras displayed on-screen when an alarm is received. The camera group contains the camera in alarm and three associated cameras.


**Default Settings:** The first camera in the list is the camera in alarm. The second camera in the list is the camera that precedes the alarm camera numerically. The third and fourth cameras in the list are the two cameras following the alarm camera numerically.

**Preset:** Use this feature to send a camera to a preset when an alarm is activated. The preset number corresponds directly with the camera number located directly above it in this menu. Select from 1 through 16. If this field is left blank, the camera will not respond. In the example above, Camera 1 will go to Preset 1, while Camera 2 will go to Preset 9.

**Relay:** Configure which relay will be triggered when an alarm is activated per camera. Select from:

- 1
- 2
- 1 + 2
- None

Rotate the **Jog** to navigate and the **Shuttle** to change the values.

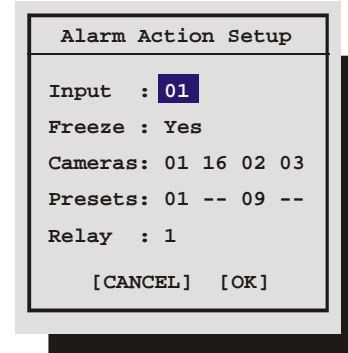

❑ **Main Menu ® Alarms ® Alarm Record Mode**

Use this menu to determine how the unit will record cameras in alarm.


**No Change:** Unit changes to the Alarm Record Rate, but it does not give priority to the camera in alarm.

**Exclusive:** The unit records only the camera (or cameras) in alarm.

**Interleaved:** Alarmed cameras are recorded at a higher rate than non-alarm cameras. The unit accomplishes this by interleaving images of alarmed cameras between images from non-alarmed cameras in the record list. **Interleaved is the recommended mode of operation.**

**Example of Record Lists:**


No Change record list for 8 cameras, Camera-4 in alarm.	1 2 3 4 5 6 7 8 1 2 3 4 5 6 7 8
Exclusive record list for 8 cameras, Camera-4 in alarm.	4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4
Interleaved record list for 8 cameras, Camera-4 in alarm.	1 4 2 4 3 4 5 4 6 4 7 4 8 4 1 4

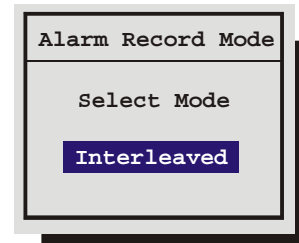

❑ **Main Menu ® Alarms ® Enable / Disable**

Use this menu to Enable or Disable the alarm inputs.

Select from the following:

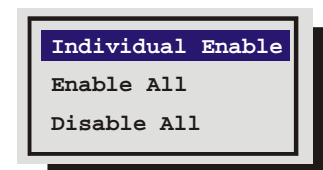


- **Individual Enable:** Allow the user to access the Alarm Enable submenu, and enable or disable alarm inputs on a per camera basis.
- **Enable All**
- **Disable All**

Rotate the **Jog** to navigate, and the **Shuttle** to change the values.

**Save changes and exit the menu:** Select **[OK]**, then press the **Enter** button.

**Exit the menu without making changes:** Press the **Menu** button, or select **[CANCEL]**, then press the **Enter** button.

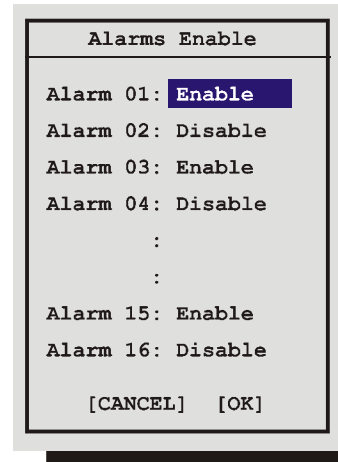


### ❑ Main Menu ® Alarms ® Alarm History

Use this window to view a list of the 100 most recent alarms. Alarms are displayed 10 at a time. Rotate the **Jog** to scroll through the alarms.

Information displayed in this window is:

- The alarms number in the list.
- The date of the alarm (month and day).
- The time of the alarm (hours, minutes, and seconds).

The number of the camera input in alarm.

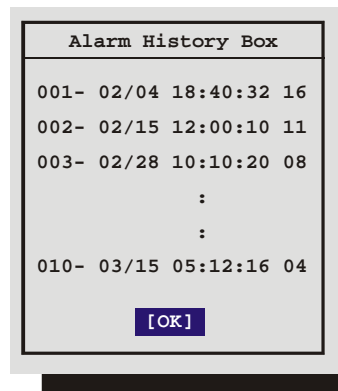

### ❑ Main Menu ® Alarms ® Link To A Macro

Use this menu to link an alarm input to a macro. If a link is created, a macro will run each time that alarm is activated.


**Alarm:** Select the alarm input you would like to link.

**Macro:** Select the macro number you wish to link to. Leave this setting blank if you do not wish to link to a macro.

Rotate the **Jog** to navigate, and the **Shuttle** to change the values.

**Save changes and exit the menu:** Select **[OK]**, then press the **Enter** button.


**Exit the menu without making changes:** Press the **Menu** button, or select **[CANCEL]**, then press the **Enter** button.

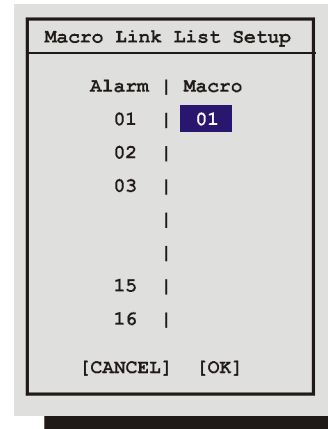

### ❑ Main Menu ® Alarms ® Fullscreen Alarm

Selecting **Yes** from this menu will cause the unit to always display the alarm camera fullscreen.

Selecting **No** from this menu will cause the unit to display the 4-way display configured in the **Main Menu ® Alarms ® Alarm Action Setup** menu.

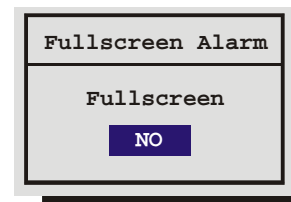


This menu selection is not available on 4-channel DVMRe Triplex units, since Fullscreen Alarm Mode is the only alarm mode available.

### ❑ Main Menu ® Alarms ® Relay Configuration

Use this menu to configure each relay output as either:

- Normally Open
- Normally Closed

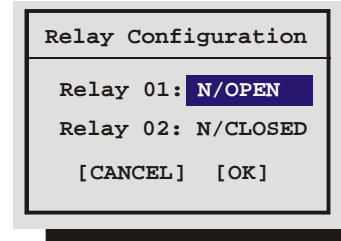

### ❑ Main Menu ® Alarms ® Buzzer Setup

Use this menu to configure the internal buzzer.

**Global Buzzer:** The Global Buzzer setting acts as a master On/Off switch. Setting the Global Buzzer to **OFF** deactivates all buzzer activity.

**Live Alarm Buzzer:** Activates while receiving alarm input.


**Videoloss Buzzer:** Activates when video loss is detected.

Disabling the Videoloss buzzer disables all videoloss buzzer activity.

Videoloss buzzers may be disabled on a per camera basis in the

**Alarms ® Videoloss Action** menu.

**Playback Buzzer:** Activates during playback of recorded alarms.

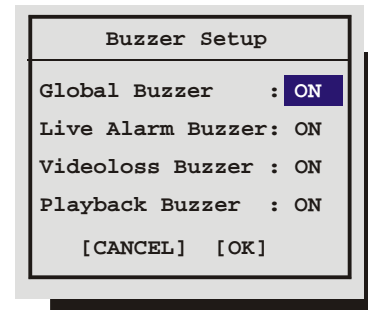

### ❑ Main Menu ® Alarms ® Videoloss Action


Use this menu to configure how the unit responds to videoloss.

**Camera:** Select the camera you wish to configure.

**Relay 1:** If enabled, the unit will activate Relay 1 when videoloss is detected.


**Relay 2:** If enabled, the unit will activate Relay 2 when videoloss is detected.

**Buzzer:** Use this setting to disable the videoloss buzzer activation on a per camera basis. To disable videoloss buzzer activation on all cameras go to the **Main Menu ® Alarms ® Buzzer Setup** menu, described in the previous section.

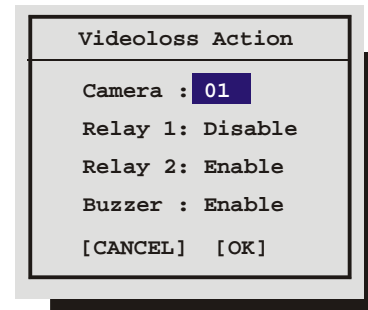

### ❑ Main Menu ® Alarms ® Pre Alarm Duration


During recording, the unit stores up to 5 seconds of recorded information in a buffer. This data can be automatically retrieved when an alarm is activated. Select the amount of time just previous to the activation of an alarm you wish to retrieve.

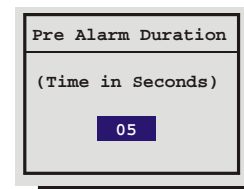

### ❑ Main Menu ® Alarms ® Notification

Use this menu to select:

- Email Alarm Notification.
- TCP/IP Dialout Notification.

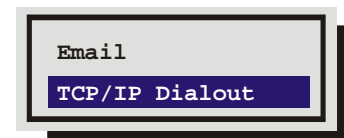



## Email Notification Setup

This screen allows the user to setup the types of events to be notified of, and the email addresses (up to two) to be notified. Follow the context sensitive on-screen instructions to setup the individual fields.

The screenshot shows the 'Email Notification Setup' screen with the following fields and values:

Notify Vidloss:	ENABLE
Notify Alarm:	DISABLE
Notify Record:	DISABLE
Notify Archive:	DISABLE
Email User 1:	john.doe
Email Domain 1:	somecompany.com
Email User 2:	jane.doe
Email Domain 2:	somecompany.com
SMTP Server:	0. 0. 0. 0
SMTP Port:	25
Timezone Delta:	-07

Annotations:

- One or more of these fields must be set to **ENABLE** to receive an email notification of the selected event. (Points to the Notify Vidloss field)
- Obtain the parameters for these two fields from your IT Department. (Points to the SMTP Server and SMTP Port fields)

Buttons: [CANCEL] [OK]

Format of email address: user@domain  
The timezone delta is relative to Universal Time (UT/GMT)

### Email Address Format

The format of the email addresses should be entered as follows. If the email address to be notified is [john.doe@somecompany.com](mailto:john.doe@somecompany.com), then john.doe should be entered in one of the **Email User** fields and somecompany.com should be entered in the subsequent **Email Domain** field.

### Timezone Delta

The timezone delta integer is based on how many time zones your current time zone is from Greenwich Mean Time (GMT). To calculate your timezone delta use the following formula.

$$\text{Current time} - \text{Greenwich Mean Time} = \text{Timezone Delta}$$


**For example:** If the current time is 0900 hours, and the GMT is 1600 hours, then the timezone delta would be -0700 and should be expressed in the field as -07.

To obtain the GMT open an Internet Browser on an Internet connected PC and point the browser to [www.greenwichmeantime.com](http://www.greenwichmeantime.com).

## TCP/IP Dialout Notification Setup

This screen allows the user to setup the types of events to be notified of, and the IP addresses (up to two) of the PC(s) where the WaveReader software resides.

WaveReader must be running on the receiving PC(s) and Alarm Monitoring must be setup. See Alarm Monitoring in the WaveReader Manual for details.

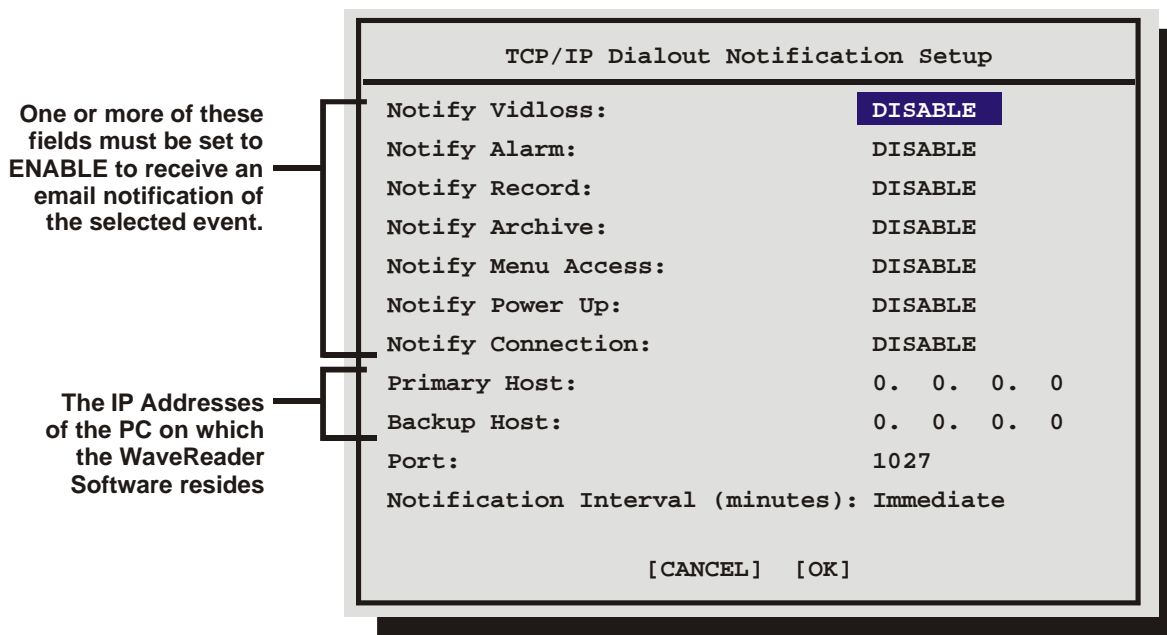

The **Notification Interval** can be set from 1 minute to 60 minutes, or immediately upon the event.

#### ☐ Main Menu ® Alarms ® Archive Alarms

Selecting **Enable** from this menu will cause the unit to activate Relay 2 if a malfunction occurs while archiving.




### 3.12 Macro

A macro is a recorded sequence of keystrokes. The number of macros depends on the number of camera inputs (4, 10 or 16). Each macro can have up to 32 keystrokes.

Use this menu to:

- Enter Macro Record mode.
- Program a scheduled start time for a macro.
- Edit the RS232 command string for each submacro.

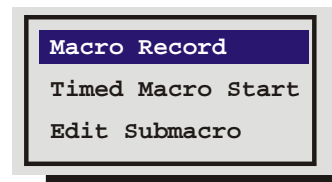


#### ☐ Main Menu ® Macro ® Macro Record

**Note:** Do not attempt macro programming while the front panel is locked.

To begin recording a macro:

1. Select the macro number you wish to record, then press the **Enter** button. The unit will automatically exit the menu system and go to a starting point. Macro Record mode is indicated as **F** and the **Macro Number** on-screen.
2. From this point, begin recording the desired keystroke sequence. Record up to 32 keystrokes. If 32 keystrokes are exceeded, the unit will end the macro recording automatically.

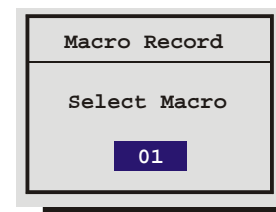

- When finished programming, press the **Function** button then the **Enter** button to end the macro recording. A form is provided in section 9 to keep track of recorded macro functions.



**Keystroke count while in the menu system:** While recording a macro, entering the menu system, changing multiple menu items, and exiting the menu system are only counted as one keystroke. Using the **Jog** to navigate the menu system does not count as keystrokes. Once the menu system has been exited, re-entering the menu system will count as a second keystroke.

Not all menu items can be programmed using macros. For a complete list of macro programmable menu items, see the table below.

During macro recording, the following button combinations perform special functions.

Button Sequence	Resulting Action
Function then 1.	Activate Relay 1 output.
Function then 2.	Reset Relay 1 output.
Function then 3.	Pause macro for 1 second.
Function then 4.	Pause macro for 5 seconds.
Function then 5.	Activate Relay 2 output.
Function then 6.	Reset Relay 2 output.
Function, Function, then Submacro number.	Program a specific submacro to activate when the macro is run.
Function then Enter.	End macro recording

## Macro Excluded Features

The following core features or settings cannot be programmed by Macro.

- Disk Maintenance.
- Erase Archive Medium.
- POTS Setting.
- Ethernet Setting.
- RS485 Network Address.
- Front Panel Lock/Unlock.
- Record Timer.

### ☐ Main Menu ® Macro ® Timed Macro Start

Use this menu to program scheduled start times for macros. Up to 20-scheduled start times can be programmed in this menu.

**Event:** Select the scheduled start event you wish to edit.

**Day:** Select the start day (**Monday – Sunday**) of the macro. Select \*\* (double asterisks) to run the macro every day.

Select **None** to cancel the scheduled start time.

**Time:** Select the start time for the macro.

**Macro:** Select the desired macro number.

Timed Macro Setup

---

Event : 01

Day : Monday

Time : 00:00

Macro : 01


[CANCEL] [OK]

A form is provided in section 9 to keep track of scheduled macros.

### ❑ Main Menu ® Macro ® Edit Submacro

A submacro is an RS232 command string used to control a peripheral device. Submacros are activated during macros. See the table on page 43 for information about programming a macro to activate a submacro.

Select the submacro you wish to edit from the menu system. This menu will appear.

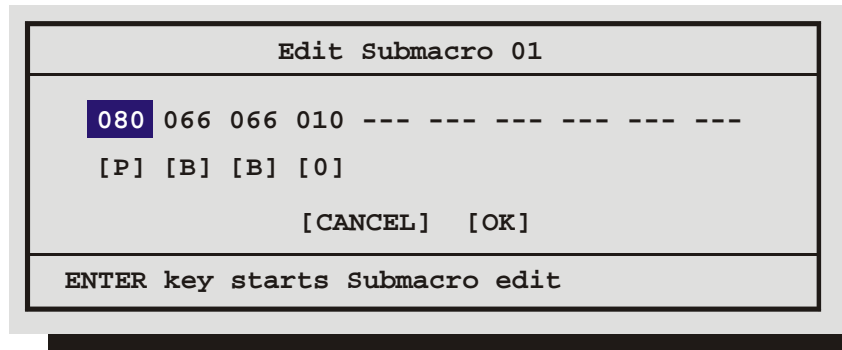


Use this menu to create the RS232 command string. Press the **Enter** button to Enter and Exit the submacro edit mode. Rotate the **Jog/Shuttle** to navigate among the fields and change the values. Each byte value can be set from 0 to 255.

### Running A Macro

 A macro is a recorded sequence of up to 32 keystrokes. To activate a macro, press the **Function** button followed by the **Number** button of the desired macro. While running, the macro is indicated on-screen as the letter **F** and the macro number.

The user can cancel the macro at any time by pressing the **Function** button.

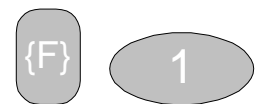

**Function and Number Buttons**

### Daylight Savings Time

To adjust the time one hour for daylight savings time, press the **Function** button, then the **Sequence** button. If this function is activated during April, one hour is added to the time. If this function is activated in October, one hour is subtracted from the time. This function will only operate once per time period.




**Function and Sequence Buttons**

## 3.13 Motion Detection

Use this menu to:


- Enable motion detection on a per camera basis.
- Activate individual zones in a scene to respond to motion detection.
- Activate the on-screen motion detection indicator.
- Set motion detection as Activity detection or Intrusion Detection.
- Configure the motion detection parameters on a per camera basis.

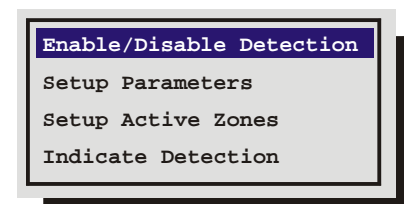

## ❑ Main Menu ® Motion Detection ® Enable/Disable Detection


Selecting **Enable All** or **Disable All** from this menu will activate or deactivate motion detection on all cameras.

Selecting **Individual Enable** from this menu will bring up the following menu.

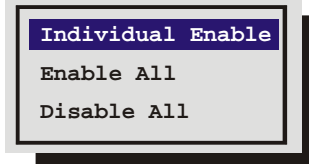


### Individual Enable Menu

Use this menu to enable or disable motion detection on a per camera basis. Rotate the **Jog** to navigate, and the **Shuttle** to change the values.

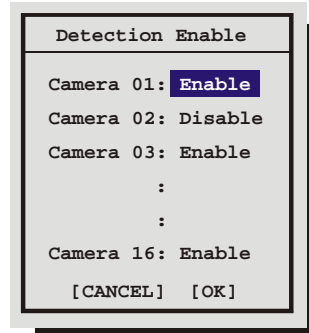

## ❑ Main Menu ® Motion Detection ® Setup Parameters

Use this menu to select the **Camera**, **Motion Detection Type**, and **Sensitivity** of the Motion Detection you wish to configure.

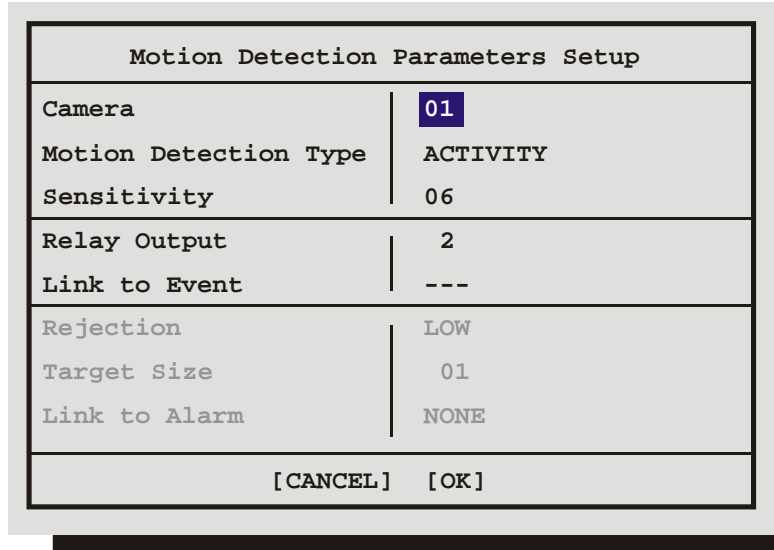

Navigate in this menu using the Jog to select the field and the Shuttle to change the parameters.

### Activity Vs. Intrusion

Activity Detection is a simple type of motion detection having only a sensitivity setting and a relay output. Intrusion Detection is a more sophisticated type of motion detection, with additional features such as false alarm rejection levels, minimum target size, and an alarm output.

## Activity Detection Setup

If Activity is selected in Motion Detection Type field, the following parameters are enabled:

**Relay Output:** The unit may be configured to activate a relay output when motion detection is present. Select either **1**, **2**, **1+2** (both relays), or **None**.

**Link to Event:** Selecting **Yes** in this menu will activate the event record speed when activity detection is present.

## Intrusion Detection Setup

If Intrusion is selected in Motion Detection Type field, the following parameters are enabled:

**Sensitivity:** Rotate the **Shuttle** to change the motion detection sensitivity, 10 being the most sensitive.

**Rejection:** Configure the unit's false alarm rejection feature by selecting **Low**, **Medium**, or **High**. These settings are based on the number of simultaneously triggered zones and the persistence of motion in a scene. The Low setting is the most sensitive to motion. The Medium setting will filter out most false alarm situations due to sudden luminance changes over the whole scene (clouds passing over). The High setting will filter out sudden luminance changes as well as spurious motion events that do not persist for a number of frames (a bird flying past the lens).


**Target Size:** This setting is the minimum number of zones (from the 16 x 16 grid) that must be activated simultaneously before it is considered to be valid motion.

**Link To Alarm:** Select the alarm number that you wish to activate when motion detection is activated.


## ❑ Main Menu ® Motion Detection ® Setup Active Zones

Use this menu to setup the Active Zones for motion detection. The screen shown below will overlay the current video image allowing for precise activity zone setup. The disabled zones will be tinted. The enabled zones will be clear.

## Activity Grid Setup Screen

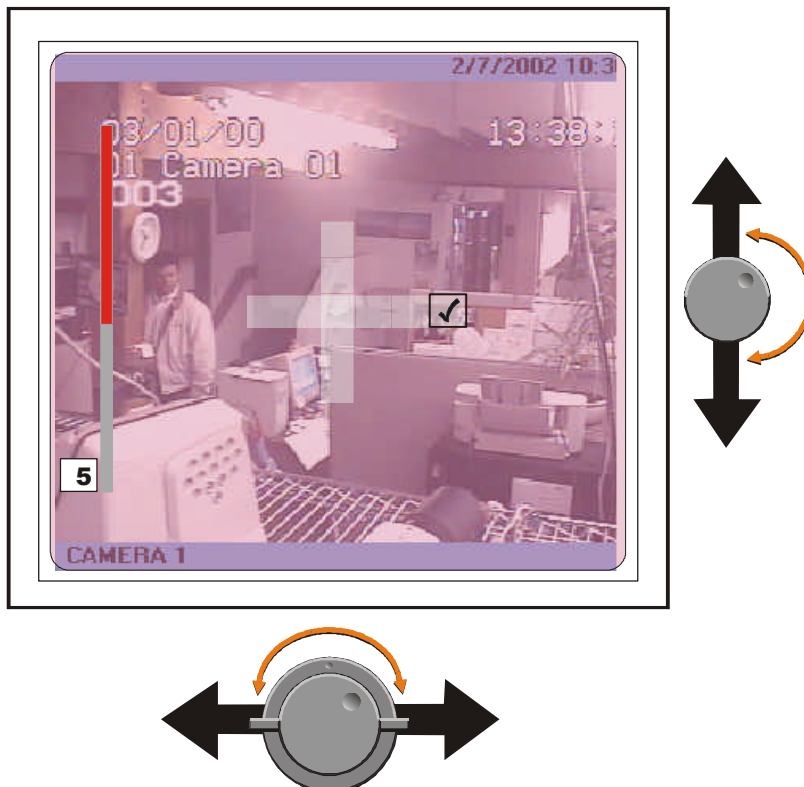

Pressing the Function button will bring up the Help screen shown on the next page. This screen will overlay the current video image.

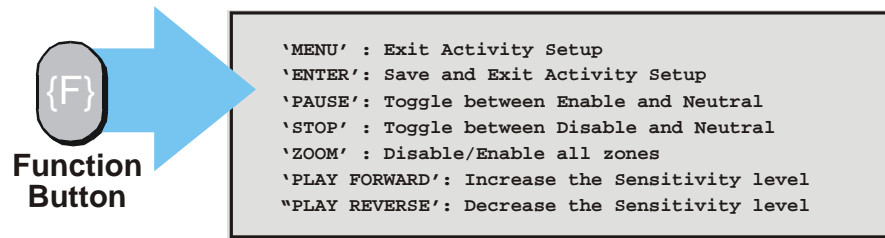

### Sensitivity Scope

Use the sensitivity scope to adjust the motion detection sensitivity for the scene. The sensitivity scope is the bar located near the left-hand corner of the screen.

The black bar raises and lowers to indicate the degree of motion detected. When the black bar reaches the red bar, a motion detection alarm is activated.

**Adjusting Motion Detection Sensitivity:** Raise and lower the red bar to change the motion detection sensitivity. Use the Play Forward button to increase the sensitivity level and the Play Reverse button to decrease the sensitivity level. The sensitivity level is also displayed as a numeric value.

Play Reverse to decrease the Sensitivity




Play Forward to increase the Sensitivity



### ❑ Main Menu ® Motion Detection → Indicate Detection


Motion Detection may be indicated on-screen by displaying the letter **M**. Use this menu to turn this feature On or Off.

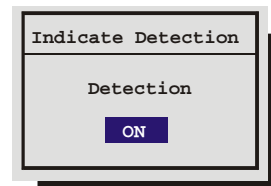

## 3.14 Camera Setup

Use this menu to:


- Edit the title for each camera.
- Adjust the Automatic Gain Control.
- Disable or Enable camera inputs.
- Specify cameras as covert (recorded but not displayed).
- View the Camera Scope (Histogram)

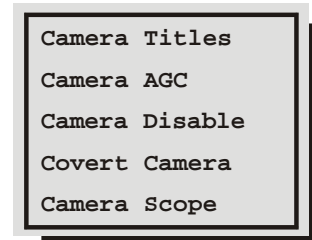

### ❑ Main Menu ® Camera Setup ® Camera Titles

Use this menu to:


- Specify if the camera titles will be displayed on the monitors.  
Edit the title for each camera.

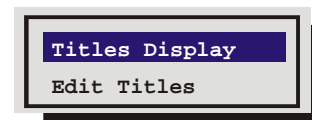

## Titles Display


Camera titles may be displayed on either monitor. Use this menu to turn this feature On or Off.

Rotate the **Jog** buttons to navigate and the **Shuttle** to change the values.

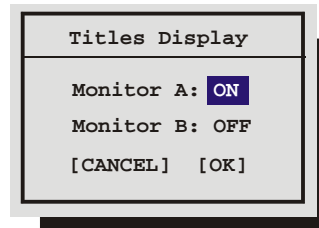

## Edit Titles

Rotate the **Shuttle** to select the camera whose title you wish to configure, and then press the **Enter** button. The Camera Title Edit menu will appear.

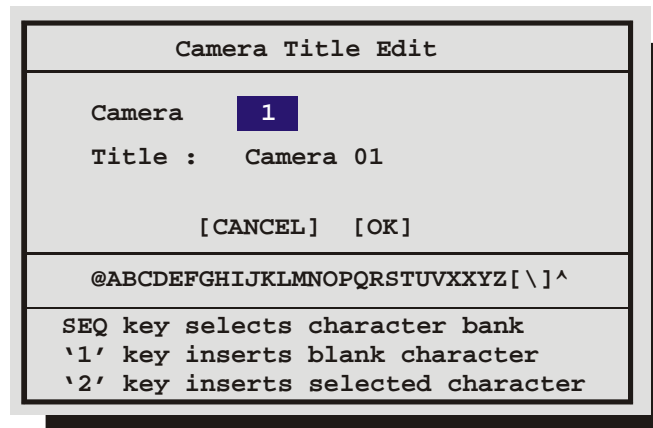

## Camera Title Edit Menu

1. With the camera title selected, press the **Enter** button. The menu will enter the Edit mode and the character bank will appear in the center of the menu.
2. Press the **Sequence** button to select the desired character set.
3. Rotate the **Shuttle** to navigate the cursor in the camera title.
4. Rotate the **Jog** to navigate the cursor in the character bank.
5. Press the **Number 1** button to insert a blank character or press the **Number 2** button to insert the selected character.
6. When finished editing the title, press the **Enter** button to exit the edit mode.
7. **Save changes and exit the menu:** Select **[OK]**, then press the **Enter** button.
8. **Exit the menu without making changes:** Press the **Menu** button, or select **[CANCEL]**, then press the **Enter** button.


## ❑ Main Menu ® Camera Setup ® AGC

Use the Automatic Gain Control (AGC) to adjust the video input signal level for cameras whose level is outside the normal range. The default gain setting is 100%.

Rotate the **Jog** to navigate and the **Shuttle** to change the values.

**Save changes and exit the menu:** Select **[OK]**, then press the **Enter** button.

**Exit the menu without making changes:** Press the **Menu** button, or select **[CANCEL]**, then press the **Enter** button.

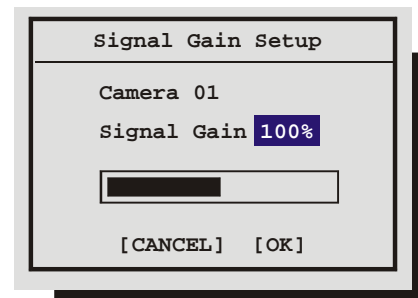




## ❑ Main Menu ® Camera Setup ® Camera Disable

Use this menu to:

- Enable or Disable cameras individually
- Configure the unit to disable cameras automatically at power-up if video loss is detected.
- Automatically disable all inputs detecting videoloss.

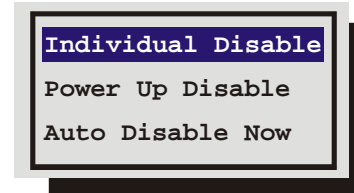


### Individual Disable

Use this menu to Disable or Enable each camera input individually.

Use the **Jog** to navigate and the **Shuttle** to change the values.

**Save changes and exit the menu:** Select **[OK]**, then press the **Enter** button.


**Exit the menu without making changes:** Press the **Menu** button, or select **[CANCEL]**, then press the **Enter** button.

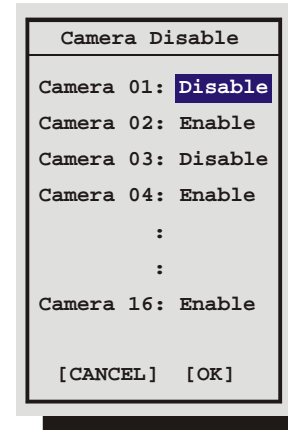

### Power Up Disable

With this feature turned On (Enabled), the unit will automatically detect which inputs are experiencing videoloss at power-up, and disable them.

Rotate the **Jog** to navigate and the **Shuttle** to change the values.

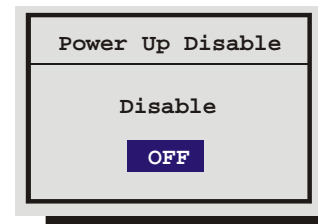

### Auto Disable Now


This feature detects which inputs have video signals and which are experiencing videoloss. When this feature is activated, the unit will automatically disable the inputs experiencing videoloss. The DVMR<sup>®</sup> Triplex will also re-enable video inputs that were previously disabled if a video input signal is detected.

## ❑ Main Menu ® Camera Setup ® Covert Camera

This feature removes cameras from all live displays while continuing to record them, so that the users and the public are unaware that the camera is being recorded. Covert cameras are viewable during playback.

Select **Yes** in this menu to configure a camera as covert.

Rotate the **Jog** to navigate and **Shuttle** to change the values.

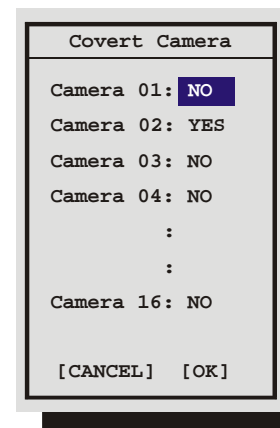


## ☐ Main Menu ® Camera Setup ® Camera Scope

Use this menu to view a live luminance histogram of the currently displayed camera.

### Luminance Histogram

A Luminance Histogram is a graphical representation of how many times each gray-level value occurs in an image.

Use this feature to analyze and optimize the video input signal.

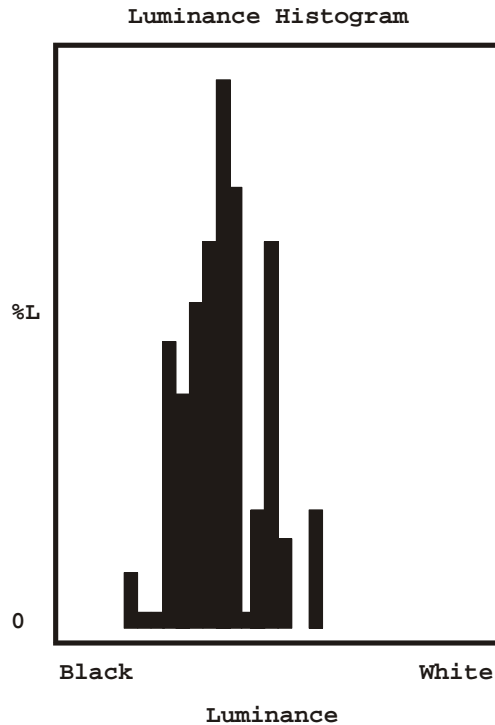

## 3.15 Archive Setup

Data recorded by the unit can be archive to an external archive device.

Use this menu to:

- Turn Background Archiving mode **Off** and **On**.
- Erase the recorded data on a compatible archive device.



## ☐ Main Menu ® Archive Setup ® Background Archive

**Background Archive:** Commands the unit to record data to both the hard disk and the archive device simultaneously.

Select from the following items.

**OFF:** Turns background archiving Off.

**ON:** Turns background archiving On.



## ❑ Main Menu ® Archive Setup ® Erase Archive Medium

Use this feature to erase all of the recorded data on an archive device.

With **Erase Archive Medium** highlighted, press the **Enter** button. If a compatible archive device is connected, a confirmation box will appear, otherwise no action will occur.



## 3.16 Audio Setup

Use this menu to enable or disable the audio feature of the Triplex. Select from:


- OFF
- G.711



## 3.17 Communications

Use this menu to:

- Configure the baud rates and settings for the RS232 ports.
- Configure the network address for the RS485 network.
- Configure the Ethernet address and networks settings.

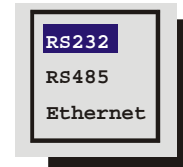


## ❑ Main Menu ® Communications ® RS232

Select the Port you wish to configure and press the ENTER button.

### Port 1


Use this menu to:

- Enable/Disable POTS and configure the Modem initialization string (POTS Setup).
- Adjust the Baud rate.

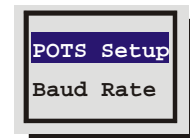

### POTS Setup

The default modem string (shown below) is for use with Hayes Accura 56k, Diamond Supra Express 56k, and 5686 US Robotics modems in their default conditions. Consult with the modem manual before attempting to make any changes. It is strongly recommended that the modem initialization string only be modified by a qualified technician.

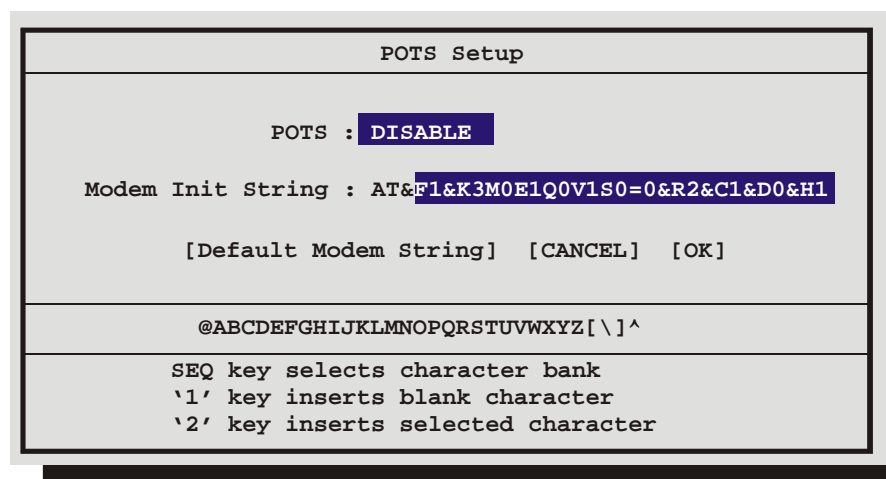


1. With the Modem Init String highlighted, press the **Enter** button to enter the Edit mode. The character bank will appear in the center of the menu.
2. Press the **Sequence** button to select the desired character bank.
3. Rotate the **Shuttle** to navigate the Modem Init String.
4. Rotate the **Jog** to select a character from the character bank.
5. Use the **Number 2** button or rotate the **Shuttle** to insert the desired character from the character bank into the Modem Init String and advance to the next character.
6. Use the **Number 1** button to insert a blank character.
7. When finished, press the **Enter** button.
8. To save the changes and reboot, select **OK**, then press the **Enter** button. The unit will only reboot if changes were made to the Modem Init String.
9. To exit the menu without making changes, select **Cancel**, then press the **Enter** button. Pressing the **Menu** button also exits the menu without making changes.

## Baud Rate

Use this menu to configure the baud rate for Port 1. Rotate the Jog to select a baud rate from the menu.

**Save changes and exit the menu:** Press the **Enter** button.

**Exit the menu without making changes:** Press the **Menu** button.

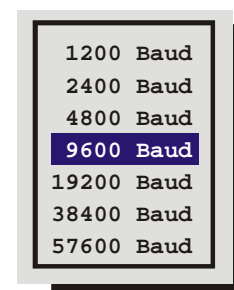

## Port 2


The RS232 port 2 is used for Event Generation and ASCII Text Insertion. See Section 7 for the RS232 Protocol required to perform these functions.

### ❑ Main Menu ® Communications ® RS485

Connect several units to a single keyboard, or vice-versa. Up to 32 units (any combination of multiplexers and keyboards) can be networked together. Use this menu to specify the units unique network address.

**Save changes and exit the menu:** Press the **Enter** button.

**Exit the menu without making changes:** Press the **Menu** button.

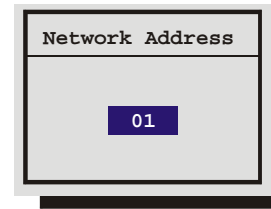


### ❑ Main Menu ® Communications ® Ethernet Settings

An ethernet connection can be used to connect to the unit from a PC for viewing of live or recorded images. Use this menu to configure the Ethernet communications settings. Select from the following:

**Ethernet:** Select Enable or Disable.

**IP Address / Subnet Mask / Gateway:** Consult with a qualified Network Administrator or an MIS professional to configure these settings.

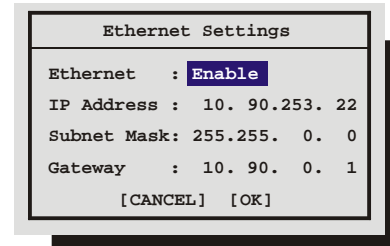


## 3.18 Front Panel Lock

Use this feature to lock the front panel keypad. While locked, the only operational key on the front panel is the **Menu** button. To unlock the front panel, enter the Installer password and return to this menu.

Highlight the item you wish to select.

**Save changes and exit the menu:** Press the **Enter** button.

**Exit the menu without making changes:** Press the **Menu** button.

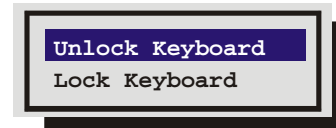

## 3.19 Factory Settings

### Return To Factory Defaults

From the Factory Setting menu, press the **Enter** button. A password box will appear. Enter the Factory Default password. Select **OK**, then press the **Enter** button.

The unit will reboot, returning all settings (except the time and date) to the factory defaults. Due to the large size of the hard disk, the reboot may take several minutes.

### Change Language

From the Factory Setting menu, press the **Enter** button. A password box will appear. Enter the Language password. Select **OK**, then press the **Enter** button.

A menu will appear displaying the available language selections. Rotate the **Jog** to select the desired language.

**Save changes and exit the menu:** Press the **Enter** button.


**Exit the menu without making changes:** Press the **Menu** button.

Factory Default Password	
10 and 16-Channel	8 1 1 1
4-Channel	4 1 1 1

Language Password	
10 and 16-Channel	5 4 1 5
4-Channel	1 4 1 4

## 3.20 Passwords


Use this feature to change the Installer, Operator or Ethernet passwords.

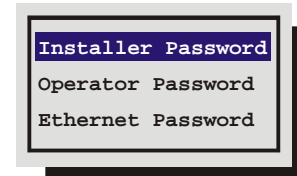

### Changing the Installer or Operator Passwords

To change the password:

1. Highlight the password you wish to change, then press the **Enter** button. A password box will appear.
2. Enter the new password using the **Number** buttons.
3. Highlight **OK**, then press the **Enter** button.
4. Re-enter the password.
5. Highlight **OK**, then press the **Enter** button. The user will be prompted, indicating if the password was entered correctly and changed.

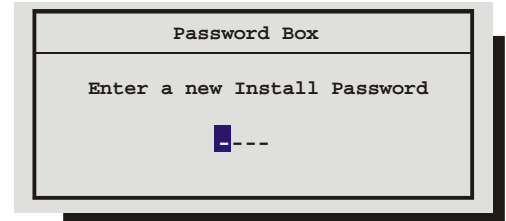

### The Ethernet Password

The Ethernet Password feature limits access to only those users who access the unit using the password feature of WaveReader versions 2.3 or later. When the unit is first setup, the default is **No Password Protection**. Meaning, anyone using WaveReader and accessing with an ethernet connection can connect to the unit.



### Activate The Ethernet Password

1. Enter the new password using the **Number** buttons.
2. Highlight **OK**, then press the **Enter** button.
3. Re-enter the password.
4. Highlight **OK**, then press the **Enter** button. The user will be prompted, indicating if the password was entered correctly and changed.

### Deactivate The Ethernet Password

To return the unit to **No Ethernet Password Protection**, enter the Ethernet Access Reset Password in the password box shown above.




## 3.21 The QuickInstall Menu

### QuickInstall Menu Overview

After installation is complete, it is strongly recommended that, as a minimum, the items in the QuickInstall menu be configured before the unit is used.

All items located in the QuickInstall menu are also found in the Main menu. These items are provided in the separate QuickInstall menu as a convenience for the installer.

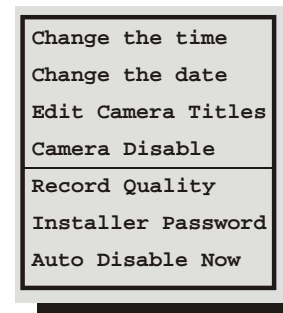

Use the following table to find detailed information about configuring specific items from the QuickInstall menu.

QuickInstall Menu Item	Primary Menu Location	Section In Manual
Change the time	Main Menu → Time/Date → Set Time	3.8
Change the date	Main Menu → Time/Date → Set Date	3.8
Edit Camera Titles	Main Menu → Camera Setup → Camera Titles	3.14
Camera Disable	Main Menu → Camera Setup → Camera Disable	3.14
Record Quality	Main Menu → Record → Record Quality	3.10
Installer Password	Main Menu → Passwords → Installer Password	3.20
Auto Disable Now	Main Menu → Camera Setup → Camera Disable → Auto Disable Now	3.14

## 3.22 The Operator Menu

### The Operator Menu Overview

The Operator menu is provided so that the user has access to a limited number of menu items. These menu items are primarily monitor display setup options, so that the user may “personalize” the monitor displays during their shifts. Other options include video archive setup and changing the operator password.

None of the items are unique to the Operator menu. All items located in the Operator menu are also found in the Main menu.

Sequencing
Time/Date Display
Titles Display
Alarm History
Archive Setup
Operator Password


Use the following table to find detailed information about configuring specific items from the Operator menu.

Operator Menu Item	Primary Menu Location	Section In Manual
Sequencing	Main Menu → Sequencing	3.9
Time/Date Display	Main Menu → Time/Date → Time/Date Display	3.8
Titles Display	Main Menu → Camera Setup → Camera Titles → Title Display	3.14
Alarm History	Main Menu → Alarm → Alarm History	3.11
Video Archive Setup	Main Menu → Archive Setup	3.15
Operator Password	Main Menu → Password → Operator Password	3.20


## 3.23 The SystemView Menu

### The SystemView Menu Overview

The SystemView menu is provided so that users may quickly view global software and hardware settings.

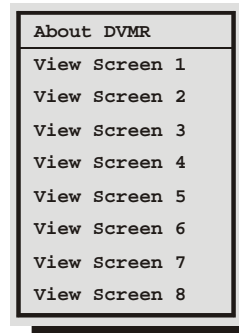

**About DVMR<sup>e</sup> menu:** This menu provides information such as model designation, serial number, software version, software date, boot code version hard disk size, IP address, and hardware address (MAC).

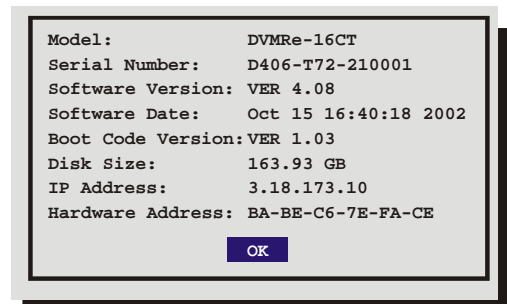

**View Screens 1 through 8:** These menus provide an overview of the units current operating parameters and the menu settings selected by the user or installer. Each View Screen is described in the following tables.

### The View Screens

#### View Screen 1

##### Alarm Input

- **Enable/Disable:** 1 = Enabled, 0 = Disabled
- **Normally Open or Normally Closed:** 0 = Open, C = Closed
- **Macro:** Macro number if activated

##### Alarm Action

- **Freeze:** 1 = Freeze, 0 = No Freeze
- **Cameras:** Primary camera in alarm and three associated cameras
- **Relay:** 1, 2, 1+2, or None

#### View Screen 2

##### Camera

- **Enable/Disable:** 1 = Enabled, 0 = Disabled
- **Signal Gain:** AGC setting from 1 through 10
- **Covert Camera:** Yes or No
- **Camera Title**

##### Videoloss Action

- **Relay 1:** 1 = Enabled, 0 = Disabled
- **Relay 2:** 1 = Enabled, 0 = Disabled
- **Buzzer:** 1 = Enabled, 0 = Disabled



### View Screen 3

#### Motion Detection

- **Enable/Disable:** 1 = Enabled, 0 = Disabled
- **Activity or Intrusion Detection:** I = Intrusion, A = Activity
- **Sensitivity:** 1 through 10
- **Relay Output:** None, 1, 2, 1+2
- **Link to Event:** Yes or No
- **Rejection Ratio:** High, Medium, or Low
- **Target Size:** 1 through 256
- **Alarm Camera:** 1 through 4, 10 or 16

### View Screen 4

#### Record Rate

- **Event Camera Settings:** T = Timelapse, E = Event, ET = Event and Timelapse
- **Timelapse Record Rate:** In pictures per second (pps).
- **Event Record Rate:** In pictures per second (pps).
- **Pre Event Duration:** 0 to 5 seconds.
- **Post Event Duration:** 0 to 200 seconds.
- **Activity Record Rate:** In pictures per second (pps).
- **Record Quality:** High, Medium, or Low.

### View Screen 5

#### Record Timer

- **DAY:** 1-31, Mon, Tue, Wed, Thu, Fri, Sat, Sun, Mon-Fri, Sat-Sun, Mon-Sun
- **Start:** Time (HH:MM)
- **Stop:** Time (HH:MM)
- **Macro:** Macro Number, On or Off

### View Screen 6

- **Time and Date Display A:** On or Off.
- **Time and Date Display B:** On or Off.
- **Time Format**
- **Date Format**
- **Titles Display A:** On or Off.
- **Titles Display B:** On or Off.
- **Master Clock:** Yes or No.
- **Multiscreen Dwell:** In seconds.
- **Full Screen Dwell:** In seconds.
- **Record Mode:** No Overwrite, Write Once, or Continuous.
- **Auto Disable:** On or Off.
- **Indicate Detection:** On or Off.

## View Screen 7

- **Global Buzzer:** On or Off.
- **Live Alarm Buzzer:** On or Off.
- **Video Loss Buzzer:** On or Off.
- **Playback Buzzer:** On or Off.
- **Relay 1:** Normally Open or Normally Closed.
- **Relay 2:** Normally Open or Normally Closed.
- **Alarm Latch:** T = Transparent, L = Latched, TO (020) = Timed Out (Time)
- **Alarm Record Mode:** Interleaved, Exclusive, or No Change.
- **Full Screen Alarm:** Yes or No. This feature is not available on the 4-Channel units.
- **Global Alarm Record Rate:** In pictures per second (pps).
- **Pre Alarm Duration:** In seconds.
- **Archive Alarm:** Enable or Disable.

## View Screen 8

- **Background Archive:** On or Off.
- **Monitor Setup:** Single or Dual.
- **Baud Rate Port 1**
- **Baud Rate Port 2**
- **Network Address**
- **Ethernet:** Enable or Disable.
- **POTS:** Enable or Disable.
- **Language:** English, German, or French.
- **Keyboard Lock:** On or Off.
- **Record Lock:** On or Off.

# 4 Alarms

---

## 4.1 Alarm Input

Alarm devices are connected via the Alarm PCB on the back panel of the unit (see section 1.7). Each Alarm Input corresponds with the Camera Input of the same number. Alarm input to camera number assignments can be changed on 10 and 16-channel models. See Alarm Action menu (section 3.11).

## 4.2 Alarm Output

**Front Panel Alarm LED:** The LED located to the left and above the Alarm button is lit for the duration of the alarm.

**Internal Buzzer:** The internal buzzer is activated until it is Silenced and Acknowledged. This feature can be turned off in the menu system (see Buzzer Setup in section 3.11).

**Monitor Displays:** Discussed below in the **On-screen Displays During Alarms** section.

**Output Relays:** The alarm output relays are active for the duration of the alarm. This feature is configured in the menu system (see Alarm Action and Relay Configuration in section 3.11) and can be deactivated.

**Macro Activation:** Unit can be configured in the menu system to activate a macro when an alarm is detected.

**Preset PTZ Camera commands:** Unit can be configured in the menu system to send preset commands to specific cameras when an alarm is detected.

**Record Rate:** Record Rate can be increased by recording at the Alarm Record Rate (see section 3.10) and by Interleaved or Exclusive Recording (see Alarm Record mode in section 3.11).

## 4.3 Alarm Acknowledge


Pressing the **Alarm** button acknowledges to the unit that the alarm has been recognized and silences the internal buzzer. This does not clear the alarm condition.

## 4.4 On-screen Displays During Alarms

### 10 and 16-Channel Units


#### Monitor-A in Live Multiscreen Mode

**Single Alarm:** When a single alarm is received, the unit changes to 4-way display containing the camera in alarm, and three associated cameras. The three associated cameras are defined as a group in the menu system (see Alarm Action in section 3.11). The top left cameo displays the camera in alarm.

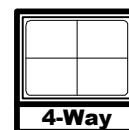

**Single Alarm**

**Second Alarm:** When a second alarm is received, the unit changes to a 10-way multiscreen, displaying the alarm cameras in the top two cameos. The associated cameras are displayed in the remaining cameos.

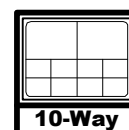

**Second Alarm**

**Third Alarm:** When a third alarm is received, the unit changes to a 9-way multiscreen, displaying the alarm cameras in the top three cameos. The associated cameras are displayed in the remaining cameos.



**Third Alarm**

**Other display options include:**

- A full screen display of a single camera in alarm, with a sequenced full screen display for additional cameras in alarm. This option is selectable in the menu system (see Full Screen Alarm in section 3.11).
- Freeze camera display at the time the alarm was received.

**Monitor-B Display During Alarm**

**Single Alarm:** Unit switches to a full screen display of the camera in alarm.

**Additional Alarms:** Unit switches to a sequenced display of all cameras in alarm.

**4-Channel Units**

**Single Alarm:** Unit switches to a full screen display of the camera in alarm.


**Additional Alarms:** Unit switches to a sequenced display of all cameras in alarm.

**4.5 Alarm Operations During Playback**

**Live Alarms Displays**

**Single Alarm:** Unit switches to a full screen display of the camera in alarm on Monitor B.

**Additional Alarms:** Unit switches to a sequenced display of all cameras in alarm on Monitor B.

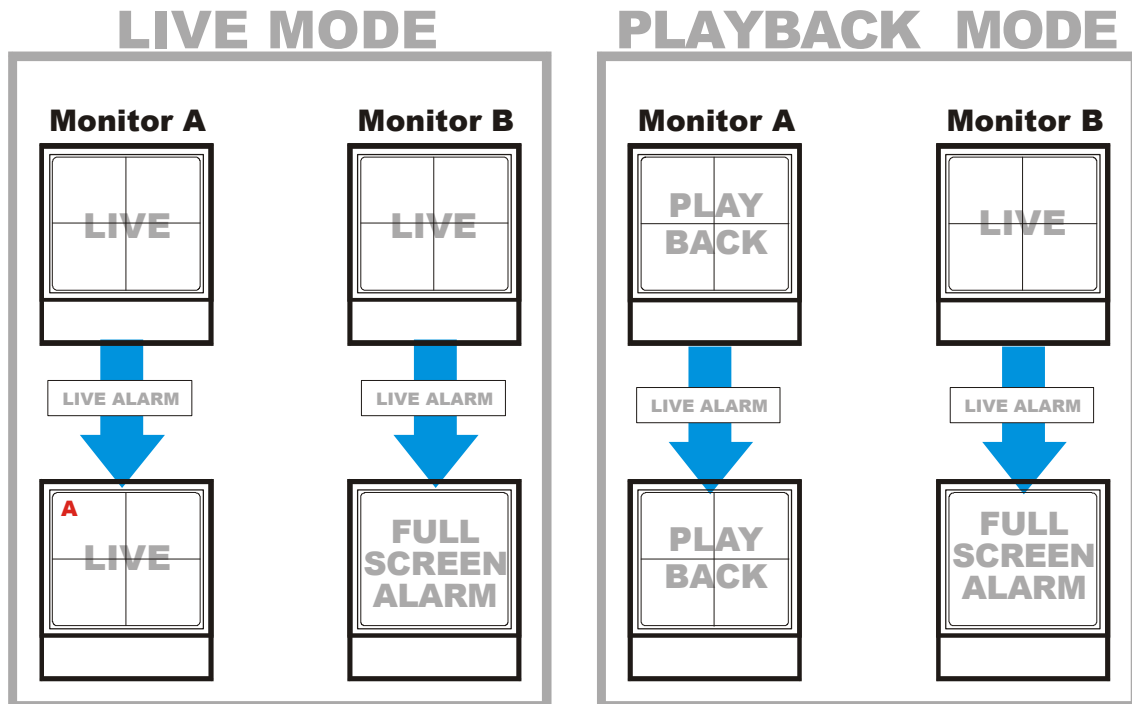

## Recorded Alarms

**Internal Buzzer:** During playback, the internal buzzer is activated until it is silenced and acknowledged. This feature can be turned off in the menu system (see **Playback Buzzer**, Buzzer Setup in section 3.11).

**Front Panel Alarm LED:** The LED located to the left and above the **Alarm** button is lit for the duration of the alarm.

**Monitor-A Multiscreen:** Each camera in alarm is indicated on-screen by a flashing red “A” in its cameo. Alarm LED lights to indicate an alarm condition. There is no change in the playback (or Triplex) multiscreen based on playback of recorded alarms.

## 4.6 Alarm History Box

The Alarm History feature provides a list of the 100 most recent alarms. View the Alarm History Box by accessing the menu system, and selecting **Operator** ® **Alarm History**. The Alarm History Box can also be found under **Main Menu** ® **Alarm** ® **Alarm History**. For detailed information about viewing the Alarm History Box see Alarm History in section 3.11.


## 4.7 Searching For Recorded Alarms

See section 5.

# 5 Searching

The DVMR<sup>e</sup> Triplex provides a powerful search interface to access video files stored on the hard disk or an external archive device.

## Search Menu Overview

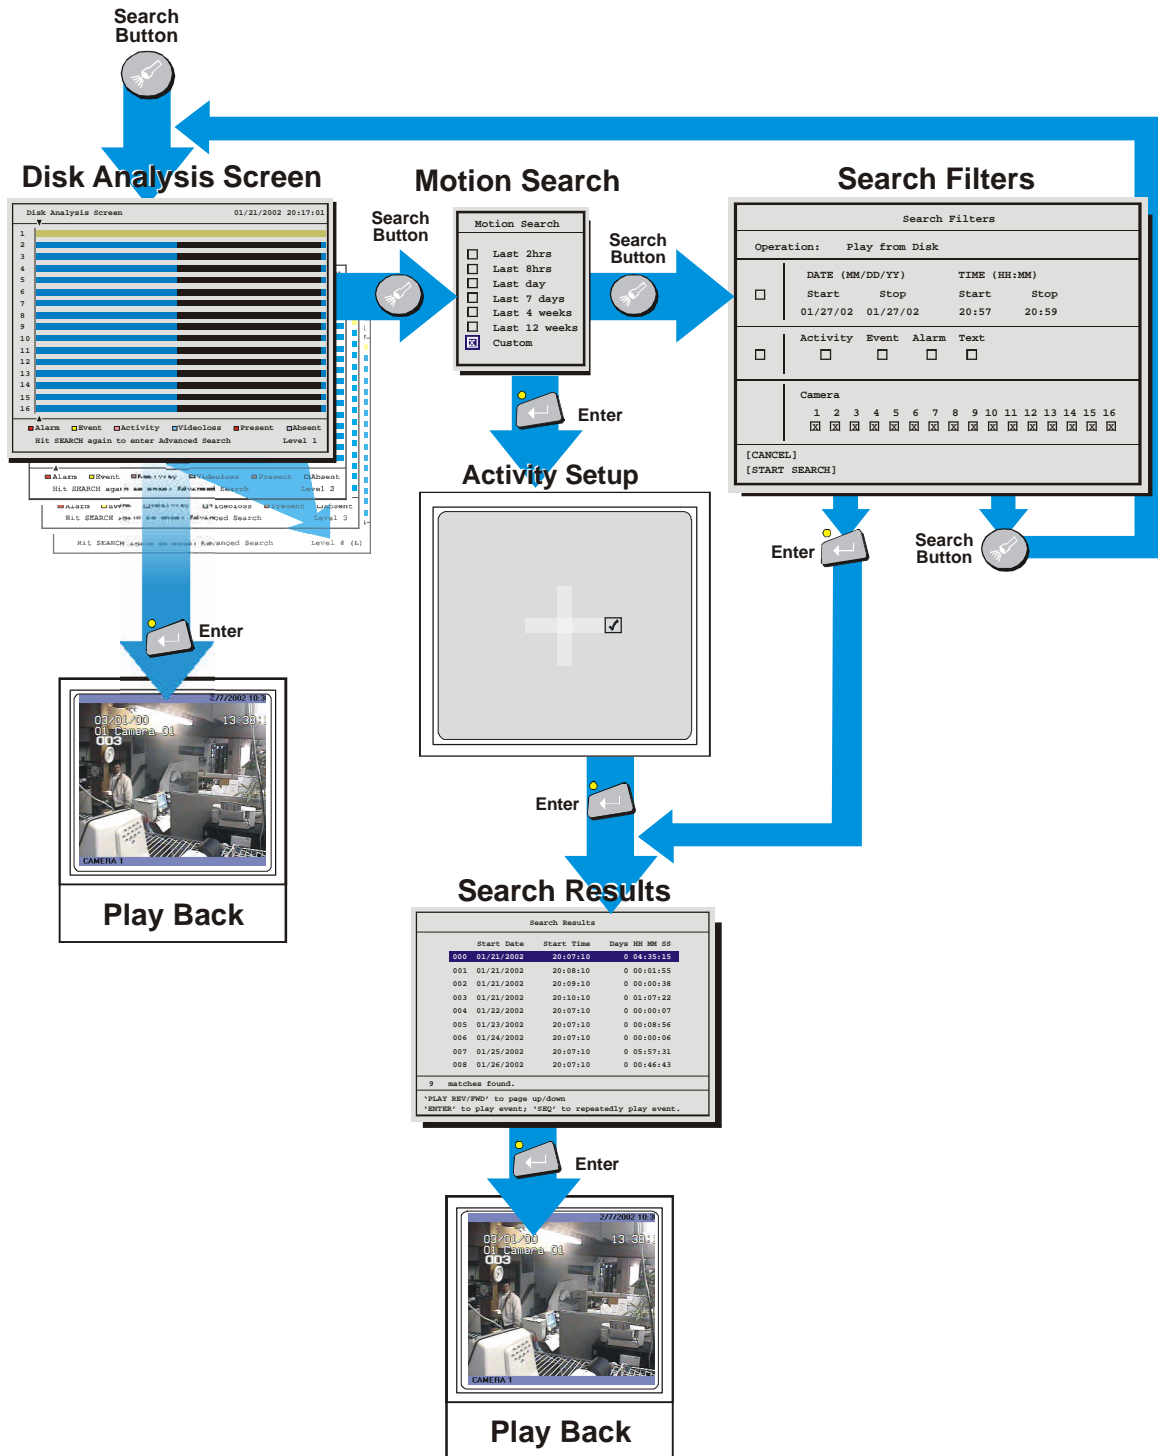


## 5.1 Disk Analysis Screen

Begin by pressing the **Search** button. The Disk Analysis Screen will appear. This screen shows a graphical representation of the recorded video stored on the internal hard disk.




**Search Button**

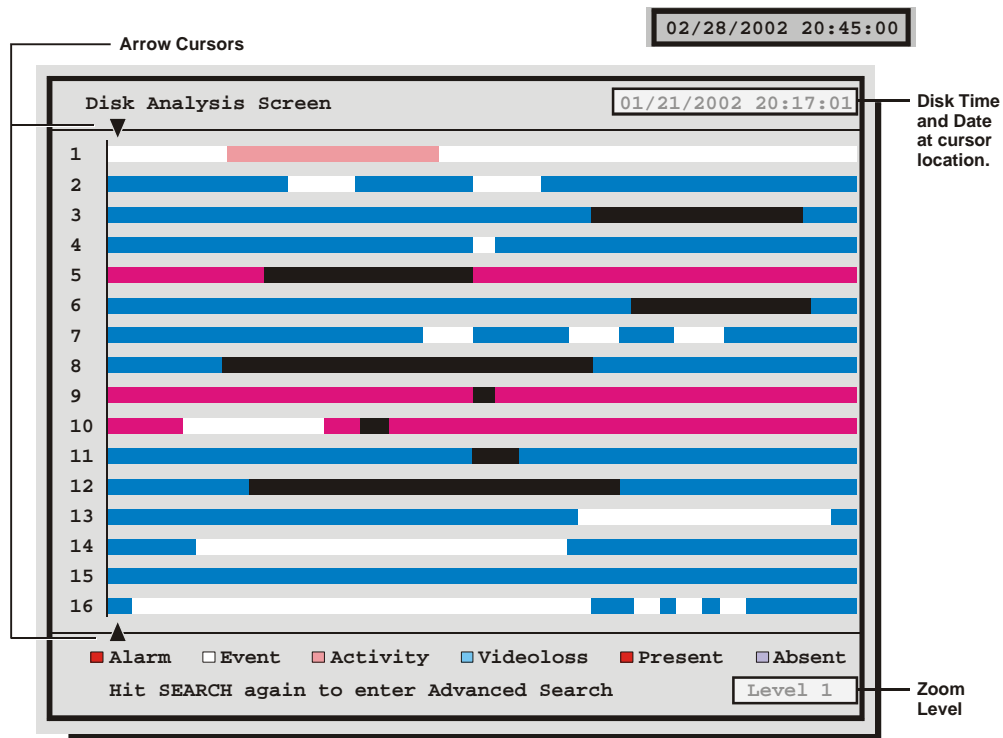

Rotating the **Jog** moves the two arrow cursors across the representation of the recorded video. As the cursors move across the screen the corresponding disk time is indicated in the upper right of the screen. The video representations are color-coded by category. Rotating the **Shuttle** expands (Zooms) the display. The Lowest level (most detail) is indicated on screen with an **(L)**. Pressing the **Enter** button will start Playback from the cursor location.

## 5.2 Motion Search

Pressing the **Search** button a second time will bring up the Motion Search menu. This menu performs a motion search with six preset time parameters and a custom search option. Rotate the **Jog** to navigate and the **Shuttle** to select a specific parameter. Selecting the **Custom** option and pressing the **Enter** button starts playback and brings up another window with Start/Stop, Time/Date options. These options provide the parameters to focus the search to a specific time period.

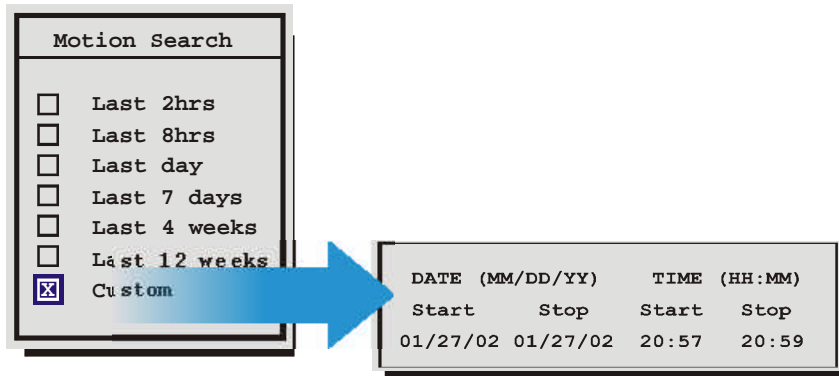


Selecting any of the other options and pressing **Enter** starts playback and displays the **Motion Search Setup Screen**.



This screen overlays the current playback video and allows the user to enable or disable motion detection on the screen within blocks that form a 16 x 16 grid.

Pressing the **Function** key while in this screen overlays a help screen with all the available commands.

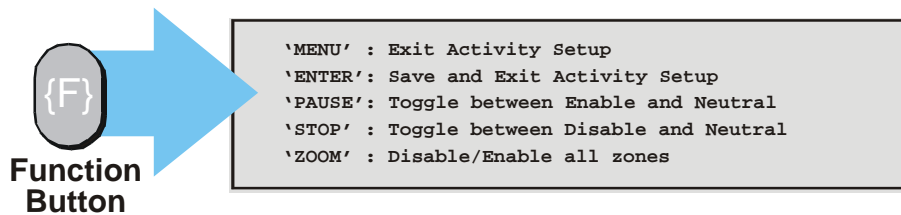

Pressing **Enter** upon completion of the activity setup will start the search and launch the **Search Results** window. See section 5.4 for operating instructions.



## 5.3 Search Filters

Pressing the **Search** button a third time brings up the Search Filters Menu. Use the Search Filters menu to specify:

- The type of operation to be performed: **Play from Disk**, **Play from Archive**, **Copy from Disk to Archive**, and **Copy from Archive to Disk**.
- The Start and Stop date of the search.
- The Start and Stop time of the search.
- Searching for recorded activity, events, or alarms.
- Searching for a text string.
- Which cameras to search inclusively or exclusively.

The following options are available when an archive device is connected:

1. Play from Disk.
2. Play from Archive.
3. Copy from Disk to Archive.
4. Copy from Archive to Disk.

Hit Camera buttons to select/deselect individual cameras. Use the Zoom button to globally select/deselect cameras to search.

### Selecting Search Parameters

1. Rotating the Jog to navigate, highlight the **box** adjacent to the parameters that you wish to modify.
2. Once in the Parameter Box, use the **Shuttle** to navigate through the fields and the Jog to change the values.
3. To activate the parameter, use the **Shuttle** or the **Enter** button to place an **[X]** in the check box.
4. When finished, use the **Jog** to navigate to another parameter.

## 5.4 Search Results

### Activate Search

From the Search Filters menu, use the **Jog** to navigate to the **Start Search** parameter. With the **Start Search** parameter highlighted, press the **Enter** button to begin the search operation. When finished searching, the Search Results window will appear. A maximum of 200 results can be displayed per search.

Follow the directions on-screen to select, archive, playback, etc.

Search Results			
	Start Date	Start Time	Days HH MM SS
000	01/21/2002	20:07:10	0 04:35:15
001	01/21/2002	20:08:10	0 00:01:55
002	01/21/2002	20:09:10	0 00:00:38
003	01/21/2002	20:10:10	0 01:07:22
004	01/22/2002	20:07:10	0 00:00:07
005	01/23/2002	20:07:10	0 00:08:56
006	01/24/2002	20:07:10	0 00:00:06
007	01/25/2002	20:07:10	0 05:57:31
008	01/26/2002	20:07:10	0 00:46:43

9 matches found.

'PLAY REV/FWD' to page up/down  
'ENTER' to play event; 'SEQ' to repeatedly play event.

Some options may be unavailable depending on the type of search performed. These options are not displayed.

When archiving, the unit will not allow the amount of selected data to exceed the amount of space available on the target medium.

Press the **Menu** button to exit the Search Results window without making a selection.

Hitting the **Enter** button will play the selected search result.

Hitting the **Enter** button again while in playback will cause the next selection from the search list to be played.

Press the **Sequence** button to repeatedly play the selected event.

# 6 Technical Specifications

<b>General</b>	
External Power Supply	12 Volt DC. 60 Watt (5 Amp)
Connector	2.1mm barrel connector, center positive.
Power Consumption	35 Watt nominal (single disk).
Operating Temperature Range	Operating: 0 to 40°C. Storage: -20 to +60°C.
Relative Humidity Range (Non-Condensing)	Operating: 10% to 80%. Storage: 10% to 95%
Dimensions	17.5 x 14 x 1.7 Inches. 1U, 19 inch rack unit.
Weight	9 Lbs.

<b>Connections</b>	
10/100 Ethernet Port	RJ-45 Connector.
RS232 Port 1	DB-9 Male Connector.
AUX Port	DB-9 Male Connector.
RS232 Port 2	RJ-45 Connector.
Camera Inputs	BNC connectors. Auto Terminating. Color & Mono.
Monitor-A Output (Y/C)	4-pin Mini-DIN Connector.
Monitor-B Output (Y/C)	4-pin Mini-DIN Connector.
Monitor-A Output (Composite)	BNC Connector
Monitor-B Output (Composite)	BNC Connector
RS485 Port	Two Looping RJ-45 Connectors
SCSI Port	50 pin, High Density SCSI-2 female connector.
Alarm I/O Port	Use Supplied DB-25 PCB connector.

<b>Video</b>	
Video Signal Input	0.5 to 2.0 Volts peak-to-peak with Automatic Gain Control.
Video Signal Output	1 Volt peak-to-peak into 75-Ohm.
Input Termination	75-Ohm (Auto Terminating)
Display Memory	4 Megabytes
Resolution	Horizontal: 720 Pixels. Vertical: 484 Lines (576 for PAL).
Gray Scale	256 levels
Colors	Y:U:V 4:2:2, 16.8 Million Colors
Compression Standard	Wavelets

<b>Audio</b>	
<b>Audio Input</b>	315mV, 40k Ohms. Unbalanced.
<b>Audio Output</b>	315mV, 600 Ohms. Unbalanced.

<b>Alarms</b>	
<b>Inputs</b>	1 per camera.
<b>Relay Configuration</b>	User programmable as Normally Open or Normally Closed.
<b>Record Priority</b>	Interleaved, Exclusive, or No Change.
<b>Alarm Status Indicators</b>	Relay Outputs, On-screen Indicators. Status Retrievable via RS232 port.

<b>Motion Detection</b>	
<b>Zones Per Camera</b>	256: 16 x 16 grid.
<b>Sensitivity Settings</b>	10 levels
<b>Gray Levels Per Zone</b>	256 levels
<b>Motion Detection Status Output</b>	Relay Outputs, Link to Alarms, Link to Events, On-screen Indicators. Status retrievable via RS232 port.

<b>Part Numbers</b>	
<b>Remote Keyboard</b>	CBR-KB3, CBR-KB3/J, KTD405. Includes motorized pan, tilt, and zoom controls.
<b>Rack Mount Kit</b>	CBR-RK6. 1U Height. Part Number: 0110-R601
<b>Replacement Manual</b>	0150-0193C.

# 7 RS232 Event Generation/Text Insertion Protocol

## 7.1 Message Structure

The **Delimiter** byte signals the start of a new message, and has a value of 0xFF.

The **Class** and **Command** fields identify the type of message.

The **Data Length** is a 16-bit value indicating the number of bytes in the **Data** portion of the message. Data Length is sent using Intel byte ordering (Little Endian).

The **Check Sum** byte is the result of ORing all the bytes in the message.

Delimiter
Class
Command
Data Length
Data
Check Sum

## 7.2 Message Type

One message is currently supported to store text along with recorded video.

### **CMD\_ADD\_TEXT**

**Class** byte is 0x14.

**Command** byte is 0x40.

**Data Length** is the number of data bytes in the message (from 2 to 502).

**Camera** byte indicates the camera associated with the text. The valid range is from 0 to 15.

**Event** byte usage is described in the following section.

**String** field contains text characters. The string can be from 0 to 500 characters in length.

0xFF
0x14
0x40
Data Length[0]
Data Length[1]
Camera
Event
String[0]
String[1]
:
String[n-1]
Check Sum

## 7.3 Event Field

The two least significant bits are currently used. All other bits should be zero.

MSB 7							LSB 0
0	0	0	0	0	0	End	Start

### **A – Event 0x00**

If both the start and end bits are clear, the associated text will be stored with the next recorded field for that camera. That camera's record rate will not be changed.

### **B – Event 0x01**

If only the start bit is set, the associated text will be stored with the next recorded field for that camera. This will cause the selected camera, as well as any pre-event fields to be recorded at the Event Record Rate\*.

### **C – Event 0x02**

If only the end bit is set, the associated text will be stored with the next recorded field for that camera. This will start the post-event timer\*\* after which, the selected camera will resume recording at the normal record rate\*.

## **D – Event 0x03**

If both the start and end bits are set, the associated text will be stored with the next recorded field for that camera. The post-event timer will be started\*\* after which the selected camera will resume recording at the normal record rate\*.

\*If no alarms are present.

\*\*If enabled.

# 8 RS232 Remote Control Protocol

---

The unit supports two different communication types:

- Remote Front Panel Button Emulation
- Remote Configuration and Status

## 8.1 Front Panel Button Emulation

### Data Structure

Byte 1: 0xFF  
Byte 2: 0x55  
Byte 3: Front Panel Button Code

### Description

Byte 1 and 2 are header bytes.

Byte 3 contains the code for a specific front panel button.

The different buttons and their corresponding codes are as follows.

No Button Pressed	0
Record	1
Play	2
Stop	3
Alarm	4
Freeze	5
Zoom	6
Sequence	7
16 Way Multiscreen	8
Camera 1	9
Camera 2	10
Camera 3	11
Camera 4	12
Camera 5	13
Camera 6	14
Camera 7	15
Camera 8	16
Camera 9	17
Camera 10	18
Camera 11	19
Camera 12	20
Camera 13	21
Camera 14	22
Camera 15	23
Camera 16	24
Reserved	25 - 40
Menu	41
Enter	42

Reserved	43
Macro	44
Reserved	45-49
Monitor B	50
Reserved	51-63
Left Arrow	64
Right Arrow	65
Up Arrow	66
Down Arrow	67
Reserved	68-74
Alarm and Sequence	75
Alarm and Camera 1	76
Alarm and Camera 2	77
Alarm and Camera 3	78
Alarm and Camera 4	79
Alarm and Camera 5	80
Alarm and Camera 6	81
Alarm and Camera 7	82
Alarm and Camera 8	83
Alarm and Camera 9	84
Alarm and Camera 10	85
Alarm and Camera 11	86
Alarm and Camera 12	87
Alarm and Camera 13	88
Alarm and Camera 14	89
Alarm and Camera 15	90
Alarm and Camera 16	91
Reserved	92-110
Search	111
Frame Reverse	112
Frame Forward	113
Play Reverse	114
Stop	115
Play Forward	116
Monitor A	130
2 Way Multiscreen	131
4 Way Multiscreen	132
6 Way Multiscreen	133
7 Way Multiscreen	134
9 Way Multiscreen	135
10 Way Multiscreen	136
13 Way Multiscreen	137

## 8.2 Configuration and Status

### i) Data structure

Byte 1: 0xFF  
 Byte 2: Command Type  
     0xAA: (SET) Update DVMRe with data.  
     0xBB: (GET) Extract data from DVMRe.  
 Byte 3: Data Length (n)  
 Byte 4: Data Type  
     0x61: Restart DVMRe  
     0xFE: Send configuration data to DVMRe  
     0x09: Read Alarm History from DVMRe  
     0xFF: Read configuration and status data from DVMRe  
 Byte 5: Data byte 1  
 Byte 6: Data byte 2  
     :  
     :  
 Byte x: Data byte n

### ii) Sending data to the DVMRe

#### a) Restart DVMRe Triplex

This command will restart the DVMRe Triplex.

Byte 1: 0xFF  
 Byte 2: 0xAA  
 Byte 3: 0  
 Byte 4: 0x61

#### b) Send data to DVMRe Triplex

Configuration data can be sent to the DVMRe Triplex, to change the way it operates. The data is arranged in the form of 16 byte blocks, numbered from 1 to 213. Blocks 182, 183 and 185 are status blocks, and hence cannot be written to. For details about the contents of each block, contact GE-Interlogix and request the **Block Data Structure** for the DVMRe Triplex.

Byte 1: 0xFF  
 Byte 2: 0xAA  
 Byte 3: 17  
 Byte 4: 0xFE  
 Byte 5: Block Number  
     (1-181, 184, 186-213)  
 Byte 6: data[0]  
     :  
     :  
 Byte 21: data[15]

After sending a block or series of blocks, block number 255 must be updated to signal the end of the configuration session. All data bytes for block 255 must be set to 0.

### iii) Requesting data from the DVMRe

When a message of type 0xBB is sent to the DVMRe Triplex, it will respond by sending 16 bytes of requested data.

#### a) Read Alarm History List

Byte 1: 0xFF  
 Byte 2: 0xBB  
 Byte 3: 0  
 Byte 4: 0x09

When the "Read Alarm History List" message is received by the DVMRe Triplex, it responds by sending a start byte 0xFF, followed by ASCII strings for every alarm event in its alarm history list, and a stop byte, 0xFF. Each string is formatted as follows:

dd.bmm/ddbhh:mm:ssbaa<CR><LF>

dd: index number (00 - 99)  
 b: space character  
 mm: month (01-12)  
 dd: day (01-31)  
 hh: hours (00-23)  
 mm: minutes (00-59)  
 ss: seconds (00-59)  
 aa: alarm number (01-16)  
 <CR> Carriage return (0x0D)  
 <LF> Line feed (0x0A)

**Example:** 03. 11/27 22:48:58 15

#### b) Read data from DVMRe Triplex

Configuration and status data can be read from the DVMRe Triplex. The data is arranged in the form of 16 byte blocks, numbered from 1 to 213. For details about the contents of each block, contact GE-Interlogix and request the **Block Data Structure** for the DVMRe Triplex.

Byte 1: 0xFF  
 Byte 2: 0xBB  
 Byte 3: 1  
 Byte 4: 0xFF  
 Byte 5: Block Number 1-213 or 255 if all blocks are requested.

The DVMRe Triplex responds to the "Read data" request by sending all the requested data bytes consecutively, without any start or stop bytes.

A total of either 16 bytes or 3408 bytes will be transmitted, depending on whether a single block or all the blocks were requested.



# 9 Macro Tables

---

---

Photo copy this page and use it to keep a record of the programmed macro functions.

## 9.1 Macro Functions Table

<b>Macro Number</b>	<b>Description</b>
1	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
<b>Function + Sequence</b>	Daylight Savings Time: Sets clock ahead one hour in April, and back one hour in October.

## 9.2 Scheduled Macro Table

<b>Event</b>	<b>Day</b>	<b>Time</b>	<b>Macro to Run</b>
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			
13			
14			
15			
16			
17			
18			
19			
20			

# 10 Warranty and Service

---

## 10.1 Factory Service



**Warning:** Do not open the top cover or attempt to service the unit, as this may expose you to dangerous voltages and other hazards. Programmer maintenance of this unit is limited to external cleaning and inspection. Refer all servicing to qualified personnel.

If the unit requires factory service, contact the dealer who supplied the unit to you for the correct procedures on returning the unit to the factory or the nearest factory service center.

If the dealer is not available, contact the manufacturer of the unit as detailed below and request a Return Material Authorization number (RMA). The unit's serial number must be provided before a RMA number can be issued. Units returned to the factory for service must have freight and insurance prepaid, and must show the RMA number clearly on all shipping documents. The failure symptoms must be clearly described by the operator and enclosed with the unit together with a copy of the original suppliers invoice. Failure to comply with these instructions will delay service of the unit, and may result in the unit not being accepted by the Repair Center.

### Factory Address

GE-Interlogix, Kalatel Division  
Attention: Repair Center  
3197-C Airport Loop Drive  
Costa Mesa, CA. 92626  
United States of America  
Telephone: 800-343-3358 (7:00 AM to 4:30 PM, Pacific Time)  
In Oregon: 541-754-9133  
Fax: 541-754-7162 (24 hours a day)

For warranty information, see the following page.

## 10.2 Warranty and Return Information

GE-Interlogix warrants all of its equipment for three years from the date of purchase. This warranty covers any defects in materials and workmanship. Equipment failures that are due to improper installation, modification, abuse, or acts of nature will not be covered by this warranty. The repair department will evaluate all equipment returned for repair to determine warranty coverage. The Tech Support Manager will resolve any questions that may arise during evaluation to make a final determination.

**Note:** The three-year warranty does not apply to the following products:  
MobileView® and the monitor CRT, which carry a 12-month warranty from the date of purchase.

The warranty specifically covers any defects in material and workmanship and does not cover equipment that has been abused, damaged, or modified.

**For all warranty repairs**, GE-Interlogix will cover all costs, including parts, labor, and shipping. Repaired equipment will be returned via the same method of shipment in which it was received. If a customer requests a faster return shipment, the difference will be charged.

**For all non-warranty repairs**, the customer will be billed for parts, labor, and shipping. Labor will be billed in half-hour increments.

**Note:** Customers requesting an estimate prior to repair will be notified by phone. If they cannot be reached, they will be notified by fax. If we are unable to reach the contact person for repair authorization after one phone attempt and two fax attempts, the equipment will be returned without being repaired. We will hold equipment no longer than two weeks.

### Advance Replacement Policy

When an advance replacement is required, we will send the customer replacement equipment from our stock and receive the returned product in exchange. The received equipment will be evaluated and the repair department will determine whether it is a warranty replacement. If it is non-warranty, see our repair policy above for details. The following guidelines will be used for all advance replacements:

- Fewer than 45 days from purchase, GE-Interlogix will replace the product with new equipment.
- From 45 days to 1 year from purchase, GE-Interlogix will replace the product with refurbished equipment.
- From 1 year to 3 years from purchase, the product must be sent in for repair. Advance replacements will be sent for a fee of \$100.

If you have questions about this policy, please contact GE-Interlogix Kalatel Division's RMA Department at 800-469-1676.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>