 




Wired Chime

Installation Instructions for Wired Chime

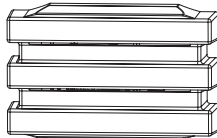

Power Requirement: 16VAC @ 180mA maximum

Included hardware:

- (1) Chime
- (4) Plastic screw anchors
- (4) 4x25mm screws (for anchors)

Required Tools:

Wire stripper/cutter, small flat blade screwdriver, Phillips screwdriver, drill, and drill bit (5/32")

Removing Front Cover

The following instructions explain how to remove the front cover of the wired chime.

 
1. With the cover face down hold the front cover while sliding the back plate to the left.
2. Using your finger gently pry up on the back cover plate. The back plate with the paper product label should come away easily.

Chime Tune Setting

The following instructions explain how to change the tune on the wired chime.

1. Remove the chime cover and locate the two 3 position dip switches shown below.

Front Door Dip Switch

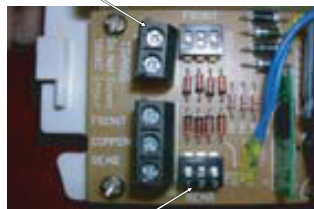

Rear Door Dip Switch

2. Select the desired chime sound from the table below.

Chime Sound Table

Position	1	2	3
Westminster	OFF	OFF	ON
Ding Dong	OFF	ON	OFF
Knock	ON	OFF	OFF
Bronze Chime	OFF	ON	ON
Cuckoo Clock	ON	OFF	ON
Foghorn	ON	ON	OFF
Gong	ON	ON	ON

ON: Switch On (up)

OFF: Switch Off (down)



WARNING: Do not exceed 16VAC input to the chime.

Installation

 
1. Remove the cover from the old door chime, disconnect the transformer and pushbutton wires (label them for

reference). Remove the old chime.

2. Install new chime

- a. Remove the front cover from the chime.
- b. Pull the pushbutton and transformer wires through the slot in the base of chime.
- c. Mark the 4 holes using the base as a template with the arrow pointing up.
- d. If using the screw anchors, drill 4 - 5/32" holes and insert the plastic screw anchors. Otherwise drill a 3/64" pilot hole for the screws.
- e. Mount the chime base using the 4x25mm screws.
- f. Attach the two wires from each pushbutton as shown in the wiring diagram. For each push button, one wire should be connected to the "Common" screw and one wire should be connected to the "Front" or "Rear" screw.
- g. Attach the wires from the chime transformer to the "transformer connections" as shown in the wiring diagram. (There is no polarity requirement).
- h. Slide the front cover on the back plate of the chime.

Wiring Diagram

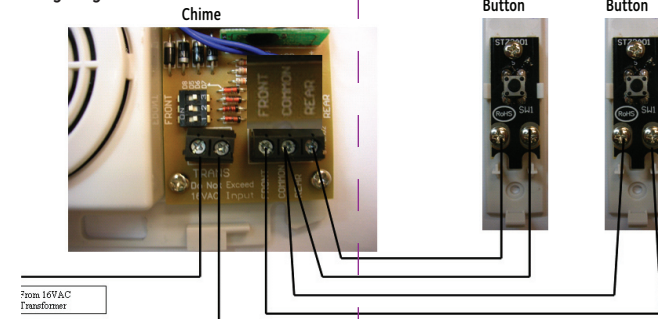

For technical support contact Jasco Products Company at 1-800-654-8483 or www.jascopeproducts.com
Made in China
Hecho en China



is a trademark of General Electric Company and is used under license to Jasco Products Company LLC, 10 E. Memorial Road, Oklahoma City, OK 73114.
www.jascopeproducts.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>