



TV User's Guide



We bring good things to life.

Important Information

CAUTION:

To prevent electric shock, match wide blade of plug to wide slot, fully insert.

ATTENTION:

Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

Please fill out the product registration card and return it immediately. Returning this card allows us to contact you if needed.

Keep your sales receipt to obtain warranty parts and service and for proof of purchase. Attach it here and record the serial and model numbers in case you ever need them. The numbers are located on the back of the TV.

Model No. _____

Serial No. _____

Purchase Date: _____

Dealer/Address/Phone: _____

Table of Contents

Important Information	Warning, Product Registration _____	i
Quick Guide to Your TV	Startup _____	2-3
	Hook up your TV, Plug in the TV, Put Batteries in the Remote, Turn on the TV, Place Channels in Memory, Set the Time	
	Basic Tour of the Remote _____	4
	Power, Volume, Channel, Special and Menu Buttons	
	Menu Basics _____	5
	Colors, Menu Buttons, Moving through the Menus	
Using Your Remote	With Remote Buttons _____	6-7
Adjusting Your TV	Overall Picture _____	8
	Picture Settings _____	9
	Color, Tint, Brightness, Sharpness, Autocolor, Picture Reset	
	Sound Settings _____	10
	Stereo, Tone	
Using Advanced Features	Placing Channels in Memory/Autoprogram _____	11
	Naming the Channels _____	12
	Setting the Sleep Timer _____	13
	Setting the Alarm Clock _____	14
	Watching Closed Captioning _____	15
	Selecting a Language _____	15
	Setting Your TV for Antenna or Cable _____	16
References	Front Panel Buttons _____	17
	Displays on the Screen _____	18
	Trouble Checks _____	19-20
	Order Form for Parts _____	21-22
	Limited Warranty _____	23
	Glossary _____	24
	Index _____	25

 
Quick Guide to Your TV

Startup

The steps below will get your TV connected and ready for watching. *For more details, see the page numbers listed.*

1. Hook up your TV

Details are in the Connections Guide.

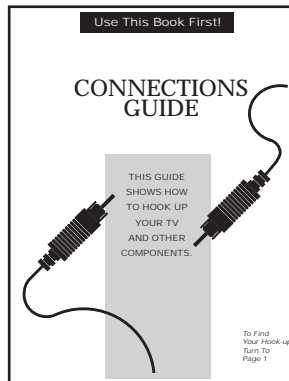


Hook up any antennas, cables or other equipment to your TV before you follow the steps below.

CAUTION: Matching stands were designed to be used with the table model TVs included in this book. The recommended stands are provided with hardware to secure the TV to the stand so that it cannot be easily pulled off or tipped over. Your GE dealer can help you choose the appropriate stand for your TV.

Stands are not available by mail order. To locate your nearest GE dealer call 1-800-447-1700.


If you choose not to use the stand recommended for your TV, take precautions that the stand or furniture the TV is placed on is properly located and of adequate size and strength to prevent the TV from accidentally being tipped over or pulled off. This could cause damage to the TV and/or personal injury.

 2. Plug in the TV

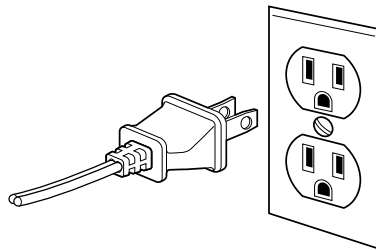

Plug the cord into the outlet, matching the wide and the small end of the plug with the outlet.

 3. Put Batteries in the Remote

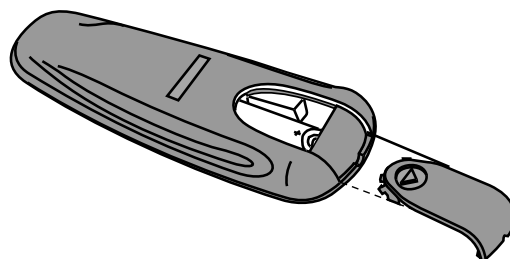

- Pull off the cover of the battery compartment.
- Place two AAA batteries as shown, matching the + and - end of each battery in the compartment.
- Replace the cover.

Quick Guide to Your TV

 
Startup

4. Turn on the TV



Press POWER on the remote.

OR

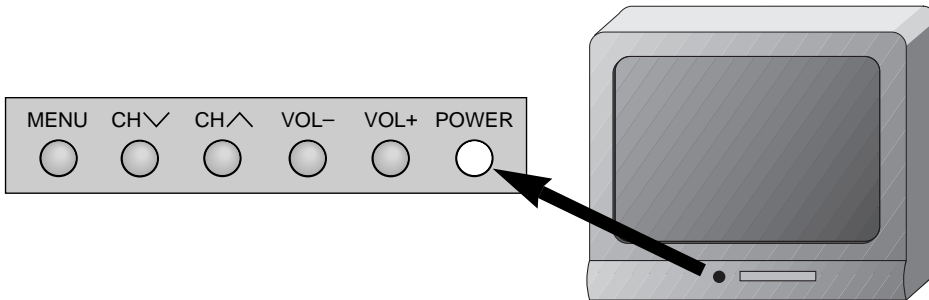

Press POWER on the TV.

 
5. Place all available channels in memory (Autoprogram)

Details for adding and deleting channels are on page 11.



- A. Press MENU until the Setup menu is selected. This menu is white.
- B. Press VOLUME + to place channels in the TV's memory (Autoprogram).
- C. Wait until TV has cycled through all the channels and returns to original channel.

6. Set the Time

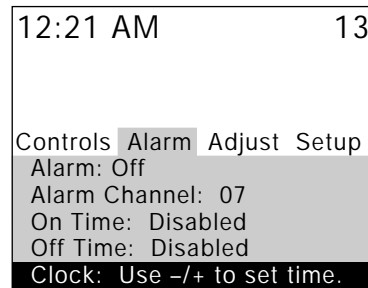

- A. Press MENU until the Alarm menu is selected. This menu is green.
- B. The Clock is automatically highlighted the first time you set it. If it is not, press CHANNEL down to highlight it.
- C. Press VOLUME - to set the hour.
- D. Press VOLUME + to set the minutes.
- F. The menus will automatically disappear from the screen, after a brief period of time.

Quick Guide to Your TV

Basic Tour of the Remote

Basic information about your remote is shown below. This will give you a general idea of how your remote works. *For more details, see page 6.*

Power Button

Turns the TV on and off.

Volume, Channel and Special Buttons

Details are on page 6.

Operate the TV.

Scan up and down through channels in the TV's memory.

Raise and lower the sound.



Menu Buttons

Details are on page 5.

Change the menus and features on the screen.



Quick Guide to Your TV

 
Menu Basics

General information about using the on-screen menu system is shown below. *Details on using the remote buttons are on page 6. Many menu items are explained in detail in Adjusting Your TV starting on page 8 and Using the Advanced Features starting on page 11.*

Colors

Press MENU repeatedly to see each of the four menu colors.

Each menu has a different color background as shown at the left.

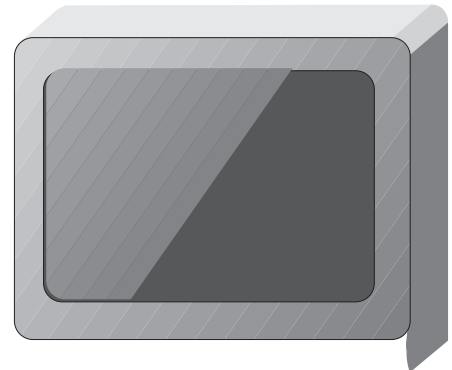


Moving through the Menus

1. Press MENU to move from menu to menu.
2. Press CHANNEL up and down to move through the features in the menu.
3. Press VOLUME + and - to move left and right on the menu lines.

Using Your Remote

 With Remote Buttons

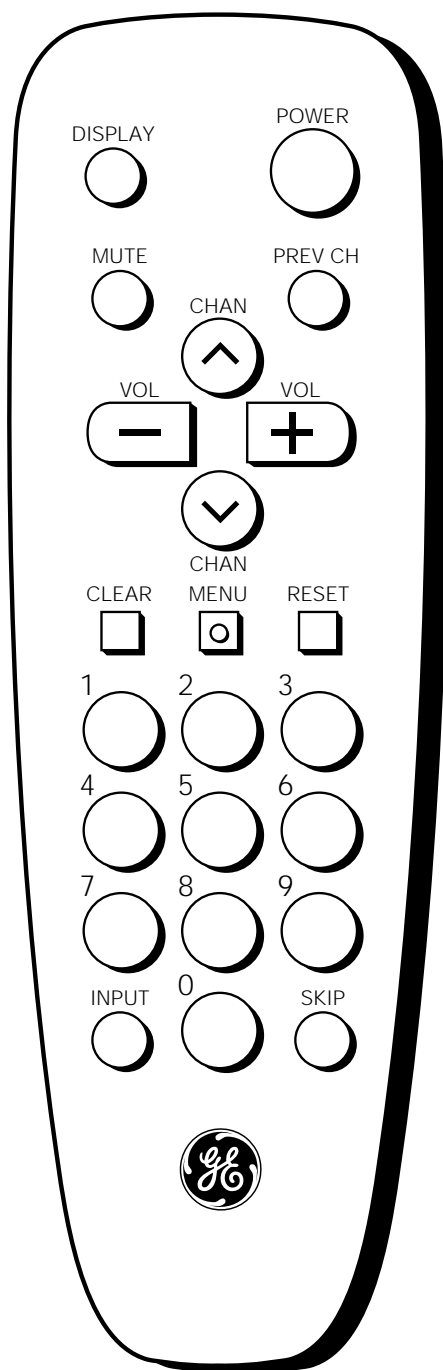

DISPLAY

Shows displays on the screen.

Clears menus from the screen.

POWER

Turns the TV on and off.

MUTE

Switches the TV sound on or off.

PREV CH (Previous Channel)

Changes back and forth between two channels.

Select a channel and then select another. Press PREV CH to switch between the two channels.

CHAN ^ and v

(Channel up and down)

Scans up and down through channels in the TV's memory.

Moves up and down menus. See *Menu Basics* on page 5.

VOL + and -

(Volume up and down)

 
Raises and lowers sound.

Moves left and right on a menu line. See *Menu Basics* on page 5.

Changes a feature setting.

Using Your Remote

With Remote Buttons

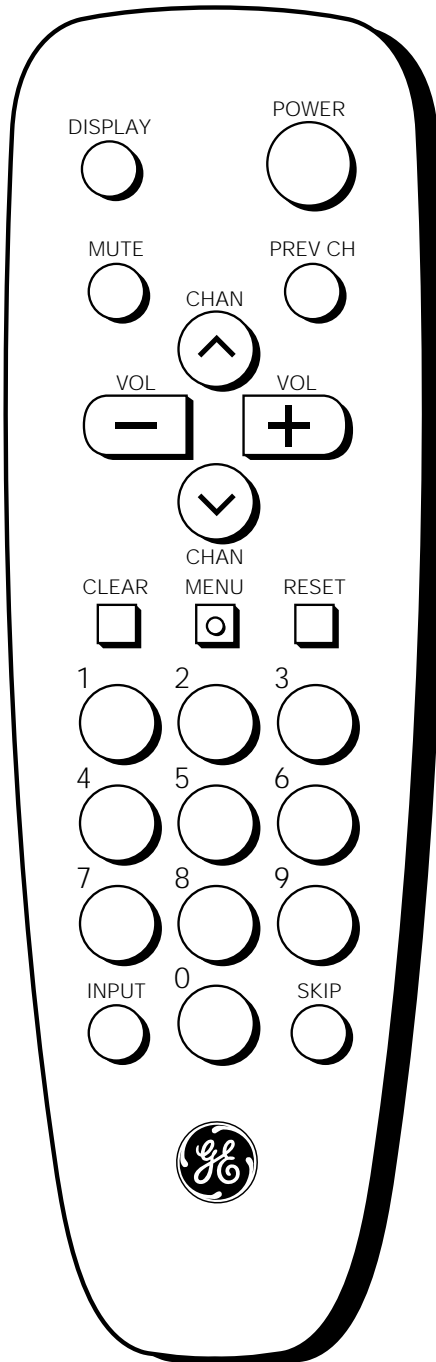

CLEAR

Clears menus and displays from the screen.

MENU

Shows menus on the screen and moves from menu to menu.

RESET

Returns the picture adjustments to the original settings.

Number Buttons

Selects any channel number.

Two numbers must be pressed for each channel. Press 0 and 6 for channel 6.

For three digit channels, press and hold 1 until 1-- appears on the screen. Then press the other two numbers.

INPUT

Switches between the TV channels and Video 00 if another component is connected.

SKIP (Commercial Skip)

Allows you to look at other channels during commercials.

 
Each press adds 30 seconds. Use the CHANNEL or number buttons to scan the other channels. TV switches back to original channel when time runs out. Press CLEAR to cancel SKIP.

Adjusting Your TV

Overall Picture


Follow the steps below to lighten or darken the overall picture without changing the color levels.

1. Select the Controls Menu

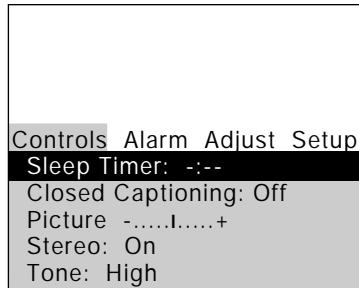


Press MENU repeatedly to select the Controls menu. This menu is yellow.

 2. Highlight Picture

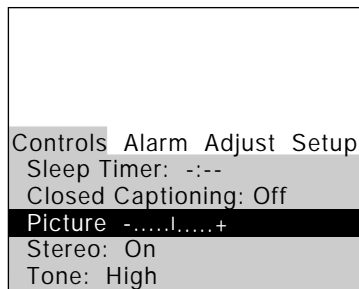

Press CHANNEL down to highlight Picture.

 3. Use VOLUME + and - to adjust the Picture

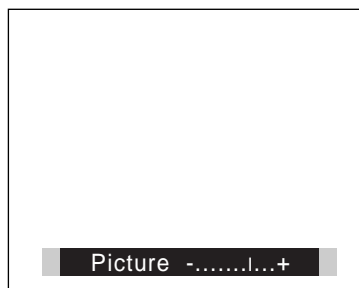

Press VOLUME + to lighten the picture.

OR

 
Press VOLUME - to darken the picture.

Adjusting Your TV

Picture Settings


Follow the steps below to change the picture on the screen to your personal setting. The chart below explains your options.

1. Select the Adjust Menu

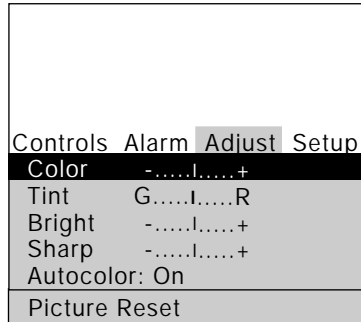

Press MENU repeatedly to select the Adjust menu. This menu is light blue.

 2. Highlight item to change

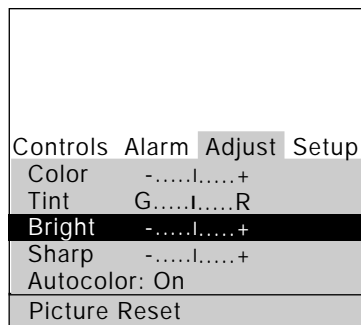

Press CHANNEL down to highlight the picture item you want to adjust.

3. Use VOLUME + or - to adjust each item

Press VOLUME + or - to adjust each item.

	Press VOLUME + to:	Press VOLUME - to:
Color	Increase color richness	Lower color to black and white
Tint	Give red tint to skin color	Give green tint to skin color
Bright (Brightness)	Add more light to dark parts of the picture	Add more dark to light parts of the picture
Sharp (Sharpness)	Show cleaner, clearer images	Make picture more smooth
Autocolor	Turn on to keep Color and Tint in proper balance each time you change channels	Turn off for manual adjustment of Color and Tint
Picture Reset	Reset the picture back to the original settings	Reset the picture back to the original settings

 
Adjusting Your TV

Sound Settings: Stereo and Tone

Follow these steps to adjust the Stereo or Tone of your TV. The chart below explains your options.


XS® Stereo
 An Innovative Method for Providing Stereo Sound Effect
 The sound delivered by your television is XS® Stereo. This patented process suppresses noise, restores the dynamic range and electronically expands the stereo signal to create a more

1. Select the Controls Menu

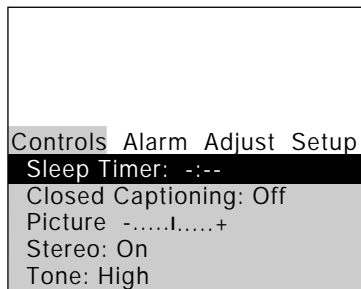


Press MENU to select the Controls menu. This menu is yellow.

 2. Highlight item to change

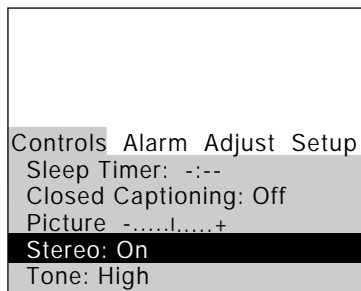

Press CHANNEL down to highlight the sound item you want to adjust.

 3. Use VOLUME + or - to adjust each item

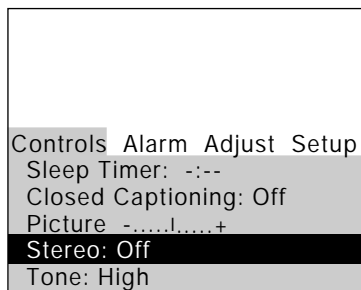

Press VOLUME + OR - to adjust each item.

Stereo	On Sound is automatically reproduced in stereo or mono, whichever the TV station is broadcasting.	Off Sound is reproduced in mono.
Tone	High High pitched sounds are louder.	Low Low pitched sounds are louder.

 
Using Advanced Features

Placing Channels in Memory (Autoprogramming)

Only channels 2–13 appear in the TV's memory when you first turn it on. The channels available in your area must be programmed into the TV's memory when you hook up your TV. Using CHANNEL up and down allows you to scan through these channels.



You may want to add or delete a few channels if some stations have weak signals or were off the air when the TV was programmed. *Refer to the Add or Delete Channels section below.*

1. Place channels in memory (Autoprogram)

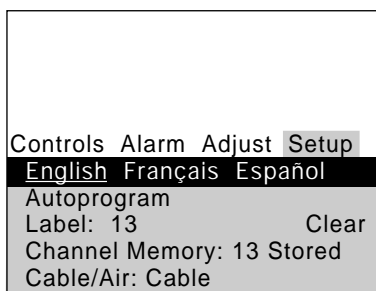

- Hook up an antenna, cable or components before you begin these steps or you will not be able to add channels into memory.
- Press MENU repeatedly to select the Setup menu. This menu is white.
- Press CHANNEL down to highlight Autoprogram.
- Press VOLUME + to start the TV adding all active channels into memory.
- Wait until the TV has cycled through all the channels and returns to the original channel.

  2. Add or delete channels

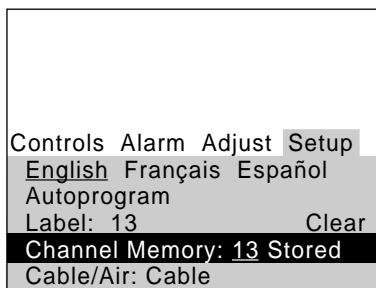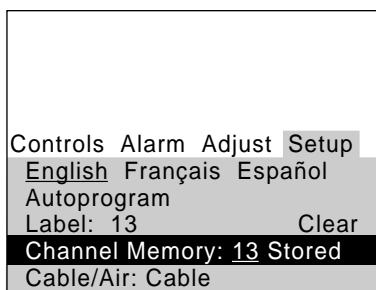


- Press MENU on the TV front panel repeatedly to select the Setup menu. This menu is white.
- Press CHANNEL down to highlight Channel Memory.
- Press VOLUME + to underline the channel number.
- Select the channel number you want to add or delete with the number buttons.
- Press VOLUME + to add or delete a channel (you will see Stored on the screen when added and Erased when deleted).
- Repeat D and E for more channels.

Using Advanced Features


Naming the Channels

You can name at least 20 channels with four characters in each name. **Full** appears beside Label when the memory is used up. **Fixed** appears when a channel number cannot be named. Below are the characters that can be used in a name.

 
1. Name a channel

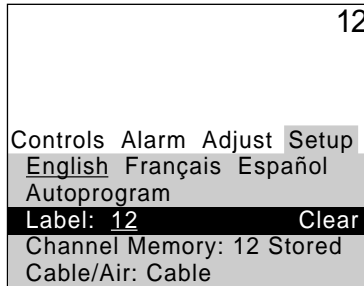

- Press MENU repeatedly to select the Setup menu. This menu is white.
- Press CHANNEL down to highlight Label.
- Press VOLUME + to underline the channel number.
- Select the channel number with the number buttons.
- Press VOLUME + to underline the first character of the name.
- Choose the character using VOLUME + and -.
- Repeat E-F to complete the name.
- Press VOLUME + to move backward if you want to change an item.

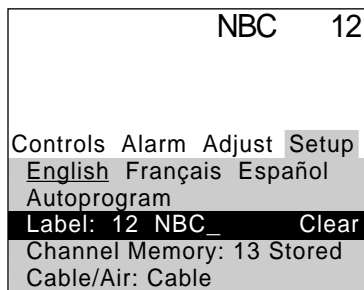 

 2. Erase a name

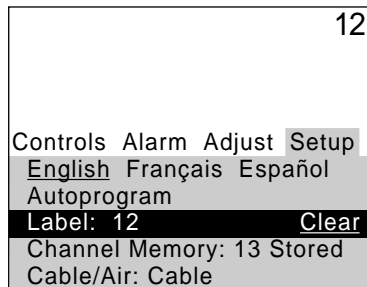

- Follow A and B above.
- Press VOLUME + until clear is underlined.
- Press VOLUME + and - to clear the name.

Character List

 
A B C D E F G H I J K L M N O P Q R S T U V W X Y Z &
' () á + , - . / 0 1 2 3 4 5 6 7 8 9 : ; < = > ? @ blank space

Using Advanced Features


Setting the Sleep Timer

You can set your TV to turn itself off. If you're watching TV at night and fall asleep, the TV will turn off for you.


1. Set Sleep Timer

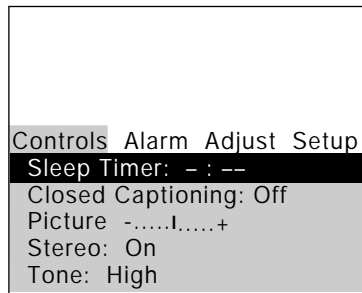

 - A. Press MENU to select the Controls menu and highlight Sleep Timer. This menu is yellow.
- B. Press VOLUME + to enter the amount of time you want to watch TV before it shuts off. Each press equals 15 minutes.
- C. Press VOLUME - to subtract time from the sleep timer.

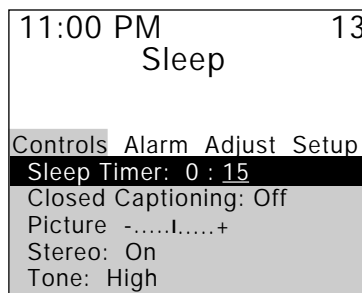

 2. Add more time

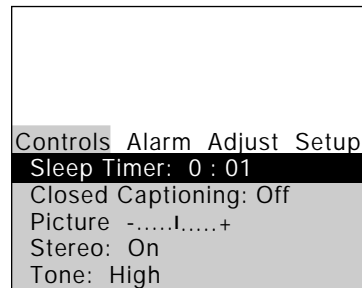

When 0:01 appears on the screen, the TV will shut off in one minute. Press VOLUME + to add more time.

3. Cancel the Timer



 
- A. Press MENU to select the Controls menu and highlight Sleep Timer.
- B. Press VOLUME - until the time reaches - : - -.

Using Advanced Features

Setting the Alarm Clock


The TV can be set to turn on each day like your alarm clock. You can set it to turn on to your favorite channel at a certain time. You can also set it to turn itself off again. The Alarm cannot be used until the clock is set.

1. Turn on the Alarm

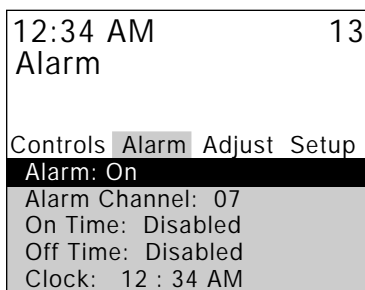


- A. Press MENU to select the Alarm menu and highlight Alarm. This menu is green.
- B. Press VOLUME + or - to select On or Off.

 2. Set the Alarm Channel

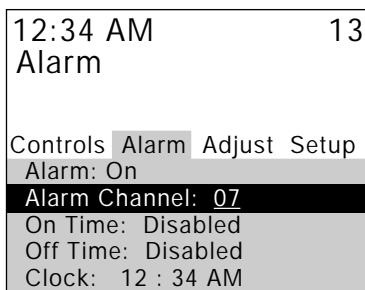


- A. Press CHANNEL down to highlight the Alarm Channel.
- B. Press VOLUME + to highlight the channel number.
- C. Enter the channel that you want the TV to turn on to with the number buttons.

 3. Set On and Off Times

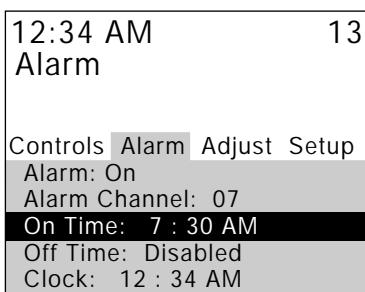

 - A. Press CHANNEL down to highlight the On or Off Time.
- B. Press VOLUME - to set the hour.
- C. Press VOLUME + to set the minutes.
- D. Press and hold VOLUME - to choose Disabled. This turns the TV only on or only off at a certain time each day.

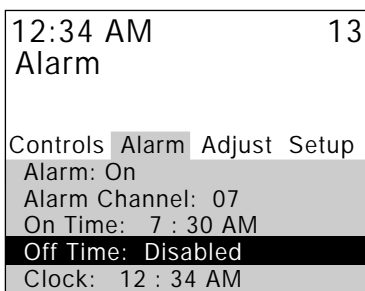

Using Advanced Features

Selecting a Language

The on-screen displays in this TV can be displayed in three languages: English, French, and Spanish. When you select a language, most of the displays will be shown on the screen in your preferred language.

1. Select the Setup menu



Press MENU repeatedly to select the Setup menu. This menu is white.

2. Select Language

Press VOLUME + or - to select English, Français (French), or Español (Spanish).

Watching Closed Captioning

Closed captioning displays the audio portion of a program as words on the TV screen. It is useful for the deaf, hearing impaired, or anyone who wants to watch a program without sound. If you have turned Closed Captioning on and it does not appear on the screen, it is not available on the channel you are watching. This TV does not support the text mode. Text information typically consists of program information, weather bulletins, local activities, etc.

1. Select the Controls Menu

 


Press MENU to select the Controls menu. This menu is yellow.

2. Highlight Closed Captioning

Press CHANNEL down to highlight Closed Captioning.

3. Select Setting

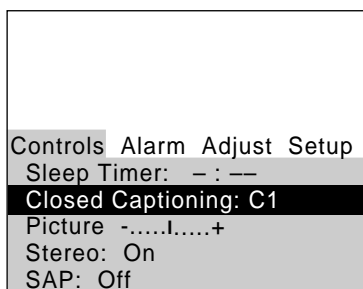

Press VOLUME + or - to select Off, C1, or C2. Select C1 for full translation of the primary language in your area. Select C2 for secondary language translation, simplified English, or whatever is being broadcast in your area.

Using Advanced Features

Setting Your TV for Antenna or Cable

 
Your TV automatically adjusts this feature when the TV places channels in memory (Autoprogram). Follow the steps below to change the setting as needed.

1. Select the Setup menu



Press MENU repeatedly to select the Setup menu. This menu is white.

2. Highlight Cable/Air

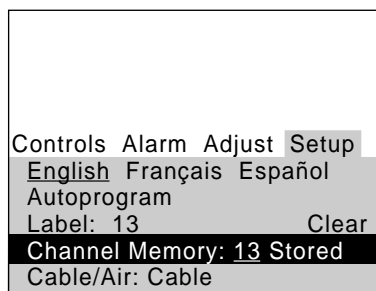

Press CHANNEL down to highlight Cable/Air.

 
3. Select Cable or Air



Press VOLUME + or - to select Cable or Air. Select Cable if you have cable. Select Air if you have a home antenna connected to your TV.

References

Front Panel Buttons

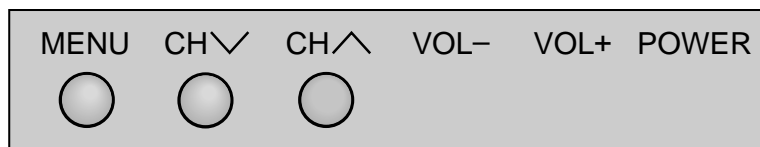

MENU

Shows menus on screen.
Moves from menu to menu.

CH \wedge and ∇

Channel up and down.
Scans up and down through channels in the TV's memory.
Moves up and down menus.

VOL + and -

Volume up and down
Raises and lowers sound.
Moves left and right on a menu line.
Changes a feature setting.

 
POWER

Turns the TV on or off.

References

Displays on the Screen

Your TV shows the settings of several features on the screen. To see what features have been set on your TV, press DISPLAY on the remote.

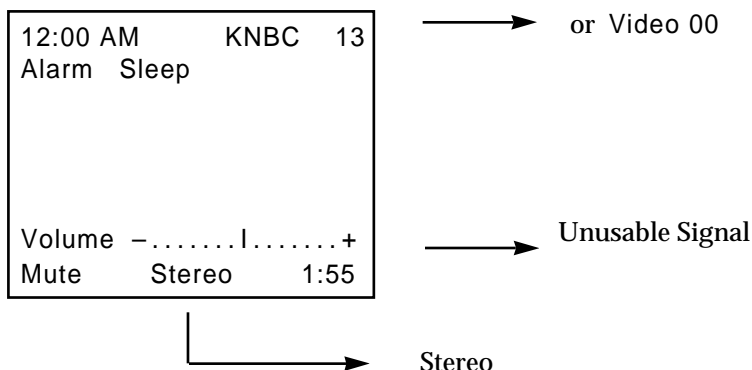

Screen Display

Description

12:00 AM

Time of the clock. *Details are on page 3.*

13

Channel number you are watching.

Alarm

Alarm clock is set to turn on or off. *Details are on page 14.*

Sleep

Sleep Timer is set to turn off the TV. *Details are on page 13.*

KNBC

Name you chose to describe the channel. *Details are on page 12.*

Unusable Signal

No signal is coming in on video input channel 00.

Video 00

Indicates that a component is connected to the VIDEO jack on the back of the TV, it is turned on, and channel 00 is selected.

Volume

Sound level of the TV.

Mute

There is no sound. *See MUTE button on page 6.*

Stereo

The sound is being broadcast in stereo. *Details are on page 10.*

1:55

The time remaining for commercial skip. *Details are on page 7.*

References

Trouble Checks

You may have problems that can be fixed with a few minor adjustments. Look for the type of problem you are having below and then try the suggestions to get your TV going again.

Trouble

Checks and Adjustments

Power

TV will not turn on

Plug TV in.

Plug something else into the outlet to make sure it is working.

Make sure batteries in the remote are not dead.

Aim the remote at the TV and press POWER.

Make sure batteries are placed in the remote the right way. *See batteries on page 2.*

Unplug TV for a few minutes and then turn it on again.

No picture, no sound but TV has power

Check antenna connections.

Check position of Cable/Air feature. *See page 16.*

Try another channel. Inactive channel may be tuned.

Picture

Blank screen

Try another channel. Inactive channel may be tuned.

Check antenna connections.

Picture poor, sound okay

Check antenna connections.

Adjust TV picture. *See pages 8-9.*

Sound

Noisy stereo reception

Turn Stereo off. The stereo broadcast may not be clear. *See page 10.*

Picture okay, no sound

Press VOLUME + or MUTE to restore sound.

Picture okay, sound poor

Try another channel.

No stereo on stereo station

Make sure Stereo is turned on. *See page 10.*

References

Trouble Checks


Trouble	Checks and Adjustments
<u>Remote</u>	
Remote lockup	Remove batteries and hold down one or more buttons for several seconds to drain the microprocessor inside the remote and reset it. Re-install the batteries and try remote again.
Works part or none of the time	Clear the path between the remote and TV of any objects. Make sure remote batteries are not dead and placed in remote correctly. <i>See batteries, page 2.</i>
Can't select certain channel	Press number buttons. Channel may not be in memory. <i>See Autoprogram on page 11.</i> For numbers over 100, press and hold 1 until 1-- appears, then press the other two numbers. Set Cable/Air feature to Cable for channels higher than 69. <i>See page 16.</i>
<u>TV Turns on or off</u>	
Turns off by itself	Check Sleep Timer. <i>See sleep timer on page 13.</i> Wait 30 seconds and turn on again, a power surge may have occurred. Check Alarm Off time. <i>See alarm clock on page 14.</i>
Turns on by itself	Check Alarm On Time. <i>See alarm clock on page 14.</i> Check clock time. <i>See clock on page 3.</i>
Does not turn off at Alarm Time	Make sure alarm is turned on or off. <i>See alarm clock on page 14.</i> Check clock time. <i>See clock on page 3.</i> Make sure Clock time is set correctly, including AM and PM. Check Alarm Off time.

References

Order Form for Parts

Remote #226725

 This is the remote that came packed with your TV. You can use the order form at the right to order it by mail.

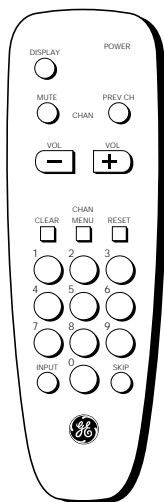

Detach Here

Fill out both sides of the information

All specifications and descriptions of parts are subject to change without notice.

References

Order Form for Parts

U.S. and Canadian Orders

By Phone:

1 – 800 – 338 – 0376

Call this toll-free number between 8AM and 8PM Eastern Standard Time and place your order using your Visa or MasterCard. **Use this number only to place an order for accessory items listed on this order form.**

By Mail:

Detach the information at the left and mail the payment to Thomson Consumer Electronics, Inc., at:

Video Accessories
PO Box 8419
Ronks, PA 17573

Most orders are shipped UPS within 72 hours. If it is not possible to ship within 30 days, we will notify you.

For more current information on these accessories, write to the following address:

Video Accessories Customer Service
Thomson Consumer Electronics, Inc.
Distributor & Special Products
2000 Clements Bridge Rd
Deptford, NJ 08096-2088

International Orders

This offer is valid only in the U.S. and Canada. Send your request for price quotation (not orders) to:

International Customer Service
Thomson Consumer Electronics, Inc.
Distributor & Special Products
2000 Clements Bridge Rd
Deptford, NJ 08096-2088 USA

References

Limited Warranty

What your warranty covers:	Any defect in material or workmanship.
How long after your purchase:	90 days for labor charges. One year for parts. Two years for picture tube. The warranty period for rental units begins with the first rental.
What we will do:	Pay any Authorized GE Television Servicenter the labor charges to repair your television. Pay any Authorized GE Television Servicenter for the new or, at our option, rebuilt replacement parts and picture tube required to repair your television.
How you get service:	For screen sizes of 20" and smaller: Take your GE television to any Authorized GE Television Servicenter. For screen sizes larger than 20": Request home service from any Authorized GE Television Servicenter. To identify your nearest Authorized GE Television Servicenter, ask your Dealer, look in the Yellow Pages, or call 1-800-447-1700. Show the service technician your evidence of purchase date.
What your warranty <i>does not</i> cover:	Customer instruction. (Your Owner's Manual clearly describes how to install, adjust, and operate your television. Any additional information should be obtained from your Dealer.) Installation and related adjustments. Acts of God, such as, but not limited to lightning damage. Signal reception problems not caused by your television. Damage from misuse or neglect. Remote control batteries. A television that has been modified or incorporated into other products or is used for institutional or other commercial purposes. A television purchased or serviced outside the USA.
What to do with the Product Registration Card:	Please complete and mail the Product Registration Card packed with your set. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.
How state law relates to this warranty:	This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.
If you purchased your product outside the United States:	This warranty does not apply. Contact your dealer for warranty information.

References

Glossary

Antenna

A device used to receive broadcast signals from TV stations.

Audio

Sound reproduced by the TV.

Audio/video cables

Cables that carry sound and picture signals from one component to another.

Autocolor

Adjusts the Color and Tint of the picture signals to the proper balance for all channels.

Autoprogram

A procedure that automatically adds only the active channels in your area to the TV's memory.

Brightness

Light and dark areas of a picture.

Channel Memory

Where channels are stored after they have been placed in memory. Channels can be added or deleted from channel memory.

Commercial Skip

A feature that allows the viewer to scan other channels during commercials, and return to the original channel after a timed break.

Component

Device such as VCR, laserdisc player, audio equipment, camcorder, etc.

Disabled

Turns off feature.

Display

A word, words or graphics that appear on the TV screen.

Inputs

Located on back of the TV for connection of a component to the TV. Used to route signals into the TV from components.

Jacks

Connectors located on the back of the TV for connecting antennas or other components.

Menu

A listing of features, controls, and adjustments shown on the TV screen that can be changed.

Mono

Slang for monaural. Sound comes through one channel.

On-Screen Display

See Display.

Picture Reset

Returns all of your TV picture adjustments back to the factory setting.

Sharpness

Clearness of a picture.

SKIP *See Commercial Skip.*

Signal

Electrical waves that are sent or received through cables or through the air.

Sleep Timer

A feature where the TV can be set to turn off at a specific time within four hours.

Source(s)

Components or devices that are connected to the TV.

Stereo

Sound signals that come through two channels (left and right).

Tone

Quality of the sound.

Tuner

A device that receives and selects signals. The desired signal is selected by the tuner.

Unusable Signal

A message that shows no signal is coming in on the video input.

Video

Picture reproduced by the television.

References

Index

<p>A</p> <ul style="list-style-type: none"> Adding Channels to Memory11 Adjust Menu <ul style="list-style-type: none"> Autocolor,Bright, Color, Picture Reset, Sharpness, Tint9 Adjusting <ul style="list-style-type: none"> Picture/Picture Settings8,9 Sound Settings10 Air or Cable Feature.....16 Alarm Channel/Clock.....14 Alarm Display.....18 Antenna16 Audio10,24 Autocolor.....9 Autoprogram3,11 <p>B</p> <ul style="list-style-type: none"> Batteries (Remote)2 Bright/Brightness9 <p>C</p> <ul style="list-style-type: none"> Cable or Air Feature.....16 Cancelling Sleep Timer13 Cautions.....i Channel Memory.....3,11 Channel Number Display18 Channels <ul style="list-style-type: none"> Adding/Deleting.....11 Placing in Memory3,11 Checks and Adjustments19-20 Clock.....3,13 Closed Captioning.....15 Color9 Colors (Menus)5 Commercial Skip7,24 <ul style="list-style-type: none"> Button7 Display18 Contents.....1 Controls <ul style="list-style-type: none"> TV Front Panel.....17 Remote6,7 <p>D</p> <ul style="list-style-type: none"> Delete Channels from Memory .11 Displays (On-Screen)18 <p>F</p> <ul style="list-style-type: none"> Front Panel Controls.....5,17 	<p>G</p> <ul style="list-style-type: none"> Glossary24 <p>H</p> <ul style="list-style-type: none"> Hook up TV...Connections Guide <p>I</p> <ul style="list-style-type: none"> Inputs24 Input Button7 <p>J</p> <ul style="list-style-type: none"> Jacks.....24 <p>M</p> <ul style="list-style-type: none"> Menus/Menu Color5 Mono10 Mute Display.....18 <p>N</p> <ul style="list-style-type: none"> Number Buttons7 <p>O</p> <ul style="list-style-type: none"> Off/On Time (Alarm)14 On-Screen Displays.....18 <p>P</p> <ul style="list-style-type: none"> Picture <ul style="list-style-type: none"> Adjustment,Setting,Reset8,9 Place Channels in Memory3,11 Plug in TV.....2 Put Batteries in Remote2 <p>Q</p> <ul style="list-style-type: none"> Quick Guide to Your TV2,3,4,5 	<p>R</p> <ul style="list-style-type: none"> References17-25 <ul style="list-style-type: none"> Trouble Checks.....19-20 Warranty.....21 Remote Control <ul style="list-style-type: none"> Batteries2 Buttons6,7 Tour4 <p>S</p> <ul style="list-style-type: none"> Safety Informationi Screen Displays.....18 Set Clock/Time3 Setting Cable/Air16 Setting the Sleep Timer13 Sharpness.....9 Sleep Display.....18 Sleep Timer13 Sound10 Startup.....2,3 Stereo10 Stereo Display18 <p>T</p> <ul style="list-style-type: none"> Table of Contents.....1 Time Display18 Tint/Tone9 Tour of the Remote.....4 Trouble Checks19-20 Turn on Alarm14 Turn on TV2 TV <ul style="list-style-type: none"> Buttons4,6,7 <p>U</p> <ul style="list-style-type: none"> Unusable Signal.....18 <p>W</p> <ul style="list-style-type: none"> Warning1 Warranty.....21
-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Thomson Consumer Electronics is one of the first corporations to take part in a special program to improve our environment.

Thomson has committed itself to a voluntary initiative program through the U.S. Environmental Protection Agency. The program's purpose is to reduce toxic air emissions and to promote pollution prevention.

Thomson's involvement includes a concentrated effort to phase in new water-based paints to replace solvent-based paints normally used in our manufacturing operations. The key benefit of these new paints is to significantly reduce air pollution.

Thomson Consumer Electronics remains committed to improving our manufacturing process through changes like these to help our environment. At Thomson, on-going efforts to maintain our valuable natural resources will continue to be a priority.

If your TV needs service, please contact your dealer or the nearest Servicenter from the yellow pages. Please do not send any products to the Indianapolis address listed in this manual or on the carton. This will only add delays in service for your product.

 **THOMSON CONSUMER ELECTRONICS**

10330 North Meridian Street
Indianapolis, IN 46290-1024

©1995 Thomson Consumer Electronics, Inc.
Trademark(s)® Registered
Marca(s) Registrada(s)
Printed in the U.S.A.
TOCOM 15097140



100%
RECYCLED PAPER
MINIMUM 50% POST CONSUMER



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>