



# TV User's Guide

---

It is important to read these instructions before operating this product for the first time.

Model:  
MG27006

TOCOM 1542511A



# Important Information

## WARNING

To reduce the risk of fire or shock hazard, do not expose this TV to rain or moisture.

## WARNING

RISK OF ELECTRIC SHOCK DO NOT OPEN

 
To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.



This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.



Caution: To reduce the risk of electric shock, match wide blade of plug to wide slot, fully insert.

Power Consumption: 120V ~ 60 Hz AC  
135 Watts (Model MG27006)

If fixed (non-moving) images are left on the screen for long periods, they may be permanently imprinted on the screen. Such images include network logos, phone numbers, and video games. This damage is not covered by your warranty. Extended viewing of channels displaying these images should be avoided.

Cable TV Installer: This reminder is provided to call your attention to Article 820-40 of the National Electrical Code which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

# Table of Contents

<b>Table of Contents</b> .....	<b>1</b>
<b>Setup and Connections</b> .....	<b>2</b>
<b>The Menu System</b> .....	<b>3</b>
The Point and Select Method .....	3
TV Main Menu .....	3
The Picture Quality Menu .....	3
The Screen Menu .....	4
The Channel Menu .....	4
V-Chip and Parental Controls .....	5
Unlocking V-Chip Parental Controls .....	5
The Time Menu .....	6
Channel Marker .....	6
The Front Panel .....	6
<b>Using the Remote</b> .....	<b>7</b>
Tour of the Remote .....	7
Programming the Remote .....	8
Using the Remote to Control a Device .....	9
<b>Troubleshooting</b> .....	<b>11</b>
<b>Care and Cleaning</b> .....	<b>12</b>
<b>Index</b> .....	<b>13</b>

# Getting Started

## Setup and Connections

### Step 1:

Unpack the TV and remote control.

### Step 2:

Connect your TV. Connect the cable from your cable system or off-air antenna to the cable in-jack on the back of the TV, as shown.

### Step 3:

Plug in the TV. Plug the end of the power cord into the wall outlet, matching the wide blade of the plug with the wide slot in the outlet. Be sure to insert the plug completely.

### Step 4:

Put batteries in the remote.

1. Remove the battery compartment cover from the back of the remote.
2. Insert batteries as shown, matching the + and - ends of each battery in the compartment.
3. Replace the cover.

### Step 5:

Turn on the TV.

- Press the TV button on the remote.

 
 
 
Read the next section, *The Menu System*, which is a brief overview of the basic rules for getting around in the menus using the remote or the TV's front control panel.

### Step 6:

Auto Channel Search.

Perform an Auto Channel Search (described in the *Channel* menu section).

**Caution:** If you choose to use a stand with your TV, take precautions that the stand or other furniture the TV is placed on is properly located and of adequate size and strength to prevent the TV from accidentally being pushed off, pulled off, or tipped over. This could cause damage to the TV and/or personal injury.

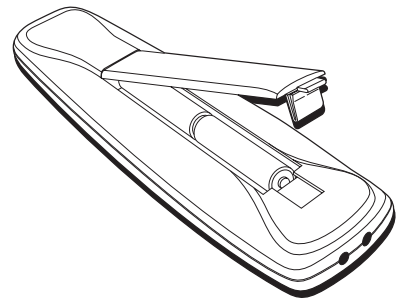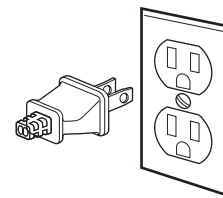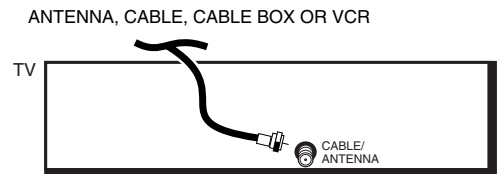

# The Menu System

## The Point and Select Method

You only need to know one rule to use the on-screen menus and control panels: point and select.

1. Point to a menu item using the MOVE arrows on the remote.
2. Select a menu item by pressing the MENU button. Selecting an item tells the TV's menu system to go ahead and make the change or go to a place you have indicated. You can also select menu items using the number buttons on your remote.

## TV Main Menu

The Main menu is your gateway to controlling the TV. It lets you adjust the TV's picture quality, screen, channel settings, parental controls, and time functions.

To select a menu item:

1. Press MENU to bring up the TV's Main menu.
2. Use the Point and Select method to make choices.
3. To exit any menu screen, point to *Exit* and press MENU, or press CLEAR.

## The Picture Quality Menu

The Picture Quality menu contains five slider controls that adjust the TV's picture. Use the left and right arrow buttons on your remote to adjust the controls.

**Contrast** Adjusts the difference between light and dark areas of the picture.

**Color** Adjusts the richness of the color.

**Tint** Adjusts the balance between the red and green levels.

**Black Level** Adjusts the brightness of the picture.

**Sharpness** Adjusts the crispness of edges in the picture.

**Auto Color** Displays a choice list that lets you turn on the feature that automatically corrects the color of the picture. (This is especially useful for tracking realistic flesh tone colors as you switch from channel to channel.) Choose *On* or *Off*, as preferred.

**Reset Picture Controls** Resets the picture controls to their original settings.

TV Main Menu	
1	Picture Quality
2	Screen
3	Channel
4	V-Chip Parental Controls
5	Time
0	Exit

*The TV Main Menu*

Picture Quality	
1	Contrast <..... .....>
2	Color <..... .....>
3	Tint <..... .....>
4	Black Level <..... .....>
5	Sharpness <..... .....>
6	Auto Color: ON
7	Reset Picture Controls
0	Exit

*The Picture Quality Menu*

### Tip

You can also use the RESET button on the remote at any time to reset the picture controls to their original settings.

# The Menu System

## The Screen Menu

The Screen menu contains the controls that let you adjust the Closed-Caption display, Closed-Caption mode, and Menu Language.

**Closed-Caption Display** Lets you choose the way closed captioning information is shown on the screen. Use the MENU button to toggle between the following:

**Off** No captioning information displayed.

**On** Captioning information shown always, when available.

**On When Muted** Displays captioning information, when available, whenever you press the MUTE button. The captioning information is not displayed when the sound is not muted.

**Closed-Caption Mode** Lets you choose which captioning mode is used for displaying captioning information. Use the MENU button to toggle between the choices: CC1 and CC2.

Not all programs are encoded with closed-captioning information. When a program is closed captioned, the letters CC are displayed in the Channel Marker.

**Menu Language** Lets you select the language of your choice: English, French, or Spanish. Use the MENU button to toggle between the choices.

Screen	
1 CC Display:	OFF
2 CC Mode:	CC1
3 Menu Language:	ENGLISH
0 Exit	

*The Screen Menu*

### Closed Caption Modes

**CC1: full translation of the primary language in your area**

**CC2: secondary language translation, simplified English, or whatever is being broadcast in your area**

## The Channel Menu

The Channel menu contains all the commands used to control your channels, including custom-building your channel list.

**Signal Type** Displays a toggle that lets you select the current antenna type.

**Antenna** Choose this if you are currently using an off-air antenna for UHF/VHF TV signals.

**Cable TV** Choose this if you are currently using cable or a cable box for TV signals.

**Auto Channel Search** Selecting this option tells the TV to search automatically for all the channels available through the antenna input. When the TV finds an active channel, it places it in the channel list. Inactive channels (weak stations or channels with no signal at all) will be removed from the channel list. You may interrupt this process by pressing the MENU button.)

Channel	
1 Signal Type:	ANTENNA
2 Auto Channel Search	
3 Lists and Labels	
0 Exit	

*The Channel menu*

### Tip

You can always press MENU to exit back to the previous screen.

# The Menu System

**Lists and Labels** Displays a control panel that lets you custom-build your channel scan list and choose a four-character label for each channel. Use the VOL +/- buttons to move left and right between fields; use the CH^/v buttons to move up and down enter settings and create labels. Press MENU to exit.

**Channel Number** Use the CH^/v buttons to scroll through the channel scan list. You can also enter the channel number directly using the number buttons.

**Channel Labels** Use the CH^/v buttons to enter a four-character label for each channel.

**Scan List** Only the channels included in the Scan list are available when you scan up and down using the CH^/v buttons. Use them to indicate whether the channel number indicated is included (YES) or is not included (NO) in the channel scan list.

Lists and Labels		
Chan #	Chan Label	Scan List
16 ⬇	NBC	YES
Press MENU to exit		

*The Lists and Labels screen*

## V-Chip and Parental Controls

The *V-Chip Parental Controls* menu allows you to program your TV so that children cannot see certain programs.

The choices in this menu involve a chip inside your TV, called V-Chip. These V-Chip functions will not work on your TV because the features depend upon special additions to the broadcast signal, not yet available in your market. Please disregard them.

### Unlocking V-Chip Parental Controls

The V-Chip inside your TV comes turned "off." However, if the screen shown on the right appears, the V-Chip Parental Controls have been locked. Follow these steps to unlock the Parental Controls and return to normal viewing:

1. Press DISPLAY on the remote control to bring up the *Enter Password* screen shown on the right.
2. With the *Enter Password* screen still up, press the following buttons on the remote, one by one: MUTE, DISPLAY, CLEAR and RESET.

TV Main Menu
1 Picture Quality
2 Screen
3 Channel
4 V-Chip Parental Controls
5 Time
0 Exit

*Selecting V-Chip Parental Controls*



Enter Password
---- ⬇
Enter four digit Password. Press MENU to exit.

*The Enter Password screen*

# The Menu System

## The Time Menu

The Time menu contains the controls that let you set the Sleep Timer and Set Time functions.

**Sleep Timer** Displays a control panel that lets you select the amount of time you want to give the TV before it shuts itself off. Use the CH ^/v buttons to increase or decrease the sleep timer by 15 minute increments. Press MENU to exit.

**Set Time** Displays a control panel that lets you enter the current time. Use the CH ^/v buttons and number buttons to set the time. Press MENU to exit.

Time
1 Sleep Timer
2 Set Time
0 Exit

*The Time menu*

## Channel Marker

The Channel Marker comes up when you first turn on the TV, change channels, or press the DISPLAY button.

08:59 Displays the current time.

WRTV Displays the label assigned to the current channel.

06 Displays the current channel.

Sleep Displayed when the Sleep Timer has been set.

Stereo Displayed when the current channel is in Stereo.

CC Displayed when Closed Captioning is available.

Mute Displayed when you mute the audio.

Unlocked Display whether the V-Chip system is locked, unlocked, or disabled.

1:30 Displayed to count down time left on the commercial skip timer.

08:59	WRTV	06
Sleep	Stereo	CC
Mute	Unlocked	1:30

*The Channel Marker shown is just an example of what your screen may look like.*

**You can press MENU or CLEAR to make the Channel Marker disappear; it will disappear automatically after a short time.**

## The Front Panel

**VOL <** Decreases the volume. When in the menu system, VOL < is used to point left to items and adjust menu controls.

 
**VOL >** Increases the volume. When in the menu system, VOL > is used to point right to items and adjust menu controls.

**CHAN ^** Scans up through the channel list. In the menu system, it points up to items and adjusts menu controls.

**CHAN v** Scans down through the current channel list. In the menu system, it points down to items and adjusts menu controls.

**MENU** Brings up the Main menu. When in the menu system, it selects highlighted items. Also returns you to the previous menu.

**POWER** Turns the TV on and off.

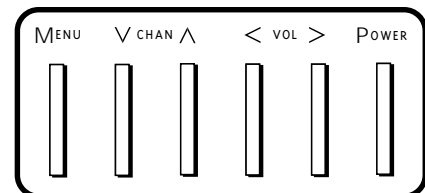



# Using the Remote

## Tour of the Remote

**POWER** When in TV mode, turns TV on and off. If in another device mode (VCR, Laserdisc, Satellite, etc.) and programmed, will turn the device on and off.

**VCR1** Puts the remote in VCR mode.

**VCR2•LD** Puts the remote in VCR2 or LD mode.

**SAT•CABLE** Puts the remote in SAT•CABLE mode.

**AUDIO** Puts the remote in Audio mode.

**TV** Turns on the TV and puts the remote in TV mode. Also displays channel information.

**REW, PLAY, FF, REC, STOP, PAUSE** If programmed, provides transport control for some remote-controllable VCRs, Laserdisc players, tape decks and CD players.

**DISPLAY** Brings up channel information. Also clears menus from the screen.

**SKIP** Press once before changing channels and the TV will wait 30 seconds before returning you to the original channel. Press repeatedly to add more time (each press adds another 30 seconds).

**CHAN<sup>^</sup> or CHAN<sup>v</sup>** Scans up or down through the current channel list. Press once to change the channel up or down; press and hold to continue changing channels.

**VOL - or VOL +** Decreases or increases the TV's volume.

**MUTE** Reduces the TV's volume to its minimum level. Press again to restore the volume.

**PREV CH** Returns you to the previous channel.

**(0-9) Number Buttons** Enters channel numbers and time settings directly through the remote control. To enter a two-digit channel, press the two digits. To enter a three-digit channel, press and hold the first digit, then add the second two. Example: to tune to channel 123, press and hold 1, press 2, then press 3.

**INPUT** In TV mode, press to toggle through the available input sources (Channel 3, Channel 4, etc.).

 
**ANTENNA** Functions as TV/VCR button in VCR mode and TV/receiver button in SAT•CABLE mode.

**CLEAR** Removes any menu or display from the screen and returns you to TV viewing. Also clears the SKIP timer. For GE, RCA and PROSCAN VCRs, this button also clears items from the VCR clock and timer programs.

**MENU•PROG** Brings up the Main menu and selects highlighted items. When in VCR mode, it functions as a PROGRAM button for GE, RCA and PROSCAN VCRs.

**RESET** Resets picture quality controls to their original settings.

**MOVE (Arrows)** Used to point to different items in the menu system. Also used to adjust the menu controls.

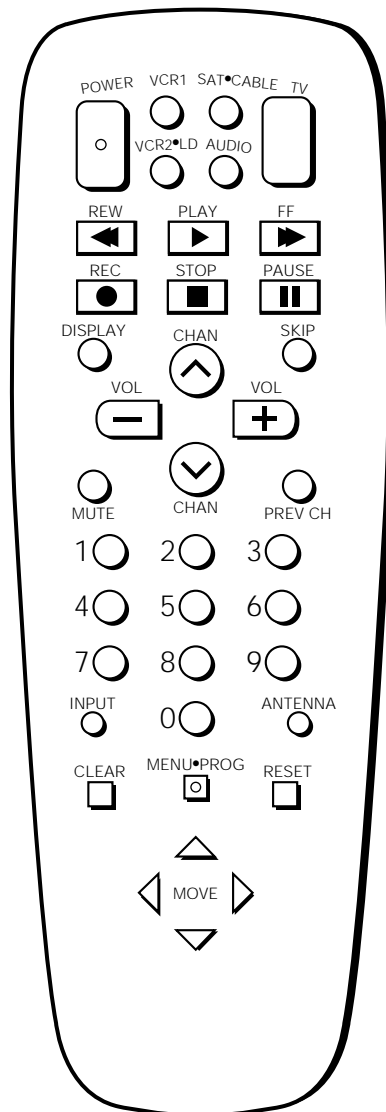

### DISPLAY Button Functions

Press once to bring up the channel marker.

Press twice to clear the screen.

# Using the Remote

## Programming the Remote

The universal remote can be programmed to control most brands of remote controllable VCRs, receivers, etc. The remote is already programmed to control most RCA, GE and PROSCAN TVs, VCRs, Laserdisc players and Satellite Receivers.

 
## Testing the Remote

To determine whether the universal remote needs to be programmed, turn a device on, such as a VCR, point the remote at the VCR, and press the VCR1 button. Then press POWER or CHAN^ (channel up) or CHAN^ (channel down) to see if the VCR responds to the remote commands. If not, the remote needs to be programmed.

## Programming the Remote to Control a VCR, Laserdisc player, Satellite Receiver or Cable Box

Follow these steps to program your universal remote to control a VCR, Laserdisc player, Satellite Receiver or Cable Box:

1. Turn on the component to be programmed.
2. Look up the brand and code number(s) for the component on the code list on the last page of this section, *Using the Remote*.
3. Press and hold the button on the remote you want to program.
4. Enter the code from the code list.
5. Release button, and then press POWER to see if the component responds to the remote commands. If it doesn't, try pressing the component button and then POWER again.
6. If you get no response, repeat these steps using the next code listed for your brand, until the component responds to the remote commands.

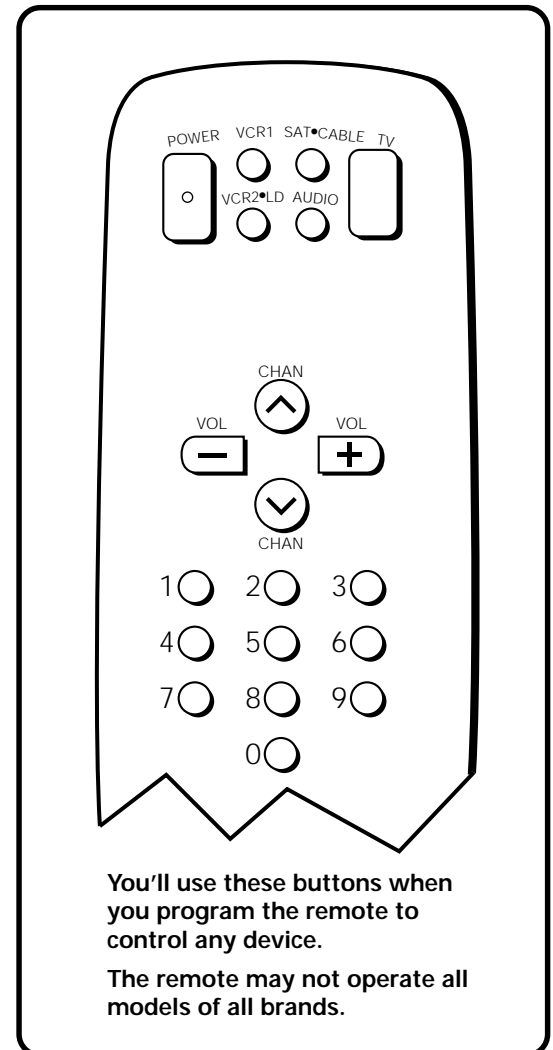

## Modes of Operation

Because this universal remote can control several different components (Laserdisc player, VCR, Cable Box, etc.), it uses operational modes triggered by the component buttons. For example, if you want the remote to control the TV, you would press the TV button to put the remote into TV mode before you could control the TV.

# Using the Remote

## **Programming the Remote to Control an RCA Audio Device:**

Your remote controls only RCA audio equipment such as an audio receiver or amplifier—it does not control other brands of audio equipment. Also, the remote may need to be programmed for your equipment. This remote may not operate all of the components listed at the end of this section. Use the codes at the end of this section or on the sheet packed in with your remote.

1. Turn on the component to be programmed.
2. Look up your brand and its code number(s) on the code list.
3. Press and hold the AUDIO button.
4. Enter the code from the code list.
5. Release the AUDIO button and press POWER or CHAN<sup>^</sup> (channel up) or CHAN<sup>v</sup> (channel down) to see if the audio device responds to the remote commands.

## **Using the Remote to Control a Device**

Once the remote has been programmed successfully, you are ready to use it to control your devices.

To operate the device:

1. Press the device button (TV, VCR1, VCR2•LD, or SAT•CABLE) to set the remote to control the device.
2. Press POWER to turn the device on or off.
3. Use the remote buttons that apply to that device.

# Using the Remote

## VCR

Admiral	2131
Adventura	2026
Aiko	2027
Aiwa	2002, 2026
Akai	2003, 2004, 2005, 2007, 2008, 2111, 2112, 2113
American High	2021
Asha	2013
Audio Dynamics	2009, 2010
Audiovox	2014
Bell & Howell	2011
Beaumont	2013
Broksonic	2012, 2025
Calix	2014
Candle	2013, 2014, 2015, 2016, 2017, 2018, 2019
Canon	2021, 2022, 2114
Capehart	2020, 2110
Carver	2062
CCE	2027, 2061
Citizen	2013, 2014, 2015, 2016, 2017, 2018, 2019, 2027
Colortyme	2009
Colt	2061
Craig	2013, 2014, 2023, 2061
Curtis-Mathes	2000, 2002, 2009, 2013, 2016, 2018, 2021, 2022, 2024, 2115
Cybernex	2013
Daewoo	2015, 2017, 2019, 2025, 2026, 2027, 2028, 2110
Daytron	2110
Dbx	2009, 2010
Dimensia	2000
Dynatech	2002, 2026
Electrohome	2014, 2029
Electroponic	2014
Emerson	2002, 2012, 2014, 2015, 2021, 2024, 2025, 2026, 2029, 2030, 2032, 2033, 2034, 2035, 2036, 2037, 2038, 2039, 2040, 2041, 2042, 2044, 2045, 2047, 2065, 2105, 2113, 2116, 2117, 2130
Fisher	2011, 2023, 2048, 2049, 2050, 2051, 2052, 2118
Fuji	2021, 2119
Funai	2002, 2026
Garrard	2026
GE	2000, 2001, 2013, 2021, 2022, 2053, 2115, 2120
Goldstar	2009, 2014, 2018, 2054, 2121
Gradiente	2026
Harley Davidson	2026
Harman Kardon	2009
Harwood	2061
Headquarter	2011
Hitachi	2002, 2055, 2056, 2057, 2107, 2111, 2120, 2122
HI-Q	2023
Instant Replay	2021
JCL	2021
JC Penney	2009, 2010, 2011, 2013, 2014, 2021, 2022, 2055, 2056, 2058, 2059, 2060, 2107, 2118
Jensen	2055, 2056, 2111
JVC	2009, 2010, 2011, 2018, 2058, 2111, 2123
Kenwood	2009, 2010, 2011, 2016, 2018, 2058, 2111, 2123
KLH	2061
Kodak	2014, 2021
Lloyd	2002, 2026
Logik	2061
LXI	2014
Magnavox	2021, 2022, 2062, 2063, 2104, 2108, 2124
Magnin	2013
Marantz	2009, 2010, 2011, 2016, 2018, 2021, 2058, 2062, 2064
Marta	2014
Masushita	2021
MEI	2021
Memorex	2002, 2011, 2013, 2014, 2021, 2023, 2026, 2104, 2131
MGA	2029, 2065, 2113
MGN Technology	2013
Midland	2053
Minolta	2055, 2056, 2107
Mitsubishi	2029, 2055, 2056, 2065, 2066, 2067, 2069, 2070, 2071, 2072, 2073, 2074, 2106, 2113, 2123
Montgomery Ward	2075, 2131
Motorola	2021, 2131

MTC	2002, 2013, 2026
Multitech	2002, 2013, 2016, 2026, 2053, 2061
NEC	2009, 2010, 2011, 2016, 2018, 2058, 2064, 2076, 2078, 2079, 2111, 2123
Nikko	2014
Noblex	2013
Olympus	2021
Optimus	2014, 2131
Optonica	2096
Orion	2035
Panasonic	2021, 2022, 2109, 2125, 2126, 2127
Pentax	2016, 2055, 2056, 2107, 2120
Pentax Research	2018
Philco	2021, 2022, 2062, 2063
Philips	2021, 2062, 2096, 2124
Pilot	2014
Pioneer	2010, 2055, 2080, 2081, 2123
Portland	2016, 2017, 2019, 2110
PROSCAN	2000, 2001
Protoc	2061
Pulsar	2104
Quarter	2011
Quartz	2011
Quasar	2021, 2022, 2125
RCA	2000, 2001, 2003, 2013, 2021, 2055, 2056, 2082, 2083, 2084, 2085, 2086, 2087, 2088, 2089, 2090, 2091, 2107, 2115, 2120, 2125
Radioshack/Realistic	2002, 2011, 2013, 2014, 2021, 2022, 2023, 2026, 2029, 2049, 2050, 2096, 2131
Radix	2014
Randex	2014
Ricoh	2128
Runco	2104
Samsung	2005, 2013, 2015, 2033, 2053, 2112
Sanky	2131, 2104
Sansui	2010, 2092, 2111, 2123
Sanyo	2011, 2013, 2023
Scott	2012, 2015, 2025, 2032, 2035, 2038, 2065, 2093, 2116
Sears	2011, 2014, 2021, 2023, 2048, 2049, 2050, 2051, 2055, 2056, 2107, 2118
Sharp	2002, 2017, 2029, 2094, 2095, 2096, 2131
Shintom	2004, 2056, 2061, 2098
Shogun	2013
Signature	2002, 2131
Singer	2021, 2061, 2128
Sony	2002, 2004, 2098, 2099, 2119, 2128
STS	2021, 2107
Sylvania	2002, 2021, 2022, 2026, 2062, 2063, 2065, 2124
Symphonic	2002, 2026
Tandy	2002, 2011
Tashiko	2014
Tatung	2058, 2111
TEAC	2002, 2026, 2058, 2085, 2111
Technics	2021, 2109
Teknika	2002, 2014, 2021, 2026, 2100, 2129
TMK	2013, 2024, 2047
Toshiba	2015, 2049, 2051, 2055, 2065, 2093, 2116
ToteVision	2013, 2014
Unitech	2013
Vector Research	2009, 2010, 2015, 2016
Victor	2010
Video Concepts	2009, 2010, 2015, 2016, 2113
Videosonic	2002
Wards	2002, 2013, 2014, 2015, 2021, 2023, 2026, 2029, 2055, 2056, 2061, 2096, 2101, 2102, 2103, 2107, 2116, 2131
XR-1000	2021, 2026, 2061
Yamaha	2009, 2010, 2011, 2018, 2058, 2111
Zenith	2004, 2098, 2104, 2119, 2128

Eastern	5017
Garrard	5011
GC Electronics	5009
Gemini	5018, 5019, 5049
General Instrument	5003, 5053
Hamlin	5020, 5021, 5022, 5035, 5045
Hitachi	5003
Hytex	5002
Jasco	5011
Jerrold	5003, 5005, 5007, 5018, 5023, 5024, 5046, 5053
Magnavox	5025
Memorex	5026
Movie Time	5002, 5027, 5028
NSC	5002, 5027, 5028
Oak	5002, 5016, 5029
Panasonic	5048, 5052
Paragon	5026
Philips	5011, 5012, 5013, 5019, 5025, 5030, 5031, 5032
Pioneer	5033, 5034
Pulsar	5026
RCA	5047, 5049, 5052
Realistic	5009, 5049
Regal	5022, 5035
Regency	5017
Rembrandt	5003
Runco	5026
Samsung	5014, 5034
Scientific Atlanta	5006, 5036, 5037, 5038
Signal	5014, 5018
Signature	5003
SL Marx	5014
Sprucer	5052
Starcom	5007, 5018, 5053
Stargate	5014, 5018
Starquest	5018
Tandy	5040
Televue	5014
Tocom	5004, 5023, 5041
Toshiba	5026
Tusa	5018
TV86	5027
Unika	5008, 5009, 5011
United Artists	5002
United Cable	5053
Universal	5008, 5009, 5010, 5011
Videoway	5044
Viewstar	5015, 5025, 5027, 5040
Zenith	5026, 5050, 5051

## Satellite Receivers

Chapparral	5056, 5057
Drake	5058, 5059
GE	5000, 5001
General Instruments	5060, 5061, 5062
Panasonic	5075
Primestar	5076
PROSCAN	5000, 5001
RCA	5000, 5001
Realistic	5063
Sony	5072
STS1	5064
STS2	5065
STS3	5066
STS4	5067
Toshiba	5068, 5073
Uniden	5069

## Audio

(For RCA and Dimensia brands only)

AM/FM	4003
Aux	4004
Phono	4005
CD	4007
Tape	4006

## Cable Boxes

ABC	5002, 5003, 5004, 5005, 5006, 5007, 5053
Antronix	5008, 5009
Archer	5008, 5009, 5010, 5011
Cabletenna	5008
Cableview	5008
Century	5011
Citizen	5011
Colour Voice	5012, 5013
Comtronics	5014, 5015
Contec	5016

# Troubleshooting

If you experience any difficulty with your TV, check these basic remedies before calling your service technician.

TV will not turn on or controls don't work

- Check to make sure it is plugged in.
- Check the wall receptacle (or extension cord) to make sure it is "live" by plugging in something else.
- Try unplugging set for two minutes, plugging it back in, and then turning it on again.

Problems with remote

- Maybe something is between the remote and the remote sensor.
- Maybe the remote is not aimed directly at the TV's remote sensor.
- Maybe batteries in remote are weak, dead or installed incorrectly. Try replacing batteries.
- Remove batteries and hold down one or more buttons for several seconds. Install the batteries and try the remote.

Turns on or off while playing

- Electronic protection circuit may have been activated because of a power surge. Wait 30 seconds and then turn on again. If this happens frequently, the voltage in your house may be abnormally high.
- Maybe the component connected to the input jacks is not turned on.
- Maybe the Sleep Timer is active.

"This program is blocked" message appears on the screen

- The V-Chip Parental Controls have been activated. Follow these steps to deactivate them:
  1. Press DISPLAY on the remote control to bring up the *Enter Password* screen.
  2. With the *Enter Password* screen still up, press the following buttons on the remote, one by one: MUTE, DISPLAY, CLEAR and RESET.

Blank screen or black box appears on the screen

- Try another channel.
- Press RESET, in case the picture controls are set too low.
- Captioning may be turned on. Check the Closed-Caption Display control panel in the Screen menu.

No sound, picture okay

- Maybe sound is muted. Try pressing volume up button to restore sound.

No picture, no sound, but light is on

- Maybe cable/air function is in wrong position.
- Maybe a vacant channel is tuned.

Sound okay, picture poor

- Check antenna connections.
- Try adjusting sharpness function to improve weak signals.

# Care and Cleaning

## Care and Cleaning

Caution: Turn OFF before cleaning.

Use a soft lint-free cloth to dust your television. Remove dust from the ventilation holes on the cabinet.

The TV's screen can be cleaned with a soft, lint-free cloth as well. Take care not to scratch or mar the screen. If necessary, you may use a cloth dampened with warm water.

Never use strong cleaning agents, such as ammonia-based cleaners, or abrasive powder. These types of cleaners will damage the TV.

While cleaning do not spray liquid directly on the screen, or allow liquid to run down the screen and inside the TV. Also, avoid placing drinks or vases with water on top of the TV. This could increase the risk of fire or shock hazard or damage to the TV.

If fixed (non-moving) images are left on the screen for long periods, they may be permanently imprinted on the screen. Such images include network logos, phone numbers, and video games. Extended viewing of channels displaying these images should be avoided.

# Index

## A

Active channel 4  
Antenna input 4  
Auto Color 3

## B

Batteries 2  
Black level 3  
Buttons  
    Remote 7

## C

Cable TV 4  
Captioning information 4  
Captioning mode 4  
Chan # 5  
Channel indicator 6  
Channel information 7  
Closed Captioning indicator 6  
Closed-Caption Mode 4  
Connecting your TV 2

## L

Labelling channels 5  
Labels 5, 6  
Lists and Labels 5

## N

Normal channel list 5

## O

Original picture settings 3

## P

Parental Controls  
    Menu 5  
Point and select 3  
Programming the remote to control  
    components 9

## R

Reset Picture Controls 3

## S

Select 3  
Set Time 6  
Signal Type 4  
Sleep Timer display 6

## T

Time display 6  
TV button 2

Please do not send any products to the Indianapolis address listed in this manual or on the carton. This will only add delays in service for your product.

**Imported by:**

Comercializadora Thomson de México, S.A. de C.V.  
Sierra Candela No.111, Piso 11  
Col. Lomas de Chapultepec  
Del. Miguel Hidalgo  
México D.F. C.P. 11000  
Teléfono: 59 80 12 70  
R.F.C. CTM-980723 KS5

**Exported by:**

 **THOMSON CONSUMER ELECTRONICS**  
10330 North Meridian Street  
Indianapolis, IN 46290

©2000 Thomson Consumer Electronics, Inc.  
Trademark(s)® Registered  
Marca(s) Registrada(s)  
Printed in USA  
TOCOM 1542511A

The following materials were used in printing this publication:



60%  
**RECYCLED PAPER**  
MINIMUM 20% POST CONSUMER





## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>