


A Quick Start to Your Monogram Dishwasher

Read the Owner's Manual for complete Operating Instructions.

Before You Start

- ✓ Water temperature should be at least 120°F for efficient cleaning and no more than 150°F to prevent damage to your dishes.

 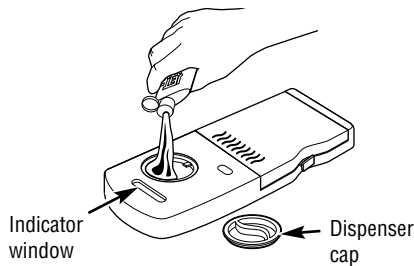


Loading Your Dishes (See pages 13 to 16 in the Owner's Manual)

- ✓ Do not obstruct spray arms.
- ✓ Do not block detergent cup with tall objects. The detergent cup must dispense detergent freely so it can circulate during the wash cycle.
- ✓ Load the silverware basket evenly. Mix knives, spoons and forks so they won't nest together.
- ✓ Use rinse agent to prevent spotting.
- ✓ Add rinse agent until the indicator window shows full.

Starting the Dishwasher

- ✓ Select the desired cycle. Press the up or down arrow until the light next to the desired cycle is on.
- ✓ Select any enhancements, if desired, then press START/RESET.
- ✓ Close and latch the door. The cycle will begin.
- ✓ The CLEAN indicator light will glow when the cycle is completed.
- ✓ The dishwasher will remember which cycle and enhancements were used last. If you don't want to change the settings, press START/RESET to begin a new cycle.
- ✓ If the door is closed, the indicator lights will turn off if the START/RESET pad is not selected within 2 minutes. To activate, open and close the door or press any pad.



Interrupting the Cycle

- ✓ Open the door slowly, just enough to stop the wash cycle. Close and latch the door; the cycle will automatically resume.



Reset/Canceling the Cycle

- ✓ Open the door slowly to prevent splash-out. Touch the START/RESET pad to cancel the cycle.
- ✓ If the START/RESET light is flashing, close the door until the water pumps out (this can take approximately 70 seconds). When the light stops flashing, the dishwasher can be reprogrammed and restarted.



Child Lock-out

- ✓ To lock the controls and prevent unwanted operation, press and hold HEATED DRY for 3 seconds. To unlock, press and hold HEATED DRY for 3 seconds.

Troubleshooting (See pages 18 to 20 in the Owner's Manual)

- ✓ If you find any damage to the dishwasher, contact the installer immediately.



Monogram.[®]

Pub. No. 49-5957
Part No. 165D4700P282

JR 12/03

GE Consumer Products
General Electric Company
Louisville, KY 40225

© 2003 General Electric Company

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>