


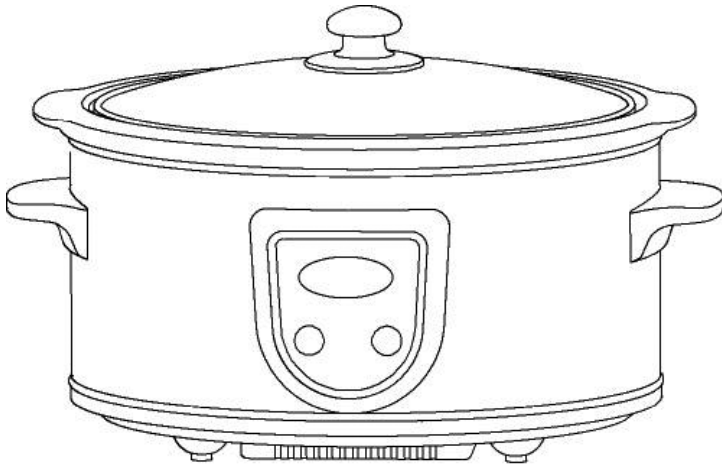

# DIGITAL SLOW COOKER



## Model Number

169088

UPC: 681131690881

**For Customer Assistance, call  
1.877.207.0923 (US) or 1.877.556.0973 (Canada)**

# IMPORTANT SAFEGUARDS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- **READ ALL INSTRUCTIONS.**
- Do not touch hot surfaces. Use handles or knobs. Use potholders when removing cover or handling hot containers.
- To protect against electrical shock, do not immerse cord, plug or appliance in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Call our toll-free customer service number for information on examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot food, water or other hot liquids.
- Do not use the appliance for other than its intended uses.
- Lift and open the cover carefully to avoid scalding, and allow water to drip into unit.
- To disconnect, turn cooker off by pressing the "low/high/warm" button so that no lights are on and the display is blinking "\_\_\_".
- Containers are designed for use with this appliance only. They cannot be used on a range top. Do not set a hot container on a wet or cold surface. Do not use a cracked container.
- This appliance has a non-metallic pot, avoid sudden temperature changes such as adding refrigerated foods into a heated pot.

## SAVE THESE INSTRUCTIONS!

## Consumer Safety Information

*THIS APPLIANCE IS INTENDED FOR HOUSEHOLD USE ONLY.*


This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug.

If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

1. Always keep the Slow Cooker unplugged when it is not in use or without inner pot or the inner pot is empty.
2. Do not place the Slow Cooker in any place that is unstable, humid, near fire or any heat sources to prevent any accident or malfunctions.
3. To protect against electric shock, do not immerse the cooking body in water or any liquid. Do not pour any liquid into cooking body without inner pot in it.
4. To reduce the risk of electric shock, cook only in the removable container.
5. Always cook with the lid on, for the recommended time.
6. A short power-supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
7. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
8. If a longer detachable power-supply cord or extension cord is used.
  - (1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance,
  - (2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

## PARTS

1. Glass lid
2. Ceramic inner pot
3. Stainless steel housing
4. Control panel

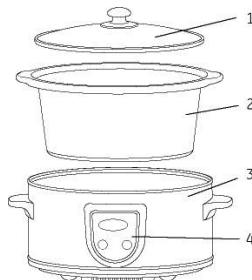

# FEATURES

- Stainless steel housing
- Oval style
- Tempered glass lid
- Dishwasher-safe, removable ceramic inner crock pot
- Slide-proof rubber feet

## SLOW COOKER MODEL

Model No.	Rated voltage	Rated power	Capacity	Dimensions	Weight
169088	120V ~/60Hz	220W	5 QT	390 x 280 x 240 mm	4.7 kg

## OPERATING INSTRUCTIONS

1. Prepare recipe according to instructions.
2. Place prepared food into the removable ceramic pot and cover with glass cover.
3. Plug the unit into wall outlet. The digital display will blink “- - -”.
4. Press “low/high/warm” button to select desired temperature.  
*Note: this unit has a Stand-by mode, where the display will blink “\_ \_ \_”.*
5. Set cooking time. Time can be set from 30 minutes to 10 hours in 30 minute increments.
6. Once the cooking cycle is finished, the unit switches to stand-by mode for 10 minutes. After 10 minutes the unit automatically switches to “keep warm” mode. The default time for “keep warm” is 10 hours. Finally, the slow cooker will switch back to stand-by mode.
7. To stop heating during cooking, press the “low/high/warm” button until none of the temperature lights are lit (stand-by mode), the display will blink the time for a few seconds and then blink “\_ \_ \_”.
8. Cooking times differ by the amount of ingredients, room temperature and many other factors. Adjust the cooking time in reference to the final result. Repeatedly removing the glass cover will decrease the temperature in the ceramic pot.
9. Lift the glass cover away from you carefully. Note: steam trapped under the glass cover is hot and can burn.

10. When finished, unplug unit from the wall outlet.
11. Let ceramic pot and glass cover cool completely before washing.
12. The sides of the metal housing and the ceramic pot on the slow cooker get very hot. Use oven mitts or potholders to remove the ceramic pot.
13. The removable ceramic pot can be used for serving the meal at the table.

## CARE AND MAINTENANCE

1. The removable inner pot goes safely into the dishwasher, or may be washed in hot soapy water. Do not use abrasive cleaning compounds, use a cloth, sponge or rubber spatula. To remove water spots and other stains, use a non- abrasive cleaner or vinegar.
2. Wipe the cooking body with a soft cloth. Never use abrasive cleaners.
3. As with any fine ceramic, the stoneware bowl will not withstand the shock of sudden temperature changes.
4. If the ceramic pot has been preheated or is hot, do not put cold foods in it. Do not preheat the Slow Cooker before using unless specified in the recipe. The ceramic pot should be at room temperature before adding hot foods.
5. To wash your ceramic pot right after cooking, use hot water. Do not pour in cold water if the ceramic pot is hot.

# CUSTOMER ASSISTANCE

If you have a claim under this warranty, please call our Customer Assistance Number. For faster service, please have the model number and product name ready for the operator to assist you. This number can be found on the bottom of your appliance and on the front page of this manual.

**Model Number:** \_\_\_\_\_ **Product Name:** \_\_\_\_\_

Customer Assistance Number 1.877.207.0923 (US) or 1.877.556.0973 (Canada)

Keep these numbers for future reference!

For more information, please visit us at [WWW.GEHOUSEWARES.COM](http://WWW.GEHOUSEWARES.COM)

## TWO-YEAR LIMITED WARRANTY

### What does your warranty cover?

- Any defect in material or workmanship.

### For how long after the original purchase?

- Two years.

### What will we do?

- Provide you with a new one.
- For those items still under warranty but no longer available, WAL-MART reserves the right to replace with a similar GE branded product of equal or greater value.

### How do you make a warranty claim?

- Save your receipt.
- Properly pack your unit. We recommend using the original carton and packing materials.
- Return the product to your nearest WAL-MART store or call Customer Assistance at 1-877-207-0923 (U.S.) or 1-877-556-0973 (Canada).

### What does your warranty not cover?

- Parts subject to wear, including, without limitation, glass parts, glass containers, cutter/strainer, blades, seals, gaskets, clutches, motor brushes, and/or agitators, etc.
- Commercial use or any other use not found in printed directions.
- Damage from misuse, abuse, or neglect, including failure to clean product regularly in accordance with manufacturer's instructions.

### How does state law relate to this warranty?

- This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.
- This warranty is in lieu of any other warranty or condition, whether express or implied, written or oral, including, without limitation, any statutory warranty or condition of merchantability or fitness for a particular purpose.
- WAL-MART, GE and the product manufacturer expressly disclaim all responsibility for special, incidental and consequential damages or losses caused by use of this appliance. Any liability is expressly limited to an amount equal to the purchase price paid whether a claim, however instituted, is based on contract, indemnity, warranty, tort (including negligence), strict liability, or otherwise. Some states or provinces do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you.

### What if you encounter a problem with this product while using it outside the country of purchase?

- The warranty is valid only in the country of purchase and you follow the warranty claim procedure as noted.



is a trademark of General Electric Company and is used under the license by Wal-Mart Stores Inc., Bentonville, AR 72716

### Marketed in Canada by:

Wal-Mart Canada Corp.  
1940 Argenta Road  
Mississauga, Ontario L5N1P9

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>