

INTRODUCTION

Your Telephone is designed to give you flexibility in use, and high quality performance. To get the most from your new telephone, we suggest that you take a few minutes right now to read through this instruction manual.


If you have any questions or problems, consult the Table of Contents, the Troubleshooting Guide, or the Index for the solution.

TABLE OF CONTENTS

PARTS CHECKLIST	2
INSTALLATION AND SETUP	2
TABLETOP INSTALLATION	3
WALL MOUNT INSTALLATION	4
USING FEATURES	5
VOLUME CONTROL	5
FLASH BUTTON	5
REDIAL BUTTON	5
TEMPORARY TONE FEATURE	5
MEMORY DIALING	6
STORING A NUMBER IN MEMORY WHILE CALLING	6
STORING A NUMBER IN MEMORY (WITHOUT CALLING)	6
DIALING A NUMBER FROM MEMORY	7
BATTERY INSTALLATION	8
TROUBLESHOOTING TIPS	9
CARE AND MAINTENANCE	10
ACCESSORY ORDER FORM	11
WARRANTY	12

PARTS CHECKLIST

 
Your package should contain the following items:

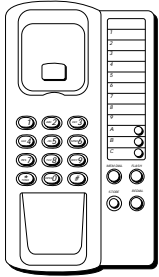


Base unit



 Handset

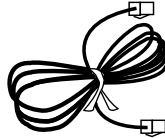

Phone line cord

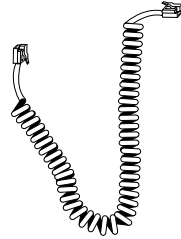 

Long handset cord

 
INSTALLATION AND SETUP

Your GE Memory Phone Telephone can be mounted on the wall or placed on a counter top or table top. After you decide which type of installation you want, refer to the appropriate installation diagram.


BEFORE YOU BEGIN

MODULAR JACK REQUIREMENTS

You need an RJ11 type modular jack, which is the most common type of phone jack and might look like the one pictured here. If you don't have a modular jack, call your local phone company to find out how to get one installed.

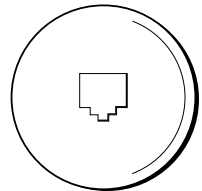

TABLETOP INSTALLATION

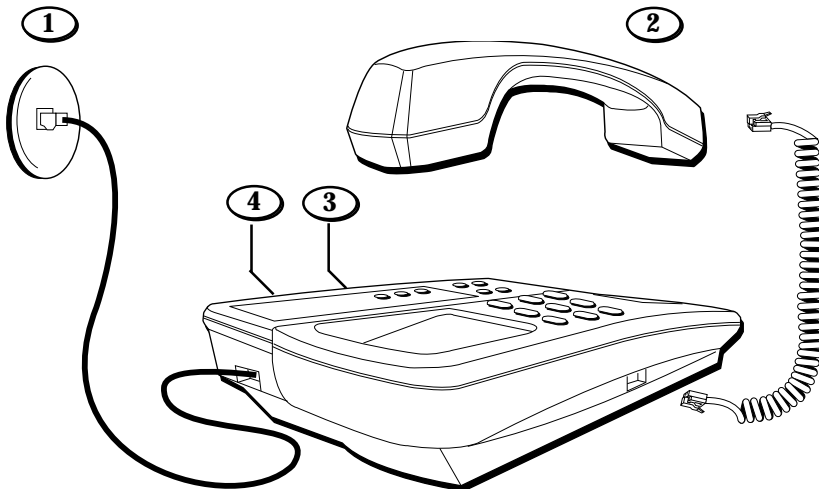 


1. Plug the telephone line cord into a modular jack (RJ11C) and into the PHONE LINE jack on the back of the unit.
2. Plug the handset cord into the handset, and into the telephone jack on the left side of the unit.
3. Set the PULSE/TONE switch to TONE if you use Touch-Tone service; set it to PULSE if you have rotary service.
4. Adjust the RINGER volume switch to the desired setting.


WALL MOUNT INSTALLATION

The Telephone can be mounted on a wall phone plate (not included).

 
1. Plug the phone cord into the phone jack on the back of the unit.
2. Wrap extra cord and retain in space provided in the back of the phone.

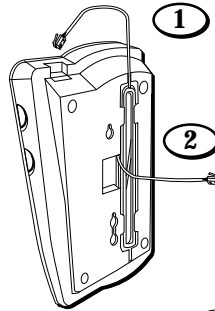

 
3. Connect the phone cord to the modular jack on the wall.
4. Slip the mounting holes over the wall plate posts and slide the unit down firmly into place.

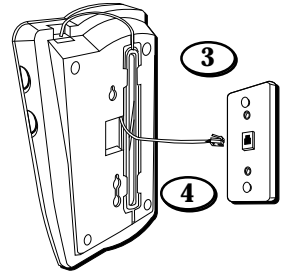

 5. Plug the handset cord into the unit, and then hang up the phone.
6. Set the RINGER VOLUME switch to the desired setting.

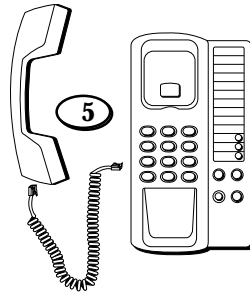

 7. Set the PULSE/TONE switch to TONE if you use Touch-Tone service; set it to PULSE if you have rotary service.

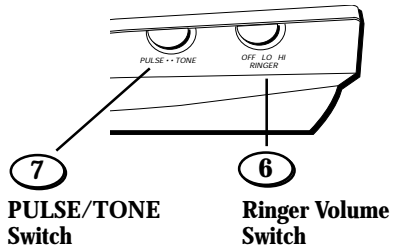


USING FEATURES

VOLUME CONTROL

Use the RINGER VOLUME switch on the side of the phone to adjust the volume of the ringer.


FLASH BUTTON

 Press the FLASH button instead of using the hook switch to activate customer calling services such as call waiting or call transfer, which are provided by your local phone company.

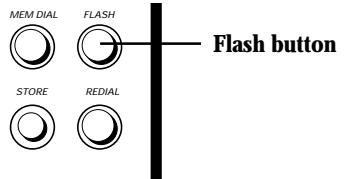

REDIAL BUTTON

 
Redial the last number you called by pressing the REDIAL button after you get a dial tone.

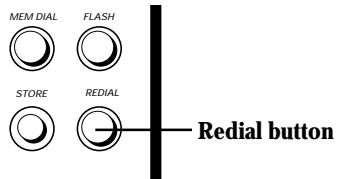

TEMPORARY TONE FEATURE

If you have Pulse (rotary) service, and want to access customer calling services that require touch-tone dialing, such as getting information from a local bank, you can use this feature.

 1. Press the TONE button (*) after you have connected to the service in order to enable touch-tone dialing.
2. When you hang up, the phone automatically returns to Pulse dialing mode.

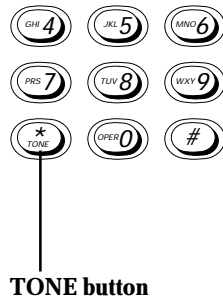

MEMORY DIALING

Store as many as 12 numbers in memory for easy dialing. Three can be stored in the Emergency Quick Dial locations, and nine additional numbers can be stored in the numbered keys (1-9).

STORING A NUMBER IN MEMORY WHILE CALLING

1. Pick up the handset.
2. Dial the phone number.
3. Press STORE twice.
4. Press an A, B ,C button, or Memory Location (1-9 on the keypad).
5. Record the phone number on the memory directory (located under the plastic cover).

STORING A NUMBER IN MEMORY (WITHOUT CALLING)

1. Pick up the handset.
2. Press STORE.
3. Dial the number to be stored.
4. Press STORE.
5. Press an A, B ,C button, or Memory Location (1-9 on the keypad).
6. Record the phone number on the memory directory (located under the plastic cover).

STORING THE LAST NUMBER DIALED

1. Pick up the handset.
2. Press STORE twice.
3. Press an A, B ,C button, or Memory Location (1-9 on the keypad).
4. Record the phone number on the memory directory (located under the plastic cover).

ADDING A PAUSE TO THE DIALING SEQUENCE

Use the REDIAL button to insert a delay in the dialing sequence when storing a number. For example, when you need to dial 9 to get an outside line, press REDIAL at the point in the dialing sequence in which a pause is required:

1. Pick up the handset.
2. Press STORE.
3. Press 9.
4. Press REDIAL to add a pause, and then dial the number.
5. Press STORE.
6. Press an A, B ,C button, or Memory Location (1-9 on the keypad).

CLEARING A STORED NUMBER

1. Pick up the handset.
2. Press STORE button.
3. Press REDIAL button.
4. Press STORE button.
5. Press an A, B ,C button, or Memory Location (1-9 on the keypad).

DIALING A NUMBER FROM MEMORY

You can dial numbers from memory when using the handset. When you get a dial tone, press the MEM DIAL button followed by the memory location (1-9) for the number you want to dial.

DIALING THE EMERGENCY QUICK DIAL NUMBERS (A, B, OR C)

 
To dial one of these numbers, just press its button after you get a dial tone.

CAUTION: If you make test calls to emergency numbers, remain on the line and explain the reason for the call. Also, make these calls in off-peak hours, such as early morning or late evening.

BATTERY INSTALLATION

A consumer replaceable long life Lithium Battery (3V) is installed in the phone to provide backup power for retaining numbers in memory.

1. Unplug modular jack from phone wall outlet.
2. Remove battery cover.
3. Remove battery by inserting a pointed object in opening at either end of battery cartridge.
4. Insert replacement battery with “-” facing back of phone.
5. Replace battery cover.
6. Plug modular jack into phone wall outlet.
7. Reprogram numbers into memory.

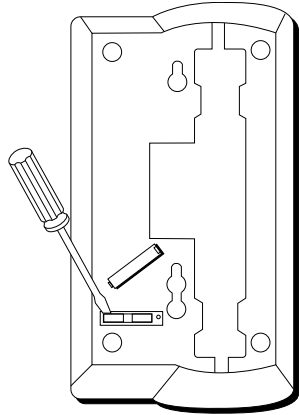

BATTERY SAFETY PRECAUTIONS

For your safety, please follow these precautions:

- Do not recharge, disassemble, mutilate, wet, or dispose of batteries in fire.
- Keep batteries out of reach of children.
- Replace only with GE Cat. #5-1923.
- When replacing batteries, be sure to unplug the phone line from the phone before inserting the batteries.

TROUBLESHOOTING TIPS

PROBLEM	SOLUTION
No dial tone Can't dial out	<ul style="list-style-type: none">• Check hook switch to make sure it pops up.• Make sure TONE/PULSE is set to correct position.• Unplug the phone, wait 30 seconds, and plug the phone back in.
Phone doesn't ring	<ul style="list-style-type: none">• Check RINGER VOLUME.• Could have too many phones on one line. (See FCC information regarding REN)
Can't be heard by other party	<ul style="list-style-type: none">• Make sure phone cord is securely plugged in.
Memory dialing problems	<ul style="list-style-type: none">• Make sure you entered numbers correctly. (See "Memory Dialing.")

CARE AND MAINTENANCE

To keep your GE telephone working and looking good, follow these few simple guidelines:

- Avoid putting the phone near heating appliances and devices that generate electrical noise. (i.e., motors, fluorescent lamps.)
- Phone should not be exposed to direct sunlight or moisture.
- Avoid dropping the handset and other rough treatment.
- Clean telephone with a soft cloth. (Remember to first unplug the phone from the wall outlet.)
- Never use a strong cleaning agent or abrasive powder, as this will damage the finish.
- Retain the original packaging for future use.

SERVICE

The FCC requires this product be serviced only by the manufacturer or its authorized service agents. In accordance with FCC requirements, changes or modifications not expressly approved by Thomson Consumer Electronics could void the user's authority to operate this product. For instructions on how to obtain service, refer to the warranty included in this guide or call customer service's telephone number: 800-448-0329.

Attach your sales receipt to the booklet for future reference or jot down the date this product was purchased or received as a gift. This information will be valuable if service should be required during the warranty period.

Purchase date _____

Store Name _____

CUSTOMER: CUT ALONG DOTTED LINE. ✂

ACCESSORY ORDER FORM

DESCRIPTION	CATALOG NUMBER	PRICE*	QUANTITY	TOTAL
Replacement Battery	5-1923	\$9.95		

For credit card purchases

Your complete charge card number, its expiration date and your signature are necessary to process all charge card orders.

Copy your complete account number from your VISA card.

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------

My card expires:

<input type="text"/>	<input type="text"/>	<input type="text"/>
----------------------	----------------------	----------------------

Copy your complete account number from your MasterCard.

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------

Copy the number above your name on the MasterCard

<input type="text"/>	<input type="text"/>	<input type="text"/>
----------------------	----------------------	----------------------

My card expires:

<input type="text"/>	<input type="text"/>	<input type="text"/>
----------------------	----------------------	----------------------

*Prices are subject to change without notice.

Total Merchandise.....\$_____

We are required by law to collect the appropriate sales tax for each individual state, county and locality to which the merchandise is being sent.

Sales Tax.....\$_____

Use VISA or MasterCard preferably .Money order or check must be in U.S. currency only. No COD or Cash.

All accessories are subject to availability. Where applicable, we will ship a superseding model.

Shipping, Handling, and Insurance.....\$_____

Total Amount Enclosed.....\$_____

Mail order form and money order or check (in U.S. currency) made payable to Thomson Consumer Electronics, Inc. to.

Consumer Electronics

Mail Order Department

P.O. Box 8419

Ronks, PA 17573-8419

This is your return label. Please print clearly To:

Name.....

Address..... Apt.....

City.....State.....ZIP.....

Authorized Signature

Please make sure that this form has been filled out completely.

LIMITED WARRANTY

What your warranty covers:

- Any defect in materials or workmanship.

For how long after your purchase:

- Two years.

(The warranty for rental units begins with the first rental.)

What we will do:

- Provide you with a new, or at our option, a refurbished unit.
- The exchange unit is under warranty for the remainder of the original product's warranty period.

How to make a warranty claim:

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- Include in the package evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send standard UPS or its equivalent to:

Thomson Consumer Electronics, Inc.

Product Exchange Center

32 Spur Drive

El Paso, Texas 79906

- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- A new or refurbished unit will be shipped to you prepaid freight.

What your warranty *does not* cover:

- Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. For additional information, ask your dealer.)
- Installation and set-up service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of God, such as but not limited to lightning damage.

Product Registration:

- Please complete and mail the Product Registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

How state law relates to this warranty:

- This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

If you purchased your product outside the USA:

- This warranty does not apply. Contact your dealer for warranty information.

Model 2-9169
343A6768-0001 (Rev. 1 E/S)
96-10
Printed in Philippines

 **THOMSON CONSUMER ELECTRONICS**

P.O. Box 1976, Indianapolis, IN 46206
© 1996 Thomson Consumer Electronics, Inc.
Trademark(s) ® Registered
Marca(s) ® Registrada(s)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>