

www.GEAppliances.ca

Safety Instructions 2, 3

Care and Cleaning

Grease Filters	
Hood Lights6	
Hood Surfaces	
Stainless Steel Surfaces5	

Installation Instructions7–16

Consumer Support

Consumer Support Back Cover	
Product Registration19, 20	
Warranty	

Owner's Manual and Installation Instructions

PVWS930 PVWS936 PVWT936 PVWG936 PVIG940



350A4502P595 03-07 ATS LI3FQA Ed. 01/08

Write the model and serial numbers here:

Model # _____

Serial # ____

You can find them on a label on the inside of the hood.

IMPORTANT SAFETY INFORMATION. READ ALL INSTRUCTIONS BEFORE USING.



SAFETY PRECAUTIONS

WARNING — TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

- A. Use this unit only in the manner intended by the manufacturer. If you have questions, contact the manufacturer.
- **B.** Before servicing or cleaning unit, switch power off at service panel and lock the service disconnecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.
- C. Do not use this unit with any solid-state speed control device.
- D. This unit must be grounded.

CAUTION— For general ventilating use only. Do not use to exhaust hazardous or explosive materials and vapors.

CAUTION— To reduce risk of fire and to properly exhaust air, be sure to duct air outside. Do not vent exhaust air into spaces within walls or ceilings or into attics, crawl spaces, or garages.

WARNING— To reduce the risk of fire or electric shock, DO NOT use this fan with any solid-state speed control device.

WARNING —TO REDUCE THE RISK OF INJURY TO PERSONS IN THE EVENT OF A RANGE TOP GREASE FIRE, OBSERVE THE FOLLOWING*:

- A. SMOTHER FLAMES with a close-fitting lid, cookie sheet, or metal tray, then turn off the burner. BE CAREFUL TO PREVENT BURNS. If the flames do not go out immediately, EVACUATE AND CALL THE FIRE DEPARTMENT.
- B. NEVER PICK UP A FLAMING PAN You may be burned.
- C. DO NOT USE WATER, including wet dishcloths or towels—a violent steam explosion will result.
- D. Use an extinguisher ONLY if:

1. You know you have a Class ABC extinguisher, and you already know how to operate it.

2. The fire is small and contained in the area where it started.

3. The fire department is being called.

4. You can fight the fire with your back to an exit.

* Based on <u>"Kitchen Fire Safety Tip</u>"s published by NFPA.

SAFETY PRECAUTIONS

WARNING —TO REDUCE THE RISK OF A RANGE TOP GREASE FIRE:

- A. Never leave surface units unattended at high settings. Boilovers cause smoking and greasy spillovers that may ignite. Heat oils slowly on low or medium settings.
- B. Always turn hood ON when cooking at high heat or when cooking flaming foods.
 (i.e. Crepes Suzette, Cherries Jubilee, Pepper corn Beef Flambé).
- C. Clean ventilating fans frequently. Grease should not be allowed to accumulate on fan or filter.
- D. Use proper pan size. Always use cookware appropriate for the size of the surface element.

WARNING —TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

- A. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
- B. Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent back drafting. Follow the heating equipment manufacturer's guideline and safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and the local code authorities.
- C. When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.
- READ AND FOLLOW THIS SAFETY INFORMATION CAREFULLY. READ AND SAVE THESE INSTRUCTIONS

D. Ducted fans must always be vented to the outdoors.

WARNING —TO REDUCE THE RISK OF FIRE, USE ONLY METAL DUCTWORK.

Do not attempt to repair or replace any part of your hood unless it is specifically recommended in this guide. All other servicing should be referred to a qualified technician.

Operating Instructions Care and Cleaning


Safety Instructions

3

Using the hood controls.

	 C E G H I
 A - MOTORSTOP B - SPEED DECREASE D - LED:SPEED 1 F - LED: SPEED 2 AND METAL FILTER SATURAT (WHEN FLASHING) C - LED: SPEED 3 AND COAL FILTER SATURATION (WHEN FLASHING) E - MOTOR START AND SPEED INCREASE G - TIMED INTENSIVE SPEED 	PRESSED, ALL FOUR LEDS TURN ON TO
<i>Control Device Reset</i> <i>Grease Filters:</i> After cleaning the grease filters, press buttons (A)-(E 2 seconds until you hear the beep and the LED stop flashing.) for) for The coal filter saturation is also indicated when the hoo is used in vented version. The hood is provided with a storage device which coun the number of hours of operation and which regulates the lighting up of the coal filter saturation LEDS.
<i>Coal Filter:</i> After replacing the cartridge, press both buttons (A) for 2 seconds until you hear the beep. The LED will flashing.	
Hood Operation	
Turn the fan on for approximately 5 minutes before start cooking in order to create some upwards drafts through the hood. This causes the heat, smoke, steam, grease and odou produced during cooking to be pushed outwards, th	The presence of drafts in the kitchen or in the hood reduces the efficiency of the hood. These drafts

Throughout this manual features and appearance may vary from your model

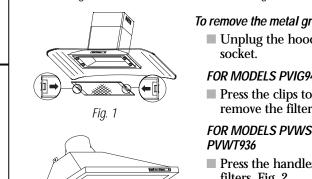

To remove the metal grease filter/s:

Unplug the hood from the mains

FOR MODELS PVIG940, PVWG936

Press the clips towards the centre and remove the filters. Fig. 1.

FOR MODELS PVWS930, PVWS936,

Press the handles and remove the filters. Fig. 2.

To replace the metal grease filter/s:

Follow the same procedure, but backwards.

Consumer Support

4

Fig. 2

Safety Instructions

Operating Instructions

Care and Cleaning

Care and cleaning of the vent hood.

Be sure electrical power is off and all surfaces are cool before cleaning or servicing any part of the vent hood. Make sure lamps are cold before cleaning the hood.

To clean the filter/s

We recommend you wash the filters at least once a month, by hand or in the dishwasher. Let the water drip out of the holes on the edges and leave the filters to dry completely before reinstalling them.

To clean the hood surface

For general cleaning operations, rub the external part of the hood made of glass, using soapy water or household cleaning products, rinsing it thoroughly and drying it with a soft dry cloth to avoid marks being left by the water.

Stainless Steel Surfaces

Do not use a steel-wool pad; it will scratch the surface.

- 7 Shake bottle well.
- Place a small amount of CERAMA BRYTE[®] Stainless Steel Cleaning Polish and Conditioner on a dry cloth or dry paper towel.
- 3 Clean a small area (approximately 8" x 8" or 20.3 x 20.3 cm), rubbing with the grain of the stainless steel if applicable.
- 5 Repeat as necessary.

www.GEAppliances.ca

Safety Instructions


Operating Instructions

Troubleshooting Tips

Consumer Support

Care and cleaning of the vent hood.

Be sure electrical power is off and all surfaces are cool before cleaning or servicing any part of the vent hood.

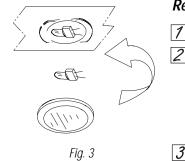

Safety Instructions

Operating Instructions

Care and Cleaning

Troubleshooting Tips

Consumer Support

Replacement of lamps (Models PVWS930, PVWS936, PVWT936, PVWG936, PVIG940)

- **1** Unscrew the lamp diffusers.
 - Remove the blown lamp and replace it with a new 20 Watt (max) 12 Volt halogen lamp with a G-4 cap. Follow the instructions given on the lamp box. Do not touch the lamp with your bare hands.
- 3 Place the lamp diffuser back in place.

Installation Instructions

Range Hood

Questions? Call 1-800-561-3344 or Visit our Website at: www. GEAppliances.ca

BEFORE YOU BEGIN

Read these instructions completely and carefully.

- **IMPORTANT** Save these instructions for local inspector's use.
- **IMPORTANT** Observe all governing codes and ordinances.
- Note to Installer Be sure to leave these instructions with the Consumer.
- Note to Consumer Keep these instructions for future reference.
- Skill level Installation of this vent hood requires basic mechanical and electrical skills.
- Completion time 1 to 3 hours
- Proper installation is the responsibility of the installer.
- Product failure due to improper installation is not covered under the Warranty.

CAUTION:

Due to the weight and size of these vent hoods and to reduce the risk of personal injury or damage to the product, TWO PEOPLE ARE REQUIRED FOR PROPER INSTALLATION

FOR YOUR SAFETY: WARNING - Before beginning the

installation, switch power off at service panel and lock the service disconnecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely **fasten** a prominent warning device, such as a tag, to the service panel.

WARNING: - TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

A. Installation work and electrical wiring must be done by

qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.

B. Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent back drafting. Follow the heating equipment manufacturers guidline and safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society for Heating, refrigeration and Air Conditioning Engineers (ASHRAE), and the local code authorities.

C. When cutting or drilling into wall or ceiling do not damage electrical wiring and other hidden utilities.


D. Ducted fans must always be vented to the outdoors.

WARNING: - TO REDUCE THE RISK OF FIRE, OF FIER, USE ONLY METAL DUCTWORK.

Do not attempt to repair or replace any part of your hood unless it is specifically recommended in this guide. All other servicing should be referred to a qualified technician.

CAUTION: - TO REDUCE THE RISK OF FIRE AND TO PROPERLY EXHAUST AIR.

Be sure to duct air outside- Do not vent exhaust air into spaces within walls or ceilings or into attics, crawl spaces, or garages.

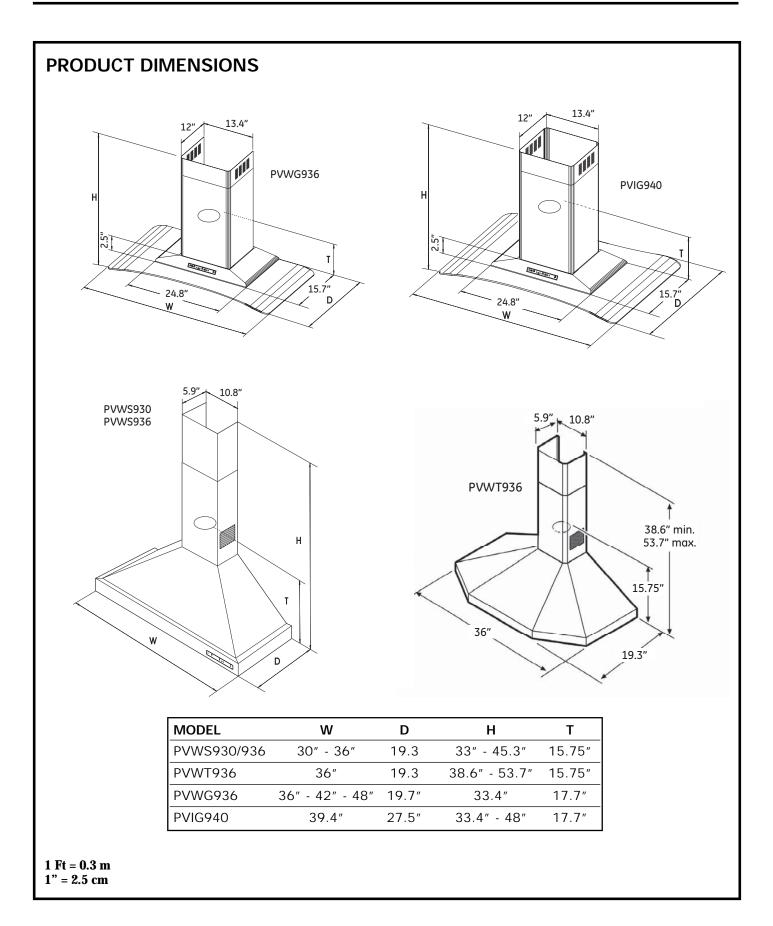

DUCT FITTINGS

Use this chart to compute maximum permissable lengths for duct runs to outdoors.

Note: Do not exceed maximum permissable equivalent lengths!

Maximum duct length: 100 foot for vent hoods.

Flexible ducting:

1 Ft = 0.3 m 1" = 2.5 cm


If flexible metal ducting is used, all the equivalent feet values in the table should be doubled. The flexible metal duct should be straight and smooth and extended as much as possible.

Do NOT use flexible ducting.

Note: Any home ventilation system, such as a ventilation hood, may interrupt the proper flow of combustion air and exhaust required by fireplaces, gas furnaces, gas water heaters and other naturally vented systems. To minimize the chance of interruption of such naturally vented systems, follow the heating equipment manufacturer's guidelines and safety standards such as those published by NFPA and ASHRAE.

Using a smaller diameter duct size will reduce performance

Duct Piece	Dimensions	Equivalent Length*	Quantity Used	Total Equivalent Length
	Round, straight	1 ft. (per foot length		
	3¼" x 12" straight	1 ft. (per foot length		
	90° elbow	8 ft.		
	45° elbow	6 ft.		
	3¼" x 12" or 90° elbow	15 ft.		
	3¼" x 12" or 45° elbow	9 ft.		
	3¼" x 12" or 90° flat elbow	20 ft.		
	7" round to 3¼" x 12" transition	1 ft.		
	3¼" x 12" to 7" round transition	5 ft.		
	7" round to 3¼" x 12" transition 90° elbow	5 ft.		
	3¼" x 12" to7" round transition 90° elbow	15 ft.		
	Round wall cap with damper	30 ft.		
	3¼" x 12" wall cap with damper	30 ft.		
	7" round roof cap	30 ft.		
	Round roof vent	24 ft.		
equivalent. Equ based on actua Engineering an	of straight duct plus duct fil ivalent length of duct piece I tests conducted by GE Eva d reflect requirements for gr nance with any ventilation h	s are luation pod	Total Duct Ru	n

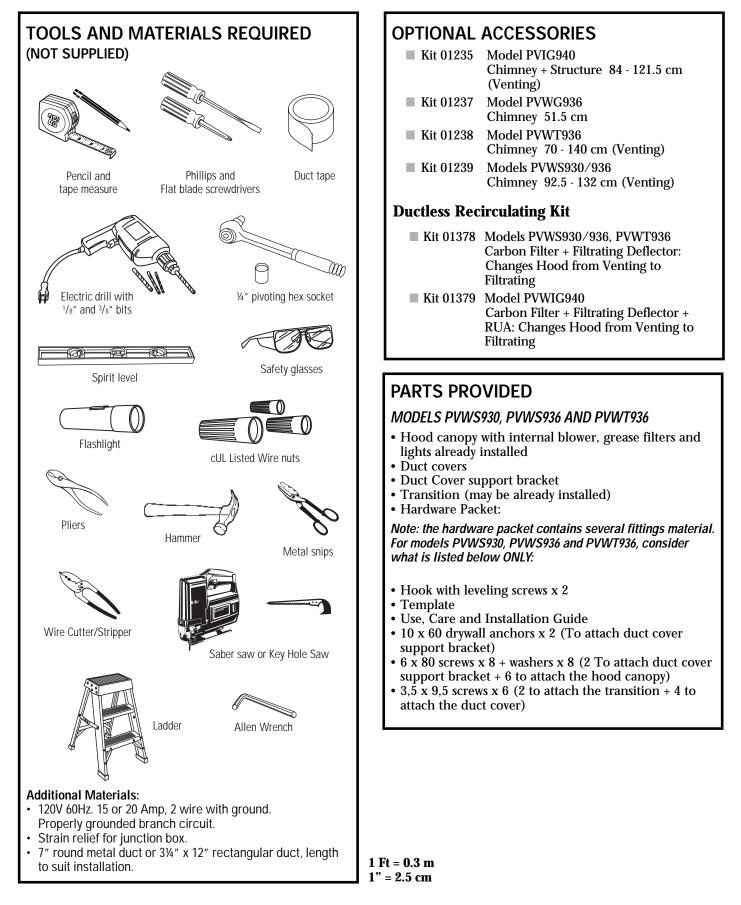

PARTS PROVIDED - Continued

MODEL PVWG936

- Hood canopy with internal blower, grease filters and lights already installed
- Glass vapour catcher
- Duct covers
- Duct Cover support bracket
- Transition (may be already installed)
- Hardware Packet:

Note: the hardware packet contains several fittings material. For model PVWG936, consider what is listed below ONLY:

- Allen Wrench
- Lower support bracket x 2 (to attach the hood canopy)
- Rubber tape (for glass vapour catcher)
- Bushes x 4 (for glass vapour catcher)
- 6 x 20 screws x 4 (for glass vapour catcher)
- Template
- Use, Care and Installation Guide
- 10 x 60 drywall anchors x 2 (To attach duct cover support bracket)
- 6 x 80 screws x 6 + washers x 6 (2 To attach duct cover support bracket + 4 to attach the hood canopy)
- $3,5 \ge 9,5$ screws ≥ 14 (2 to attach the transition + 4 to attach the duct cover + 8 to attach the lower support brackets)

MODEL PVIG940

- Hood canopy with internal blower, grease filter and lights already installed
- Glass vapour catcher
- Duct covers
- Chimney structure
- Transition (may be already installed)
- Use, Care and Installation Guide
- Hardware Packet:

Note: the hardware packet contains several fittings material. For model PVIG940, consider what is listed below ONLY:

- Allen Wrench
- Rubber tape (for glass vapour catcher)
- Bushes x 4 (for glass vapour catcher)
- 6 x 20 screws x 4 (for glass vapour catcher)
- Template
- 6 x 80 screws x 4 + washers x 4(To attach the chimney structure to the ceiling)
- 3,5 x 9,5 screws x 16 (8 to assemble the structure + 4 to attach the duct covers + 2 to attach the transition + 2 to attach the junction cover (may be already intsalled))
- 8 x 16 screws x 4 (to attach the canopy to the structure).

1 Ft = 0.3 m

1" = 2.5 cm

DUCTING OPTIONS AND EXAMPLES


Closely follow the instructions set out in this manual. All responsibility, for any eventual inconveniences, damages or fires caused by not complying with the instructions in this manual, is declined.

Venting Methods

The hood is equipped with a transition B for discharge of fumes to the outside **(Ducting version)**.

Models PVWS930/936 and PVWT936: Minimum Duct Size (Ducting/Ductless version): 5" Round Pipe.

Models PVWG936 and PVIG940: Minimum Duct Size (Ducting/Ductless version): 6" Round Pipe.

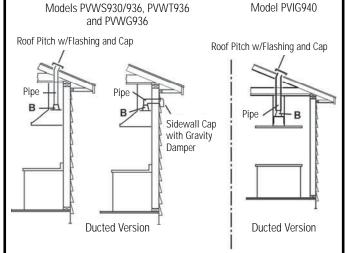

Preparation

Do not cut a joist or stud unless absolutely necessary. If a joist or stud must be cut, then a supporting frame must be constructed.

Fittings material is provided to secure the hood to most types of walls/ceilings.

However, a qualified technician must verify suitability of the materials in accordance with the type of wall/ceiling.

Before making cutouts, make sure there is proper clearance within the ceiling or wall for exhaust vent.

Hood installation height above cooktop is the users preference. The lower the hood is above the cooktop, the more efficient the capturing of cooking odors, grease and smoke.


The hood shall be installed at 30" (76,2 cm) minimum to 36" (91,4 cm) above the countertop. Check your ceiling height and the hood height maximum before you select your hood.

WALL INSTALLATION

FOR MODELS PVWS930, PVWS936, PVWT936 AND PVWG936 ONLY

(For model **PVIG940** installation, please refer to the paragraph "CEILING INSTALLATION" on the next pages).

- 1. Choose the assembly height which is most convenient for the user and mark the wall behind the hob.
- 2. Mark the centre line of the hood and trace the vertical line from the bottom of the hood to the ceiling.
- 3. Fasten the template using adhesive tape, making sure the centre line corresponds with the bottom of the hood.
- 4. Mark the centre of the fixing points (6 fixing points for models **PVWS930/936** and **PVWT936**; 4 fixing points for model **PVWG936**) through the template on the wall and then remove the template.
- 5. Trace a horizontal line on the wall 1" above the highest fixing point and 1" below the lowest fixing point.
- 6. Find studs behind drywall by tapping wall or using a stud finder. Mark the center of the studs with a vertical line to the right and left of the marked fastener location.
- 7. *Note:* All fastener location must span the studs otherwise proceed as follows:
 - Cutout drywall along marked lines.
 - Install wood blocking between studs and make sure it is flush with existing stud front. Make sure all mounting screws will anchor to added studs.
 - Replace drywall and refinish.
- 8. Mark the centre line again and the bottom of the hood in same position as before and fasten the template to the wall using adhesive tape as indicate above at point 3.

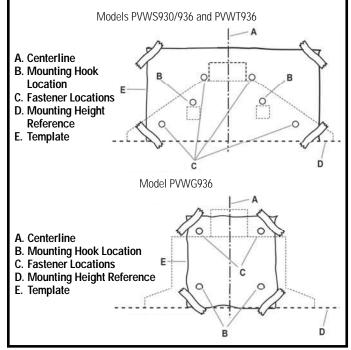


9. Models PVWS930/936 and PVWT936:

Attach the 2 hooks with leveling screws (provided in the assembly kit) to the points marked on the template with 2 screws and then remove the template.


Model PVWG936:

Screw 2 screws on lower fixing point but do not tighten them completely (leave a space of $\frac{1}{2}$ ") they will serve to hang the hood canopy.

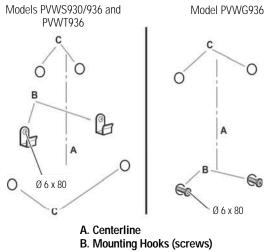



10. Install the bracket flush with the ceiling using the drywall anchors provided with the appliance.

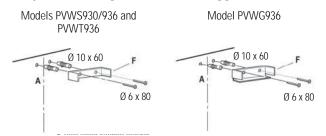

- 11. Determine and make all necessary cuts in the wall for the vent system. Install the vent system before the canopy hood. See "Venting methods" paragraph.
- 12. Determine the required height for the conduit and cut a 1¹/₄" hole at this location. Run wires through hole according to the National Electrical Code or CSA Standards and local codes and ordinances. *Note:* If a In-line blower installation is required/ needed, then provide an additional hole/conduit.

There must be enough power supply cable from the fused disconnect (Or circuit breaker) box to make the connection in the hood's Junction box/es.


Use caulking to seal all openings. Do Not turn on power until installation is completed.

> 1 Ft = 0.3 m 1" = 2.5 cm

WALL INSTALLATION - Continued

13. Model PVWG936:

Fix the 2 supplied brackets on the rear side of the motor housing with 4 screws each.

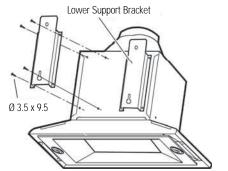


14. Hang hood with the 2 mounting hooks (screws).


WARNING

Excessive Weight Hazard - Use two or more people to move and install range hood. Failure to do so can result in back or other injury.

- 15. Hang hood with the 2 mounting hooks (screws).Level the appliance, using a carpenters level across bottom of hood and (models PVWS930/936 and PVWT936 only) with leveling screws in mounting hooks.
- 16. Secure hood with 2 screws on top and (models PVWS930/936 and PVWT936 only) 2 screws on bottom.

Models PVWS930/936 and PVWT936

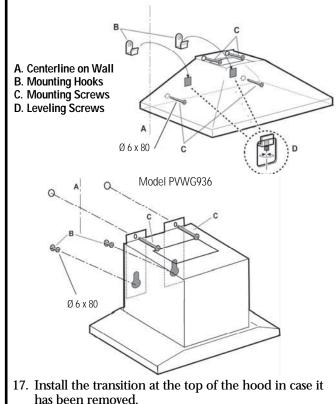

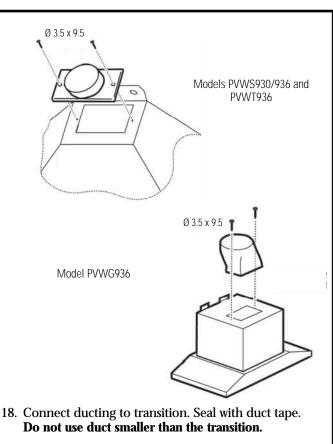

19. Electrical connection

WARNING

- Electrical Shock Hazard
- Turn off power circuit at the service panel before wiring this unit.
- 120 VAC, 15 or 20 Amp circuit required.


ELECTRICAL GROUNDING INSTRUCTIONS

THIS APPLIANCE IS FITTED WITH AN ELECTRICAL JUNCTION BOX WITH 3 WIRES, ONE OF WHICH (GREEN/YELLOW) SERVES TO GROUND THE APPLIANCE. TO PROTECT YOU AGAINST ELECTRIC SHOCK, THE GREEN AND YELLOW WIRE MUST BE CONNECTED TO THE GROUNDING WIRE IN YOUR HOME ELECTRICAL SYSTEM, AND IT MUST UNDER NO CIRCUMSTANCES BE CUT OR REMOVED.

Failure to do so can result in death or electrical shock.

Remove the knockout and the Junction box cover and install the conduit connector (cUL listed) in junction box.

1 Ft = 0.3 m 1" = 2.5 cm

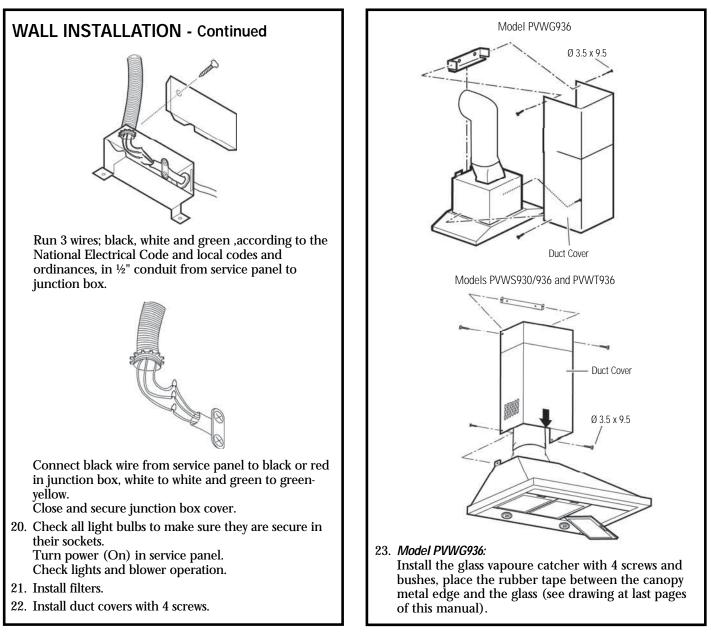



CEILING INSTALLATION


FOR MODEL PVIG940 ONLY

(For models **PVWS930/936**, **PVWT936** and **PVWG936** installation, please refer to paragraph "WALL INSTALLATION" on previous pages).


- 1. Choose the assembly height which is most convenient for the user.
- 2. Measure the height "**H**" between the ceiling and the floor

- establish the desired distance " $\ensuremath{\mathbf{D}}$ " between the floor and the hood

- measure the height "X" of the hood
- you will obtain "L" by applying the following formula
 L = H (D + X).

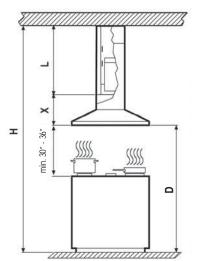


Once you have regulated the length of the telescopic structure, fasten the two items using the 8 screws.

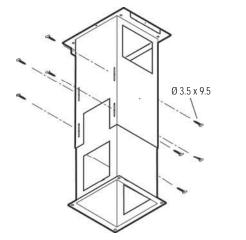


3. Mark the centre lines of the hob or the distance on the overlying ceiling. Use the centre lines marked on the ceiling to position the assembly template.

1 Ft = 0.3 m 1" = 2.5 cm Note the position of the front part of the hood and proceed with the installation. *Note:* All fastener location must span the studs otherwise proceed as described in **Step 4**.

4. Remove the template and keep it. Cut the dry wall of the ceiling and remove it. Install some wooden strips of suitable length 2" x 4" between the joists to create the assembly points of the chimney flue. Use the template for the dimensions and to define the space required. Make sure you fasten the wooden strips safely and level. **Consult a professional if you are having difficulty or if this is your first installation.**

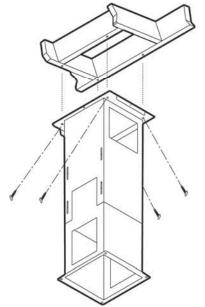


 - 5. Install the outlet duct. The female end should be 4½" under the finished ceiling and fastened safely to the joists. **Do not use smaller ducts than those specified.**
- 6. Install the conduit in the position marked in the hood and measure out the length "L" from the ceiling (see installation **Step 2**).
- 7. Install the dry wall around the duct and conduit then proceed with the ceiling finish.



- 8. Fasten the outlet duct to the female end situated 4" underneath the ceiling.
- 9. Position the telescopic structure adjusted previously. Fasten it to the ceiling using the 4 screws. The outlet duct and the conduit pass along inside it.
- 10. Insert the chimney with the grid facing the ceiling and fasten it on the sides to the telescopic structure using 2 screws.


CEILING INSTALLATION - Continued

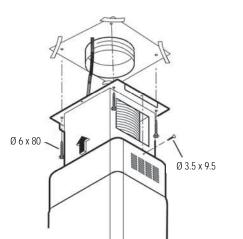

- 11. Insert the other chimney and keep it raised. Fix the low connector to the connection box. Then fasten the outlet duct onto the transition.
- 12. Bring the canopy together with the telescopic structure, and fasten them together using 4 screws (M8 x 16).
 Then you can carry out the electrical connection (consult Step 19 of "WALL INSTALLATION" instructions

(consult **Step 19** of "WALL INSTALLATION" instructions on previous page).

13. Lower the chimney and fasten it on the sides to the hood.

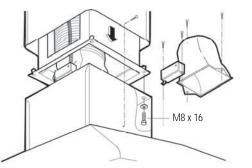

14. Install the glass vapour catcher with 4 screws and bushes, place the rubber tape between the canopy metal edge and the glass (see drawing at last pages of this manual)

www.GEAppliances.ca

Care and Cleaning

Before you call for service...

?

Safety Instructions

Operating Instructions

Troubleshooting Tips

Save time and money! Review the charts on the following pages first and you may not need to call for service.

Problem	Possible Causes	What To Do
Fan does not operate when the switch is on	A fuse may be blown or a circuit breaker tripped.	• Replace fuse or reset circuit breaker.
Fan fails to circulate air or moves air slower than normal		 Remove the filters, clean if necessary and replace them. If cleaning and replacing the filters does not correct the problem, call for service.

Please place in envelope and mail to: Veuillez mettre dans une enveloppe et envoyez à :

OWNERSHIP REGISTRATION P.O. BOX 1780 MISSISSAUGA, ONTARIO L4Y 4G1

(FOR CANADIAN CONSUMERS ONLY -POUR RÉSIDENTS CANADIENS SEULEMENT)

	– THANKS MERCI	OWNERSHIP REGISTRATION CERTIFICATE – FICHE D'INSCRIPTION DU PRO Please register your product to enable us to contact you in the remote event a safety notice is issued for this product and to allow for efficient communication under the terms of our warranty, should the need arise.	ermettre de ecurité concernant lent avec vous en
	' ∑ ¦ □ - ¦	REGISTER ON-LINE: www.geappliances.ca MAIL TO: P.O. BOX 1780, I ENREGISTREMENT SUR INTERNET À : www.electromenagersge.ca POSTEZ À : ONTARIO, L4Y 4 Image: March M	
For Canadian	- 0,1		
Customers	TUR LA	STREET NO / Nº RUE STREET NAME / RUE	APT.NO/APP./RR#
	E AND RE ENVOYEZ	CITY / VILLE PROVINCE POSTAL CO	DDE/CODE POSTAL
	, I	AREA CODE/IND. RÉG. TELEPHONE/TÉLÉPHONE E-MAIL/COURRIEL	
		DID YOU PURCHASE A SERVICE CONTRACT FOR THIS APPLIANCE? YES/OUI LEXPIR	
	THIS Z ICI	AVEZ-VOUS ACHETÉ UN CONTRAT DE SERVICE POUR CET APPAREIL ? NO/NON	DÚ
Pour les consommateurs	r along ti Découpez	NAME OF SELLING DEALER / NOM DU MARCHAND MODEL / MODÈLE	
canadiens	JT ALC	INSTALLATION DATE / DATE D'INSTALLATION Y/A M DU CORRESPONDENCE FRANÇAIS SERIAL / SÉRIE	
	CUT	 I do not wish to receive any promotional offers regarding this product. Je ne désire pas recevoir d'offres promotionnelles concernant ce produit. 	

Range Hood Warranty.



All warranty service provided by our Factory Service Centers, or an authorized Customer Care[®] technician. To schedule service, on-line, 24 hours a day, visit us at www.GEAppliances.ca, or call 1.800.561.3344.

Staple your receipt here. Proof of the original purchase date is needed to obtain service under the warranty.

For The Period Of: Mabe Will Replace:

One Year From the date of the original purchase *Any part* of the range hood which fails due to a defect in materials or workmanship. During this *full one-year warranty*, Mabe will also provide, *free of charge*, all labor and in-home service to replace the defective part.

What Mabe Will Not Cover:

- Service trips to your home to teach you how to use the product.
- Improper installation, delivery or maintenance.
- Failure of the product if it is abused, misused, or used for other than the intended purpose or used commercially.
- Replacement of house fuses or resetting of circuit breakers.
- Damage to the product caused by accident, fire, floods or acts of God.
- Incidental or consequential damage caused by possible defects with this appliance.
- Damage caused after delivery.

EXCLUSION OF IMPLIED WARRANTIES—Your sole and exclusive remedy is product repair as provided in this Limited Warranty. Any implied warranties, including the implied warranties of merchantability or fitness for a particular purpose, are limited to one year or the shortest period allowed by law.

This warranty is extended to the original purchaser and any succeeding owner for products purchased for home use within Canada. If the product is located in an area where service by a Mabe Authorized Servicer is not available, you may be responsible for a trip charge or you may be required to bring the product to an Authorized Mabe Service Location for service.

Some provinces do not allow the exclusion or limitation of incidental or consequential damages. This warranty gives you specific legal rights, and you may also have other rights which vary from province to province. To know what your legal rights are, consult your local or provincial consumer affairs office.

Warrantor: Mabe Canada Inc. Burlington, Ontario

Safety Instructions

Operating Instructions

Consumer Support.



GE Appliances Website

Have a question or need assistance with your appliance? Try the GE Appliances Website 24 hours a day, any day of the year! For greater convenience and faster service, you can now download Owner's Manuals, order parts or even schedule service on-line.



Schedule Service

Expert Mabe repair service is only one step away from your door. Get on-line and schedule your service at your convenience 24 hours any day of the year! Or call 1-800-461-3636 during normal business hours.



Extended Warranties

Purchase a GE extended warranty and learn about special discounts that are available while your warranty is still in effect. You can purchase it on-line anytime, or call 1-888-261-2133 during normal business hours. Mabe Consumer Home Services will still be there after your warranty expires.



Parts and Accessories

Individuals qualified to service their own appliances can have parts or accessories sent directly to their homes (VISA, MasterCard and Discover cards are accepted). Order on-line today, 24 hours every day or by phone at 1-800-661-1616 during normal business hours.

Instructions contained in this manual cover procedures to be performed by any user. Other servicing generally should be referred to qualified service personnel. Caution must be exercised, since improper servicing may cause unsafe operation.



Contact Us

If you are not satisfied with the service you receive from Mabe, contact us on our Website with all the details including your phone number, or write to: General Manager, Customer Relations, Mabe Canada Inc. Suite 310, 1 Factory Lane Moncton, N.B. E1C 9M3



Register Your Appliance

Register your new appliance on-line—at your convenience! Timely product registration will allow for enhanced communication and prompt service under the terms of your warranty, should the need arise. You may also mail in the pre-printed registration card included in the packing material.

GEAppliances.ca

GEAppliances.ca

GEAppliances.ca

GEAppliances.ca

GEAppliances.ca

GEAppliances.ca

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com