



# WAFFLE BAKER GAUFRIER / WAFFLERA

Model Number / Numéro de modèle / Número de Modelo: 169186  
UPC: 681131691864

## Customer Assistance / Service à la clientèle / Asistencia al Cliente

1 877 207 0923 (US)

1 877 556 0973 (Canada)



### Thank you for purchasing a GE small appliance.

In keeping with the GE ecomagination initiative, please consider the option to recycle the packaging material and donate the properly functioning appliance and corresponding Use & Care Guide you are no longer using.

To read more about GE's ecomagination commitment visit:

[ge.ecomagination.com](http://ge.ecomagination.com)

### Merci d'avoir acheté ce petit appareil GE.

Afin de poursuivre l'initiative écomagination de GE, veuillez recycler les matériaux d'emballage et faire don d'un appareil fonctionnant adéquatement que vous n'utilisez plus ainsi que le guide d'utilisation et d'entretien.

Pour en savoir plus à propos de l'engagement écomagination de GE, visitez le site :

[ge.ecomagination.com](http://ge.ecomagination.com)

### Gracias por comprar un pequeño electrodoméstico de GE.

Siguiendo la iniciativa ecoimaginación de GE, por favor considere la opción de reciclar el material de empaçado y donar el aparato funcionando adecuadamente y la Guía de Cuidado y Uso correspondiente que ya no use.

Para leer más sobre el compromiso de ecoimaginación de GE visite:

[ge.ecomagination.com](http://ge.ecomagination.com)

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against risk of electrical shock do not immerse cord, plug or any part of the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Call our toll-free customer service number for information on examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces, including the stove.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "MIN" then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Do not use appliance unattended.
- During use, provide 4 to 6 inches air space above, behind and on both sides for air circulation. Do not use on surfaces where heat may cause a problem.
- Never remove the waffle with any kind of cutting device or other metallic kitchen utensil.
- Always allow the appliance to cool before putting it away and never wind the cord around the appliance while it is still hot.

## SAVE THESE INSTRUCTIONS!

## ADDITIONAL SAFEGUARDS

This appliance is for **HOUSEHOLD USE ONLY**. It may be plugged into an AC electrical outlet (ordinary household current).

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply cord or extension cord is used;

- 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and
- 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

If the power-supply cord is a grounding-type-3-wire cord with a grounding prong on the plug, the extension cord should also be a grounding-type-3-wire cord.

### GROUNDING INSTRUCTIONS

 
 
This appliance must be grounded while in use to protect the operator from electrical shock. The appliance is equipped with a 3-conductor cord and a 3-prong grounding-type plug to fit the proper grounding-type receptacle. **WARNING!** Shock Hazard: If the plug on this appliance does not fit in your outlet, do not modify the plug, and do not use an adaptor. Have an electrician replace the obsolete outlet.

## ADDITIONAL SAFEGUARDS (CONT.)

### CORD SAFETY TIPS

1. Never pull or yank on cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the cord replaced.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.


## PARTS

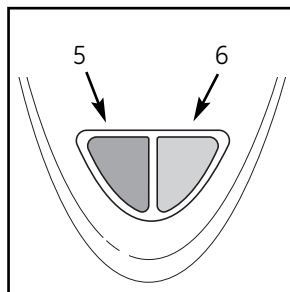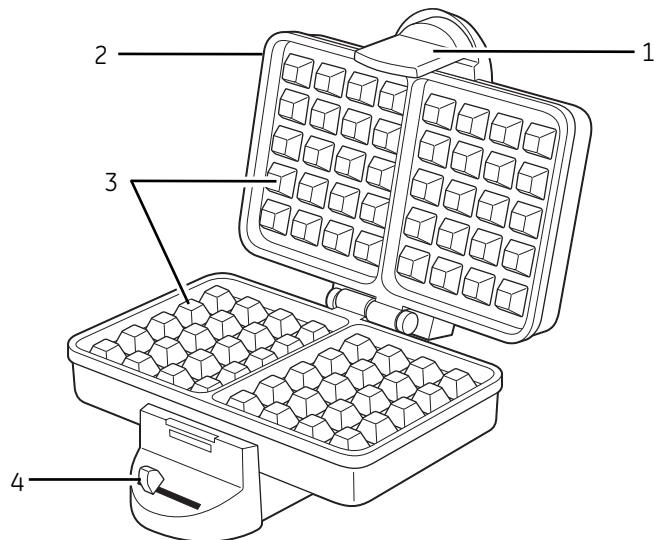

Top of Lid

1. Lid Latch
2. Lid
3. Grids
4. Variable Temperature Control (MIN-MAX)
5. Power ON Light
6. Preheat Light

## OPERATION

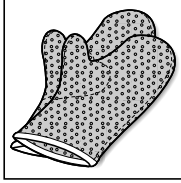 

### ⚠ WARNING

 
Always use a hot mitt to protect hand when opening a hot waffle baker. Escaping steam can burn and lid surfaces are hot.

### Before first use

- Wipe the bottom and top cooking grids **(3)** with a soapy damp cloth.
- Rinse cloth then wipe cooking grids **(3)** again.
- Wipe or brush cooking grids **(3)** with vegetable oil.
- This is only recommended before first use.

### Using the waffle baker


- Plug cord into electrical outlet. The POWER ON light **(5)** will glow.
- Choose desired temperature (MIN—MAX). Preheat with lid **(2)** closed until PREHEAT light comes on.
- Raise lid **(2)** and pour about  $\frac{1}{3}$  cup (80 ml) batter onto **center of each** cooking grid **(3)**. Lower the lid **(2)**. Make sure lid **(2)** is fully closed and lid latch **(1)** is engaged.

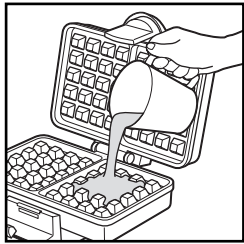

- Waffles are done in about 3 to 6 minutes, depending on chosen temperature (MIN—MAX), recipe, or when steaming begins to stop. Remove waffle with plastic or wooden utensil. Never use metal. This will damage the nonstick coating.
- Unplug unit when through cooking. Let cool.

### Power ON and preheat lights

 The POWER ON light **(5)** comes on when the waffle baker is first plugged in. This light will stay on until the unit is unplugged.

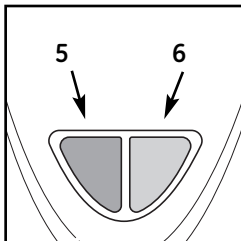

The PREHEAT light **(6)** comes on when the waffle baker has reached the desired temperature. For best results, wait until the PREHEAT light **(6)** comes on before adding the waffle batter. This light will cycle on and off during baking.

## CARE AND CLEANING

### **⚠ WARNING** Shock Hazard.

To reduce the risk of electrical shock, do not immerse the cord, plug or base in water or any other liquid.

- Unplug from outlet and let cool.
- Wipe cooking grids **(3)** and outside of unit with a damp, soapy cloth. Rinse cloth and wipe grids **(3)** again.
- Do not use steel wool, scouring pads or abrasive cleansers on any part of the unit. Never use sharp or pointed objects for cleaning purposes.
- Always allow the appliance to cool down completely before storing. The unit can be stored upright to save space.

## WAFFLE BAKER USAGE TIPS

- Most waffle recipes can be poured directly onto the nonstick cooking grids **(3)**. Use a cooking spray for dessert waffles or any recipe with a lot of sugar. If your waffles start to stick, the grids **(3)** may need to be scrubbed with a nylon brush to remove any cooked-on food particles.
- Waffles can be made ahead of time and kept warm in a 200°F (90°C) oven.
- To store waffles, let cool and then pack in an airtight container. Store in refrigerator or freezer. Waffles can be reheated in a microwave oven, a toaster oven, or regular oven.
- Most waffles are done in about 3 to 6 minutes. Recipes made from scratch may take longer. Check for doneness after approximately 5 minutes or when the steaming stops. If the lid **(2)** doesn't lift easily, let waffles cook a minute more before checking again.

## BASIC WAFFLE RECIPE

- 2 cups (500 ml) flour
- 2 tablespoons (30 ml) sugar
- 1 tablespoon (15 ml) baking powder
- 1 teaspoon (5 ml) salt
- 1¾ cups (425 ml) milk
- ⅓ cup (85 ml) vegetable oil
- 2 eggs

Combine flour, sugar, baking powder, and salt. Whisk together milk, oil, and eggs. Gradually add milk mixture to the dry ingredients. Stir until just blended. Pour batter onto waffle baker. Makes 4½ cups (1.125 L) batter.

**Basic Blueberry Waffles:** After pouring batter onto waffle grids **(3)**, sprinkle fresh blueberries over batter then close lid **(2)**.

## CUSTOMER ASSISTANCE

If you have a claim under this warranty, please call our Customer Assistance Number. For faster service, please have the model number and product name ready for the operator to assist you. This number can be found on the bottom of your appliance and on the front page of this manual.

**Model Number:** \_\_\_\_\_ **Product Name:** \_\_\_\_\_

Customer Assistance Number 1.877.207.0923 (US) or 1.877.556.0973 (Canada)

Keep these numbers for future reference!

For more information, please visit us at [www.gehousewares.com](http://www.gehousewares.com)

### Two-Year Limited Warranty

#### What does your warranty cover?

- Any defect in material or workmanship.

#### For how long after the original purchase?

- Two years.

#### What will we do?

- Provide you with a new one.
- For those items still under warranty but no longer available, WAL-MART reserves the right to replace with a similar GE branded product of equal or greater value.

#### How do you make a warranty claim?

- Save your receipt.
- Properly pack your unit. We recommend using the original carton and packing materials.
- Return the product to your nearest WAL-MART store or call Customer Assistance at 1-877-207-0923 (U.S.) or 1-877-556-0973 (Canada).

#### What does your warranty not cover?

- Parts subject to wear, including, without limitation, glass parts, glass containers, cutter/strainer, blades, seals, gaskets, clutches, motor brushes, and/or agitators.
- Commercial use or any other use not found in printed directions.
- Damage from misuse, abuse, or neglect, including failure to clean product regularly in accordance with manufacturer's instructions.

#### How does state law relate to this warranty?

- This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.
- THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTY OR CONDITION, WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, INCLUDING, WITHOUT LIMITATION, ANY STATUTORY WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, EXCEPT TO THE EXTENT PROHIBITED BY LAW.
- WAL-MART, GE, AND THE PRODUCT MANUFACTURER EXPRESSLY DISCLAIM ALL RESPONSIBILITY FOR SPECIAL, INCIDENTAL, AND CONSEQUENTIAL DAMAGES OR LOSSES CAUSED BY USE OF THIS APPLIANCE. ANY LIABILITY IS EXPRESSLY LIMITED TO AN AMOUNT EQUAL TO THE PURCHASE PRICE PAID WHETHER A CLAIM, HOWEVER INSTITUTED, IS BASED ON CONTRACT, INDEMNITY, WARRANTY, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY, OR OTHERWISE. SOME STATES OR PROVINCES DO NOT ALLOW THIS EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL LOSSES SO THE FOREGOING DISCLAIMER MAY NOT APPLY TO YOU.

#### What if you encounter a problem with this product while using it outside the country of purchase?

- The warranty is valid only in the country of purchase and you follow the warranty claim procedure as noted.



is a trademark of General Electric Company and is used under the license by WAL-MART Stores, Inc., Bentonville, AR 72716

#### Marketed in Canada by:

Wal-Mart Canada Corp.  
1940 Argenta Road, Mississauga,  
Ontario L5N1P9

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>