



MyDECT



Digital Cordless Telephone with
Large Buttons

CONTENTS

| | |
|---|----|
| CONTENTS | 1 |
| INTRODUCTION | 3 |
| Unpacking the Telephone | 4 |
| DESCRIPTION | 5 |
| General Description | 5 |
| INSTALLATION | 11 |
| Location | 11 |
| Setting Up | 12 |
| Battery Use | 12 |
| Using the Belt Clip | 13 |
| HANDSET SETTINGS | 14 |
| On/Off Settings | 14 |
| Ringer Settings | 15 |
| Key Tone Settings | 18 |
| Dialling Mode (T/P) | 19 |
| Time Settings | 20 |
| Personal Identification Number Settings | 21 |
| Access Code Settings | 22 |
| Smart Dialling Settings | 23 |
| Caller Display Settings | 24 |
| USING THE TELEPHONE | 25 |
| Making a Call | 25 |
| Receiving a Call | 26 |
| Mute Function | 26 |
| Receiving Volume | 27 |
| Last Number Redial | 27 |
| Recalling Recent Numbers | 27 |
| Deleting Recent Numbers | 28 |
| Registered Recall | 29 |
| Tone Dialling Switchover | 29 |
| Paging the Handset | 29 |
| Call Timer | 29 |
| Key Lock | 30 |
| Smart Dialling | 30 |

RECYCLING DIRECTIVES

The WEEE (Waste Electrical and Electronic Equipment) has been put in place for the products at the end of their useful life are recycled in the best way.

When this product is finished with, please do not put it in your domestic waste bin.

Please use one of the following disposal options:

- Remove the batteries and deposit them in an appropriate WEEE skip. Deposit the product in an appropriate WEEE skip.

- Or, hand the old product to the retailer. If you purchase a new one, they should accept it.

Thus if you respect these instructions you ensure human health and environmental protection.



For product support and help visit our website at www.geemarc.com

Telephone 01707 384438

Or fax 01707 372529

GUARANTEE

Electrical connection: The apparatus is designed to operate from a 230V 50Hz supply only. (Classified as 'hazardous voltage' according to EN60950 standard). The apparatus does not incorporate an integral power on/off switch. To disconnect the power, either switch off supply at the mains power socket or unplug the AC adaptor. When installing the apparatus, ensure that the mains power socket is readily accessible.

Telephone connection: Voltages present on the telecommunication network are classified TNV-3 (Telecommunication Network Voltage) according to the EN60950 standard.

CONTENTS

| | |
|---|----|
| Call Barring | 31 |
| CALLER DISPLAY | 33 |
| View Caller Display List | 33 |
| Dial a Number from the Caller Display List | 34 |
| Delete an Entry from the Caller Display List | 35 |
| Delete all Entries from the Caller Display List | 35 |
| PHONE BOOK | 36 |
| Create a Phone Book Entry | 36 |
| View Phone Book Entries | 37 |
| Dialling using the Phone Book | 37 |
| Modify a Phone Book Entry | 38 |
| Delete a Phone Book Entry | 38 |
| CALL BY CALL | 39 |
| Create a Call by Call Entry | 39 |
| Dialling using Call by Call | 40 |
| Modify a Call by Call Entry | 41 |
| Delete a Call by Call Entry | 42 |
| ADDITIONAL HANDSETS & BASES | 43 |
| Register a New Handset | 44 |
| Select a Base | 45 |
| Release a Handset | 46 |
| Internal Calls | 47 |
| Call Transfer between Handsets | 48 |
| Other Optional Accessories | 49 |
| RESTORE FACTORY SETTINGS | 50 |
| TROUBLESHOOTING | 51 |
| SAFETY INFORMATION | 53 |
| GUARANTEE | 54 |
| RECYCLING DIRECTIVES | 56 |

INTRODUCTION

Congratulations on purchasing your Geemarc MyDECT telephone. This telephone offers all the advantages of cordless technology (compliant with Digitally Enhanced Cordless Telecommunications-DECT standard) together with large buttons which are helpful if you are partially sighted. This telephone is also hearing aid compatible.

It is important that you read the instructions below in order to use your Geemarc telephone to its full potential. Keep this user guide in a safe place for future reference.

This guide explains how to use the following telephone:

MyDECT

This guide applies to single and multiple handset systems.

GUARANTEE

From the moment your Geemarc product is purchased, Geemarc guarantee it for the period of one year. During this time, all repairs or replacements (at our discretion) are free of charge. Should you experience a problem then contact our help line or visit our website at www.geemarc.com. The guarantee does not cover accidents, negligence or breakages to any parts. The product must not be tampered with or taken apart by anyone who is not an authorized Geemarc representative. The Geemarc guarantee in no way limits your legal rights.

IMPORTANT: YOUR RECEIPT IS PART OF YOUR GUARANTEE AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF AWARRANTY CLAIM.

Please note: The guarantee applies to the United Kingdom only

DECLARATION: Geemarc Telecom SA hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio and Telecommunications Terminal Equipment Directive 1999/5/EEC and in particular article 3 section 1a, 1b and section 3. The telephone does not operate if the line current is lower than 18 mA.



General

Only use the power supply included with the product.

Only use the approved rechargeable batteries supplied.

Do not open the handset (except to replace the handset batteries) or base. Contact the helpline for all repairs.

Never dispose of batteries in a fire. There is a serious risk of explosion and/ or the release of toxic chemicals.

Cleaning

Clean the telephone with a soft cloth. Keep the base and handset charging contacts clean. Never use polishes or cleaning agents - they could damage the finish or the electrics inside.

Environmental

Do not expose to direct sunlight.

Always ensure there is a free flow of air over the surfaces of the telephone.

Do not place any part of your product in water and do not use it in damp or humid conditions e.g. bathrooms.

Do not expose your product to fire or other hazardous conditions.

Unplug your phone from the telephone socket during thunderstorms because it could damage your telephone. Your guarantee does not cover thunderstorm damage.

The telephone is designed for working within a temperature range of 5°C to 45°C.

Unpacking the Telephone

When unpacking the telephone, you should find the following in the box:

- 1 MyDECT handset
- 1 MyDECT base
- ☞ Mains power adaptor
- ☞ Telephone line cord
- ☞ Belt clip
- 3 x AAA rechargeable batteries
- 1 Battery compartment cover



For product support and help visit our website at www.geemarc.com
Telephone 01707 384438
Or fax 01707 372529

DESCRIPTION

General Description

Handset Description



TROUBLESHOOTING

Consistently short battery life

- Clean the charge contacts
- Replace the batteries

Nothing happens when you press any button

- Check the the keylock is switched off

General Checks

- Make sure that the telephone line cord and adaptor are correctly plugged in and they are not damaged.
- Make sure the batteries are inserted correctly.
- Make sure that the batteries are fully charged.
- Connect another telephone to the telephone PTT socket or move your telephone to another socket to track if the failure is coming from your telephone or your PTT socket.
- Make sure the power adaptor is properly connected

Handset not registering

- See general checks.

No display

- See general checks

No connection between handset and base

- You may be out of range of the base. Move closer to the base

Handset on the base does not charge

- Make sure the handset is placed properly on the base. When charging, the battery symbol should be shown filling up.

Handset does not ring

- See general checks

No tone when you press

- See general checks.
- Check for the handset number on the LCD display e.g. HS1. If this is not present you must register the handset (see Handset Registration section)

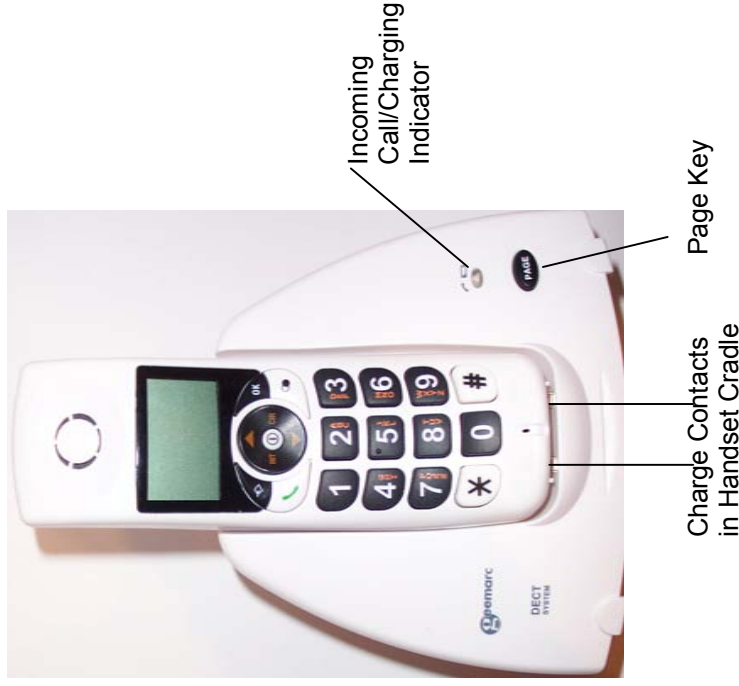 
A warning tone is heard during a call:

- The batteries are empty. The handset needs to be replaced in the base in order to recharge.
- You are out of the base coverage area.

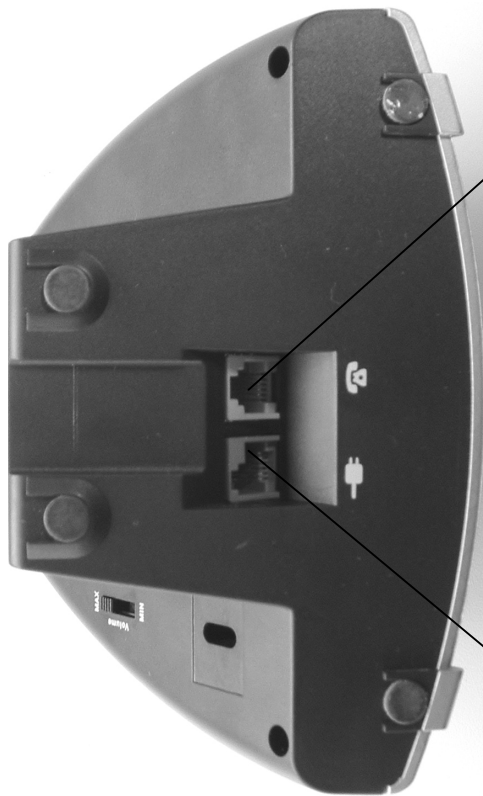 
No number is displayed when the telephone rings:

- Please contact your telephone network provider to get the caller display service.
- Even if you have subscribed to a caller display service, if the caller does not want to show their number (private number), the display will show *****.
- Even if you have subscribed to a caller display service, try changing the Caller Display Settings (see page 24)
- It could be a call from a PBX. Caller display may not work properly if the telephone is connected to a PBX.

Base Description



DESCRIPTION



*Power Adaptor Socket


** Line Socket

(*) Classified "hazardous voltage" according to EN60950 standard

(**) Classified TNV-3 according to EN60950 standard

RESTORE FACTORY SETTINGS

The factory settings can be restored to the telephone.

Press  to activate the menu

Use  and  to scroll through the menu to select '**HS RESET**'

Press **OK**

Use the keypad to type in your PIN (default 0000)

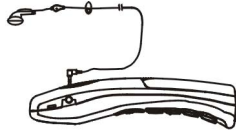 
Press **OK**

Press **OK** to confirm the reset

ADDITIONAL HANDSETS & BASES

Other Optional Accessories

The headset socket is located on the right side of the handset. It is a standard 2.5mm plug. Simply plug the headset into the socket. The handset will be activated whilst the microphone on the handset will be deactivated.



DESCRIPTION

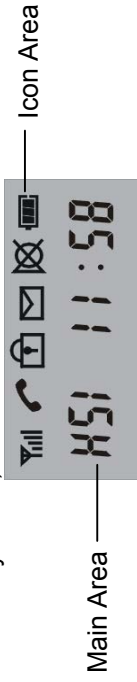 
LCD Screen Description

The LCD screen is split into two distinct areas:

The icon area. This is found at the top of the screen. This displays the various system icons which help you to use the telephone.

The main area. This is found across the centre of the screen. It displays the following:

- number being dialled
- call display information
- phonebook
- menu information
- in standby mode, handset number and current time



Signal Strength icon

This is always displayed when your telephone is switched on. It shows the current signal strength. More bars indicate more signal strength



Line icon

This indicates that the line is engaged



Key Lock icon

This indicates the keys are locked



New Call icon

This indicates that there has been a new call



Mute icon

This indicates mute is activated. The microphone is turned off temporarily



Battery Status icon



This is always displayed when your telephone is switched on. It shows the level of battery charge. More bars indicate more battery charge




DESCRIPTION

LCD Screen Navigation

The  key is used to activate the menu. The  key is also used to deactivate the menu and return to standby mode from any menu.

The  and  keys are used to scroll through the menu.

 : move backward through the menu

 : move forward through the menu

The **OK** key is used to confirm an action or choice on a screen.

The **C/R** key is used to cancel an action/entry.

If you press **C/R** from any menu (except whilst in number input mode), the telephone returns to the previous screen.


If you press and hold **C/R** from any menu (except whilst in number input mode), the telephone returns to standby mode.

The telephone will automatically return to standby mode from any menu if no button is pressed for 30 seconds.

ADDITIONAL HANDSETS & BASES

Call Transfer between Handsets

An external call can be transferred from one handset to another.


During a telephone conversation, when you wish to transfer the call, press . Your external caller will be placed on hold

Enter the handset number you wish to transfer to (1-6)


The paged handset will ring. The calling handset number will be displayed on the LCD display

To answer the paged handset, press any button

If required, you may now speak to the paged user.

To transfer the external call to the paged handset, press 

O R

To cancel the call transfer and talk to the external caller again, press 

Notes:


On transferring a call, you may hang up before the paged handset answers. The connection between the external caller and the paged handset is complete once you hang up.

If the paged handset does not answer a call within a predetermined time, the call will be transferred back to your handset.

Internal Calls



When using several handsets registered to the same base unit, you can make internal calls and transfer external calls between handsets.

Make an Internal Call



| | |
|---|---|
| | Press  |
| Enter the handset number you wish to page (1-6) | |

Notes:



If an incorrect handset number is entered i.e. one that does not exist, the handset will sound an error tone

To cancel an internal call, press either  or .

Receive an Internal Call

| | |
|--|--|
| | The paged handset will ring. The calling handset number will be displayed on the LCD display |
| To answer, press any button | |
| To end the call, press either  or  . | |

Notes:

If there is an external call during the course of an internal call, low beeps will be heard in the background. The internal call can be finished by pressing . The normal external call ring tone will be heard, press  to answer the call.

Menu Map

| | |
|--------------|------------|
| Store Phone | |
| Call Log | |
| Call by Call | |
| Key Beep | |
| Ring | Ring Type |
| | Ring Level |
| | VIP Ring |
| PIN Change | |
| Smart Dial | |
| Access Code | |
| Register | |
| HS Reset | |
| Clr Redial | |
| Clr Call Log | |
| Select Base | |
| Base Menu | Call Bar |
| | Dial Mode |
| | Time Set |
| | Release |

INSTALLATION

 
Location

Ensure you situate the telephone close enough to the power socket so that the cable will reach safely without stretching. Also, the mains power needs to be easily accessible in case you need to disconnect the power.

Make sure the telephone is at least 1 metre away from other electrical products e.g. TV, radio and monitors so as to avoid interference. Also, avoid direct heat and sunlight.

We advise you to place the telephone on a table cloth or similar, as the rubber feet on the base can mark some surfaces

Handset Range

The telephone has a range of 30-50 metres indoors and up to 300 metres outdoors. The range will be reduced when there is no clear line of sight between the base and handset. Place the base as high as practically possible to ensure the best signal between the base and the handset. The  icon at the top left of the LCD display will flash and the signal strength bars will disappear to warn you if you have moved out of range of the base. You will need to move closer to the base station as the telephone line might be disconnected and the handset will return to standby.





 


This icon will flash when handset is out of range

ADDITIONAL HANDSETS & BASES

Release a Handset

A registered handset can be removed from a base if necessary.

| |
|---|
| Press  to activate the menu |
| Use  and  to scroll through the menu to select ' BASE MENU ' |
| Press OK |
| Use the keypad to type in your PIN (default 0000) |
| Press OK |
| Use  and  to scroll through the menu to select ' RELEASE ' |
| Press OK |
| All handsets currently registered with the base will be displayed on the LCD display |
| Using the keypad, enter the number of the handset you wish to deregister |
| When the selected handset number disappears from the LCD display, press OK |

ADDITIONAL HANDSETS & BASES

Select a Base



Your handset can be used with up to 4 bases.

Note: In order to use the handset with more than one base unit, the handset must be registered with each base (see Register a New Handset section).

Press  to activate the menu

Use  and  to scroll through the menu to select '**SELECT BASE**'

Press **OK**

Use  and  to scroll through the available bases. Select the base number you require.
If you select '**BEST BASE**', the handset will automatically find the first available base if you lose contact whilst moving

Press **OK** and return to standby


INSTALLATION

Setting Up

Plug the power cable into the power socket on the base. Plug the adaptor into the mains supply and switch the supply on. (*)

Connect the line cord plug to the line socket on the base. Connect the other end of the line cord to the PTT socket. (**)

Install the rechargeable batteries in the handset. The handset requires three Nickel Metal Hydride (NiMH) AAA batteries. These are supplied with your telephone. Check the battery polarity diagrams on the handset when inserting the batteries. Fit the battery cover by sliding the cover on to the back of the handset until it snaps shut (this can be found in the packaging with the batteries).

Place the handset on the base, a short beep will be heard. The Power/Charging indicator lights up (green). The battery symbol  will be displayed on the handset. Once the handset is fully charged, the display will show a full battery symbol.

The telephone has an automatic charging control to avoid excessive charging.

Before the handset can be used, the handset batteries must be charged for a minimum of 15 hours on the MyDECT base.

Battery Use

The  icon is continuously displayed at the top right corner of the LCD display. The icon indicates the level of battery power. The more bars displayed, the more power left.



When the battery is too weak for the telephone to operate, the handset will automatically switch off. Place the handset on the base to charge the handset battery. Under ideal conditions, the handset battery should give about 8 hours talktime or 240 hours standby on a single charge.

(*) Classified "hazardous voltage" according to EN60950 standard

(**) Classified TNY-3 according to EN60950 standard.

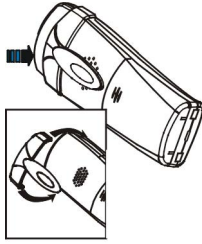 
INSTALLATION

Using the Belt Clip

The belt clip supplied allows you to conveniently carry the handset around.

Attach Belt Clip

Attach the belt clip to the rear of the handset. Make sure the belt clip locks into place.








Remove Belt Clip

Insert a screw driver along the edge of one of the belt clip arms and release the clip. Lift the clip off the handset.



ADDITIONAL HANDSETS & BASES

Register a new Handset

| |
|---|
| Press  to activate the menu |
| Use  and  to scroll through the menu to select ' REGISTER ' |
| Press OK |
| Use the keypad to type in your PIN (default 0000) |
| Press OK |
| Use  and  to scroll through the base number options. Select the base number you require |
| Press OK |
| Press and hold PAGE on the base for more than 5 seconds. When the LED lamp on the base starts to flash, release PAGE |
| Press OK |
| Enter the telephone Authentication Code (AC). The AC is '0000'. |
| Press OK |
| Registration has been successful if the handset number is displayed on the newly registered handset and you have been returned to standby |

ADDITIONAL HANDSETS & BASES

The handset that came with your base is already registered to the base (factory setting). This is registered as handset 1. Each additional handset you purchase must be registered to the base.

Up to 6 handsets can be registered to one base unit. This means you can make internal calls between registered handsets, transfer an incoming call between handsets and answer a call anywhere in the office or home at any time as all the handsets will call at the same time.

You can also register up to 4 base units to each handset. This will increase the phone range, allowing you to move between the telephone coverage areas.

HANDSET SETTINGS

On/Off Settings

When the handset is placed on the charger it automatically switches on. Alternatively, press **1**. The LCD window will display the time and the handset number. The telephone is now in standby mode and is ready for use.




To turn the handset off, squeeze **1** until '**GOOD BYE**' appears. The LCD display will then switch off.

HANDSET SETTINGS

Ringer Settings

Ringer Tones

There is a choice of six handset ringer tones to notify you of incoming calls.


 
Press  to activate the menu

Use  and  to scroll through the menu to select '**RING**'

Press **OK**

Press **OK** to access '**RING TYPE**'

Press **OK**


Use  and  to scroll through the menu to select desired ringer tone.

Each time you press  and , the handset demonstrates the ring you have selected

Press **OK** to save the ringer tone selection and return to standby

 

CALL BY CALL

Delete a Call by Call Entry

Press  to activate the menu

Use  and  to scroll through the menu to select '**CALL BY CALL**'

Press **OK**

Use  and  to scroll through the memory locations (1, 2 or 3) until you find the entry to be deleted

 

Press and hold **C/R** until the number disappears from the LCD display

Press **OK** and return to standby. The telephone number will no longer be held in the phone book

 

CALL BY CALL

Modify a Call by Call Entry

Press  to activate the menu

Use  and  to scroll through the menu to select '**CALL BY CALL**'

Press **OK**

Use  and  to scroll through the memory locations (1, 2 or 3) until you find the entry to be modified


Use **C/R** to correct a mistake. **C/R** will clear the last digit entered. To clear all digits, press and hold **C/R**, then enter the correct number.

Press **OK** to save the changes and return to standby

HANDSET SETTINGS


 
Ringer Volume

There is a choice of three handset ringer volumes. The handset ringer can also be turned off.


 
Press  to activate the menu

Use  and  to scroll through the menu to select '**RING**'

Press **OK**

Use  and  to scroll through the menu to select '**RING LEVEL**'

Press **OK**

Use  and  to scroll through the menu to select desired volume level or OFF.

Each time you press  and , the handset demonstrates the volume you have selected


 
Press **OK** to save the volume selection and return to standby

HANDSET SETTINGS


VIP Ringer Tones

This option enables you to instantly identify callers. The selected tone will notify you that the incoming call is from a particular telephone number stored in the telephone memory. This setting is only relevant if you have subscribed to a Caller Display service. You can specify 2 VIP telephone numbers. There is a choice of six handset ringer tones to notify you of incoming calls from the VIP numbers.

Press  to activate the menu

Use  and  to scroll through the menu to select '**RING'**

Press **OK**

Use  and  to scroll through the menu to select '**VIP RING'**

Press **OK**


 

 
Use  and  to scroll through the two VIP telephone number options.

Select either '**VIP RING 1'** or '**VIP RING 2'**

Press **OK**

Using the keypad, enter the desired number (up to 24 digits)

Press **OK**

Use  and  to scroll through the menu to select desired VIP ringer tone. Each time you press  and , the handset demonstrates the ringer tone you have selected

Press **OK** to save the VIP ringer tone selection and return to standby

CALL BY CALL

Dialling using Call by Call

In standby mode, press **OK**

Use  and  to scroll through the Call by call numbers until you find the required telephone number

Press **OK**

Using the keypad, enter the telephone number you wish to call

O R

Press  and  to scroll through the phone book until you find the required telephone number

Press **OK**

Press 






To end the call simply press  or place the handset on the base

CALL BY CALL

Sometimes special network service numbers are required to precede the telephone number you are calling. Call by Call allows you to store the special number and then recall it very easily.

3 call by call numbers can be stored.


Create a Call by Call Entry

| |
|--|
| Press  to activate the menu |
| Use  and  to scroll through the menu to select 'CALL BY CALL' |
| Press OK |
| Use  and  to scroll through the call by call memory locations (1, 2 or 3) until you find the required entry. |
| Using the keypad, enter the desired number (up to 10 digits) |
| Press OK to save the number and return to standby |

Note: Use **C/R** to correct a mistake. **C/R** will clear the last digit entered. To clear all digits, press and hold **C/R**, then enter the correct number.

Insert Pause

Inserting a pause provides a delay of 3 seconds. This is necessary with some telephone systems.

To insert a dialling pause between numbers when storing a number, press  until **P** appears in the LCD display.

HANDSET SETTINGS


 
 


 

Note: Use **C/R** to correct a mistake when entering the VIP telephone number. **C/R** will clear the last digit entered.

To clear all digits, press and hold **C/R**, then enter the correct number.

Key Tone Settings

There are 3 options for the key tone each time a key is pressed:

Type 1 = Standard key tone
Type 2 = Two frequency tone
Off = No sound when a key is pressed


| |
|--|
| Press  to activate the menu |
| Use  and  to scroll through the menu to select 'KEY BEEP' |
| Press OK |
| Use  and  to scroll through the menu to select desired key tone. Each time you press  and  , the handset demonstrates the key tone you have selected |
| Press OK to save the key tone selection and return to standby |

 

HANDSET SETTINGS

Dialling Mode (T/P)

In the UK, all telephone exchanges now use Tone dialling. The dial mode setting is pre-set to Tone.

If your telephone does not dial out, it is probably being used from an older private switchboard (PBX). In this case, the dial mode must be changed to Pulse.



Press  to activate the menu

Use  and  to scroll through the menu to select '**BASE MENU**'



Press **OK**

Use the keypad to type in your PIN (default 0000). The numbers will not appear on the screen

Press **OK**

Use  and  to scroll through the menu to select '**DIAL MODE**'

Press **OK**

Use  and  to scroll through the menu to select '**Tone**' or '**Pulse**'

 

Press **OK** to save the dial mode selection and return to standby

PHONE BOOK

Modify a Phone Book Entry

Press  to activate the menu


Press **OK** to select '**STORE PHONE**'

Use  and  to scroll through the stored numbers until you find the entry to be modified

 

Use **C/R** to modify the phone book entry. **C/R** will clear the last digit entered. To clear all digits, press and hold **C/R**, then enter the correct number (up to 24 digits)

Press **OK** to save the modified number and return to standby

Delete a Phone Book Entry

Press  to activate the menu

Press **OK** to select '**STORE PHONE**'

Use  and  to scroll through the stored numbers until you find the entry to be deleted

Press and hold **C/R** until the number disappears from the LCD display

Press **OK** and return to standby. The telephone number will no longer be held in the phone book

PHONE BOOK

View Phone Book Entries

In standby mode, use ▲ and ▼ to scroll through the phone book until you find the required telephone number

Dialling using a Phone Book Entry

In standby mode, use ▲ and ▼ to scroll through the phone book until you find the required telephone number

Press 

O R


In standby mode, press and hold the entry number required (0-9) until the telephone number appears on the LCD display. The number will be dialled automatically.

To end the call simply press  or place the handset on the base

HANDSET SETTINGS

Time Setting

The time displayed on the handset can be changed. The time format is 24 hours.

Press  to activate the menu

Use ▲ and ▼ to scroll through the menu to select '**BASE MENU**'

Press **OK**

Use the keypad to type in your PIN (default 0000). The numbers will not appear on the screen

Press **OK**

Use ▲ and ▼ to scroll through the menu to select '**TIME SET**'

Press **OK**

Use the keypad to enter the correct time. **Note:** Valid hours are between 00 and 23 (inclusive)

If you need to correct a digit use ▲ and ▼ to move the cursor to the incorrect number. Enter the correct number

Press **OK** to save the time and return to standby

Notes: If you subscribe to a Caller Display service, the time will be set automatically.


HANDSET SETTINGS

Personal Identification Number (PIN) Settings

The PIN is required for the following options:

- Registering a new handset
- Resetting a handset
- Changing settings found under the base menu

The PIN is pre-set to '0000'. This can be changed – this is recommended for confidentiality.

Press  to activate the menu

Use  and  to scroll through the menu to select '**PIN CHANGE**'

Press **OK**

Use the keypad to type in the current PIN (if you enter an incorrect PIN, the telephone returns to standby mode)

Press **OK**

Use the keypad to type in the new PIN. The range is 0000 – 9999

Press **OK**

Use the keypad to type in the new PIN again for confirmation purposes.


Press **OK** to save the new PIN and return to standby

PHONE BOOK

 

Telephone numbers can be stored in the phone book.

The phone book can contain 10 entries. Each phone number can contain up to 24 digits.

Create a Phone Book Entry

Press  to activate the menu

Press **OK** to select '**STORE PHONE**'

Use  and  to scroll through the 10 phone book memory locations (0-9) until you find the required entry

Using the keypad, enter the desired number (up to 24 digits)

Press **OK** to save the number and return to standby

Note: Use **C/R** to correct a mistake. **C/R** will clear the last digit entered. To clear all digits, press and hold **C/R**, then enter the correct number.


 


 
Insert Pause

Inserting a pause provides a delay of 3 seconds. This is necessary with some telephone systems.


 
 
To insert a dialling pause between numbers when storing a number, press  until **P** appears in the LCD display.

CALLER DISPLAY

Delete an Entry from the Caller Display List

- Press  to activate the menu
- Use  and  to scroll through the menu to select **'CALL LOG'**
- Press **OK**
- Use  and  to scroll through the caller display list until you find the telephone number you wish to delete
- Press **OK**
- Press **OK** to confirm and return to standby


 

Delete All Entries from the Caller Display List

- Press  to activate the menu
- Use  and  to scroll through the menu to select **'CLR CALL LOG'**
- Press **OK**
- Use the keypad to type in your PIN (default 0000)
- Press **OK**
- Press **OK** to confirm and return to standby

HANDSET SETTINGS

Access Code Settings

Some telephone systems require an access code before dialling the telephone number e.g. 9. The telephone can be set to automatically insert a one digit access code and a preset pause when you use a telephone number from the Caller Display list.

- Press  to activate the menu
- Use  and  to scroll through the menu to select **'ACCESS CODE'**
- Press **OK**
- Use the keypad to type in the one digit access code
- Press **OK** to save the access code selection and return to standby

HANDSET SETTINGS



Smart Dialling Settings

Your telephone can search for a complete number when you simply enter the first digit(s) of the number. The telephone number can only be displayed if this number is currently stored in the telephone memory (either phonebook, received or dialled recently). The smart dialling feature will only function if it has been enabled.

Press  to activate the menu

Use  and  to scroll through the menu to select '**SMART DIAL**'


Press **OK**

 
 
Use  and  to scroll through the menu to select desired option '**ON**' or '**OFF**'

Press **OK** to save the smart dial selection and return to standby



CALLER DISPLAY

Dial a Number from the Caller Display List

Press  to activate the menu

Use  and  to scroll through the menu to select '**CALL LOG**'

Press **OK**

Use  and  to scroll through the caller display list until you find the telephone number you wish to dial

Press 

To end the call simply press  again or place the handset on the base

CALLER DISPLAY

The features described in this section are only available if you subscribe to a Caller Display service from your network provider.





 
Caller Display means you can see who is calling on your handset display (provided the number is not withheld, unavailable or is an international call).

The display shows **PRIVATE ID** for a withheld number.

Whether you take a call or not, the caller's details are stored in the Call list. The call list stores the last 10 incoming calls. When the call list memory is full, a new call will take the place of the oldest call. You can display, scroll through and dial numbers in the list.

The  symbol will be shown on the handset display if you receive a call in your absence

View Caller Display List

| |
|--|
| Press  to activate the menu |
| Use  and  to scroll through the menu to select ' CALL LOG ' |
| Press OK |
| Use  and  to scroll through the caller display list. The time the call was received is also displayed alongside the telephone number |


 

Notes: If there are no caller ID telephone numbers in the call log, **EMPTY** is displayed

HANDSET SETTINGS

Caller Display Settings

If you have subscribed to a Caller Display service yet telephone numbers are not displayed when you receive incoming calls, change the caller display type. There are two caller display types:

- DTMF
- FSK


| |
|---|
| Press  to activate the menu |
| Use  and  to scroll through the menu to select ' BASE MENU ' |
| Press OK |
| Use the keypad to type in your PIN (default 0000) |
| Press OK to access ' CALL BAR ' |
| Press and hold # for approximately 3 seconds. The current setting is displayed. CLI d = DTMF CLI F = FSK |
| Press * once to change the caller display setting and return to standby |

USING THE TELEPHONE

Making a Call


Pick up handset.
Press 


When you hear dialing tone, dial the number on the keypad.

To end the call simply press  again or place the handset on the base

Pre-Dialling

Pick up handset. Dial the number on the keypad.

Press , the number is automatically dialled

To end the call simply press  again or place the handset on the base


 
Note: If you make an incorrect entry while pre-dialling the telephone number :

- Press **C/R** to clear the last digit and then enter the correct number
- Press **C/R** for more than one second to clear all digits entered and return to standby mode.

USING THE TELEPHONE

To Deactivate a Call Barring Number

Press  to activate the menu

Use  and  to scroll through the menu to select '**BASE MENU**'

Press **OK**

Use the keypad to type in your PIN (default 0000)

Press **OK**

Press **OK** to access '**CALL BAR**'

Use  and  to scroll through the 4 entries of barred numbers until you find the entry to be deleted

Press and hold **C/R** until the number disappears from the LCD display

Press **OK** and return to standby. This call bar number will no longer be held in the phone book

USING THE TELEPHONE



Call Barring

Call barring lets you block outgoing calls to certain types of telephone numbers. Telephone numbers beginning with the numbers you specify can not be dialled if call barring is activated. You can set up to 4 different restricted numbers containing up to 4 digits each.

When activated, the message **BARRING** is displayed in the LCD display when the restricted number is dialled.

To Activate a Call Barring Number

Press  to activate the menu

Use  and  to scroll through the menu to select '**BASE MENU**'

Press **OK**

Use the keypad to type in your PIN (default 0000)

Press **OK**

Press **OK** to access '**CALL BAR**'


Use  and  to scroll through the 4 call bar memory locations (1-4) until you find the required memory location

Using the keypad, enter the desired number (up to 4 digits)

Press **OK** to save the number and return to standby

USING THE TELEPHONE

Receiving a Call

When an incoming call is received the telephone rings and the  icon will flash on the LCD display. If the caller can be identified (due to subscription to a Caller Display service), the caller's telephone number will be displayed.





Press any button to answer
Or
If the handset is in the base, simply lift it up



To end the call simply press  or replace the handset on the base

Mute Function

If you wish, you can speak privately to someone else in the room without your caller overhearing. You will still be able to hear the caller but they cannot hear you during the mute operation.

During a call, press 

The LCD display will show  which indicates that your voice is muted to the call and the caller cannot hear you speaking

Press  again to resume the conversation. The symbol  will disappear from the LCD display

USING THE TELEPHONE

Receiving Volume


During a conversation, the ▲ or ▼ keys adjust the ear piece volume level. The volume can be adjusted from level 1 to 3. The selected volume is displayed in the LCD display. The receiving volume range is 0dB to 12dB.




Last Number Redial

To redial the last number dialled:

Pick up handset.


Press  in standby mode

Press  to dial the number


Recalling Recent Numbers

You can call back any of the last 10 numbers dialled as follows:


Pick up handset.

Press  in standby mode

Use ▲ and ▼ to scroll through the dialled numbers until you find the number you wish to call

Press  to dial the number

Notes:

- When no numbers are found, **EMPTY** is displayed
- If the redial memory is full i.e. 10 numbers stored, each time you dial a new number, the oldest number stored is automatically erased and the redial memory is updated.
- The displayed number can be modified before pressing  by using **C/R**.


 
USING THE TELEPHONE

Key Lock

When this feature is turned on, all buttons except for  will be locked and will not function.

Incoming or intercom calls can be answered by using any buttons on the telephone. However, when you complete the call and hang up, the telephone returns to lock mode.

This feature is useful to avoid pressing buttons by mistake.

Switch lock On: Press  briefly. The  icon will appear in the LCD display

Switch lock Off: Press  briefly. The  icon will disappear from the LCD display

Note: Ensure you do not press  for longer than 3 seconds otherwise the handset will be switched off.


Smart Dialling

Your telephone can search for a complete number when you simply enter the first digit(s) of the number. The telephone number can only be displayed if this number is currently stored in the telephone memory (either phonebook, received or dialled recently). The smart dialling feature will only function if it has been enabled (see Smart Dialling Settings section).

In standby mode, enter the first digit(s) of the required telephone number.

A search for a matching telephone number will be carried out in the order of outgoing calls, Phonebook, incoming calls). The first matching number will be displayed.

If this is not the required number, enter the remaining digits until you see the correct number

Press  to dial the number

USING THE TELEPHONE

Registered Recall

The **C/R** key can also be used with special services such as Call Waiting (if provided by your service provider) or transferring external calls to another extension within a private switchboard.

Tone Dialling Switchover

If your network requires pulse dialling, yet you need to access services such as voice mail or an interactive telephone system which require tone dialling, the telephone can be set to tone dialling for a temporary period.

In order to do this, press the * key whilst in pulse dial mode. The telephone will be converted to tone dial mode temporarily. When you end call or you press the **C/R** key during the call, the telephone will be returned to the pulse dial mode.

Paging the Handset

If you wish to locate the handset simply follow the instructions below:

- Press **PAGE**, located on the front of the base
- All registered handsets will be paged and will ring for about 30 seconds
- Press any button on the located handset to stop paging mode.
Alternatively, press **PAGE** to stop paging mode


Call Timer

Your handset automatically times the duration of every external call. The time is shown during the call and for a few seconds after the call has ended.


USING THE TELEPHONE

Deleting Recent Numbers

To delete a specific number in the redial memory

- Pick up handset.
Press  in standby mode
- Use **▲** and **▼** to scroll through the dialled numbers until you find the number you wish to delete
- Press **OK**. You will be prompted to confirm the deletion.
- Press **OK** again to confirm, (**C/R** to Cancel). You will hear a beep (if key tone setting is switched on) and the telephone will return to standby mode after clearing the telephone number from memory

To delete all numbers in the redial memory

- Press  to activate the menu
- Use **▲** and **▼** to scroll through the menu to select '**C/R REDIAL**'
- Press **OK**
- Use the keypad to type in your PIN (default 0000)
- Press **OK**. You will be prompted to confirm the deletion
- Press **OK** again to confirm, (**C/R** to Cancel). You will hear a beep (if key tone setting is switched on) and the telephone will return to standby mode after clearing the telephone numbers from memory

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>