

Congratulations on your purchase of a Graco[®] Rocking Entertainer™ activity center!

Graco is the recognized leader in the design and manufacture of quality baby products. We believe your new Graco® Rocking Entertainer™ activity center is a wise choice, promising many hours of enjoyment for your baby.

Before using your activity center, please take a few minutes to read this Owner's Manual. The short time you spend reading these instructions will help you to assemble and use your activity center properly.

Customer Satisfaction

Our goal is to make every product the best it can be! We are also committed to supporting our products after purchase. If you would like to speak with Graco about your product, please contact our Customer Service Department at 1-800-345-4109.

Our knowledgeable staff will be ready to answer any questions you may have concerning parts, use or maintenance. When you call, please have the model and serial numbers ready so your call may be processed quickly and efficiently.


© 1997 Graco 283-10-97

AWARNING

Failure to follow these warnings and the assembly instructions could result in serious injury or death.



Never leave child unattended. Always keep child in view while in this product.

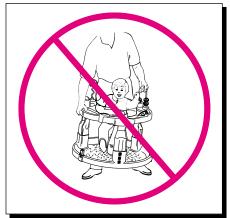


Never lift or carry this product with child in it.




Do not use product with a child who can tip over or climb out of product.



Strings can cause strangulation. DO NOT place items with a string around your child's neck, such as hood strings or pacifier cords. DO NOT suspend strings over the activity center or attach strings to toys.

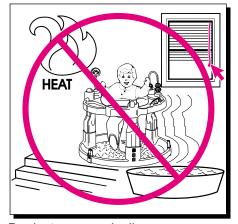

Product may gradually move across the floor as child plays in it. Watch for movement of product and be sure child stays away from hazards in the area such as stairs, cords, hot liquids, pools, sources of heat and anything else that may injure your child.

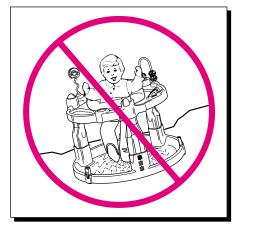

To avoid tipovers, place product on flat. level floor/ground. Adjust legs to same height so that the tray is level before placing child in product.

THIS PRODUCT REQUIRES ADULT ASSEMBLY.

READ ALL INSTRUCTIONS BEFORE ASSEMBLY AND USE OF THIS PRODUCT. If you experience any difficulties, please contact the Customer Service Department.

KEEP INSTRUCTIONS FOR FUTURE USE.

to sit upright unassisted, unable to walk, weighs less than 30 pounds, and is less than 32 inches tall.

EXCESSIVE EXPOSURE TO SUN OR HEAT could cause fading or warping of parts.

DO NOT USE THIS PRODUCT if it is damaged or broken.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.

CARE AND MAINTENANCE

for loose screws, worn parts, torn material or stitching. Replace or repair the parts as needed. Use only Graco®

REMOVABLE CLOTH SEAT may be machine washed in lukewarm water on delicate cycle and drip dried. DO NOT

TO CLEAN FRAME, use only household soap or detergent

PARTS LIST

CHECK that you have all the parts listed below BEFORE assembling your activity center. If any parts are missing, call Customer Service at 1-800-345-4109.

Tool required: Screwdriver





Teether toy

Beads and bar

Flip toy (4)



Foot (3)

 
Seat






Tray with seat ring

Seat lock and screw



Phone

 and cord



Additional parts found only on certain models:





Mirror

Steering wheel and cap

Mounting bracket (2) and screws (4)

THIS PRODUCT IS FOR USE ONLY by a child who is able

Download from Www.Somanuals.com. All Manuals Search And Download

replacement parts.

MACHINE DRY. NO BLEACH.

and warm water. NO BLEACH.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com