



# nüvi® 3700 series for Volvo® cars quick start manual



for use with these nüvi models:  
3760, 3790

June 2010

190-01265-01 Rev. A

Printed in Taiwan

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

## Getting Started

### **WARNING**

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

---

When using your device for the first time, complete the following tasks.

1. Power your device ([page 2](#)).
2. Mount your device ([page 3](#)).
3. Configure your device ([page 3](#)).
4. Acquire satellites ([page 4](#)).
5. Understand the Main menu ([page 4](#)).

## Powering the Device

Connect your device to the vehicle mount.

Your device charges as you drive.

### **Power Connection**

Your device can be powered three ways.

- Vehicle mount
- micro-B cable ([page 11](#))
- AC adapter

If you do not plan to use your device while it is connected to a power source, press the **Power** button to lock the device. For more about locking the device, go to [page 10](#).

## Mounting Your Device

### **WARNING**

This product contains a lithium-ion battery. To prevent the possibility of personal injury or product damage caused by battery exposure to extreme heat, remove the device from the vehicle when exiting or store it out of direct sunlight.

1. Fit the bottom of your device into the cradle.
2. Tilt your device back until it snaps into place. Your device should turn on automatically if the vehicle is running. Follow the on-screen instructions.




## Configuring your Device

1. Connect your device to the vehicle mount.
2. Your device should turn on automatically if it is plugged in and the vehicle is running.
3. Follow the on-screen instructions.

## Front Cover



## Acquiring Satellites

The  bars indicate satellite strength.

1. Go outdoors to an open area, away from tall buildings and trees.
2. If necessary, turn on your device.

Acquiring satellite signals can take a few minutes. When at least one of the bars is green, your device has acquired satellite signals.

## Main Menu



- 1 GPS satellite strength.
- 2 Touch to select a transportation mode.

- 3 Touch to find a destination.
- 4 Touch to view the map.
- 5 Touch to stop a route.
- 6 Touch to detour a route.
- 7 Touch to make a call when connected to a compatible mobile phone. Go to [www.garmin.com/bluetooth](http://www.garmin.com/bluetooth) for information.
- 8 Touch to adjust the volume.
- 9 Touch to open the menu of tools and settings.

## Finding Points of Interest

1. From the Main menu, touch **Where To? > Points of Interest.**
2. Select a category and a subcategory, if necessary.
3. Select a destination.
4. Touch **Go!**


## Finding a Volvo® Dealership

1. From the Main menu, touch **Where To? > Volvo Dealers**
2. Select a dealership.
3. Touch **Go!**

## Finding a Place by Spelling the Name

1. From the Main menu, touch **Where To? > Points of Interest > Spell Name.**
2. Enter the name of your destination.
3. Touch **Done.**
4. Select a destination.
5. Touch **Go!**

## Searching Near Another Location

1. From the Main menu, touch **Where To? >  > Near.**
2. Select an option.

## Following Your Route

Your route is marked with a magenta line on the map. If you depart from the original route, your device recalculates the route. A speed limit icon could appear as you travel on major roadways.




- 1 Touch to view the Next Turn page. If a view of the junction exists, the Junction View page appears.
- 2 Touch to view the Turn List page.
- 3 Touch to zoom in and out.
- 4 Touch to return to the Main menu.

- 5 Touch to change the data field.
- 6 Touch to view the Where Am I? page.
- 7 Touch and drag the map to view a different area of the map.
- 8 Touch to view the Trip Computer page.


## Adding a Stop

Before you can add a stop, you must be navigating a route.

1. Touch  to return to the Main menu.
2. Touch **Where To?**.
3. Search for the extra stop.
4. Select the stop from the search results.
5. Touch **Go!**.
6. Touch **Add to Current Route**.

## Taking a Detour

Before you can take a detour, you must be navigating a route.

1. Touch  to return to the Main menu.
2. Touch **Detour**.

If the route you are currently taking is the only reasonable option, the device might not calculate a detour.

## Orienting the Screen

Rotate your device to view in horizontal (landscape) or vertical (portrait) mode.



**NOTE:** When mounted in landscape mode, the device cannot be rotated more than 90 degrees.

## Adjusting the Screen Brightness

1. Touch **Tools > Settings > Display > Brightness**.
2. Touch and move the scroll bar to adjust screen brightness.

## About the Transportation Modes



*Bicycle*



*Pedestrian*



*Automobile*

Your device has different transportation modes for navigation. Routing is calculated differently based on your mode. For example, in Pedestrian transportation mode with cityXplorer™ maps loaded, your device calculates a route that uses a combination of public transit options, such as riding a bus or subway, and walking. cityXplorer maps are not included with your device.

Go to [www.garmin.com](http://www.garmin.com) to purchase cityXplorer maps.

## Changing Your Transportation Mode

1. From the Main menu, touch the transportation mode icon.
2. Select a mode, and touch **Save**.


## About Traffic

### NOTICE

The traffic receiver and the device must be in data range of an FM station transmitting TMC data to receive traffic information. Traffic information is not available in all areas or countries.

The FM Traffic Message Channel (TMC) traffic receiver is an option for your nüvi 3700. Contact your Volvo dealer for more information.

If a severe traffic delay occurs on your route, the device automatically

recalculates the route. The traffic icon  changes color to indicate the severity of traffic conditions on your route or on the road you are traveling.

For more information on FM Traffic, go to [www.garmin.com/volvo](http://www.garmin.com/volvo).

**NOTE:** Garmin and Volvo are not responsible for the accuracy of the information.

## About Voice Command

**NOTE:** The Voice Command menu is only active if your selected text language is supported.

The Voice Command feature is available on some nüvi models. Voice Command allows you to use your device by speaking the words you see on the screen or by speaking certain commands. The Voice Command menu provides a list of available commands to use.



## Activating Voice Command

Speak **Voice Command**.

The voice command menu appears.

## Tips for Using Voice Command

- Talk in a normal voice directed at the device to speak a command exactly as it appears on the screen.
- Respond to voice prompts from the device as needed.
- Speak numbers to enter numbers.
- Speak **Exit** to exit Voice Command.

## Navigating with Voice Command

1. Speak your wakeup phrase.  
The voice command menu appears.
2. Speak **Find by Name**.

3. Listen for the voice prompt and speak the name of the place.  
The device repeats the name of the place as it is searching.  
A list of locations appears.
4. Speak the line number of the location you want.
5. Speak **Yes** to navigate to the location, or speak **No** to go back to the list of found locations.

## Hands-free Features

Hands-free calling is available on some nüvi models.



## Pairing Your Phone

Before you can pair, your phone and the device must be turned on and near each other.

1. Enable the Bluetooth® component on your phone.
2. From the main menu, touch **Tools > Settings > Bluetooth**.

3. Touch the button below **Bluetooth** > **Enabled** > **OK**.
4. Touch the button below **Phone**.
5. Touch **OK**.
6. Select your phone, and touch **OK**.
7. Enter the Bluetooth PIN (**1234**) for your device in your phone.

### Placing and Ending Calls

1. Touch  > **Dial**.
2. Enter the number.
3. Touch **Dial**.
4. Touch  > **End Call** to end a call.

### Answering a Call

When you receive a call, the Incoming Call window opens.


1. Touch **Answer**.  
**TIP:** Touch **Ignore** to stop your phone from ringing.

2. Speak normally.

The internal microphone is in the front of the device.

### About Sleep Mode

You can use sleep mode to conserve battery power when your device is not in use. Sleep mode uses very little power, and a battery charge lasts for weeks when your device is in sleep mode.

- Press the **Power** button to put the device in sleep mode.
- Press and quickly release the **Power** button and double-tap  to wake up the device.

### Resetting the Device


You can reset your device if it stops functioning.

Press and hold the power button for 10 seconds.

## Registering Your Device

1. Go to [www.garmin.com/volvo](http://www.garmin.com/volvo).
2. Follow the on-screen instructions to register your product.
3. Keep the original sales receipt, or a photocopy, in a safe place.

## Updating the Software

1. Connect the device to your computer using the micro-B cable.
2. Double-click  to open the myDashboard™ Web page.  
If the AutoPlay menu does not open, or you are on a Mac® computer, go to [www.garmin.com/agent](http://www.garmin.com/agent).
3. Follow the on-screen instructions.

After you have installed myGarmin Agent, you will be prompted to open myDashboard each time you connect your device to your computer. myDashboard checks for

current software updates and provides additional information about your device.

For the latest free software updates (excluding map data) throughout the useful life of your Garmin product, go to [www.garmin.com/volvo](http://www.garmin.com/volvo).

## nüMaps Guarantee™

To receive one free map update (if available), register your device at [www.garmin.com/volvo](http://www.garmin.com/volvo) within 60 days of acquiring satellites while driving with your device. You are not eligible for the free map update if you register by phone or wait longer than 60 days after the first time you acquire satellites while driving with your device. For more information, go to [www.garmin.com/volvo](http://www.garmin.com/volvo).

## Volvo® Limited Warranty

Contact your Volvo dealer for warranty information.

## More Information

For more information about your device, select **Tools > Help**. You can download the latest version of the owner's manual from [www.garmin.com/volvo](http://www.garmin.com/volvo). For information on accessories, go to <http://buy.garmin.com> or contact your Garmin dealer.

Garmin®, the Garmin logo, and nüvi® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. cityXplorer™, nüMaps Guarantee™, myDashboard™, and myGarmin™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin. Volvo® is a registered trademark of AB Volvo and Volvo Car Corporation. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc., and any use of such name by Garmin is under license. Mac® is a trademark of Apple Computer, Inc., registered in the USA and other countries.



© 2010 Garmin Ltd. or its subsidiaries

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>