

GRACO INC. P.O. BOX 1441

## INSTALLATION

#### PREPARING FOR USE

Operating instructions and safety warnings are given in separate manual 306-997; service instructions are given in the manuals for the separate components.

#### CONNECTING HOSES

Connect fluid hose to nipple on outlet manifold. Do not use thread sealer. Connect spray gun to swivel.


#### -WARNING-

NEVER exceed 120 psi (8 bar) air pressure to pump. At 120 psi, the pump develops up to 3600 psi (248 bar) fluid pressure. Be sure that any hose, valve, etc., that you use will withstand the pressures developed.

Connect a 1/2 ID static grounded air hose to the 1/2 npt air inlet union. You should have a bleed type master air valve in your air supply line so that you can shut off air before it reaches unit.

Flush unit as described in 306-997. If you have the stationary unit, install the filter conversion kit. Refer to manual 306-812 for instructions.


Troubleshooting and service instructions are given in 306-997 and the separate manuals for each component assembly.

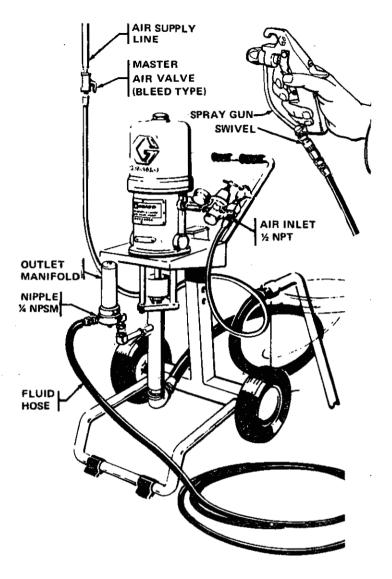

#### PARTS DRAWING

### 30:1 PRESIDENT HYDRA-SPRAY (SIPHON STAND)


Model 226-185 Series "B"

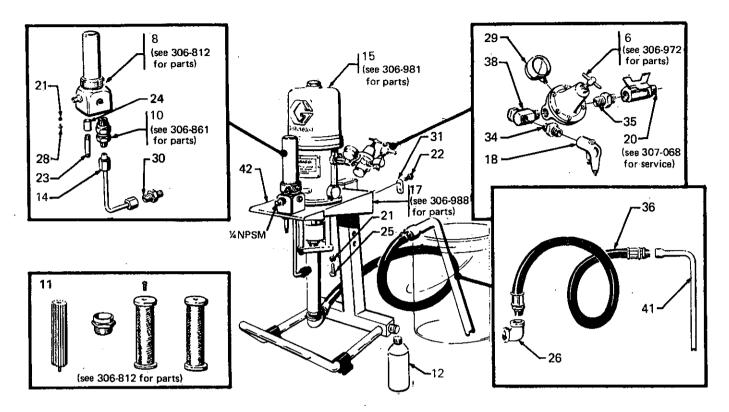

30:1 PRESIDENT HYDRA-SPRAY (SIPHON CART)

## Model 226-238 Series "D"

Model 206-448 Series "D" (Same as 226-238 less hose, swivel, gun and tip)

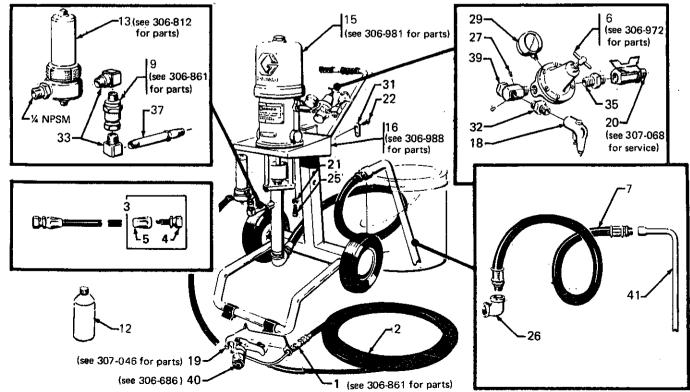

2 307-051

Model 226-185 Series "B" Includes items 6, 8, 10-12, 14, 15, 17, 18, 20-26, 28-31 34-36, 38, 41, 42

Model 226-238 Series "D" Includes items 1, 2, 6, 7, 9, 12, 13,15, 16, 18-20, 2 of item 21, 22, 25-27, 29, 31-33, 35, 37, 39-41

Model 206-448 Series "D" Includes items 6, 7, 9, 12, 13, 15, 16, 18, 20, 2 of item 21, 22, 25-27, 29, 31-33, 35, 37, 39, 41

PARTS LIST

	PART NO.	DESCRIPTION	QTY.		PART NO.	DESCRIPTION	<b>Ω</b> ΤΥ.
1 2	*204-940 *205-492	SWIVEL (see 306-861 for parts) FLUID HOSE Assy, nylon w/grnd wire, ¼ id, 25 ft., cpld ¼ npsm(f)	1	18 19	208-627 208-663	BLOW GUN HYDRA-SPRAY GUN (see 307-046 for parts)	1 1
3	205-493	swivel, replaceable part, item 3 .REUSEABLE COUPLING Assy.	_	20 21	208-630 100-016	BALL VALVE(see 307-068 for service LOCKWASHER, spring, ¼ screw	
		Includes items 4 and 5	2			size	6
4	205-494	STUD, ¼ npsm(f)	2	22	100-055	DRIVE SCREW	2
5	164-625	. SLEEVE	2	23	100-124	NIPPLE, pipe, ¼ npt x 2½"	1
6	206-197	AIR REGULATOR (see 306-972		24	100-175	COUPLING, pipe, ¼ npt	1
-	000 007	for parts)	1	25	100-270	CAPSCREW, hex hd, ¼-20 x 5/8	2
7	206-297	HOSE, cpld, ¾ npt(mbe), ¾ id,		26	100-349	ELBOW, 90°, ¾ npt(fbe)	1
0	000 400	3½ ft.	1	27	100-403	PLUG, pipe, square head, 1/8 npt	2
8	206-482	FILTER (see 306-812 for parts)	1	28	100-609	SCREW, mach, rd hd, ¼-20 x 3/8	4
9	206-831	CHECK VALVE (see 306-861 for		29	101-180	GAUGE, air, 0-200 lb, ¼ npt(m)	1
	000 005	parts)	1	30	101-958	MALE CONNECTOR, 3/8 od tube	
10	206-835	CHECK VALVE (see 306-861			400 303	x 3/8 npt (m)	1
4.4	200 070	for parts)	1	31	150-707	SERIAL PLATE	1
11	206-979	FILTER CONVERSION KIT (see	4	32	151-519	NIPPLE, reducing, ¼ to 1/8 npt	1
12	206-994	306-812 for parts)	1	33	155-699	ELBOW, 90°, 3/8 npt (m x f)	2
12	200-994	THROAT SEAL LUBRICANT,		34	156-971	NIPPLE, pipe, short, ¼ npt	1
13	207-277	1 pint EU TER (con 206 812 (our monte)	1	35	159-239	NIPPLE, reducing, ½ to 3/8 npt	F 1
13	207-277	FILTER (see 306-812 for parts) RISER TUBE	1	36 37	160-049 160-790	HOSE, cpld, ¼ npt(mbe), ¼ id, 6 ft. NIPPLE, adapter, 3/8 npt; 3 - 5/8" lg	1
			1	38		· · · · · ·	
15	207-707	30:1 PRESIDENT PUMP (sée 306-		30	161-262	MANIFOLD, ½ npt(m) x ½ npt(f)	1
16	208-210	981 for parts)	1	39	162-376	swivel, ¼ npt hole tapped in body	1
10	200-210	UNIVERSAL MOUNTING STAND,		39	102-3/0	MANIFOLD, ½ npt(m x f), 900	4
17	208-211	portable (see 306-988 for parts)	1	40	•163-???	swivel, 3 holes (1/8 npt) in body	1
17	200-211	UNIVERSAL MOUNTING STAND,		40 41		SPRAY TIP, std. (see 306-686)	1
		stationary (see 306-988 for parts)	1	41	165-767	SUCTION TUBE, 3/8 npt, 18"	1
				42	169-558	PLATE, adapter	I

NOTE: 306 & 307 Numbers in description refer to separate instruction manuals.

#### **\* SUGGESTED REPLACEMENT PARTS**

Order parts by number and name. Also give series letter and model number for which parts are ordered. Call or write your Graco distributor, nearest Graco factory branch or service depot for parts or service.

## SERVICE INFORMATION

Listed below by the assembly changed are OLD and NEW parts.

ASSEMBLY	PART	REF	PART	NAME
CHANGED	DESIGNATION	NO.	NO.	
226-238 FINAL Assy		19	208-327 208-663	Spray Gun Spray Gun
ALL	OLD	20	207-919	Ball Valve
FINAL Assy	NEW		208-630	Ball Valve

INTERCHANGEABILITY NOTE: NEW parts replace OLD parts listed directly above them.

# ACCESSORIES

(Must be purchased separately)

### Air Supply Hose

Air hose with static ground wire for connecting air supply to unit. ½ in. id; coupled ½ NPT(MBE).

	PART NO.	LENGTH
	205-418	6 ft.
	205-216	15 ft.
·,	205-273	25 ft.
	208-594	50 ft.

#### Fluid Hoses, Static Grounded Nylon

Stainless Steel braid cover.

¼ in. id; coupled ¼ NPSM(F)

-		
PART NO.	LENGTH	
207-880	15 ft.	
207-881	25 ft.	
207-882	50 ft.	

 
וחתהו

#### Fluid Hoses, Static Grounded Nylon

Di				
PART NO.	I.D.	LENGTH	THD. SIZE	
206-787	1/8"	2'	%" NPSM (F)	
205-492	1/4"	25'	¼" NPSM (F)	
205-616	Ŷ <b>4</b> ‴	50'	¼" NPSM (F)	
205-776	3/8"	25'	3/8" NPT (M)	
205-777	3/8"	50'	3/8" NPT (M)	

#### **High Pressure Ball Valves**


For two gun hookup with individual line control.



TITIE


PART NO. THD. SIZE

205-757 ¼ NPT (M) Both ends

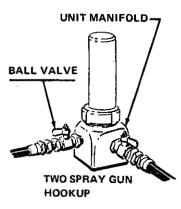

#### Air Strainer 204-999

Can be attached to air inlet manifold of unit. Has ½-in: swivel union for connection of air supply hose and a removable 60 mesh screen for filtering air to pump.

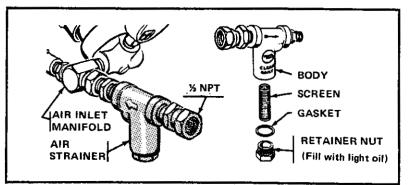



# ACCESSORIES

(Must be purchased separately)

# Cover Mounted Agitator 226-086

Fits 5-gallon pails for agitation of paint in original shipping container. Has port for inserting suction tube. Requires air hose for connecting air supply to agitator.

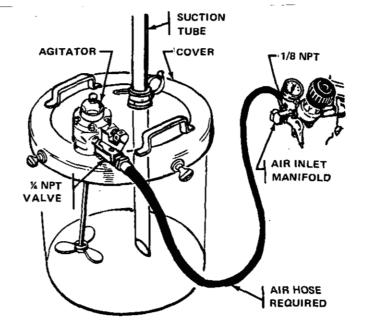

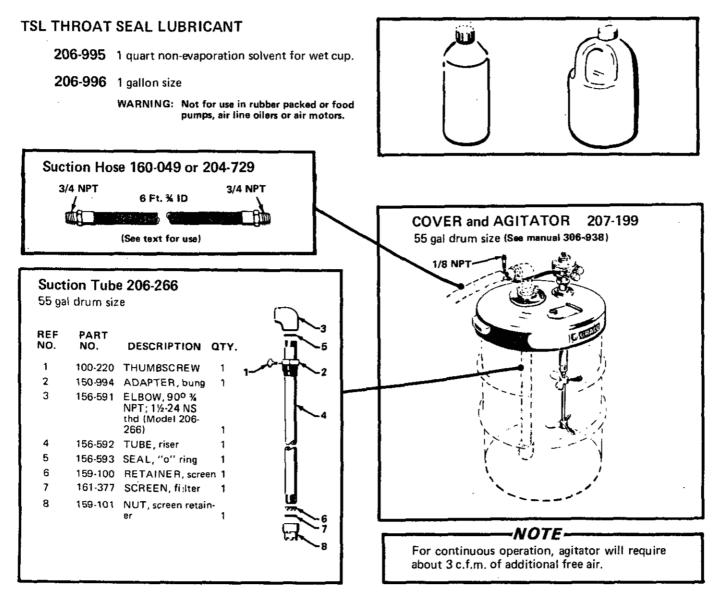

For agitation of paint and suction directly from original 55-gallon shipping container. 6-ft. suction hose 160-049 is for petroleum base solvent flushing and water base materials: 204-729 is for hydracarbon solvent flushing materials.

## TECHNICAL DATA

Recommended air operating range Maximum recommended pump speed

Air\_consumption

Air inlet size

Fluid filter

Maximum working pressure

40 to 120 psi (3 to 8 bar) 104 cycles/min; 1.67 gpm for continuous operation see below 3600 psi (248 bar) % NPT(F) 60 mesh screen

## AIR CONSUMPTION

Pump Delivery	CFM at 70 psi (5 bar)	CFM at 100 psi (7 bar)
1.67 gpm	42	54
1.0 gpm	28	36
.25 gpm	10	14

#### THE GRACO WARRANTY

Graco Inc. warrants all equipment manufactured by it and bearing its name to be free from defects in material and workmanship under normal use and service. Scope of this warranty extends to the original purchaser for a period of 12 months from the date of purchase and is applicable only when the equipment is installed and operated in accordance with factory recommendations. The warranty does not extend to damage or wear caused by misuse, abrasion, corrosion, negligence, accident, faulty installation or tampering in a manner to impair its normal operation.

In the event the equipment supplied by Graco Inc. is found to be defective within the above-stated 12-month period, Graco Inc. will repair or replace free of charge such defective parts if rendered prepaid to the factory or to an authorized Graco service agency and is found by Graco Inc.'s inspection to be truly defective in workmanship or material. In the event said material is deemed defective in workmanship or material, it will be corrected and shipped transportation prepaid within the continental U.S. If inspection of any such equipment by Graco Inc. does not disclose any defect in workmanship or material, repairs will be made at a reasonable charge. Purchased assemblies which are incorporated into Graco equipment, carry the manufacturer's regular warranty.

The foregoing warranties are exclusive, and are in lieu of all other warranties (whether written, oral or implied) including warranty of merchantability in other respects than expressly set forth above and warranty of fitness for a particular purpose. Except as herein provided, every form of ilability for direct or consequential damages or loss is expressly excluded and denied.



ATLANTA, CHICAGO(Broadview), CLEVELAND, DALLAS, DETROIT(Southfield), FT. LAUDERDALE, HOUSTON, LOS ANGELES, PHILADELPHIA(Levittown), ST. LOUIS(Maryland Heights), SOUTH SAN FRANCISCO, WEST CALDWELL(N.J.) Factory Branches: CANADA: ARGENTINA: BRAZIL: VENEZUELA; ENGLAND: FRANCE: GER-

307-051 May, 1971 Revised Apr., 1974 PRINTED U.S.A

55440

Subsidiary and Affiliate Companies: MANY; ITALY; SWITZERLAND; SWEDEN; HONG KONG; JAPAN

GRACO INC. P.O. BOX 1441

Download from Www.Somanuals.com. All Manuals Search And Download.

Minneapolis, MN

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com