



Grandstream Networks, Inc.

GXP21xx SIP Enterprise Phones



TABLE OF CONTENTS
GXP21XX USER MANUAL

WELCOME.....	3
INSTALLATION.....	4
EQUIPMENT PACKAGING	4
CONNECTING YOUR PHONE.....	4
GXP2120/2110 EXTENSION UNIT.....	4
SAFETY COMPLIANCES.....	6
WARRANTY	6
PRODUCT OVERVIEW	7
USING THE GXP21XX SIP ENTERPRISE PHONE.....	11
GETTING FAMILIAR WITH THE LCD	11
MAKING PHONE CALLS	13
ANSWERING PHONE CALLS	16
PHONE FUNCTIONS DURING A PHONE CALL	17
CALL FEATURES	19
CUSTOMIZED LCD SCREEN & XML	19
CONFIGURATION GUIDE.....	20
CONFIGURATION VIA KEYPAD.....	20
CONFIGURATION VIA WEB BROWSER	23
SAVING THE CONFIGURATION CHANGES	38
REBOOTING THE PHONE REMOTELY.....	38
SOFTWARE UPGRADE & CUSTOMIZATION.....	39
FIRMWARE UPGRADE THROUGH TFTP/HTTP.....	39
CONFIGURATION FILE DOWNLOAD	40
RESTORE FACTORY DEFAULT SETTING.....	41

TABLE OF FIGURES
GXP21XX USER MANUAL

Figure 1: Connecting the GXP2120/2110 and the GXP Extension Board.....	5
Figure 2: Keypad GUI Flow.....	21

TABLE OF TABLES
GXP2120 USER MANUAL

Table 1: Equipment Packaging	4
Table 2: GXP21xx Connectors.....	4
Table 3: GXP21xx Product Models	7
Table 4: GXP21xx Comparison Guide	7
Table 5: GXP21xx Key Features in a Glance	8
Table 6: GXP21xx Hardware Specifications.....	8
Table 7: GXP21xx Technical Specifications	9
Table 8: LCD Buttons	11

Table 9: LCD Icons.....	12
Table 10: GXP21xx Keypad Buttons.....	12
Table 11: GXP Call Features.....	19
Table 12: Key Pad Configuration Menu.....	20
Table 13: Device Configuration - Status.....	24
Table 14: Device Configuration – Settings/Basic Settings.....	24
Table 15: Device Configuration – Settings /Advanced Settings.....	27
Table 16: SIP Account Settings.....	32

Welcome

Your Grandstream GXP21xx Enterprise IP phone is feature-enriched, sophisticated, yet simple to use. The GXP21xx delivers superior HD audio quality, rich and leading edge telephony features, personalized information and customizable application service, automated provisioning for easy deployment, advanced security protection for privacy, and broad interoperability with most 3rd party SIP devices and leading SIP/NGN/IMS platforms.

The GXP21xx supports a broad range of codecs, security protection, PoE, dual 10/100mbps Ethernet ports, along with customizable XML provisioning and application features. Users can expect superior audio quality using the new high definition handset, hands-free speakerphone, or headset. Also, it can support up to 5-way conferencing, multi-languages, dual-color LEDs, presence and Busy Lamp Field (BLF). It presents a large easy-to-read backlit graphical display along with multiple XML keys to further enhance the user experience. The GXP2120/2110 is also expandable with one to two expansion modules.

The GXP21xx is a perfect choice for enterprise users looking for a high quality, feature rich multi-line IP phone with the best values.

Caution: Changes or modifications to this product not expressly approved by Grandstream, or operation of this product in any way other than as detailed by this User Manual, could void your manufacturer warranty.

Warning: Please do not use a different power adaptor with the GXP21xx as it may cause damage to the products and void the manufacturer warranty.

- This document is subject to change without notice. The latest electronic version of this user manual is available for download from: <http://www.grandstream.com/support>
- *Reproduction or transmittal of the entire or any part, in any form or by any means, electronic or print, for any purpose without the express written permission of Grandstream Networks, Inc. is not permitted.*

Installation

EQUIPMENT PACKAGING

Table 1: Equipment Packaging

	GXP2120	GXP2110	GXP2100
Main Case	Yes	Yes	Yes
Handset	Yes	Yes	Yes
Phone Cord	Yes	Yes	Yes
Power Adaptor	Yes	Yes	Yes
Ethernet Cable	Yes	Yes	Yes
High Phone Stand	Yes	Yes	Yes
Low Phone Stand	Yes	Yes	No
Wall Mount Spacers (2)	Yes	Yes	Wall Mount stand

CONNECTING YOUR PHONE

The connectors of the GXP21xx are located on the bottom of the device.

Table 2: GXP21xx Connectors

EXT	Connect the GXP Extension unit directly to GXP2110/2120 using connection cable. Draw power from PoE if provided by network. (Not applicable on GXP2100)
PC	10/100Mbps RJ-45 ports for PC (downlink) connection.
LAN	10/100Mbps RJ-45 port for LAN (uplink) connection. Supports PoE (802.3af). Draws power from either spare line or signal line.
Power Jack	5V DC power port; UL Certified
Headset Jack	RJ9 and 2.5mm
Handset Jack	RJ9

GXP2120/2110 EXTENSION UNIT

GXP2120/2110 supports two (2) extension units, providing up to 112 additional programmable extensions. Each GXP Extension unit has 56 multi-purpose keys, dual color LEDs (red/green) and support BLF (Busy Lamp Field) and Presence.

GXP2120/2110 Extension package contains:

- 1) 1 GXP Extension unit
- 2) 2 connection cables
- 3) 1 universal power adaptor

FIGURE 1: CONNECTING THE GXP2120/2110 AND THE GXP EXTENSION

GXP2120 with GXP Extension



Connecting the GXP2120/2110 to GXP Extension

GXP Extension



Reverse side of connection with connection plate



Reverse side of connection w/connection plate



GXP2120/2110 has a special port on the back.

Connect the first GXP EXT to the GXP2120/2110 using the connection cable found in the GXP Extension package. The first GXP EXT draws power directly from the phone. Connect the second GXP Extension unit using the connection plate and the connection cable. The GXP2120/2110 will automatically reboot and power up the GXP Extensions. Grandstream recommends, though not required, to use a separate power supply with the second GXP EXT.

NOTE: Should your system lose power, please unplug your devices and power up the GXP2120/2110 first.

Powering up the system:

1. The GXP2120/2110 will boot up first;
2. The GXP2120/2110 LEDs will be solid red;
3. The status light in the top right corner of the GXP Ext will blink in red;
4. All of the LED indicators on the GXP Ext will flash three times;
5. The status light at the top right corner of the GXP Ext will turn to solid green.

NOTE:

1. Extension for GXP2120/2110 is the same for GXP2020/2010 models. However, GXP2120/2110 uses a different-shaped connector for the special port (as shown above). Extension cables will be included with the extension board.
2. Extension for GXP2120/2110 does not support hot-swap. Once connected, user should reboot the phone to ensure the set up will work correctly.
3. GXP2120/2110 can drive 2 extension modules. Independent power adapters are not needed for extension modules.

SAFETY COMPLIANCES

The GXP21xx complies with FCC/CE and various safety standards. The GXP21xx power adaptor is compliant with the UL standard. Only use the universal power adaptor provided with the GXP21xx package. The manufacturer's warranty does not cover damages to the phone caused by unsupported power adaptors.

WARRANTY

If you purchased your GXP21xx from a reseller, please contact the company where you purchased your phone for replacement, repair or refund. If you purchased the product directly from Grandstream, contact your Grandstream Sales and Service Representative for a RMA (Return Materials Authorization) number before you return the product. Grandstream reserves the right to remedy warranty policy without prior notification.

Product Overview

Table 3: GXP21xx Product Models

Model	Picture	Overview
GXP2120		<p>GXP2120 is an executive SIP phone. It features:</p> <ul style="list-style-type: none"> • Six lines • Seven programmable hard keys • Four XML programmable soft keys
GXP2110		<p>GXP2110 is an executive SIP phone. It features:</p> <ul style="list-style-type: none"> • Four lines • Eighteen programmable hard keys • Three XML programmable soft keys
GXP2100		<p>GXP2100 is an executive SIP phone. It features:</p> <ul style="list-style-type: none"> • Four lines • Seven programmable hard keys • Three XML programmable soft keys

Table 4: GXP21xx Comparison Guide

Features	GXP2120	GXP2110	GXP2100
LCD Display	320x160 pixel	240x120 pixel	180x90 pixel
Number of Lines	6	4	4
Programmable Hard Keys	7	18	7
Programmable Soft Keys	4	3	3
Extension Module	Yes, up to 2 Expansion Modules, 56 nodes each	Yes, up to 2 Expansion Modules, 56 nodes each	N/A

Table 5: GXP21xx Key Features in a Glance

Features	Benefits
Open Standards Compatible	SIP RFC3261, TCP/IP/UDP, RTP/RTCP, HTTP/HTTPS, ARP/RARP, ICMP, DNS (A record, SRV and NAPTR), DHCP (both client and server), PPPoE, TELNET, TFTP, NTP, STUN, SIMPLE, SIP over TLS, 802.1x, TR-069
Superb Audio Quality	Advanced Digital Signal Processing (DSP), Silence Suppression, VAD, CNG, AGC
Network Interfaces	Dual 10/100Mbps Ethernet ports with integrated PoE
Feature Rich	Traditional voice features including caller ID, call waiting, hold, transfer, forward, block, auto-dial, off-hook dial
Advanced Features	Multi-line support with dual-color LED, multi-party conferencing, line extension interface, large backlit graphic LCD, 4 navigation keys, dedicated buttons for hold, send/redial, speakerphone, headset, transfer, conference (for up to 5 parties depending on model), mute, message, Do-Not-Disturb, phone book, intercom
Advanced Functionality	Customized downloadable ring-tones, SRTP, SIP over TLS, multi-language support and XML enabled, adjustable positioning angles, wall mountable, AES encryption, automatic multimedia service (eg., weather information)

Table 6: GXP21xx Hardware Specifications

Model	GXP2120	GXP2110	GXP2100
LAN Interface (Ethernet ports)	Two (2) 10/100 Mbps Full/Half Duplex Ethernet Switch with LAN and PC port with auto detection		
Graphic LCD Display	320x160 pixel	240x120 pixel	180x90 pixel
Expansion Module Support	Yes		No
Headset Jack	2.5mm and RJ9		
Call Appearance LED	13 Dual color (green/red)	22 Dual color (green/red)	11 Dual color (green/red)
Power over Ethernet	Built-in auto-sensing: Cisco and IEEE 802.3af standard		
Universal Switching	Input: 100-240VAC 50-60 Hz	Input: 100-240VAC 50-60 Hz	Input: 100-240VAC 50-60 Hz
Power Adaptor	Output: +5VDC, 800mA, UL certified	Output: +5VDC, 800mA, UL certified	Output: +5VDC, 800mA, UL certified
Dimension	251mm(W) x 202mm(L) x 77mm(H)	252mm (W) x 210mm (L) x 78mm (H)	222mm (W) x 210mm (L) x 93mm (H)
Weight	1.66KG (3.64lbs)	1.78KG (3.92lbs)	1.63KG (3.59lbs)
Temperature	32 –104° F/ 0 – 40° C		

Humidity Compliance	10% – 90% (non-condensing) FCC / CE / C-Tick
----------------------------	---

Table 7: GXP21xx Technical Specifications

Lines	Multiple direct lines with independent SIP accounts, programmable speed dial keys, XML programmable soft-keys																																																								
Protocol Support	Support SIP 2.0, TCP/UDP/IP, PPPoE, RTP/RTCP, SRTP by SDES, HTTP, ARP/RARP, ICMP, DNS, DHCP, NTP, TFTP, SIMPLE/PRESENCE protocols, TR-069, 802.1x Support multiple SIP accounts and up to 11 media channels concurrently Support SIP PUBLISH method (RFC 3903), SIP Presence package (RFC 3856, 3863) for use of MFKs, SIP Dialog package (RFC 4235) Support for SIP MESSAGE method (RFC 3428)																																																								
Display	Backlit graphic LCD display, up to 8 level grayscale																																																								
Feature Keys	Feature keys on different models: <table border="1"> <thead> <tr> <th></th> <th>GXP2120</th> <th>GXP2110</th> <th>GXP2100</th> </tr> </thead> <tbody> <tr> <td>HOLD</td> <td>Yes</td> <td>Yes</td> <td>Yes</td> </tr> <tr> <td>SPEAKERPHONE</td> <td>Yes</td> <td>Yes</td> <td>Yes</td> </tr> <tr> <td>SEND</td> <td>Yes</td> <td>Yes</td> <td>Yes</td> </tr> <tr> <td>TRANSFER</td> <td>Yes</td> <td>Yes</td> <td>Yes</td> </tr> <tr> <td>CONF</td> <td>Yes</td> <td>Yes</td> <td>Yes</td> </tr> <tr> <td>MUTE</td> <td>Yes</td> <td>Yes</td> <td>Yes</td> </tr> <tr> <td>DND</td> <td>Yes</td> <td>Yes</td> <td>No</td> </tr> <tr> <td>HEADSET</td> <td>Yes</td> <td>Yes</td> <td>Yes</td> </tr> <tr> <td>INTERCOM</td> <td>Yes</td> <td>Yes</td> <td>Yes</td> </tr> <tr> <td>PHONEBOOK</td> <td>Yes</td> <td>Yes</td> <td>Yes</td> </tr> <tr> <td>MSG</td> <td>Yes</td> <td>Yes</td> <td>Yes</td> </tr> <tr> <td>MENU</td> <td>Yes</td> <td>Yes</td> <td>Yes</td> </tr> <tr> <td>NAVIGATION (4)</td> <td>Yes</td> <td>Yes</td> <td>Yes</td> </tr> </tbody> </table>		GXP2120	GXP2110	GXP2100	HOLD	Yes	Yes	Yes	SPEAKERPHONE	Yes	Yes	Yes	SEND	Yes	Yes	Yes	TRANSFER	Yes	Yes	Yes	CONF	Yes	Yes	Yes	MUTE	Yes	Yes	Yes	DND	Yes	Yes	No	HEADSET	Yes	Yes	Yes	INTERCOM	Yes	Yes	Yes	PHONEBOOK	Yes	Yes	Yes	MSG	Yes	Yes	Yes	MENU	Yes	Yes	Yes	NAVIGATION (4)	Yes	Yes	Yes
	GXP2120	GXP2110	GXP2100																																																						
HOLD	Yes	Yes	Yes																																																						
SPEAKERPHONE	Yes	Yes	Yes																																																						
SEND	Yes	Yes	Yes																																																						
TRANSFER	Yes	Yes	Yes																																																						
CONF	Yes	Yes	Yes																																																						
MUTE	Yes	Yes	Yes																																																						
DND	Yes	Yes	No																																																						
HEADSET	Yes	Yes	Yes																																																						
INTERCOM	Yes	Yes	Yes																																																						
PHONEBOOK	Yes	Yes	Yes																																																						
MSG	Yes	Yes	Yes																																																						
MENU	Yes	Yes	Yes																																																						
NAVIGATION (4)	Yes	Yes	Yes																																																						
Device Management	NAT-friendly remote software upgrade (via TFTP/HTTP) for deployed devices including behind firewall/NAT Auto/manual provisioning system, Web GUI Interface Expansion interface, Address Book																																																								
Audio Features	Full-duplex hands-free speakerphone, headset enabled Advanced Digital Signal Processing (DSP) Dynamic negotiation of codec and voice payload length Support for G.723,1 (5.3/6.3K), G.729A/B, G.711 a/μ-law, G.726-32, G.722 (wide-band), and iLBC codecs In-band and out-of-band DTMF (in audio, RFC2833, SIP INFO) Silence Suppression, VAD (voice activity detection), CNG (comfort noise generation), ANG (automatic gain control) Acoustic Echo Cancellation (AEC) with Acoustic Gain Control (AGC) for speakerphone mode, Support side tone																																																								

	<p>Adaptive jitter buffer control (patent-pending) and packet delay & loss concealment</p> <p>HD audio handset with HD wideband audio codecs for excellent double-talk performance.</p>
Telephony Features	<p>Intuitive graphic user interface (GUI), downloadable phone book (XML, LDAP), support for anonymous call using privacy header, MLS (multi-language support)</p> <p>Voice mail indicator, downloadable custom ring-tones, call hold, call transfer (attended/blind), call forward, call waiting, caller ID, mute, redial, call log, caller ID display or block, Do-Not-Disturb (DND) and volume control</p> <p>Multi-party conferencing (up to 5), dial plan prefix, dial-plan support, off-hook auto dial, auto answer, early dial and speed dial</p>
Network and Provisioning	<p>Via keypad/LCD, Web browser, or secure (AES encrypted) central configuration file, manual or dynamic host configuration protocol (DHCP) network setup</p> <p>Support NAT traversal using IETF STUN and Symmetric RTP</p> <p>Support Layer 2 (802.1Q, VLAN, 802.1p) and Layer 3 QoS (ToS, DiffServ, MPLS)</p>
Firmware Upgrades	<p>Support firmware upgrade via TFTP or HTTP</p> <p>Support for Authenticating configuration file before accepting changes</p> <p>User specific URL for configuration file and firmware files</p> <p>Mass provisioning using TR-069 or encrypted XML configuration file</p>
Advanced Server Features	<p>Message waiting indication, support DNS SRV Look up and SIP Server Fail Over, Support customizable idle screen via downloading XML by HTTP/TFTP</p>
Security	<p>User and administrator level passwords, MD5 and MD5-sess based authentication, AES based secure configuration file, SRTP, TLS, 802.1x media access control</p>

Using the GXP21xx SIP Enterprise Phone

GETTING FAMILIAR WITH THE LCD

GXP21xx has a dynamic and customizable screen. The screen displays differently depending on whether the phone is idle or in use (active screen).

Table 8: LCD Buttons

Key Button	Key Button Definitions
LINE SELECTORS	Selects the phone line printed on its right-hand side.
DATE AND TIME	Displays the current date and time. Can be synchronized with Internet time servers.
LOGO	Displays company logo name. This logo name can be customized via xml screen customization.
NETWORK STATUS	Displays the status of the phone and network. It will indicate whether the network is down, starting or running (IP address). “## MISSED CALLS” is shown here too.
STATUS BAR	Shows the status of the phone, using icons as shown in the next table.
LINE STATUS INDICATOR	Displays the name of the account that is in use. Select another account by pressing the LINE key on the left side.
SOFTKEYS	<p>The softkeys are context sensitive and will change depending on the status of the phone. Typical functions assigned to softkeys are:</p> <ul style="list-style-type: none"> • FORWARD ALL Unconditionally forwards the phone line to another phone • MISSED CALL This option shows up there were unanswered calls to this phone. The Missed Calls option shows a list of the missed calls • NEXTSCR Press this button to toggle between idle screen, weather and IP Address. • REDIAL Redials the last number • END CALL Hangs up phone

SPECIAL SOFTKEYS (Only When Integrated with GXE5024/5028)	<p>Call Parking: FOR GXP2120/GXP2110 ONLY. Refer to the GXE5024/5028 Online User Manual for more information.</p> <ul style="list-style-type: none"> CallPark When a GXP2120 dials out, the Call Park softkey will display on screen. To park the call, press the “Call Park” button. PickUp When another GXP2120 goes off-hook the Call Pickup softkey will display on screen. To pickup the parked call, press the “Call Pickup” button.
	<p>Call Queue: FOR GXP2120/2110 ONLY. Refer to the GXE5024/5028 Online User Manual for more information.</p> <ul style="list-style-type: none"> SignIn Press this button to sign in to the call queue. Agent will be prompted in the LCD display to select the call queue to join. Press “menu” button on keypad to select “ok”. Once the agent completely signs in, the agent will be brought back to the main screen. SignOut Press this button to sign out of the call queue. Press “menu” button on keypad to select “ok”. This will be displayed once the agent is signed in to the call queue.

Table 9: LCD Icons












Icon	LCD Icon Definitions
	DND Icon: ON when the “Do Not Disturb” is activated
	Calls Forwarded Icon: INDICATES calls are forwarded
	Voice Mail / Message Waiting Indicator: ON when there is new voice mail / message
	Network Status: Network is down
	Missed Call Icon: Indicates missed call(s)
	Save Call Record: Indicates phone system writing the call records into the flash. It might take 10 to 20 seconds to finish the process

Table 10: GXP21xx Keypad Buttons

Key Button	Key Button Definitions
LINE KEYS	2 Line keys with LED, can be configured to different SIP profiles
HOLD	Place ACTIVE call on hold
SEND	Press to dial out the number or redial when the phone is idle
TRANSFER	Transfer an ACTIVE call to another number
CONF	Press CONF button to connect Calling/Called party into conference

MUTE	Mute an active call
HEADSET	Press HEADSET key to answer/hang up phone calls while using headset. It also allows user to toggle between headset and speaker
DND	Enable/Disable DND. (Not applicable on GXP2100)
INTERCOM	Press to use intercom if intercom user ID is configured in web GUI
MENU	Press to enter menu when phone is in idle. Use it as ENTER key in keypad configuration
	Enter to retrieve voice mails or other messages
	Brings phonebook on screen
	Enable/Disable hands-free speaker
	Enable/Disable handset mode ; or used as SEND/REDIAL
	-Navigation keys “Up” “Down” “Left” “Right”. Press to navigate in menu options -During the call, press “Up” “Down” to adjust volume -When the phone is idle, press “Up” to view missed call; press “Down” to view phonebook
0 – 9, *, #	Standard phone keypad; press # key to send call; press * key to for IVR functions
Multi Purpose Keys	18 MPKs in GXP2110 and 7 MPKs in GXP2120 used for BLF, Speed dial and etc

MAKING PHONE CALLS

Handset, Speakerphone and Headset Mode

The GXP21xx allows you to make phone calls via handset, speakerphone, or headset mode. During the active calls the user can switch between the handset and the speaker by pressing the speaker key. For headsets to operate, the user must plug the headset to an RJ9 or 2.5mm port on the phone, which allows the user to pick-up, speak, or hang-up calls.

Multiple SIP Accounts and Lines

GXP2120 can support up to 6 independent SIP accounts; GXP2110/GXP2100 can support up to 4 independent SIP accounts. Each account is capable of independent SIP server, user and NAT settings. Each of the line buttons is “virtually” mapped to an individual SIP account. The name of each account is conveniently printed next to its corresponding button. In off-hook state, select an idle line and the name of the account (as configured in the web interface) is displayed on the LCD and a dial tone is heard.

For example: Configure ACCOUNT 1 and ACCOUNT 2 with Account Name as “VoIP 1”, “VoIP 2”, respectively and ensure that they are active and registered. When LINE1 is pressed, you will hear a dial tone and see “VoIP 1” on the LCD display; when LINE2 is pressed, you will hear a dial tone and see “VoIP 2” on the LCD display.

To make a call, select the line you wish to use. The corresponding LINE LED will light up in green. User can switch lines before dialing any number by pressing the same LINE button one or more times. If you continue to press a LINE button, the selected account will circulate among the registered accounts.

For example: when LINE1 is pressed, the LCD displays “VoIP 1”; If LINE1 is pressed twice, the LCD displays “VoIP 2” and the subsequent call will be made through SIP account 2.

Incoming calls to a specific account will attempt to use its corresponding LINE if it is not in use. When the “virtually” mapped line is in use, the GXP will flash the next available LINE (from left to right or from top to bottom for Multi Purpose Keys) in red. A line is ACTIVE when it is in use and the corresponding LED is red.

Completing Calls

There are five ways to complete a call:

1. **DIAL:** To make a phone call.
 - Take Handset/SPEAKER/Headset off-hook or press an available LINE key (activates speakerphone) or press the NEW CALL soft-key.
 - The line will have a dial tone and the primary line (LINE1) LED is red. If you wish, select another LINE key (alternative SIP account).
 - Enter the phone number
 - Press the SEND key or press the “DIAL” soft-key.
2. **REDIAL:** To redial the last dialed phone number.

When redialing the phone will use the same SIP account as was used for the last call. Thus, when the third SIP account was made for the last call/call attempt, the phone will use the third account to redial.

 - Press SEND key directly to redial or
 - Take Handset/SPEAKER/Headset off-hook or press an available LINE key (activates speakerphone), the corresponding LED will be red.
 - Press the SEND button or press the REDIAL soft-key.
3. **USING CALL HISTORY:** To call a phone number in Call History
When using the call history, the phone will use the same SIP account as was used for the last call/call attempt. Thus, when returning a call made to the third SIP account, the phone will use the third SIP account return the call.
 - Press the MENU button to bring up the Main Menu.
 - Select Call History and then “Answered Calls”, “Dialed Calls”, “Missed Calls” “Transferred Calls” or “Forwarded Calls” depending on your needs
 - Select phone number using the arrow keys
 - Press OK to select
 - Press OK again to dial.

4. **USING THE PHONEBOOK:** To call a phone number from Phonebook
Each entry in the phonebook can be attached to an individual SIP account. The phone will use that SIP account to make the phone call.

- Go to the phonebook by:
 - i. Pressing the phonebook button (bottom, left-hand side of phone), or
 - ii. Pressing the DOWN arrow key, or
 - iii. Pressing the menu button and selecting “Phone book”
 - iv. Pressing MENU
- Select the phone number by using the arrow keys
- Press OK so select
- Press OK again to dial.

5. **PAGING/INTERCOM:**

The paging/intercom function can only be used if the SERVER/PBX supports this feature and both the phones and PBX are correctly configured.

- Take the Handset/SPEAKER/Headset off-hook
- Select the LINE key associated with account
- Press OK key to display LCD: **LINEx: PAGE.**
- Dial the phone number you want to Page/Intercom
- Press SEND key.

NOTE: Dial-tone and dialed number display occurs after the handset is off-hook and the line key is selected. The phone waits 4 seconds (by default; No key Entry Timeout) before sending and initiating the call. Press the “SEND” or “#” button to override the 4 second delay.

Speed Dial

The Multi Purpose Key buttons, located on the right-hand-side of the phone, can be configured for speed dial. Press the speed dial button to automatically call the assigned extension.

Note: The multi-functional buttons will function as LINE keys when all LINES are busy. The LED will flash in red to indicate an incoming call. Press the button to pick up the call. If any one of the Multi Purpose Keys is associated with a call, the button’s speed dial/BLF function will not work.

Making Calls using IP Addresses

Direct IP Call allows two phones to talk to each other in an ad-hoc fashion without a SIP proxy. VoIP calls can be made between two phones if:

- Both phones have public IP addresses, or
- Both phones are on a same LAN/VPN using private or public IP addresses, or
- Both phones can be connected through a router using public or private IP addresses (with necessary port forwarding or DMZ)

To make a direct IP call, please follow these steps:

1. Press MENU button to bring up MAIN MENU
2. Select “Direct IP Call” using the arrow-keys
3. Press OK to select
4. Input the 12-digit target IP address. (Please see example below)

5. Press OK key to initiate call

To make a quick IP call, please see next section.

For example: If the target IP address is 192.168.1.60 and the port is 5062 (e.g. 192.168.1.60:5062), input the following: **192*168*1*60#5062** - The “*” key represent the dot“.”; The “#” key represent colon “:”. Press OK to dial out.

Quick IP Call Mode

The GXP21xx also supports Quick IP call mode. This enables the phone to make direct IP-calls, using only the last few digits (last octet) of the target phone’s IP-number. This is possible only if both phones are in under the same LAN/VPN. This simulates a PBX function using the CMSA/CD without a SIP server. Controlled static IP usage is recommended.

Setting up the phone to make Quick IP calls

To enable Quick IP calls, the phone has to be setup first. This is done through the web-setup function. In the “Advanced Settings” page, set the “Use Quick IP-call mode to YES. When #xxx is dialed, where x is 0-9 and xxx <=255, a direct IP call to aaa.bbb.ccc.XXX is completed. “aaa.bbb.ccc” is from the local IP address regardless of subnet mask. The numbers #xx or #x are also valid. The leading 0 is not required (but OK).

For example:

192.168.0.2 calling 192.168.0.3 -- dial #3 follow by SEND or #
192.168.0.2 calling 192.168.0.23 -- dial #23 follow by SEND or #
192.168.0.2 calling 192.168.0.123 -- dial #123 follow by SEND or #
192.168.0.2: dial #3 and #03 and #003 results in the same call -- call 192.168.0.3

NOTE: If you have a SIP Server configured, a Direct IP-IP still works. If you are using STUN, the Direct IP-IP call will also use STUN. Configure the “Use Random Port” to “NO” when completing Direct IP calls.

ANSWERING PHONE CALLS

Receiving Calls

1. **Incoming single call:** Phone rings with selected ring-tone. The corresponding account LINE flashes red. Answer call by taking Handset/SPEAKER/Headset off hook or pressing SPEAKER or by pressing the corresponding account LINE button.
2. **Incoming multiple calls:** When another call comes in while having an active call, the phone will produce a Call Waiting tone (stutter tone). Next available lines will flash red (as described in section 4.3.2). Answer the incoming call by pressing its corresponding LINE button. The current active call will be put on hold.
3. **Paging/Intercom Enabled:** Phone beeps once and automatically establishes the call via SPEAKER. (PBX or Server must also supports this feature)

Do Not Disturb

Press the “DND” button to enable/disable “Do Not Disturb” (the corresponding icon will be on the right hand side of the screen). When DND is enabled, the phone will not ring and send caller directly to voicemail.

PHONE FUNCTIONS DURING A PHONE CALL

Call Waiting/ Call Hold

1. **Hold:** Place a call on hold by pressing the “HOLD” button.
2. **Resume:** Resume call by pressing the corresponding blinking LINE.
3. **Multiple Calls:** Automatically place ACTIVE call on “HOLD” by selecting another available LINE to place or receive another call. Call Waiting tone (stutter tone) audible when line is in use.

Mute

1. Press the MUTE button to enable/disable muting the microphone.
2. The “Line Status Indicator” will show “LINEx: SPEAKING” or “LINEx: MUTE” to indicate whether the microphone is muted.

Call Transfer

GXP21xx supports both *Blind* and *Attended* transfer:

1. **Blind Transfer:** Press “TRANSFER” button, then dial the number and press the “SEND” button to complete transfer of active call.
2. **Attended Transfer:** Press “LINEx” button to make a call and automatically place the ACTIVE LINE on HOLD. Once the call is established, press “TRANSFER” key then the LINE button of the waiting line to transfer the call. Hang up the phone call after “Transfer Successful” is displayed in the screen.

NOTE: To transfer calls across SIP domains, SIP service providers must support transfer across SIP domains. Blind transfer will usually use the primary account SIP profile.

5-Way Conferencing

GXP21xx can host conference calls and supports up to 5-way conference calling (Excludes GXP2100 which supports up to 4-way).

1. **Initiate a Conference Call:**
 - Establish a connection with two or more parties
 - Press CONF button
 - Choose the desired line to join the conference by pressing the corresponding LINE button
 - Repeat previous two steps for all other parties that would like to join the conference. This can be done at any time. However, if a new call comes in, the other calls will be placed on hold and the host will have to individually re-join the held lines back into the conference by repeating the previous two steps again
2. **Cancel Conference:** Canceling establishing conference call
 - If after pressing the “CONF” button, a user decides not to conference anyone, press CONF again or the original LINE button
 - This will resume two-way conversation
3. **End Conference:**
 - Press HOLD to end the conference call and put all parties on hold;
 - To speak with an individual party, select the corresponding blinking LINE.

NOTE: The party that starts the conference call has to remain in the conference for its entire duration, you can put the party on mute but it must remain in the conversation. Also, this is not applicable when the feature “Transfer on call hangup” is turned on.

Voice Messages (Message Waiting Indicator)

A blinking red MWI (Message Waiting Indicator) indicates a message is waiting. Press the Message button to retrieve the message. An IVR will prompt the user through the process of message retrieval. Press a specific LINE to retrieve messages for a specific line account.

NOTE:

- Each line has a separate voicemail account. Each account requires a voicemail portal number to be configured in the “Voicemail User ID” field.
- To check which line account has a message 1) press the message button (this always checks the primary account), 2) check each line for stutter tone or 3) check missed calls using the menu.

Busy Lamp Field

The Multi Purpose Key buttons can be configured for Busy Lamp Field function with a specified account. When BLF is configured on one of the multi-functional buttons, the Speed Dial function will work when that line is not in use. Call Pick Up is supported when user presses a flashing BLF key.

Shared Call Appearance (SCA)

The GXP21xx phone supports shared call appearance by Broadsoft standard. This feature allows members of the SCA group to shared SIP lines and provides status monitoring (idle, active, progressing, hold) of the shared line. When there is an incoming call designated for the SCA group, all of the members of the group will be notified of an incoming call and will be able to answer the call from the phone with the SCA extension registered.

All the users that belong to the same SCA group will be notified by visual indicator when a user seizes the line and places an outgoing call, and all the users of this group will not be able to seize the line until the line goes back to an idle state or when the call is placed on hold. (With the exception of when multiple call appearances are enabled on the server side).

In the middle of the conversation, there are two types of hold: Public Hold and Private Hold. When a member of the group places the call on public hold, the other users of the SCA group will be notified of this by the red-flashing button and they will be able to resume the call from their phone by pressing the line button. However, if this call is placed on private-hold, no other member of the SCA group will be able to resume that call.

To enable shared call appearance, the user would need to register the shared line account on one of the accounts on the phone. In addition, they would need to navigate to “Settings”->”Basic Settings” on the web UI and set the line to “Shared Line” with the corresponding account. If the user requires more shared call appearances, the user can configure multiple line buttons to be “shared line” buttons associated with the account.

CALL FEATURES

The GXP21xx supports traditional and advanced telephony features including caller ID, caller ID w/name, call forward/transfer/park/hold as well as intercom/paging and BLF.

Table 11: GXP21xx Call Features

Key	Call Features
*30	Block Caller ID (for all subsequent calls)
*31	Send Caller ID (for all subsequent calls)
*67	Block Caller ID (per call)
*82	Send Caller ID (per call)
*70	Disable Call Waiting (per Call)
*71	Enable Call Waiting (per Call)
*72	Unconditional Call Forward Dial “*72” for a dial tone. Dial the forwarding number followed by “#”. Wait for dial tone. LCD will display “Call FWD Activated”.
*73	Cancel Unconditional Call Forward: dial “*73” and get the dial tone, then hang up. LCD will display “Call FWD Activated”.
*90	Busy Call Forward Dial “*90” for a dial tone. Dial the forwarding number followed by “#”. Wait for a dial tone. Hang up.
*91	Cancel Busy Call Forward: dial “*91”. Wait for dial tone. Hang up.
*92	Delayed Call Forward Dial “*92” for a dial tone. Dial the forwarding number followed by “#”. Wait for a dial tone. Hang up. LCD will display “Call FWD Activated”.
*93	Cancel Delayed Call Forward Dial “*93” for a dial tone, then hang up.

CUSTOMIZED LCD SCREEN & XML

Grandstream GXP21xx Enterprise IP phone support both simple and advanced XML applications: 1) XML Custom Screen, 2) XML Downloadable Phonebook and 3) Advanced XML Survey Application. For more information on how to create a downloadable XML phonebook, creating a custom idle screen and/or reprogramming the soft-keys on GXP21xx, please visit our website at: <http://www.grandstream.com/support>

Configuration Guide

The GXP21xx can be configured in two ways. Firstly, using the Key Pad Configuration Menu on the phone; secondly, through embedded web-configuration menu.

CONFIGURATION VIA KEYPAD

To enter the MENU, press the round button. Navigate the menu by using the arrow keys: up/down and left/right. Press the OK button to confirm a menu selection. The phone automatically exits MENU mode with an incoming call, the phone is off-hook or the MENU mode if left idle for 20 seconds.


Press the MENU button to enter the key the Key Pad Menu. The menu options available are listed in table 12.

Table 12: Key Pad Configuration Menu

Item	Description
Call History	Displays histories of answered, dialed, missed, and transferred and forwarded calls
Status	Displays the network status, account status, software version, MAC-address and hardware version of the phone
Phone Book	Displays the phonebook and downloads phonebook XML
LDAP Directory	Displays the LDAP directory and downloads directory
Instant Messages	Goes to instant messages
Direct IP Call	Dials IP address for direct IP call
Preference	<p>Press <i>Menu</i> button to enter this sub menu including:</p> <ul style="list-style-type: none"> • Do NOT Disturb DND (Do Not Disturb) function could be turned on or off in the “Do Not Disturb” menu. • Ring Tone Choose different ring tones in the “Ring Tone” menu. • Ring Volume Press <i>Menu</i> button to hear the selected ring volume, press “←” or “→” to hear and adjust the ring tone volume. • LCD Contrast Press “←” or “→” to adjust the LCD contrast. • LCD Brightness Press “←” or “→” to adjust the LCD brightness for active/idle screen. • Download SCR XML The phone will download the custom idle screen if available. • Erase Custom SCR Custom idle screen will be erased and will be replaced with default logo. • Display Language You can choose English, Simplified Chinese, Traditional Chinese, Korean, Japanese, Italian, Spanish, French, German, Portuguese, Russian, Croatian, Hungarian, Polish, Slovenian which are built in the phone. Users could select Automatic for local language based on IP

	<p>location if available. Also, the phone will download secondary language if available.</p> <ul style="list-style-type: none"> • Time Settings <p>Press <i>Menu</i> button to choose the menu item Press “←” or follow the soft keys to return to the main menu</p>
Config	<p>Press <i>Menu</i> button to display the configuration selections:</p> <ul style="list-style-type: none"> • SIP To change SIP server settings for SIP accounts. • Upgrade In this menu setting regarding the firmware server and Config server can be changed. It also enables the user to make the phone attempt to download new firmware. • Factory Reset Key in the physical/MAC address on back of the phone. Press <i>Menu</i> button to reset FACTORY DEFAULT setting. Do not use Factory Reset unless you want to restore factory settings. • Layer 2 QoS Configure 802.1Q/VLAN Tag and priority value.
Factory Functions	<p>Press <i>Menu</i> to display the factory function items including</p> <ul style="list-style-type: none"> • Audio Loopback Speak into the handset. If you hear your voice in the handset, your audio works fine. Press <i>Menu</i> button to exit the mode • Diagnostic Mode All LEDs will light up. Press any key on the keypad, to display the button name in the LCD. Lift and put back the handset or press <i>Menu</i> button to exit the diagnostic mode. <p>Press “←” to return the main menu</p>
Network	To enable/disable DHCP; to setup IP-address, Net mask and Gateway address
Reboot	Press <i>Menu</i> button to reboot the device
Exit	Exit from this menu

FIGURE 2: KEYPAD GUI FLOW

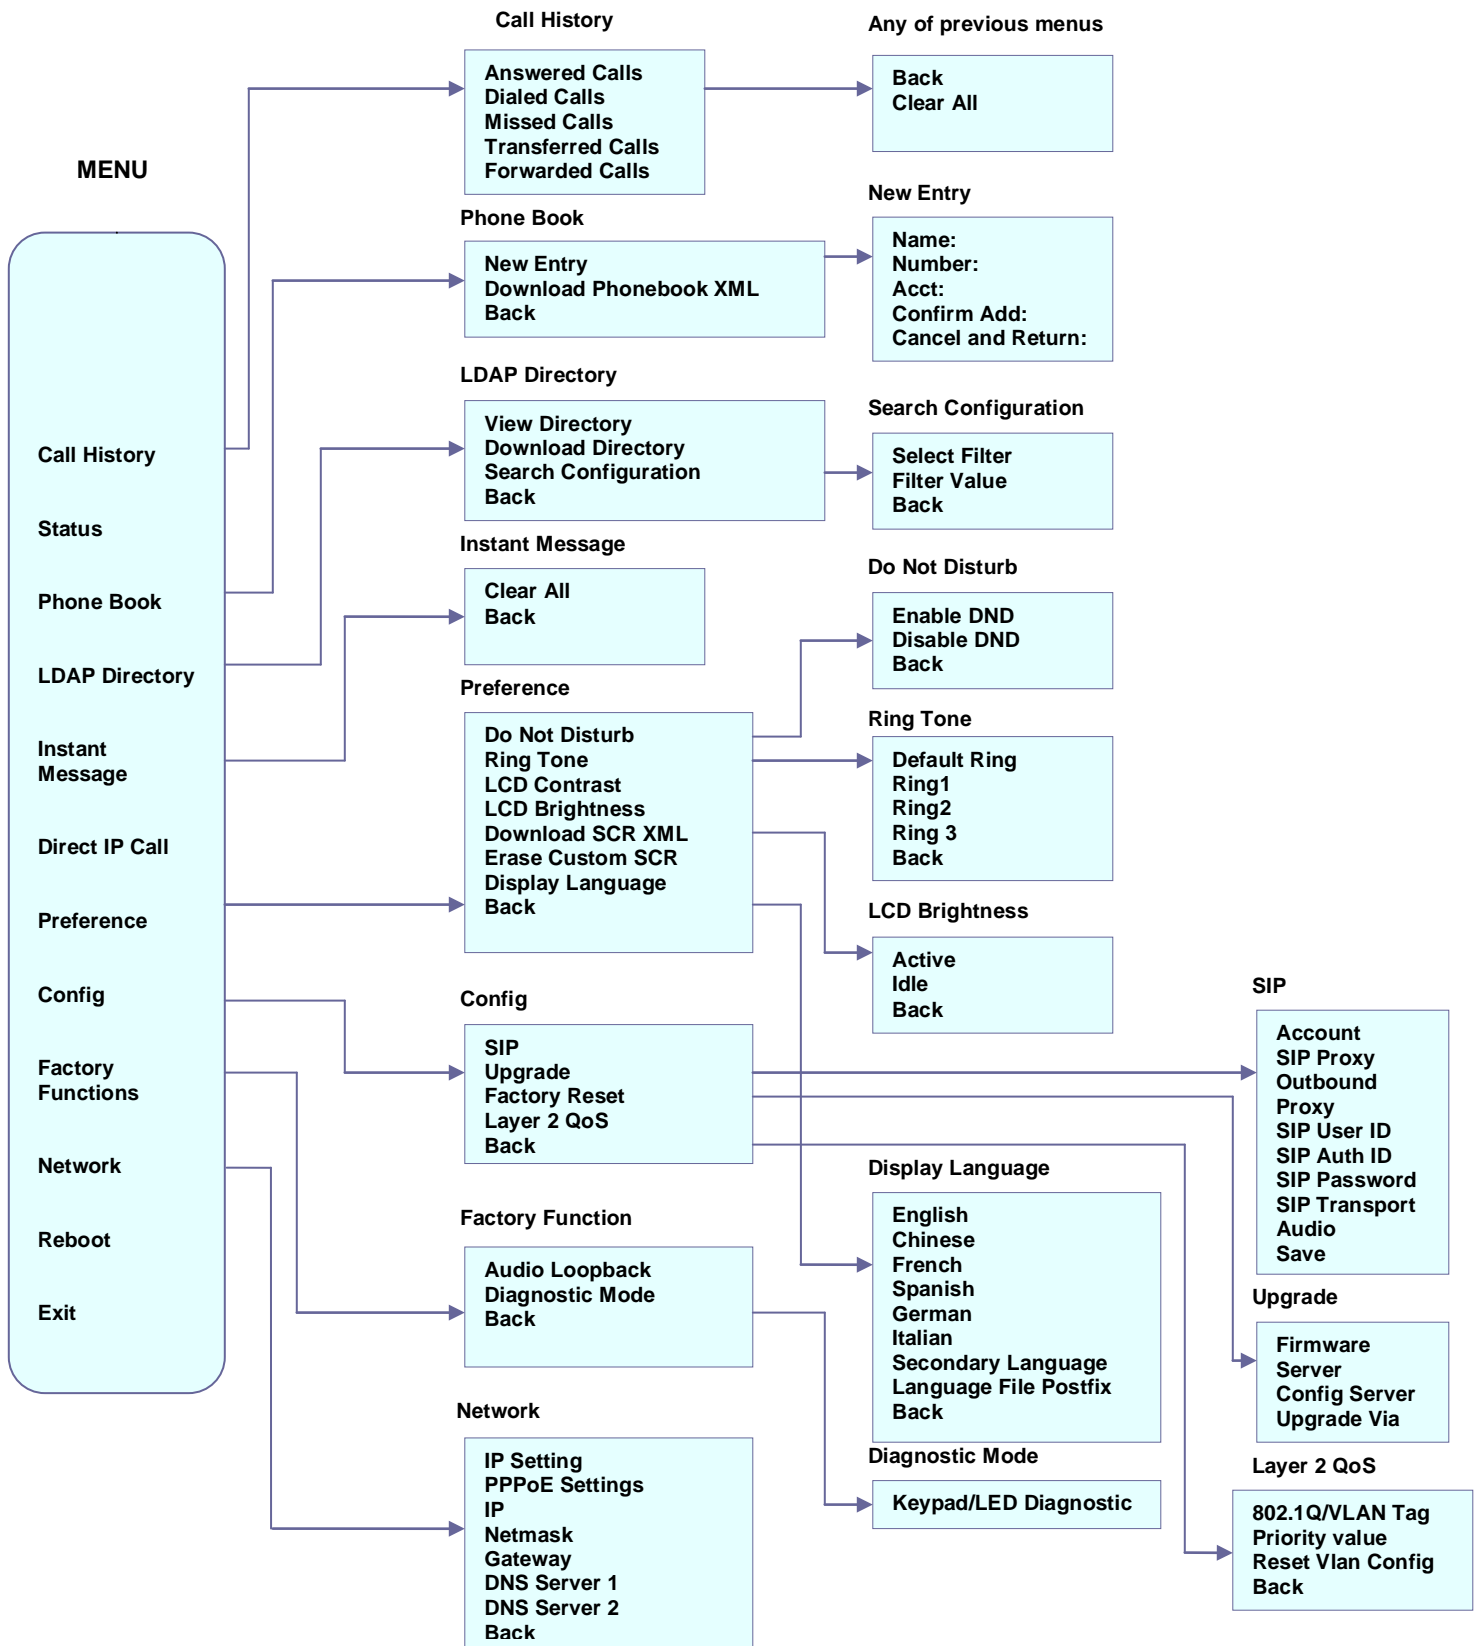

CONFIGURATION VIA WEB BROWSER

The GXP21xx embedded Web server responds to HTTP/HTTPS GET/POST requests. Embedded HTML pages allow a user to configure the IP phone through a Web browser such as Microsoft's IE or Mozilla Firefox, Google Chrome.

Access the Web Configuration Menu

To access the phone's Web Configuration Menu

- Connect the computer to the same network as the phone¹
- Make sure the phone is turned on and shows its IP-address
- Start a Web-browser on your computer
- Enter the phone's IP-address in the address bar of the browser²
- Enter the administrator's password to access the Web Configuration Menu³

¹ The Web-enabled computer has to be connected to the same sub-network as the phone. This can easily be done by connecting the computer to the same hub or switch as the phone is connected to. In absence of a hub/switch (or free ports on the hub/switch), please connect the computer directly to the phone using the PC-port on the phone.

² If the phone is properly connected to a working Internet connection, the phone will display its IP address. This address has the format: xxx.xxx.xxx.xxx, where xxx stands for a number from 0-255. You will need this number to access the Web Configuration Menu. **e.g.** if the phone shows 192.168.0.60, please use "http://192.168.0.60" in the address bar your browser.

³ The default administrator password is "admin"; the default end-user password is "123".

NOTE: When changing any settings, always SUBMIT them by pressing "UPDATE" button on the bottom of the page. Reboot the phone to have the changes take effect. If, after having submitted some changes, more settings have to be changed, press the menu option needed.

Definitions

This section will describe the options in the Web configuration user interface. As mentioned, a user can log in as an administrator or end-user.

Functions available for the end-user are:

- **Status:** Displays the network status, account statuses, software version and MAC address of the phone
- **Basic:** Basic preferences such as date and time settings, multi-purpose keys and LCD settings can be set here.

Additional functions available to administrators are:

- **Advanced Settings:** To set advanced network settings, codec settings and XML configuration settings.
- **Account X:** To configure each of the SIP accounts.
- **EXT X:** To configure setting on extension module (Not applicable on the GXP2100)

Table 13: Device Configuration - Status

MAC Address	The device ID, in HEXADECIMAL format.
IP Address	This field shows IP address of GXP21xx.
Product Model	This field contains the product model information.
Part Number	This field contains the product part number.
Software Version	<ul style="list-style-type: none"> • Program: This is the main firmware release number, which is always used for identifying the software (or firmware) system of the phone. • Boot: Booting code version number • Core: Core code version number • Base: Base code version number • DSP: DSP code version number • Aux: Aux code version number
System Up Time	This field shows system up time since the last reboot.
System Time	This field shows the current time on the phone system.
Registered	Indicates whether accounts are registered to the related SIP server.
PPPoE Link Up	Indicates whether the PPPoE connection is enabled (connected to a modem).
Service Status	<ul style="list-style-type: none"> • GUI: shows the GUI status: running or stopped • Phone: shows the phone status: running or stopped
Core Dump	Download core dump file for troubleshooting when necessary.

Table 14: Device Configuration – Settings/Basic Settings

End User Password	This contains the password to access the Web Configuration Menu. This field is <u>case sensitive</u> with a maximum length of 25 characters.
IP Address	<p>The GXP21xx operates in two modes:</p> <ol style="list-style-type: none"> 1. DHCP mode: all the field values for the Static IP mode are not used (even though they are still saved in the Flash memory.) The GXP21xx acquires its IP address from the first DHCP server it discovers on its LAN. The DHCP option is reserved for NAT router mode. To use the PPPoE feature, set the PPPoE account settings. The GXP21xx establishes a PPPoE session if any of the PPPoE fields is set. 2. PPPoE mode: configure all of the following fields: PPPoE account ID, PPPoE password and PPPoE service name. 3. Static IP mode: configure all of the following fields: IP address, Subnet Mask, Default Router IP address, DNS Server 1 (primary), DNS Server 2 (secondary). These fields are set to zero by default.

802.1x Mode	<p>This option allows the user to enable/disable 802.1x mode on the phone. The default value is disabled. To enable 802.1x mode, this field should be set to EAP-MD5. Once enabled, the user would be required to enter the following information below to be authenticated on the network:</p> <ul style="list-style-type: none"> • Identity • MD5 Password
Line Keys x	<p>This allows the user to configure the account mapped to each line key, as well as enabling SCA (Shared Call Appearance) for the line. Options available for Key Mode are :</p> <ol style="list-style-type: none"> 1. Line 2. Shared Line
Multi Purpose Key X	<p>These options are used to assign a function to the corresponding multi purpose key. Options available are:</p> <ol style="list-style-type: none"> 1. Speed Dial. 2. BLF (Busy Lamp Field). This option has to be supported on the PBX and it indicates the status of the extension. The three possible states are idle (green), busy (red), ringing (blinking red). 3. Presence Watcher. This option has to be supported by a presence server and it is tied to the “Do not disturb” status of the phone. 4. Eventlist BLF. This option is similar to the BLF option but in this case the PBX collects the information from the phones and sends it out in one single notify message. PBX has to support this feature. <p>Each function is connected to one of the accounts and has a target username and user ID.</p>
Time Zone	<p>This parameter controls the date/time display according to the specified time zone. If “Allow DHCP Option 2 to override Time Zone setting” is checked, the time zone will be overridden by the DHCP server.</p>
Self-Defined Time Zone	<p>This parameter allows the users to define their own time zone. The syntax is: std offset dst [offset], start [/time], end [/time] Default is set to: MTZ+6MDT+5,M3.2.0,M11.1.0 MTZ+6MDT+5, This indicates a time zone with 6 hours offset with 1 hour ahead which is U.S central time. If it is positive (+) if the local time zone is west of the Prime Meridian (A.K.A: International or Greenwich Meridian) and negative (-) if it is east. M3.2.0,M11.1.0 The 1st number indicates Month: 1,2,3..., 12 (for Jan, Feb, ..., Dec) The 2nd number indicates the nth iteration of the weekday: (1st Sunday, 3rd Tuesday...) The 3rd number indicates weekday: 0,1,2,...,6(for Sun, Mon, Tues,...,Sat) Therefore, this example is the DST which starts from the second Sunday of March to the 1st Sunday of November.</p>

Weather Update	<p>By default, “Enable Weather Update:” is set to “Yes”. If set to “No”, weather information will not display on the phone.</p> <p>Settings to customize the display of weather via:</p> <ul style="list-style-type: none"> • City Code – Enter city code • Update Interval – Refresh time in minutes • Degree Unit – Select Automatic, Fahrenheit or Celsius <p>Weather information is displayed on GXP21xx LCD when “Enable Weather Update” is set to “Yes” and pressing the “SwitchSCR” soft-key once.</p>
Stock Update	<p>By default, “Enable Stock Update:” is set to “Yes”. If set to “No”, stock information will not display on the phone.</p> <p>Settings to customize the display of stock via:</p> <ul style="list-style-type: none"> • Stock Code – Enter stock code <p>Stock information is displayed in GXP21xx LCD when “Enable Stock Update” is set to “Yes” and pressing the “SwitchSCR” soft-key twice.</p>
Currency Update	<p>By default, “Enable Currency Update:” is set to “Yes”. If set to “No”, currency information will not display on the phone.</p> <p>Settings to customize the display of currency via:</p> <ul style="list-style-type: none"> • Currency Code – Enter currency code <p>Currency information (foreign currencies to US dollar) is displayed in GXP21xx LCD when “Enable Currency Update” is set to “Yes” and pressing the “SwitchSCR” soft-key three times.</p>
LCD Backlight Brightness	Set the LCD brightness level for idle state and active state. Range from 0 to 8 where 0 means off and 8 means the brightest.
LCD Contrast	Set LCD contrast. Range from 0 to 20.
Time Display Format	LCD time display in 12 hour or 24 hour format.
Disable in-call DTMF display	Default is “No”. This field is used to hide the keypad input during a call.
Disable Missed Call Backlight	Default is “No”. By default, LCD backlight will light up whenever there is a missed call.
HEADSET Key Mode	<p>Default Mode:</p> <ul style="list-style-type: none"> - Toggle to Headset when using Speaker/Handset - Dial, pick up call or hang up call using Headset <p>Toggle Headset/Speaker:</p> <ul style="list-style-type: none"> - toggle between using Headset and using Speaker
Headset TX gain (dB)	Set headset TX gain to -6, 0 or +6. Default is 0 db.
Headset RX gain (dB)	Set headset RX gain to -6, 0 or +6. Default is 0 db.

Advanced User configuration includes not only the end user configuration, but also advanced configuration such as SIP configuration, Codec selection, NAT Traversal Setting and other miscellaneous configuration.

Table 15: Device Configuration – Settings /Advanced Settings

Admin Password	Administrator password. Only the administrator can access the “Advanced Settings” and “Account Settings” page. Password field is purposely blank for security reasons after clicking update and saved. The maximum password length is 25 characters.
Layer 3 QoS	This field defines the layer 3 QoS parameter. It is the value used for IP Precedence or Diff-Serv or MPLS. Default value is 12.
Layer 2 QoS	This contains the value used for layer 2 802.1Q/VLAN tag and 802.1p priority value. Default setting is 0.
Local RTP port	This parameter defines the local RTP-RTCP port pair used to listen and transmit. It is the base RTP port for channel 0. When configured, channel 0 will use this port _value for RTP and the port_value+1 for its RTCP; channel 1 will use port_value+2 for RTP and port_value+3 for its RTCP. Local RTP port ranges from 1024 to 65400 and must be even. The default value is 5004.
Use Random Port	This parameter, when set to “Yes”, will force random generation of both the local SIP and RTP ports. This is usually necessary when multiple GXPs are behind the same NAT. Default is “No”.
Keep-alive interval	This parameter specifies how often the GXP21xx sends a blank UDP packet to the SIP server in order to keep the “hole” on the NAT open. Default is 20 seconds.
Use NAT IP	NAT IP address used in SIP/SDP message. Default is blank.
STUN Server	IP address or Domain name of the STUN server. STUN resolution result will display in the STATUS page of the Web UI.
Firmware Upgrade and Provisioning	<p>Allows the user to select the following options for firmware upgrade:</p> <ul style="list-style-type: none"> • Always Check for New Firmware • Check New Firmware only when F/W pre/suffix changes • Always Skip the Firmware Check. <p>Firmware upgrade may take up to 10 minutes depending on network environment. Do not interrupt the firmware upgrading process.</p> <p>Note: Grandstream strongly recommends that the user upgrade firmware locally in a LAN environment if using TFTP to upgrade. Please DO NOT interrupt the upgrade process (especially the power supply) as this will damage the device.</p>
XML Config File Password	The password used for encrypting the XML configuration file using OpenSSL. This is required for the phone to decrypt the encrypted XML configuration file.
HTTP/HTTPS User Name	The user name for the HTTP/HTTPS server.
HTTP/HTTPS Password	The password for the HTTP/HTTPS server.

Upgrade Via	This field allows the user to choose the firmware upgrade method: TFTP, HTTP or HTTPS.
Firmware Server Path	Defines the server path for the firmware server. It can be different from the Configuration server which is used for provisioning.
Config Server Path	Defines the server path for provisioning; it can be different from the firmware server.
Firmware File Prefix/Postfix	Default is blank. If configured, GXP21xx will request the firmware file with the prefix/postfix and only the firmware with the matching encrypted prefix will be downloaded and flashed into the phone. This setting is useful for ITSPs. End user should keep it blank.
Config File Prefix/Postfix	Default is blank. If configured, GXP21xx will request the config file with the prefix/postfix and only the file with the matching encrypted prefix will be downloaded and flashed into the phone. This setting is useful for ITSPs. End user should keep it blank.
Allow DHCP Option 43 and Option 66 to override server	Default is "Yes". This allows device gets provisioned from the server automatically.
Automatic Upgrade	This function is used by ITSP. End user should NOT touch these parameters. Default is "No". Choose "Yes" to enable automatic HTTP upgrade and provisioning. In "Check for upgrade every" field, enter the number of minutes to check the HTTP server for firmware upgrade or configuration changes. When set to "No", the phone will only perform HTTP upgrade and configuration check once at boot up.
Authenticate Conf File	Default is "No". If set to "Yes", configuration file would be authenticated before acceptance. End user should use default setting.
Enable TR-069	Default is "No".
ACS URL	URL for TR-069 Auto Configuration Servers (ACS).
TR-069 Username	Enter username for TR-069.
TR-069 Password	Enter password for TR-069.
Save Credentials	Save TR-069 credentials. Default is "No".
Auto Login	Auto Login TR-069 account. Default is "No".
Periodic Inform Enable	Enable periodic inform. Default is "No".
Periodic Inform Interval	When enabling periodic inform, set up the periodic inform interval.
Connection Request Username	Enter the connection request username.
Connection Request Password	Enter the connection request password.
Authentication Method	Select the authentication method among "No authentication", "Basic" or Digest.

Connection Request Port	Enter the connection request port.
Phonebook XML Download	Selects the file download mode for the download server. Users can choose from TFTP/HTTP/No.
Phonebook XML Server Path	The URL/IP address of the phonebook download server.
Phonebook Download Interval	The interval at which the phonebook will be downloaded from the download server (in Minutes). The default setting is 0.
Remove Manually-edited entries on Downloads	If set to "Yes", the phone will remove the manually-edited entries in the old phonebook list before downloading the new file. The default setting is set to "Yes".
LDAP Directory	IP address or domain name of LDAP script server.
Idle Screen XML Download	Enable XML Idle Screen download via TFTP or HTTP. Select whether to "Use Custom Filename" or not, and define the "XML server path".
Download Screen XML At Boot-up:	The phone will download the idle screen xml file if set to "Yes". The default setting is "No".
Use custom filename:	The phone will use custom filename specified in XML server path if set to "Yes". The default setting is "No".
Idle Screen XML Server Path:	Specify the idle screen XML server path.
XML Application	Server path: enter server path for XML application. Softkey Label: define the softkey label for the XML application.
Offhook Auto Dial	To configure a User ID/extension to dial automatically when the phone is taken offhook.
Syslog Server	The IP address or URL of System log server. This feature is especially useful for ITSPs.

Syslog Level	<p>Select the ATA to report the log level. Default is NONE. The level is one of DEBUG, INFO, WARNING or ERROR. Syslog messages are sent based on the following events:</p> <ul style="list-style-type: none"> • product model/version on boot up (INFO level) • NAT related info (INFO level) • sent or received SIP message (DEBUG level) • SIP message summary (INFO level) • inbound and outbound calls (INFO level) • registration status change (INFO level) • negotiated codec (INFO level) • Ethernet link up (INFO level) • SLIC chip exception (WARNING and ERROR levels) • memory exception (ERROR level) <p>The Syslog uses USER facility. In addition to standard Syslog payload, it contains the following components: <i>GS_LOG: [device MAC address][error code] error message.</i> <i>For example:</i> May 19 02:40:38 192.168.1.14 GS_LOG: [00:0b:82:00:a1:be][000]. Ethernet link is up.</p>
Send SIP Log	<p>When setting the “Yes”, phone will send out SIP Log to syslog server. Default setting is “No”.</p>
NTP server	<p>This parameter defines the URI or IP address of the NTP (Network Time Protocol) server. It is used to display the current date/time.</p>
Allow DHCP Option 42 to override NTP server	<p>Default is “Yes”. This allows device gets provisioned for DHCP Option 42 from the server automatically.</p>
SSL Certificate	<p>This defines the SSL certificate needed to access certain websites.</p>
SSL Private Key	<p>This defines the SSL Private key.</p>
SSL Private Key Password	<p>This defines the SSL private key password.</p>
Distinctive Ring Tone	<p>Caller ID must be configured. Select a Distinctive Ring Tone 1 through 3 for a particular Caller ID. The GXP21xx will ONLY use selected ring tones for particular Caller IDs. For all other calls, the GXP21xx will use System Ring Tone. When selected and no Caller ID is configured, the selected ring tone will be used for all incoming calls.</p>
System Ring Tone	<p>System ring tone. Default is North American standard. Adjust system ring tone frequencies and cadences based on local telecom standard.</p>

Call Progress Tones	<p>Using these settings, users can configure ring or tone frequencies based on parameters from local telecom. By default, they are set to North American standard. Frequencies should be configured with known values to avoid uncomfortable high pitch sounds.</p> <p>Syntax: f1=val,f2=val[,c=on1/off1[-on2/off2[-on3/off3]]]; (Frequencies are in Hz and cadence on and off are in 10ms) ON is the period of ringing (“On time” in “ms”) while OFF is the period of silence. In order to set a continuous ring, OFF should be zero. Otherwise it will ring ON ms and a pause of OFF ms and then repeat the pattern. Up to three cadences are supported.</p>
Intercom User ID	Configure intercom user ID when intercom is used.
Disable Call Waiting	Default is “No”. If set to “Yes”, the call waiting feature will be disabled.
Disable Call Waiting Tone	Default is “No”. If set to “Yes”, the call waiting tone will be disabled.
Disable Direct IP Calls	Default is “No”. If set to “Yes”, direct IP calls will be disabled.
Use Quick IP Call Mode	<p>Dial an IP address under the same LAN/VPN segment by entering the last octet in the IP address.</p> <p>In the Advanced Settings page there is an option “Use Quick IP-call mode”. Default setting is “No”. When set to “Yes”, and #XXX is dialed, where X is 0-9 and XXX <=255, phone will make direct IP call to aaa.bbb.ccc.XXX where aaa.bbb.ccc comes from the local IP address REGARDLESS of subnet mask.</p> <p>#XX or #X are also valid so leading 0 is not required (but OK). See Quick IP Call Mode for details.</p>
Disable Conference	Default is “No”. If set to “Yes”, conference will be disabled.
Enable MPK Sending DTMF	Default is No. If set to “Yes”, Multi-Purpose keys can be sent as DTMF.
Disable DND Button	Default is “No”. If set to “Yes”, the “DND” button on keypad will be disabled.
Disable Transfer	Default is “No”. If set to “Yes”, transfer will be disabled.
Auto-Attended Transfer	Default is “No”. If set to “Yes”, the phone will use attended transfer by default.
Configuration via Keypad Menu	<p>Configures the access control of configurations via the phone keypad menu. There are three modes:</p> <ul style="list-style-type: none"> • Unrestricted • Basic Settings Only • Constraint Mode

Display Language	<p>Allows user to choose preferred display language in web UI and key pad UI. Currently, the phone supports these languages: English, Simplified Chinese, Traditional Chinese, Korean, Japanese, Italian, Spanish, French, German, Portuguese, Russian, Croatian, Hungarian, Polish and Slovenian.</p> <p>Note: The “Automatic” setting in language refers to Grandstream’s IP2Location client which when connected to Internet would attempt to lookup a database (driven by Grandstream) with the IP address for its geographical location.</p> <p>Language file postfix allows the language file to have different postfixes so the phone can request a particular file. It will append an underscore "_" plus the string in the language file postfix.</p> <p>The default language file name is "gxp.txt". If the field “Language File postfix” has "NL" string in it, then the phone will request "gxp_NL.txt" instead of "gxp.txt".</p> <p>User can only load one secondary language. Supported downloadable language: Czech, Dutch, Estonian, French, German, Italian, Polish, Portuguese, Slovak, Slovenian and Spanish.</p> <p>How to set up Download Language: This is similar to updating firmware in your local network environment.</p> <ol style="list-style-type: none"> 1. Get the language file gxp.txt ready. Make sure the file is using UTF-8 encoding. 2. Copy gxp.txt to the firmware server directory using your local TFTP or HTTP server. 3. Access the advanced settings of the Web GUI, set “Display Language” to “Download Language” and enter the server path in Firmware Server Path. Select TFTP or HTTP for firmware upgrade. 4. Update and reboot the phone.
-------------------------	---

GXP21xx has up to six line appearances, each with an independent SIP account. Each SIP account requires its own configuration page. Their configurations are identical.

Table 16: SIP Account Settings

Account Active	This field indicates whether the account is active. The default value is “Yes”.
Account Name	The name associated with each account - displayed on LCD.
SIP Server	SIP Server’s IP address or Domain name provided by VoIP service provider.
Secondary SIP Server	This field allows administrator to configure a backup SIP Server.
Outbound Proxy	IP address or Domain name of Outbound Proxy, Media Gateway, or Session Border Controller. Used for firewall or NAT penetration in different network environment. If the system detects symmetric NAT, STUN will not work. ONLY outbound proxy can provide solution for symmetric NAT.
SIP User ID	User account information provided by VoIP service provider (ITSP); either an actual phone number or formatted like one.

Authenticate ID	SIP service subscriber's Authenticate ID used for authentication. It can be identical to or different from SIP User ID.
Authenticate Password	SIP service subscriber's account password for GXP21xx to register to (SIP) servers of ITSP.
Name	SIP service subscriber's name that is used for Caller ID display.
DNS Mode	The default is set to A Record. If user wishes to locate the server by DNS SRV, the user may select SRV or NATPTR/SRV. When "Use Configured IP" option is selected, if SIP server is configured as domain name, phone will not send DNS query, but use "Primary IP" or "Secondary IP" to send sip message if at least one of them are not empty.
Primary IP	This option applies only if "Use Configured IP" is selected, the phone will send DNS query to the Primary IP. Insert IP address here.
Backup IP 1	Insert the first back up IP here.
Backup IP 2	Insert the second back up IP here.
SIP Registration	This parameter controls sending REGISTER messages to the proxy server. The default setting is "Yes".
Unregister on Reboot	Default is "No". If set to "Yes", the SIP user's registration information will be cleared on reboot.
Register Expiration	This parameter allows user to specify the time frequency (in minutes) that GXP21xx refreshes its registration with the specified registrar. The default interval is 60 minutes. The maximum interval is 65,535 minutes (about 45 days).
Local SIP Port	This parameter defines the local SIP port used to listen and transmit. The default value for Account 1 is 5060. It is 5062, 5064, 5066 for Account 2, Account 3 and Account 4 respectively.
SIP Registration Failure Retry Wait Time	Retry registration if the process failed. Default is 20 seconds.
SIP T1 Timeout	RFC 3261 SIP T1 timer. Default is 0.5 second.
SIP T2 Interval	RFC 3261 SIP T2 timer. Default is 4 seconds.
SIP Transport	Choose SIP Transport between UDP and TCP. Default is UDP.
Check Domain Certificate	Enable to check the domain certificate. Default is "No".
Remove OBP from Route	The SIP Extension notifies the SIP server that it is behind a NAT/firewall.
Validate Incoming Messages	This configuration selects whether or not the incoming messages should be validated.
Support SIP Instance ID	Selects whether or not SIP Instance ID is supported.

NAT Traversal	<p>This parameter activates the NAT traversal mechanism. It has options: No, STUN, Keep-Alive, UPnP, Auto, VPN.</p> <p>If selecting STUN and a STUN server is also specified, the phone performs according to the STUN client specification. Using this mode, the embedded STUN client detects if and what type of NAT/Firewall configuration is used. If the detected NAT is a Full Cone, Restricted Cone, or a Port-Restricted Cone, the phone will use its mapped public IP address and port in all of its SIP and SDP messages.</p> <p>If selecting Keep-Alive with no specified STUN server, the GXP21xx will periodically (every 20 seconds or so) send a blank UDP packet (with no payload data) to the SIP server to keep the “hole” on the NAT open.</p>
SUBSCRIBE for MWI	<p>Default is “No”. When set to “Yes” a SUBSCRIBE for Message Waiting Indication will be sent periodically.</p>
PUBLISH for Presence	<p>Enable Presence feature.</p>
Proxy-Require	<p>SIP Extension to notify SIP server that the unit is behind the NAT/Firewall.</p>
Voice Mail UserID	<p>When configured, user can access messages by pressing “MSG” button. This ID is usually the VM portal access number.</p>
Send DTMF	<p>This parameter specifies the mechanism to transmit DTMF digit. There are 3 supported modes: in audio which means DTMF is combined in audio signal (not very reliable with low-bit-rate codec), via RTP (RFC2833), or via SIP INFO.</p>
DTMF Payload Type	<p>Sends DTMF using RFC2833. The default is 101.</p>
Early Dial	<p>Default is “No”. Use only if proxy supports 484 responses.</p>
Dial Plan Prefix	<p>Sets the prefix added to each dialed number.</p>

<p>Dial Plan</p>	<p>Dial Plan Rules:</p> <ol style="list-style-type: none"> 1. Accepted Digits: 1,2,3,4,5,6,7,8,9,0 , * , #, A,a,B,b,C,c,D,d 2. Grammar: x - any digit from 0-9; <ol style="list-style-type: none"> a) xx+ - at least 2 digit numbers b) xx. - only 2 digit numbers c) ^ - exclude d) [3-5] - any digit of 3, 4, or 5 e) [147] - any digit of 1, 4, or 7 f) <2=011> - replace digit 2 with 011 when dialing g) - the OR operand <ul style="list-style-type: none"> • Example 1: {[369]11 1617xxxxxxx} <p>Allow 311, 611, and 911 or any 10 digit numbers with leading digits 1617</p> <ul style="list-style-type: none"> • Example 2: {^1900x+ <=1617>xxxxxxx} <p>Block any number of leading digits 1900 or add prefix 1617 for any dialed 7 digit numbers</p> <ul style="list-style-type: none"> • Example 3: {1xx[2-9]xxxxxx <2=011>x+} <p>Allows any number with leading digit 1 followed by a 3 digit number, followed by any number between 2 and 9, followed by any 7 digit number OR Allows any length of numbers with leading digit 2, replacing the 2 with 011 when dialed.</p> <ol style="list-style-type: none"> 3. Default: Outgoing – {x+} <p>Allow any length of numbers.</p> <p>Example of a simple dial plan used in a Home/Office in the US: { ^1900x. <=1617>[2-9]xxxxxx 1[2-9]xx[2-9]xxxxxx 011[2-9]x. [3469]11 }</p> <p>Explanation of example rule (reading from left to right):</p> <ul style="list-style-type: none"> • ^1900x. - prevents dialing any number started with 1900 • <=1617>[2-9]xxxxxx - allows dialing to local area code (617) numbers by dialing 7 numbers and 1617 area code will be added automatically • 1[2-9]xx[2-9]xxxxxx - allows dialing to any US/Canada Number with 11 digits length • 011[2-9]x. - allows international calls starting with 011 • [3469]11 - allow dialing special and emergency numbers 311, 411, 611 and 911 <p>Note: In some cases where the user wishes to dial strings such as *123 to activate voice mail or other applications provided by their service provider, the * should be predefined inside the dial plan feature. An example dial plan will be: { *x+ } which allows the user to dial * followed by any length of numbers.</p>
<p>Delayed Call Forward Wait Time</p>	<p>Time waited before the call is forward to a number or VM. Default is 20 seconds.</p>
<p>Enable Call Features</p>	<p>Default is “Yes”. If set to “No”, Call transfer, Call Forwarding & Do-Not-Disturb are supported locally provided ITSP support those features. In addition, “ForwardAll” softkey will be hidden if call feature code is disabled for Account 1.</p>
<p>Call Log</p>	<p>User can choose to disable Call Log and what kind of calls to log.</p>

Session Expiration	<p>The SIP Session Timer extension enables SIP sessions to be periodically “refreshed” via a SIP request (UPDATE, or re-INVITE. Once the session interval expires, if there is no refresh via a UPDATE or re-INVITE message, the session is terminated.</p> <p>Session Expiration is the time (in seconds) at which the session is considered timed out, provided no successful session refresh transaction occurs beforehand. The default value is 180 seconds.</p>
Min-SE	Defines the minimum session expiration (in seconds). Default is 90 seconds .
Caller Request Timer	If set to “Yes”, the phone will use session timer when it makes outbound calls if remote party supports session timer.
Callee Request Timer	If selecting “Yes”, the phone will use session timer when it receives inbound calls with session timer request.
Force Timer	If set to “Yes”, the phone will use session timer even if the remote party does not support this feature. If set to “No”, the session timer is enabled only when the remote party supports this feature. To turn off Session Timer, select “No” for Caller Request Timer, Callee Request Timer, and Force Timer.
UAC Specify Refresher	As a Caller, select UAC to use the phone as the refresher, or UAS to use the Callee or proxy server as the refresher.
UAS Specify Refresher	As a Callee, select UAC to use caller or proxy server as the refresher, or UAS to use the phone as the refresher.
Force INVITE	Session Timer can be refreshed using INVITE method or UPDATE method. Select “Yes” to use INVITE method to refresh the session timer.
Enable 100rel	PRACK (Provisional Acknowledgment) method enables reliability to SIP provisional responses (1xx series). This is required to support PSTN inter-networking.
Account Ring Tone	<p>There are 4 uniquely defined ring tones:</p> <ul style="list-style-type: none"> • One (1) System Ring Tone: when selected, all calls will ring with system ring tone. • Three (3) Customer Ring Tones: when selected, incoming calls from designated account will play selected ring tone.
Ring Timeout	Defines how long the phone will ring when receiving a call. Default is 60 seconds.
Send Anonymous	If this parameter is set to “Yes”, the “From” header in outgoing INVITE message will be set to anonymous, essentially blocking the Caller ID from displaying.
Anonymous Call Rejection	Default is “No”. If set to “Yes”, anonymous call will be rejected.
Auto Answer	Default is “No”. If set to “Yes”, GXP21xx will automatically switch on speaker to answer the incoming call. Set to Intercom/Paging mode, it will answer the call based on the SIP info header from the server.
Allow Auto Answer by Call-Info	If the Call-Info header contains answer-after=0, the call be answered automatically (so called paging mode).

Refer-To Use Target Contact	Default is “No”. If set to “Yes”, then for Attended Transfer, the “Refer-To” header uses the transferred target’s Contact header information.
Transfer on Conference Hangup	Defines whether or not the call is transferred to the other party if the initiator of the conference hangs up. Default setting is set to “No”.
Preferred Vocoder	GXP21xx supports up to 7 different Vocoder types including G.711(a/μ) (also known as PCMU/PCMA), G.723.1, G.729A/B, G.726-32, iLBC, G.722 (wide-band). Configure Vocoders in a preference list that is included with the same preference order in SDP message. Enter the first Vocoder in this list by choosing the appropriate option in “Choice 1”. Similarly, enter the last Vocoder in this list by choosing the appropriate option in “Choice 8”.
SRTP Mode	Enable SRTP mode based on selection. Default is “No”.
Symmetric RTP	Selects whether or not symmetric RTP is supported.
Silence Suppression	This controls the silence suppression/VAD feature of the audio codec G.723 and G.729. If set to “Yes”, when silence is detected, a small quantity of VAD packets (instead of audio packets) will be sent during the period of no talking. If set to “No”, this feature is disabled.
Voice Frames per TX	This field contains the number of voice frames to be transmitted in a single Ethernet packet (be advised the IS limit is based on the maximum size of Ethernet packet is 1500 byte (or 120kbps)). When setting this value, be aware of the requested packet time (ptime, used in SDP message) is a result of configuring this parameter. This parameter is associated with the <u>first</u> codec in the above codec Preference List or the actual used payload type negotiated between the 2 conversation parties at run time. <i>E.g.</i> , if the first codec is configured as G.723 and the “Voice Frames per TX” is set to 2, then the “ptime” value in the SDP message of an INVITE request will be <u>60ms</u> because each G.723 voice frame contains 30ms of audio. Similarly, if this field is set to 2 and the first codec is G.729 or G.711 or G.726, then the “ptime” value in the SDP message of an INVITE request will be <u>20ms</u> . If the configured voice frames per TX exceeds the maximum allowed value, the IP phone will use and save the maximum allowed value for the corresponding first codec choice. The maximum value for PCM is 10 (x10ms) frames; for G.726, it is 20 (x10ms) frames; for G.723, it is 32 (x30ms) frames; for G.729/G.728, 64 (x10ms) and 64 (x2.5ms) frames respectively. Please be careful when editing these parameters. Adjusting these parameters will also change the dynamic jitter buffer. The GXP21xx has a patent dynamic jitter buffer handling algorithm. The jitter buffer range is 20 ~ 200 ms. We recommend using the default settings provided. We do not recommend adjusting these parameters if you are an average user. Incorrect settings will affect the voice quality.
No Key Entry Timeout	Default is 4 seconds. After the timeout, the phone will send out the dialed number.

Use # as Dial Key	This parameter allows users to configure the “#” key as the “Send” (or “Dial”) key. If set to “Yes”, the “#” key will immediately send the call. In this case, this key is essentially equivalent to the “(Re)Dial” key. If set to “No”, the “#” key is included as part of the dial string.
G723 Rate	Encoding rate for G723 codec. By default, 6.3kbps rate is set.
G726-32 Packing Mode	Select “ITU” or “IETF” for G726-32 packing mode.
iLBC Frame Size	iLBC packet frame size. Default is 20ms. For Asterisk PBX, 30ms might be required.
iLBC Payload Type	Payload type for iLBC. Default value is 97. The valid range is between 96 and 127.
eventlist BLF URI	If the server supports this feature, user needs to configure an "eventlist BLF" URI on the service side (i.e.: BLF1006@myserver.com) On the GXP21xx, under Account page, fill in the ""eventlist BLF" field with the URI without the domain. (i.e.: BLF1006). Under Basic Settings, please select "eventlist BLF" in the Multi Purpose Key then choose account number, enter username and user id.
Special Feature	Default is Standard. Choose the selection to meet special requirements from Soft Switch vendors.

SAVING THE CONFIGURATION CHANGES

After the user makes a change to the configuration, press the “Update” button in the Configuration Menu. The web browser will then display a message window to confirm saved changes.

We recommend rebooting or powering cycle the IP phone after saving changes.

REBOOTING THE PHONE REMOTELY

Press the “Reboot” button at the bottom of the configuration menu to reboot the phone remotely. The web browser will then display a message window to confirm that reboot is underway. Wait 30 seconds to log in again.

Software Upgrade & Customization

Software (or firmware) upgrades are completed via either TFTP or HTTP. The corresponding configuration settings are in the ADVANCED SETTINGS configuration page.

FIRMWARE UPGRADE THROUGH TFTP/HTTP

To upgrade via TFTP or HTTP, select TFTP or HTTP upgrade method. “Upgrade Server” needs to be set to a valid URL of a HTTP server. Server name can be in either FQDN or IP address format. Here are examples of some valid URLs.

- firmware.mycompany.com:6688/Grandstream/1.2.3.5
- 72.172.83.110

There are two ways to set up the Upgrade Server to upgrade firmware: via Key Pad Menu or Web Configuration Interface.

Key Pad Menu

To configure the Upgrade Server via Key Pad Menu options, select “Config” from the Main Menu, then select “Upgrade”. Under this sub Menu, user can edit Upgrade Server in either an IP address format or FQDN format. Choose “Save and use TFTP” or “Save and use HTTP” to select upgrade method. Select “Reboot” from the Main Menu to reboot the phone.

Web Configuration Interface

To configure the Upgrade Server via the Web configuration interface, open the web browser. Enter the GXP21xx IP address. Enter the admin password to access the web configuration interface. In the ADVANCED SETTINGS page, enter the Upgrade Server’s IP address or FQDN in the “Firmware Server Path” field. Select TFTP or HTTP upgrade method. Update the change by clicking the “Update” button. “Reboot” or power cycle the phone to update the new firmware.

During this stage, the LCD will display the firmware file downloading process. Please do NOT disrupt or power down the unit. If a firmware upgrade fails for any reason (e.g., TFTP/HTTP server is not responding, there are no code image files available for upgrade, or checksum test fails, etc), the phone will stop the upgrading process and re-boot using the existing firmware/software.

Firmware upgrades take around 60 seconds in a controlled LAN or 5-10 minutes over the Internet. We recommend completing firmware upgrades in a controlled LAN environment whenever possible.

No Local TFTP/HTTP Server

For users who do not have a local TFTP/HTTP server, we provide a HTTP server on the public Internet for users to download the latest firmware upgrade automatically. Please check the Support/Download section of our website to obtain this HTTP server IP address: <http://www.grandstream.com/support/firmware>.

Alternatively, download and install a free TFTP or HTTP server to the LAN to perform firmware upgrades. A free Windows version TFTP server is available: <http://support.solarwinds.net/updates/New-customerFree.cfm>.

INSTRUCTIONS FOR LOCAL TFTP UPGRADE:

1. Unzip the file and put all of them under the root directory of the TFTP server.
2. The PC running the TFTP server and the GXP21xx should be in the same LAN segment.
3. Go to File -> Configure -> Security to change the TFTP server's default setting from "Receive Only" to "Transmit Only" for the firmware upgrade.
4. Start the TFTP server, in the phone's web configuration page
5. Configure the Firmware Server Path with the IP address of the PC
6. Update the change and reboot the unit

User can also choose to download the free HTTP server from <http://httpd.apache.org/> or use Microsoft IIS web server.

NOTE:

- When GXP21xx phone boots up, it will send TFTP or HTTP request to download configuration file "cfg000b82xxxxxx", where "000b82xxxxxx" is the MAC address of the GXP21xx phone. This file is for provisioning purpose. For normal TFTP or HTTP firmware upgrades, the following error messages in a TFTP or HTTP server log can be ignored: "*TFTP Error from [IP ADDRESS] requesting cfg000b82023dd4 : File does not exist.Configuration File Download*"

CONFIGURATION FILE DOWNLOAD

The GXP21xx can be configured via Web Interface as well as via Configuration File (binary or XML) through TFTP or HTTP/HTTPS. The "Config Server Path" is the TFTP or HTTP server path for the configuration file. It needs to be set to a valid URL, either in FQDN or IP address format. The "Config Server Path" can be the same or different from the "Firmware Server Path".

A configuration parameter is associated with each particular field in the web configuration page. A parameter consists of a Capital letter **P** and 2 to 4 digit numeric numbers, i.e., P2 is associated with "Admin Password" in the ADVANCED SETTINGS page. For a detailed parameter list, please refer to the corresponding configuration template of the firmware.

Once the GXP21xx boots up (or re-booted), it will request a configuration file named "cfgxxxxxxxxxxxx" followed by a request for configuration XML file named "cfgxxxxxxxxxxxx.xml", where "xxxxxxxxxxxx" is the MAC address of the device, i.e., "cfg000b820102ab". The configuration file name should be in lower cases.

For more details on XML provisioning, please refer to <http://www.grandstream.com/support>.

Managing Firmware and Configuration File Download

When "Automatic Upgrade" is set to "Yes", a Service Provider can use P193 (Auto Check Interval, in minutes, default and minimum is 60 minutes) to have the devices periodically check for upgrades at pre-scheduled time intervals. By defining different intervals in P193 for different devices, a Server Provider can manage and reduce the Firmware or Provisioning Server load at any given time.

Restore Factory Default Setting

WARNING: Restoring the Factory Default Setting will **delete** all configuration information of the phone. Please **backup** or **print** all the settings before you restoring factory default settings. We are not responsible for restoring lost parameters and cannot connect your device to your VoIP service provider.

INSTRUCTIONS FOR RESTORATION:

Step 1: Press “OK” button to bring up the keypad configuration menu, select “Config”, press “OK” to enter submenu, select “Factory Reset” (Please refer to Table 5-1 of keypad flow chart)

Step 2: Enter the MAC address printed on the bottom of the sticker. Please use the following mapping:

0-9: 0-9

A: 22 (press the “2” key twice, “A” will show on the LCD)

B: 222

C: 2222

D: 33 (press the “3” key twice, “D” will show on the LCD)

E: 333

F: 3333

Example: if the MAC address is 000**b**8200**e**395, it should be key in as “000**222**8200**333**395”.

NOTE: If there are digits like “22” in the MAC, you need to type “2” then press “->” right arrow key to move the cursor or wait for 4 seconds to continue to key in another “2”.

Step 3: Press the “OK” button to move the cursor to “OK”. Press “OK” button again to confirm. If the MAC address is correct, the phone will reboot. Otherwise, it will exit to previous keypad menu interface.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>