

iLuv[®]

Model : IMM173

Instruction Manual

INTRODUCTION

Congratulations on your purchase of the new iLuv® iMM173 for your iPod and/or iPhone. Designed specifically to work with iPod and/or iPhone, this product is uniquely designed with two docks to provide performance that brings out the best in your music. Please keep this manual for future reference.

- Powerful built-in speakers allow you to hear your music with depth and clarity
- Treble / Bass control
- Large display; easy to see
- Auxiliary line input for any audio devices with 3.5mm jack
- LCD dimmer level control (0-11 levels)

Features for your iPod / iPhone

- Two iPod docks let you charge up to two iPod* and/or iPhone at once
- Enjoy rich sound from your iPod / iPhone with jAura acoustic speaker technology
- Choose and play any one of two docked iPod / iPhone**
- Plays and charges your iPod / iPhone
- Integrated universal dock for your iPod / iPhone

Digital Dual Alarm Clock

- Digital clock display with dual alarm clock
- Easy to adjust DST (Daylight Saving Time) with a simple switch
- Wake to iPod / iPhone, FM radio, or buzzer
- Sleep to iPod / iPhone, FM radio

Radio

- FM stereo
- PLL tuning digital tuning technology
- Programmable presets for 8 radio stations

* Compatible with any iPod with dock connector (Excluding 1st, 2nd, and 3rd generation iPod)

** Only one dock supports iPhone

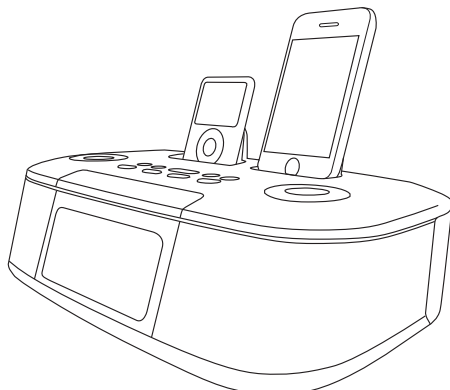 


TABLE OF CONTENTS

Getting Started

Power Source	3
Protect your Furniture	3
Installing the Remote Control Battery	4
Location of Controls on the Main Unit	5
Location of Controls on the Main Unit- continued	6
Location of Controls on the Remote Control	6
Location of Indications on the LCD Screen	7

Operational Instructions

Turning the System ON	8
Turning the System Off	8
Select Source	8
Radio Tuner	8
Using the iPod Function	9
Aux Mode	9
Adjusting the Volume	9
Setting the Clock using the Time Sync Function	10
Setting the Clock	10
DST (Daylight Saving Time)	11
Sleep Mode	11
Setting the Treble / Bass	11
Mute Function	11
Snooze Function	12
Dimmer setting	12
Setting the Alarm	12
Using the Radio	13
iPhone and iPod Operation	14
iPhone Function	15
Menu and Enter	15
Repeat	15
Shuffle	16
Both occupied	16
Maintenance	16

Troubleshooting Guide

User Safety Guide

19

 
GETTING STARTED

Power Source

- This system is designed to operate on AC100V~240V 60/50Hz house current only.
- Connecting this system to any other power source may cause damage to the system and such damage is not covered by your warranty.
- Main plug is used as the disconnect device, the disconnect device shall remain readily operable.

Note:

The system has an AC plug and will only fit into matching AC outlets. This is a safety feature to reduce the possibility of electric shock. If the plug will not fit in your AC outlets, you should have the outlet changed by a qualified, licensed electrician. Do not use an adapter to make the plug fit into your outlet. This defeats the safety feature and could expose you to electric shock.

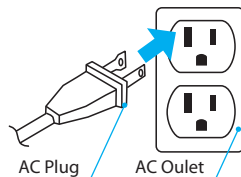

Protect your Furniture

 
This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

GETTING STARTED

Installing the Remote Control Battery

The remote control battery has been previously installed and ready for operation for the first time use. When the remote control stops functioning, replace the battery with a new one. To do so, locate the battery compartment and follow the steps below:


1. Slide out the battery holder from the remote control case.
2. Insert a "CR2025" 3V lithium battery making certain to follow the correct polarity. Observe the corresponding symbols (+/-).
3. Secure battery and push the battery holder back into the remote control until it is fully inserted.

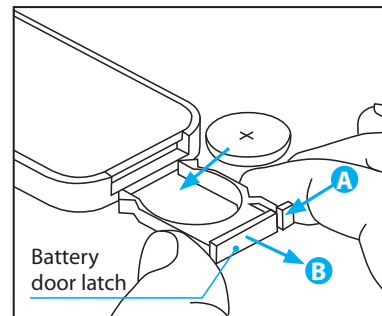

GETTING STARTED


Location of Controls on the Main Unit

 - VOLUME** Knob
- MODE** Button
- iPod Dock (L)
- SELECT/TIME SYNC** Button
- iPod/iPhone Dock (R)
- SET BASS/TREBLE TIME** Button
- SEARCH** Knob
- POWER** /AL OFF Button
- PRESET** Number (7- 8) button
- SLEEP** Button
- PRESET** Number (5 - 6) button
- PLAY/PAUSE (AUTO SCAN)** Button
- PRESET** Number (3 - 4) button
- ALARM 2** Button
- PRESET** Number (1- 2) button
- ALARM 1** Button

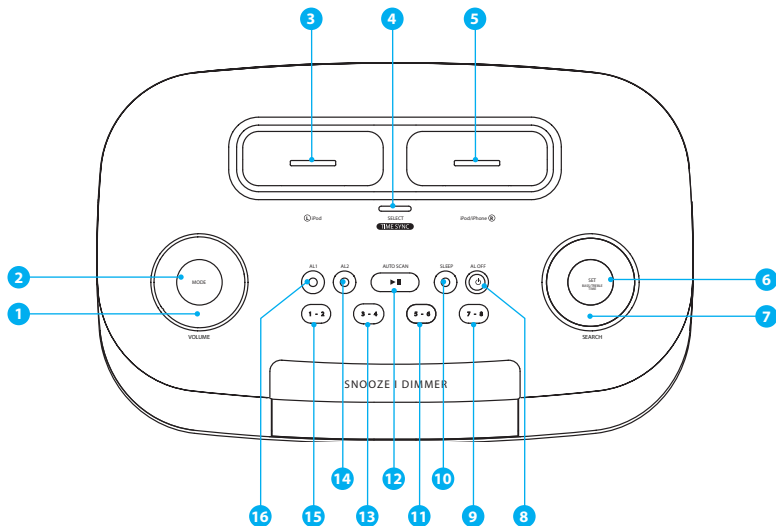


GETTING STARTED

 Location of Controls on the Main Unit - CONTINUED

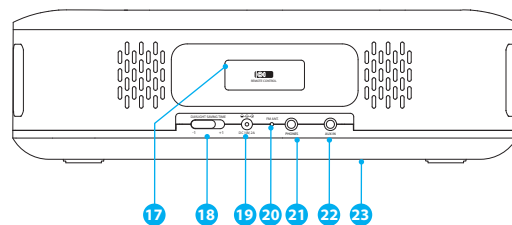

- REMOTE CONTROL** Holder
- DST** Switch [(-1)/(+1)]
- POWER** Jack
- FM ANTENNA** Jack
- HEADPHONE** Jack
- AUX IN** Jack
- Back up battery Compartment Cover

 
Location of Controls on the Remote Control

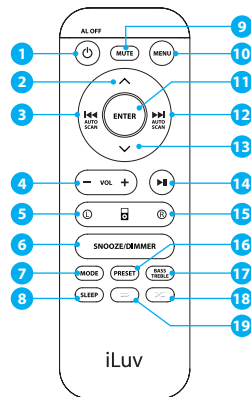

- POWER/AL OFF** Button
- UP** Button
- SKIP BACKWARD** /AUTO SCAN Button
- VOLUME +/-** Button
- iPod** Select Button
- SNOOZE/DIMMER** Button
- MODE** Button
- SLEEP** Button
- POWER/AL OFF** Button
- MUTE** Button
- ENTER** Button
- SKIP FORWARD** /AUTO SCAN Button
- DOWN** Button
- PLAY/PAUSE** Button
- iPod** Select Button
- PRESET** Button
- BASS TREBLE** Button
- SHUFFLE** Button
- REPEAT** Button

GETTING STARTED

 Location of Indications on the LCD Screen

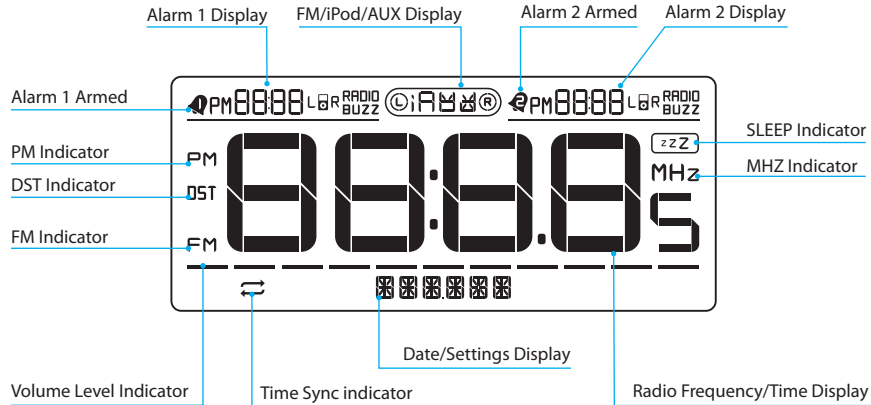

OPERATIONAL INSTRUCTIONS

Turning the System ON

In standby mode, press **POWER** /AL OFF Button on the unit or on the remote control to the last selected source.

Turning the System Off

In any source mode, press **POWER** /AL OFF button on the unit or on the remote control and the clock will appear on the display. Be aware that the dim, alarm setting will still be functional at standby mode.

To turn off alarm sound, press the POWER /AL OFF button on the unit or remote control.

Select Source

Press the **MODE** button on the unit or on remote control to select the source:

iPod → FM → AUX → iPod...

Radio Tuner

Press the **MODE** button on the unit or remote control until "FM" icon is displayed with the "FM" station appearing below it on the display.



OPERATIONAL INSTRUCTIONS

Using the iPod Function

When the iPod mode is selected, the “iPod” logo icon will show on the display. If authentication is successful the unit will automatically play after approximately **3 - 5** seconds.

 
While initializing, the LCD screen will display the word “WAIT” When completed, your iPod or iPhone will play back automatically.

NOTE:

Your iPhone can only playback and charge on the **iPod/iPhone® Dock**. If your iPhone is inserted in **iPod Dock**, the display on your iPhone LCD screen will read, **“This accessory is not made to work with iPhone.”**

Press **SELECT** button on the unit or **L, R** button on remote control to select **“iPod L”** or **“iPod R”**. When your selection is made **“iPod L”** or **“iPod R”** will show on the display.

When only one of two docks is occupied, the SELECT button will not function.

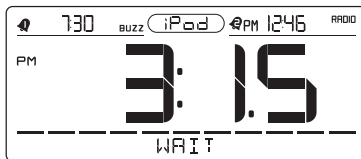

Aux Mode

When Aux mode is selected, the “Aux” icon will display. Use this mode to play audio devices through the 3.5mm jack.



Adjusting the Volume

Use the Volume knob to adjust the Volume. Display shows “VOL” and assigns a numerical value between 0 and 40 (40 is Max). For example: “VOL 23” may display current volume level. This volume level setting will be stored when the unit is power off. When the unit is powered on, the unit will return to this volume setting.

OPERATIONAL INSTRUCTIONS

Setting the Clock using the Time Sync Function

 
The easiest way to set the clock on the iMM173 is to synchronize it with the atomic clock function on your iPhone or iPod. This unit is equipped with a Time Sync function which automatically sets the date and time by synchronizing it with your iPhone or iPod, when it is placed in the dock.

1. With the power turned ON and the power connected, the Time Sync function is automatically enabled as indicated by a “Sync” icon on the LCD screen.
2. When your iPhone or iPod is placed in the **iPod/iPhone® dock***, the unit will begin authentication.
3. During authentication, the iMM173 will update the time and date according to your iPhone or iPod. The “Sync” icon will blink during this process.

To turn off the Time Sync Function, follow these instructions:

1. Set the iMM173 into Standby mode.
2. Press the **SELECT / TIME SYNC** button to turn OFF/ON the Time Sync function. If the Time Sync function is turned off, the unit will not sync the time from your iPhone or iPod, and the **“Sync” icon will disappear on LCD.**

Note: The Time Sync function only works when your iPhone or iPod is docked in the iPod/iPhone® dock

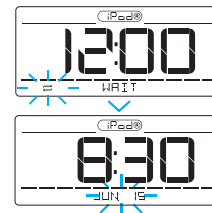


Setting the Clock

Make sure the unit is turned off in order to set the clock.

The default clock setting is 12:00AM. If you set the clock during Daylight Saving Time, be sure to set the **DST** switch on to ensure the proper function of the **DST** switch. When setting the clock during Standard time, make sure the **DST** switch is off.

 - Press and hold the **SET** button on the unit for three (3) seconds to set the year, day and time. The current year will flash as shown on this page.
- The year will blink first at the bottom of the LCD splay. Rotate the **SEARCH** knob until the current year appears. Press the **SET** button to set and confirm. Repeat these steps to set the day and time.
- Press the **SET** button to confirm. If no knob or button is pressed for 10 seconds, the setting will return to the current clock time and exitclock mode.
- **Note:** There is no AM icon on this LCD screen. When setting the clock for an afternoon or evening time, make sure that the PM icon appears on the screen
- The time setting sequence should be: Year > Month/Date > Hour/ Minute.
- To exit clock setting mode, press the **SET** button.

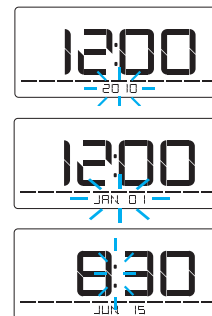

OPERATIONAL INSTRUCTIONS

DST (Daylight Saving Time)

To adjust to Daylight Saving Time, slide the DST switch to “(+1)” to advance the time 1 hour. Slide the DST switch to “(-1)” to turn the time back 1 hour.

For example: DST: 11:00pm (DST off) -> 12:00am (DST on). When the switch is at “(+1)” the “DST” icon will display on LCD.

Sleep Mode

You can set the iMM173 to play music from your iPod, iPhone, or Radio as you go to sleep. The unit will turn off automatically after the time you set in Sleep mode.

1. In FM, iPod, or AUX, you can activate the sleep mode by pressing the **SLEEP** button on the main unit.
2. Press the **SLEEP** button while the unit is already playing or in standby mode to display the sleep time.
3. Setting: 120 ->90 -> 60 -> 30 ->15 -> 00 (OFF) -> 120...
4. While unit is already in sleep mode, press the **SLEEP** button to display the amount of sleep time remaining; press again to change sleep time to the next lower increment.
5. Use the Volume controls to set the preferred sound level for Sleep Mode.

Setting the Treble / Bass

1. Press the **TREBLE / BASS** button on unit or remote control to enter to EQ set mode.
 - **EQ access:**
 - i. **Treble** -> -5 -> -4 -> -3 -> -2 -> -1 -> 0 -> +1 -> +2 -> +3 -> +4 -> +5
 - ii. **Bass** -> -5 -> -4 -> -3 -> -2 -> -1 -> 0 -> +1 -> +2 -> +3 -> +4 -> +5
 2. As Treble and Bass adjusts with rotary search switch on the unit or volume button on the remote, Bar display should move along.
 3. Treble -> Bass -> exit EQ set
- Note:** Treble and Bass default setting is “0”.

Mute Function

1. In FM, iPod, AUX mode, press the **MUTE** button on remote control to activate the mute function.
2. “MUTE” is displayed on LCD.
3. Press the **MUTE** button again to resume normal playback.

OPERATIONAL INSTRUCTIONS

Snooze Function

1. Press the **SNOOZE / DIMMER** button when the alarm sounds.
2. The alarm will be silenced and come on again 7 minutes later.
3. Snooze can be pressed several times during the 1 hour alarm period.

Dimmer setting

1. Press the **SNOOZE / DIMMER** button during normal operation to adjust the brightness of LCD display.
2. Dimmer grade: **0-11 levels** with display bar.
3. Press and hold **SNOOZE / DIMMER** button for dimmer grade quick change.

Setting the Alarm

The Alarm 1 and Alarm 2 functions can be set with the unit turned ON or OFF.

 
 
1. Press and hold **ALARM 1** or **ALARM 2** button on the top panel of the unit for three (3) seconds. The alarm time will flash on the upper left corner of the LCD display (for Alarm 1) and the upper right corner (for Alarm 2). Rotate **SEARCH** knob to set the hour and minute. Press **ALARM 1** or **ALARM 2** button to confirm.
2. Wake up mode display will begin flashing, rotate **SEARCH** knob to select from RADIO (FM), iPod L, iPod R or BUZZ (Buzzer).

Note: Pre-tune your desired radio channel in FM radio mode before setting the wake up function.

• Wake to FM radio • Wake to iPod L • Wake to iPod R • Wake to Buzzer

* For Wake to Radio or Wake to iPod, set desired volume level when in Radio or iPod mode. When alarm sounds, the volume will gradually increase to the preset sound level.

3. When the wake up mode is selected, press **ALARM 1** or **ALARM 2** button again to confirm until the Alarm indicator appears on the display. If no button is pressed in 10 seconds, changes are set and alarm set mode activates.
4. Press **ALARM 1** or **ALARM 2** to turn on or turn off the alarm setting.

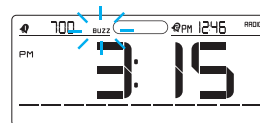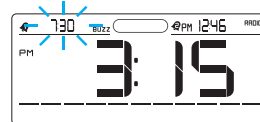

Alarm 2 settings and display




OPERATIONAL INSTRUCTIONS

Using the Radio

Extend the FM Antenna (on back of unit) fully for best reception. Do not strip, alter or attach to other antennas.

Tuning and Listening to the Radio


1. Press the **MODE** button to select FM radio mode.
2. Rotate search +/- knob to tune radio to a desired station. Or press the **▶|| PLAY / PAUSE** button can automatically search clear station (**SEEK +**).
3. Or press access the radio presets, just press any one of the radio preset buttons (preset 8 stations).
4. Rotate the volume knob to adjust iMM173 volume up or down.
5. Press the **POWER**  / **AL OFF** Button again to turn radio off.

Programming Radio Presets

The unit has four presets buttons for eight preset stations for customers to find local stations (to store favorite stations).

1. Tune a broadcasting station you want to save.
2. Press and hold the **1-2** button for 3 seconds, the "P1" will display on LCD flashing. The station will automatically be saved as P1 if no further action is taken after approximately three (3) seconds.
3. With "P1" flashing, press the **1-2** button immediately to select P2 memory station. "P2" will flash on the screen. The station will automatically be saved as P2 if no further action is taken after approximately three (3) seconds.
4. Follow this procedure for each of the radio presets.

 Press 3 Sec. Release to set

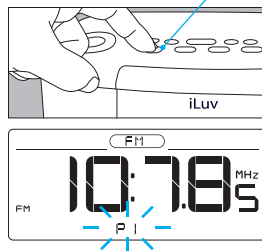

Selecting presets

1. Press the **1-2** button, the P1 preset station will play. Press the **1-2** button again to select P2 preset station.
2. Follow this procedure for each of the radio presets.

Selecting preset radio stations with remote control

When **PRESET** button of remote control is pressed, the stored FM preset radio should sound right away. Repeatedly press the **PRESET** button to listen to other stored FM stations with following cycle: P1 -> P2 -> P3 -> ...->P8

OPERATIONAL INSTRUCTIONS

iPhone and iPod Operation

Selecting the Dock

- Press the **MODE** button to select iPod function. "iPod" icon appears.
- Press the **SELECT** button on unit, or the **(L)**, **(R)** button on remote control to select the dock to be played.
- Select iPod **(L)** for iPod play and charge, select iPod **(R)** for iPhone or iPod play and charge.
- Press **▶|| PLAY/PAUSE** button to start playback.

Playback

1. To pause the playback, press **▶|| PLAY/PAUSE** button. To resume playback, press the **▶|| PLAY/PAUSE** button again.
2. Press the **◀◀ SKIP BACKWARD/AUTO SCAN** or **▶▶ SKIP FORWARD/AUTO SCAN** buttons to skip down or up music of your iPod on remote control.
3. During playback, press and hold the **◀◀ SKIP BACKWARD/AUTO SCAN** or **▶▶ SKIP FORWARD/AUTO SCAN** buttons on remote control to start high speed search. When the desired passage is found on remote control, release the button to resume the normal playback.

Charging your iPhone and iPod

- iPhone and iPod can be charged at any mode after insert them to dock.
- Dock 1 **(L)** is only for iPod charge and Dock 2 **(R)** is for iPhone or iPod charge.

OPERATIONAL INSTRUCTIONS

iPhone Function

1. When your iPhone is inserted and is detected successfully, playback will switch and play to your iPhone.
2. During playback, press and hold the **⏮ SKIP BACKWARD/AUTO SCAN** or **⏭ SKIP FORWARD/AUTO SCAN** button on remote control to start high speed search. When the desired passage is found on remote control, release the button. Normal playback will resume.
3. While playing music or movies and there is an incoming call on your iPhone, the ring tone will sound through the speakers.
4. To answer the phone:
 - a. Pick up the iPhone to answer for a private conversation.
 - b. Touch the Speaker Phone icon on your iPhone to answer using the speaker function.

Note:

The speakers on the IMM173 are not used when you are in speaker phone mode. In this mode, it is the Speaker Phone function of your iPhone, NOT the IMM173 that is used. See Speaker Phone instructions in the Owner's manual of your iPhone.

Menu and Enter

- Press the **MENU** button on the remote control when iPhone/iPod is playing to return to the menu.
- You can press **UP** or **DOWN** buttons to select, and then press the **ENTER** button to enter.

Repeat

Press the **REPEAT** button on remote control while your iPhone/iPod music is playing.

1. Press the **REPEAT** Button once on remote control during iPhone/iPod music is playing. Current track will repeat.
2. Press the **REPEAT** Button twice on remote control during iPhone/iPod music is playing. All tracks will repeat.

OPERATIONAL INSTRUCTIONS

Shuffle

- Press the **SHUFFLE** Button on the remote control while your iPhone/iPod music is playing.
- Your iPod will start random playing. Press shuffle again to change normal playing mode.

Both occupied

When both of two docks are occupied, press the **SELECT** switch button to select iPod R or iPod L to play on the main unit or remote control.

Maintenance

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as Benzine, thinner or similar materials can damage the surface of the unit.

TROUBLESHOOTING GUIDE

- **The system does not turn on.**
 - a. The DC adapter may not be connected properly. Check the connection.
 - b. The power outlet may not function. Try another outlet.
- **Your iPod/iPhone does not fit into the iPod dock.**
 - a. The installed dock adapter is not the correct one. Check whether a correct dock adapter is installed.
 - b. There might be some obstructions on the dock. Check whether there are any obstructions on the connector and on the dock. If everything is secured, place your iPod/iPhone back into the dock.
- **It does not recognize your iPod when docked.**
 - a. Your iPod may not be properly docked. Take your iPod out of the dock, and remove any obstructions on the connector from the dock and on your iPod. Place your iPod back into the dock.
 - b. Your iPod is frozen or locked up. Check whether your iPod operates correctly before placing it back into the dock. Please refer to the owner's instruction manual of your iPod.
 - c. The software of your iPod is outdated. Upgrade the software on your iPod. For the details on how to upgrade the software on your iPod, please visit the Apple website: <http://www.apple.com>.
 - d. You are using the first or second generation iPod. The system does not recognize first or second generation iPod. Use the line-in jack/AUX Mode for the first or second generation of iPod.
- **Your iPod is not charged even though it is in the dock.**
 - a. Your iPod might not be properly docked. Take your iPod out of the dock, and remove any obstructions on the connector from the dock and on your iPod. Place your iPod back into the dock.
 - b. Your iPod is frozen or locked up. Check whether your iPod operates correctly before placing it back into the dock. Please refer to the owner's instruction manual of your iPod.
 - c. You are using the first, second, or third generation of iPod. First, second, and third generation of iPod is only charged with the FireWire connection. The FireWire connection is not supported by the system.

TROUBLESHOOTING GUIDE

- **When playing music, the sound gets distorted.**
 - a. The volume level on the connected device or the system is set too high. Decrease the volume until the distortion has disappeared.
 - b. The source sound is distorted. If the original sound source (MP3) on your iPod is poor quality, the distortion and noises are easily noticed with high-power speakers. Try a different audio source like a music CD to test.
- **The remote control does not operate properly.**
 - a. The installed battery is weak. Replace with a new battery.
 - b. It is not aimed to the system or too far away from it. Move within 10 feet of the unit and point the remote control toward the system.

WARNING

- TO PREVENT FIRE OR SHOCK HAZARD. DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.
- THIS APPLIANCE SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING WATER AND THAT NO OBJECT FILLED WITH LIQUIDS SUCH AS VASES SHALL BE PLACED ON APPARATUS.



The lightning flash with an arrowhead symbol within an equilateral triangle is intended to alert the user of the presence of un-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to people.

CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN

WARNING: To reduce the risk of electric shock, do not remove cover (or back). No user-servic-able parts inside. Refer servicing to qualified service personnel.



The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions
2. Keep these instructions
3. Heed all warnings
4. Follow all instructions
5. Do not use this apparatus near water
6. Clean only with dry cloth
7. Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the

IMPORTANT SAFETY INSTRUCTIONS - continued

- provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
 11. Only use attachments/accessories specified by the manufacturer.
 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
 13. Unplug this apparatus during lightning storms or when unused for long periods of time.
 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
 15. Grounding or Polarization – This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
Alternate Warnings – This product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.
 16. Ventilation – Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer’s instructions have been adhered to.
 17. The MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



USER SAFETY GUIDE

IMPORTANT SAFETY INSTRUCTIONS - continued



CLEANING

Always disconnect unit from power supply before attempting to clean it. Use soft cloth moistened with soapy water, and wipe gently. Do not use solvents or abrasive materials.

LASER SAFETY

This unit uses laser technology. Only a qualified professional should remove the cover or attempt to service this device, due to possible eye injury.



CAUTION – CLASS 1 LASER PRODUCT

Use of controls adjustments and/or performance of procedure other than specified herein may result in hazardous radiation exposure.



DANGER

Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam. CAUTION: HAZAROUS LASER RADIATION WHEN OPEN AND INTERLOCK DEFEATED.



YOU CAN HELP TO PROTECT THE ENVIRONMENT!

Please remember to respect the local regulations: Hand in the non-working electrical equipment to an appropriate waste disposal center.

FOR USED BATTERIES

Disposed of the used batteries properly. Please follow the local regulations for the battery disposal.

USER SAFETY GUIDE

FCC NOTICE TO A USER IN USA

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

FCC RULES

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

Note: Do not make changes or modify the device in any way. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

USER SAFETY GUIDE

FCC NOTICE TO A USER IN USA - continued

IMPORTANT NOTES ON HEARING

Your hearing is very important to you and to us, so please take care when operating this equipment. We strongly recommend you to follow the guideline below in order to prevent possible damage or loss of hearing.

If you continuously listen to the loud sounds, your hearing will adapt to continuous loud sounds and will give you the impression that the volume has been reduced. What seems normal to you may in fact be harmful. To guard against this BEFORE YOUR HEARING ADAPTS, set the volume at a low level and slowly increase the volume level until you can hear comfortably and clearly without distortion. Damage to your hearing is accumulative and is irreversible. Any ringing or discomfort in the ears indicates that the volume is too loud. Once you have established a comfortable listening level, DO NOT INCREASE THE VOLUME LEVEL FURTHER.

In the use of headphones, please take more attention. Hearing experts say that listening to a loud music can damage your hearing, especially when listening to music with headphones.

USER SAFETY GUIDE

IC NOTICE TO A USER IN CANADA

Since digital circuitry may cause interference to other radio or television tuners nearby, switch this unit off when not in use or move it away from the affected radio/television tuner.

NOTE: This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of Industry Canada. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television operation (which can be determined by turning the equipment off), the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

WARNING!

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
- Mains plug is used as the disconnect device. It shall remain readily operable and should not be obstructed during intended use. To be completely disconnected, the apparatus from supply mains, the mains plug of the apparatus shall be disconnected from the mains socket outlet completely.

ADDITIONAL IMPORTANT INSTRUCTIONS

- Place the apparatus with some distances from the nearby objects or walls for sufficient ventilations. The ventilation should not be impeded by covering the ventilation openings with items such as newspapers, table-cloths, curtains, etc.
- No naked flame sources such as lighted candles should be placed on the apparatus.
- Dispose of used batteries properly. Follow the local regulation for the battery disposal.
- Use this apparatus in the moderate climates. It is recommended not to use this apparatus such in a lighting storm.

- **Radio frequency**
FM: 87.5MHz – 108MHz
- **Connectivity**
3.5mm stereo headphone jack
3.5mm aux. in jack
Power jack
FM antenna
- **Power Requirement**
AC100V~240V 60/50Hz Adapter
- **Power consumption:** ≤25W
- **Dimensions** (W x H x D):
11.2" x 3.4" x 7.2" (284mm x 87mm x 183mm)
- **Unit weight:**
5.31lbs (2.4kg)

iLuv

THANK YOU FOR YOUR PURCHASE
Visit our website at www.i-Luv.com

©2009 www.i-Luv.com

iLuv is a trademark of jWIN Electronics Corp. iPod is a trademark of Apple Inc. registered in the U.S. and other countries. iPhone is a trademark of Apple Inc. All logos and brands are property of their respective owners. iPod or iPhone are not included in this package. Features and specifications are subject to change without prior notification. The illustrated product and specifications may differ slightly from that supplied. Designed in New York, USA / Made in China

© 2009 jWIN Electronics Corp. All rights reserved. No portion of this printed material or product enclosed herewith including design, shape or graphics, may be reproduced or transmitted in any form without the expressed written consent of jWIN Electronics Corp. by any means, electronic or mechanical, including photocopying, recording or use of an information storage and retrieval system. Any unauthorized distribution or reproduction of this printed material or product, or any portion thereof, will be prosecuted to the fullest possible extent of the law.

Printed in China

Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>