



USER'S GUIDE  
V:1905-0321-11



# IBP391B

## Portable Music System for iPod + iPhone

For the most up-to-date version of this User's Guide, go to [www.ilive.net](http://www.ilive.net)

# Warnings and Precautions

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- **AVERTISSEMENT:** Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- **CAUTION:** Use of any controls or adjustments or performance of procedures other than those herein specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **PRÉCAUTION:** *Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.*
- **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- **WARNING:** The battery, batteries, and battery pack shall not be exposed to excessive heat such as sunshine, fire, or the like.

- **WARNING:** Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.
- **WARNING:** Shock hazard - Do Not Open.
- **AVIS:** *RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR*

Mains Plug or Direct plug-in adapter is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the Mains Plug or Direct plug-in adapter should be disconnected from the mains socket outlet completely.

*La fiche d'alimentation ou adaptateur de courant est utilisé comme dispositif de déconnexion et doit rester accessible pendant l'utilisation. Pour mettre l'appareil hors tension, la fiche ou adaptateur de courant doit être débranché de la prise de courant.*

Do not mix old and new batteries.  
Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.  
*No mezcle baterías viejas y nuevas.  
No mezcle baterías alcalinas, estándar (carbón-zinc) o recargables (ni-cad, ni-mh, etc.).*



**WARNING:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.




The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

# Important Safety Instructions

1. Read these Instructions.
  2. Keep these Instructions.
  3. Heed all Warnings.
  4. Follow all instructions.
  5. Do not use this apparatus near water.
  6. Clean only with a dry cloth.
  7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
  8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
  9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
  10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
  11. Only use attachments/accessories specified by the manufacturer.
- 
12.  Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
  14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 

**Special note:** When placing your unit on a lacquered or natural finish, protect your furniture with a cloth or other protective material.

## FCC Warnings

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.  
*L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.*
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.  
*Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.*
- Caution marking is located at the rear or bottom of the apparatus.  
*Attention marquage est situé sur le panneau arrière ou inférieur de l'unité.*
- The marking information is located at the rear or bottom of apparatus.  
*Le marquage est situé sur le panneau arrière ou inférieur de l'unité.*



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

## Portable Music System for iPod + iPhone

### Features

- Made for iPod and iPhone
- Plays and charges docked iPod and iPhone
- App-enhanced
- Auto time sync with iPod and iPhone
- FM radio (PLL)
- Station memory presets (10 FM)
- iPod and iPhone authentication IC
- Built-in speakers
- Telescopic FM antenna
- Negative LCD display
- Composite video output
- 3.5mm audio input
- Last user settings memory
- Cloth speaker grill
- DC power input: requires an AC/DC power adapter (included)
- DC battery power: requires 4 C batteries (not included)
- Battery life: ~8 hours

### Included

- AC/DC power adapter

## Table of Contents

<b>Portable Music System for iPod + iPhone</b> .....	<b>4</b>
Features	
Included	
<b>Table of Contents</b> .....	<b>5</b>
<b>Introduction</b> .....	<b>6</b>
<b>Setup</b> .....	<b>8</b>
Power	
<b>iPod and iPhone</b> .....	<b>8</b>
Docking an iPod or iPhone	
Playing a Docked iPod or iPhone	
<b>App</b> .....	<b>9</b>
Automatically Downloading the App	
Manually Downloading the App	
<b>App Introduction</b> .....	<b>9</b>
IBP391 App	
<b>Radio</b> .....	<b>10</b>
Tuning the FM Radio	
Saving a Station as a Preset	
Tuning to a Preset	
<b>3.5mm Audio Input and Composite Video Output</b> .....	<b>11</b>
Using the Composite Video Output	
Using the 3.5mm Audio Input	
<b>Company Information</b> .....	<b>12</b>
International Support	
Contact Information	
Green Initiative	

## Introduction

### Power

Press to power on. Press and hold to turn the music system off.

 
### Adjustable Dial for iPod and iPhone

 
 
### Skip/Search

Press to skip or press and hold to search between tracks on a docked iPod or iPhone. Press to tune the FM radio in FM radio mode.

### Play/Pause/M+

Press to play or pause a docked iPod or iPhone. Press to cycle through saved FM radio stations in FM radio mode.

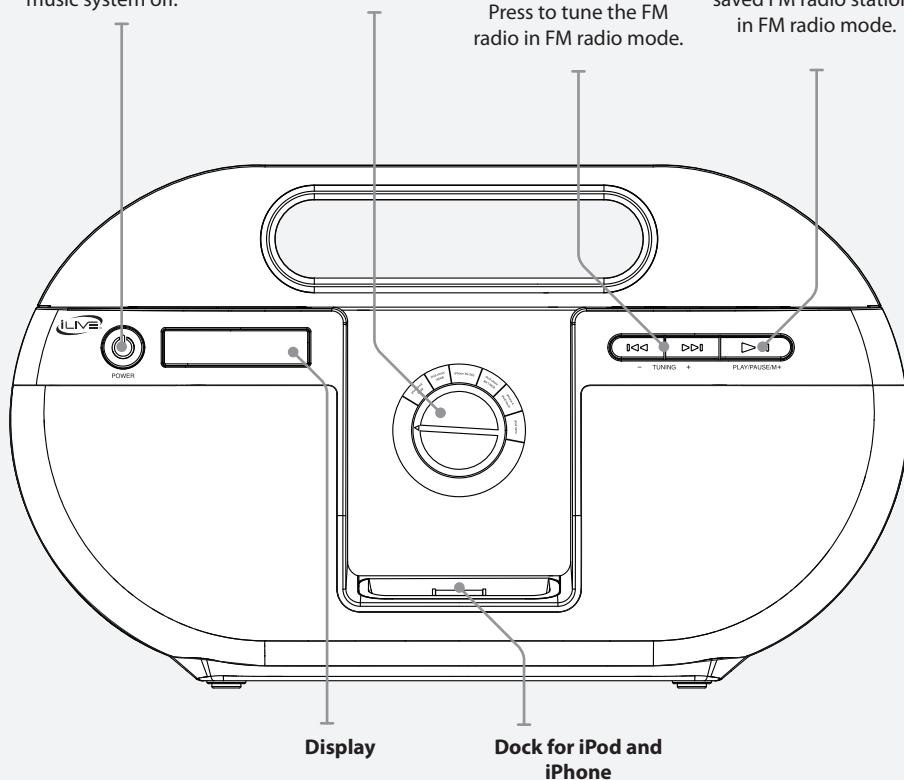

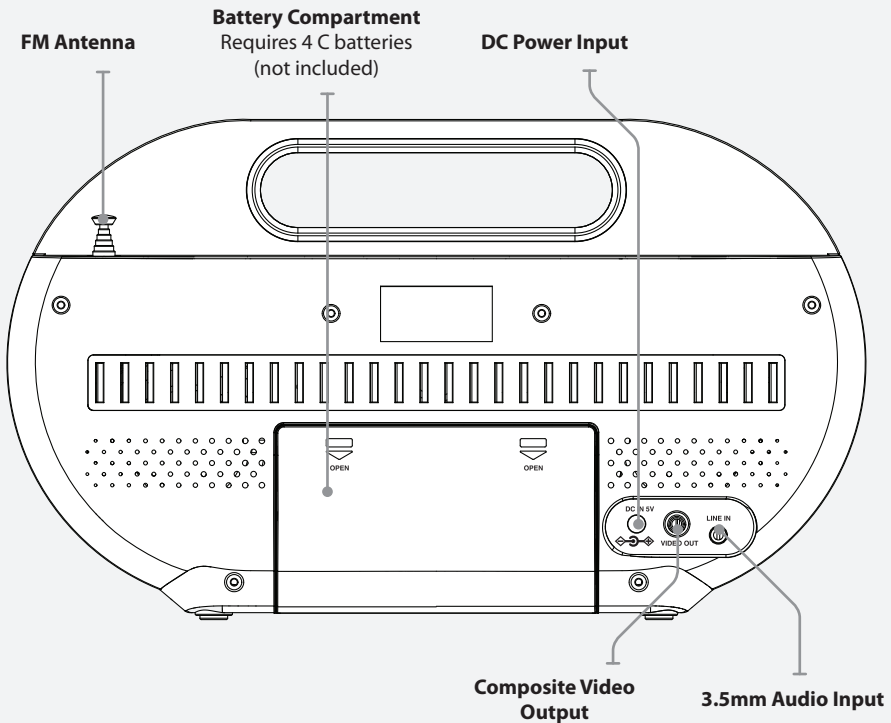
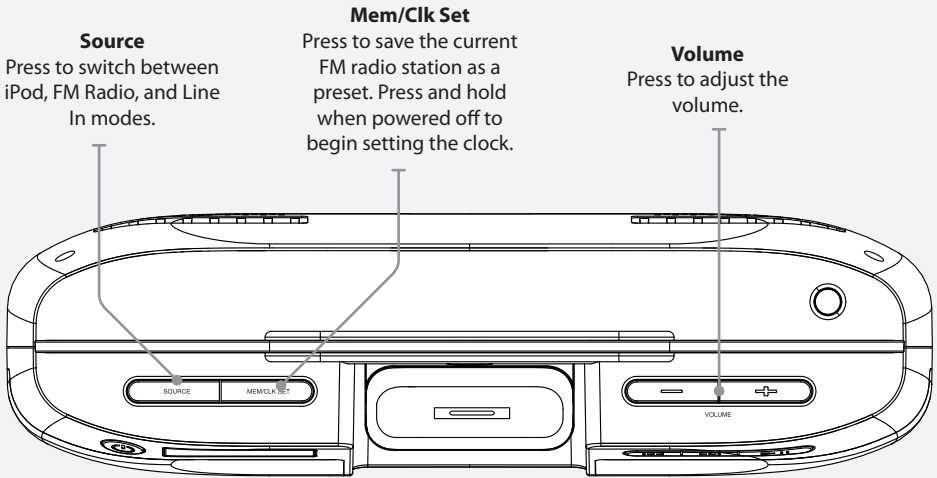


## Setup

### Power

DC Power Input: Requires an AC/DC power adapter (included)

  DC Battery Power: Requires 4 C batteries (not included)

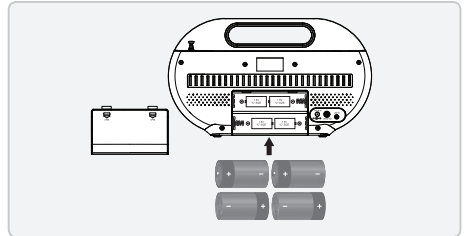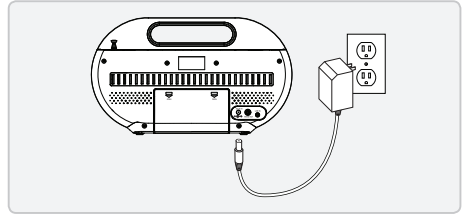


## iPod and iPhone

### Docking an iPod or iPhone

1. Turn the **Adjustable Dial for iPod and iPhone** to the appropriate depth for the iPod or iPhone model you are wanting to dock.
2. Connect your iPod or iPhone to the **Dock for iPod and iPhone**.

 *After docking, if your iPod or iPhone is not well supported by the adjustable dial, remove the docked iPod or iPhone and readjust the dial to the appropriate depth.*

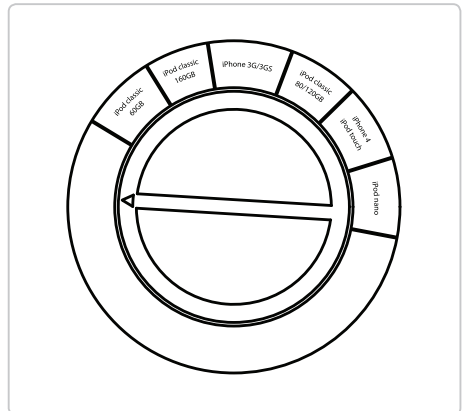

### Playing a Docked iPod or iPhone

 
1. Follow the instructions for Docking an iPod or iPhone.
2. Press the **Source** button to switch to iPod mode.
3. Press the **Play/Pause/M+** button.



## App

### Automatically Downloading the App

1. Follow the instructions for [Docking an iPod or iPhone](#).
2. Once the iPod or iPhone is docked a screen will appear prompting you to download the IBP391 app from the App Store.
3. Press **Yes** to automatically download the IBP391 app.

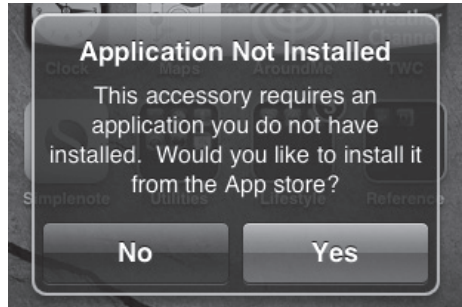

### Manually Downloading the App

1. Go to the App Store on your iPhone or iPod touch.
2. Search for IBP391.
3. Download the App.

## App Introduction

### IBP391 App

#### CLOCK

The clock will automatically sync with the time on the iPod or iPhone, so there's no need to set it.

#### ALARM

Add as many alarms as you like. You can set them to wake to iPod music, Nature Sounds, Buzzer, or you can record audio to make your own custom alarm sound or message.

#### WEATHER

Type in your location in the settings and view your current weather conditions along with the time on the home page of the app.

#### PHOTO SLIDE SHOW

Select photos that are already on your iPod or iPhone and play a slideshow with your music in the background.

#### SOURCES

When docked with the App-enhanced Music System (IBP391) you can use the Player feature in the app to select the source for the Music System.

**iPod:** Choose to play music directly from your iPod or iPhone.

**FM Radio:** Choose to use your docked iPod or iPhone to tune the FM radio on the Music System.

**Line In:** Choose to play music from an audio source connected to the 3.5mm audio input.

## Radio

### Tuning the FM Radio

1. Press the **Source** button to switch to FM radio mode.
2. Press the **Skip/Search** buttons to tune to the desired FM radio station.

### Saving a Station as a Preset

1. Follow the instructions for [Tuning the FM Radio](#) and tune to the FM radio station you want to save.
2. Press and hold the **Mem/Clock Set** button.
3. Press the **Skip/Search** buttons to choose a preset number.
4. Press and hold the **Mem/Clock Set** button to save the current radio station to the selected preset number.

### Tuning to a Preset

1. Follow the instructions for [Tuning the FM Radio](#).
2. Press the **M+** button to cycle through saved preset radio stations.

## 3.5mm Audio Input and Composite Video Output

### Using the Composite Video Output

Requires an RCA composite video cable (not included)

1. Connect the RCA composite video cable to the **COMPOSITE VIDEO OUTPUT** on the speaker and a composite video input on a television.
2. Adjust the **TV OUT** settings on the docked iPod to **OK**.
3. Videos played from the docked iPod or iPhone will now play on the connected television.

### Using the 3.5mm Audio Input

Requires a 3.5mm audio cable (not included)

1. Connect a 3.5mm audio cable to the **3.5MM AUDIO INPUT** on the speaker and an audio output on an MP3 player or other audio source.
2. Press the **SOURCE** button to switch to Line In mode.
3. Use the native controls on the connected MP3 player or other audio source to play and control audio played through the speaker.

## Company Information

### International Support

To download this User's Guide in English, Spanish, or French, visit the support section at [www.ilive.net](http://www.ilive.net).

Para transferir esta guía de usuario en inglés, español, o francés, visite la sección de la ayuda en [www.ilive.net](http://www.ilive.net).

Pour télécharger ce guide de l'utilisateur en anglais, espagnol, ou français, visitez la section de soutien chez [www.ilive.net](http://www.ilive.net).

### Contact Information

**Phone:** 1-888-999-4215

**Email:** [customerservice@ilive.net](mailto:customerservice@ilive.net)

**Parts Email:** [partsinfo@dpi-global.com](mailto:partsinfo@dpi-global.com)

**Website:** [www.ilive.net](http://www.ilive.net)

### Green Initiative



Environmental Commitment to 'Protect for Today and Sustain for Tomorrow'

2009 marked the official launch of DPI, Inc.'s corporate campaign for a greener and cleaner world. DPI is building upon environmental initiatives introduced at all of their facilities to help formulate and sustain significant and important conservation efforts within its manufacturing and marketing communities. In addition to targeting and selecting energy efficient product features, and structuring 'green office' procedures, other initial program efforts include:

- Reduction of all packaging sizes
- Recyclable plastics for clamshell packages, with a plan to eventually replace plastic with recyclable paper
- Recycled fiber board in place of the polyfoam in packing boxes
- Recycled plastics in place of the virgin material in product construction

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>