



IC618B INSTRUCTION MANUAL

Contents

Warnings and Precautions	2
Important Safety Instructions.....	3
In the Box & Features.....	4
Powering the Unit & Changing the Remote Battery	5
Docking an iPod	6
Playing an iPod & Tuning the AM/FM Radio.....	7
Saving FM or AM Radio Stations to the Unit's Memory.....	7
Location of Controls & Control Definitions.....	8-11
Service Information.....	12

Warnings and Precautions

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside. Please refer any servicing to qualified service personnel.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

WARNING: Danger of explosion if the remote control’s batteries are incorrectly installed. Replace only with the same or equivalent battery.

WARNING: The remote control’s button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste

WARNING: Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.

Do not mix old and new batteries.
Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important Safety Instructions

- 1. Read Instructions** - All the safety and operating instruction should be read before the product is operated.
- 2. Retain Instructions** - The safety and operating instruction should be retained for future reference.
- 3. Heed Warnings** - All warning on the product and in the operating instructions should be adhered to.
- 4. Follow instructions** - All operating and use instructions should be followed.
- 5. Cleaning** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with a dry cloth.
- 6. Attachments** - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
- 7. Water and Moisture** - Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement, or near a swimming pool, and the like. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
- 8. Accessories** - Do not place this product on an unstable cart, stand tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
- A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

See figure:



 
- 10. Ventilation** - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction have been adhered to.
- 11. Power Sources** - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
- 12. Grounding or Polarization** - This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety

feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarizes plug.

Alternate Warnings - This product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.

- 13. Power-Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and point where they exit from the product.
- 14. Protective Attachment Plug** - The product is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.
- 15. Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

See figure:

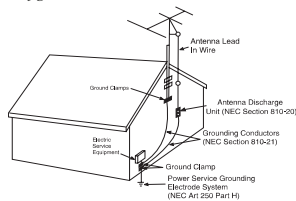


- 16. Lightning** - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
- 17. Power Lines** - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- 18. Overloading** - Do not overload wall outlets, extension cords, or integral convenience

receptacles as this can result in a risk of fire or electric shock.

- 19. Object and Liquid Entry** - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- 20. Servicing** - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- 21. Damage Requiring Service** - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - When the power-supply cord or plug is damaged,
 - If liquid has been spilled, or objects have fallen into the product,
 - If the product has been exposed to rain or water,
 - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - If the product has been dropped or damaged in any way, and
 - When the product exhibits a distinct change in performance - this indicates a need for service.
- 22. Replacement Parts** - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
- 23. Safety Check** - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
- 24. Wall or Ceiling Mounting** - The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
- 25. Heat** - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. Battery shall not be exposed to excessive heat such as sunshine, fire, or the like.
- 26. Main plug** is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- 27. Excessive sound pressure** from earphones and headphones can cause hearing loss.

 In the Box

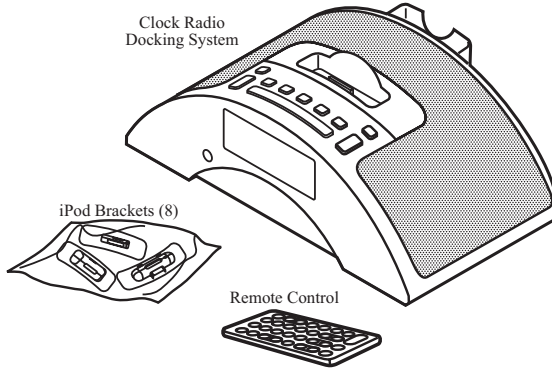


Features

- Digital Tune AM/FM Stereo Radio
- Station Memory Presets: 10 AM & 20 FM
- Electronic Volume
- Preset EQ
- Last Station Memory
- Mute Function
- Certified iPod Connector installed for iPod docking.
- Recharge Circuit for iPod/mini/nano/photo/video
- Includes Brackets to fit iPod players
- Controls connected iPod players
- Line-In Jack, 3.5mm type
- Digital Clock with Dual Alarm
- Gradual Wake to iPod, Radio & Buzzer
- Snooze Function
- Sleep Function
- Wake to tunes from your iPod
- Remote Control Controls docked iPod players
- Controls Radio Tuning & Volume
- Uses CR2025 Button Cell Battery, included
- Blue Backlit LCD Display
- Full-Range Speakers built in
- DC Jack: AC/DC Adaptor, UL Listed
- Remote Control, Remote Battery included
- Docking Brackets to fit different iPod Players

Powering the Unit

 
The unit can be powered by plugging it into a standard AC outlet (120V ~ 60Hz) using the included AC/DC adaptor.

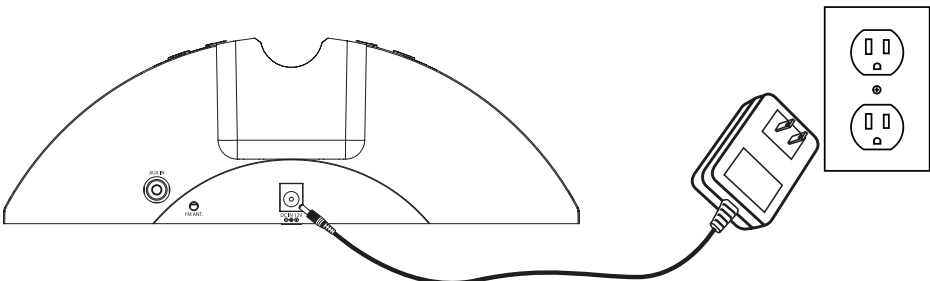

Using the Units Backup Battery


Insert a 9-Volt battery into the unit's **Battery Compartment** to serve as a backup in case of a power failure. (9-Volt Battery not included)

 Please note, the backup battery is only meant to power the unit for a short period of time. It is not meant to serve as the unit's main power supply.

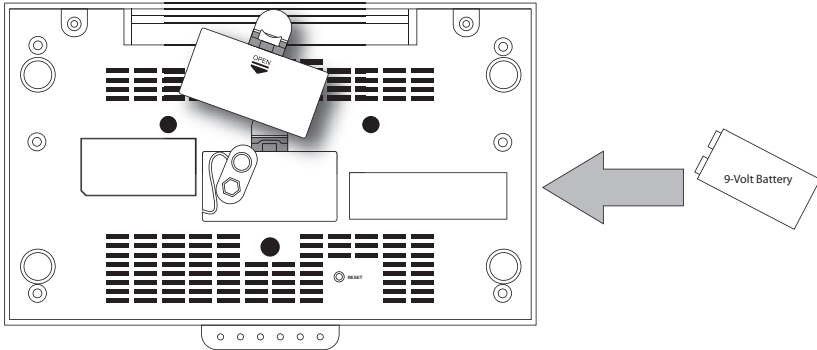

Changing the Remote Battery

 WARNING: Danger of explosion if the remote control's batteries are incorrectly installed. Replace only with the same or equivalent battery.

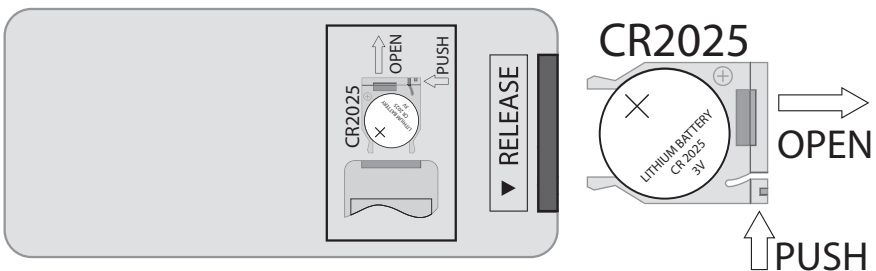

1. Push the Release Button and pull out the Battery Compartment to access the battery.
2. Replace the old battery with an equivalent new battery (CR2025).
3. The positive side of the battery, as indicated by a plus symbol, must be facing up when inserted into the remote.

Docking an iPod

1. Locate the numbered *Bracket* that fits the iPod that will be docked.

Each included Bracket has a number on it, indicating which iPod model that bracket is compatible with. See the separate bracket chart page to identify which bracket is needed.

2. Snap the *Bracket* into place over the iPod connector in the **Docking Station**.

 
All Brackets will only fit one way onto the Dock.

When inserting an iPod nano (first or second generation), slide the Dock connection on the unit so that it matches the opening on the iPod nano (first or second generation).

3. Connect the iPod to the iPod connector inside the **Docking Station**.

Once an iPod is connected to the **Docking Station**, the unit will charge the docked iPod.

Please note, when the unit is in AM radio mode, a docked iPod will not charge.

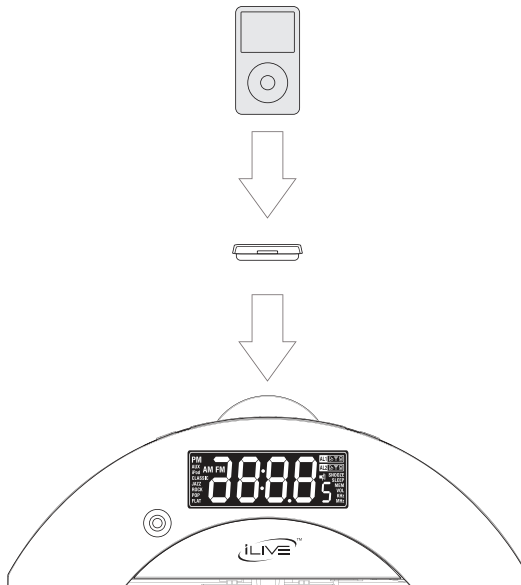

Playing an iPod

1. Dock an iPod onto the unit.
 2. Press the **Standby/Al Off Button** to turn the unit on.
 3. Press the **Function Button** to switch the unit to iPod mode.
 4. Press the **Play/Pause Button** to play and pause the docked iPod.
-

 
Tuning the AM/FM Radio

1. Press the **Standby/Al Off Button** to turn the unit on.
 2. Press the **Function Button** to switch the unit to AM or FM radio mode.
 3. Press the **Skip/Search/Tuning Buttons** to tune the AM or FM radio.
-

Saving FM or AM Radio Stations to the Unit's Memory

1. After tuning the AM or FM radio, to the desired station, press the **Enter/Memory Button**.
 2. Press the **AL 1/M+ Button** and **AL 2/M- Button** to adjust the radio memory slot.
 3. Press the **Enter/Memory Button** to save the current radio station to the selected memory slot.
-

Location of Controls

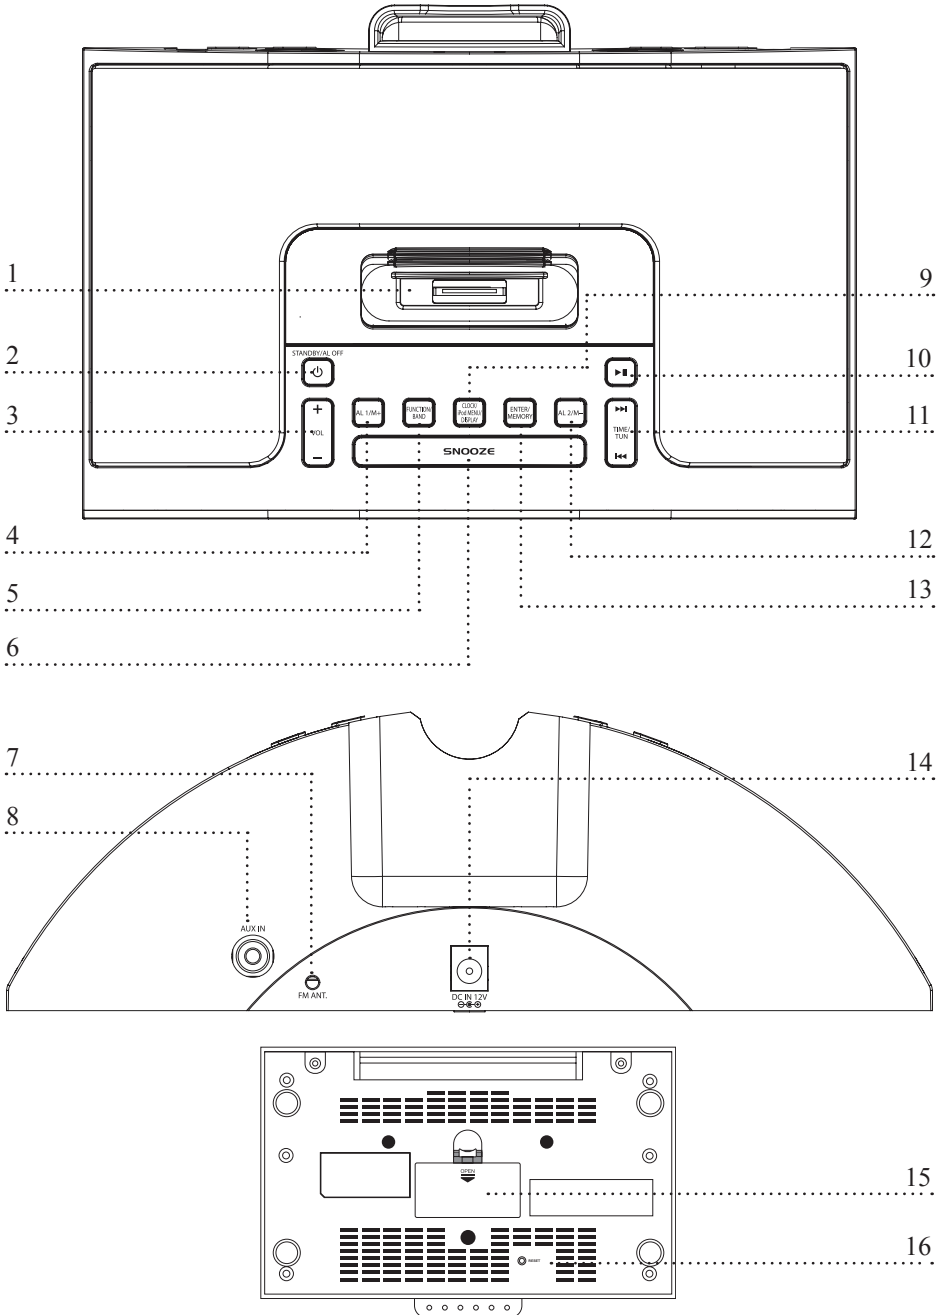

Control Definitions

1 Dock for iPod

Use the Dock for iPod to connect an iPod to the unit.

2 Standby/AL Off Button

Press the Standby/AL Off Button to turn the unit off and on.

Press the Standby/AL Off Button to turn the unit's alarm off after it sounds.

3 Volume Buttons

Press the Volume Buttons to adjust the volume of audio output from the unit.

4 AL 1/M+ Button

With the power off, press and hold the AL 1/M+ Button to set alarm 1.

Press the AL 1/M+ Button to cycle through saved radio stations.

5 Function/Band Button

Press the Function/Band Button to switch between AM radio, FM radio, iPod, and Aux modes.

6 Snooze Button

Press the Snooze Button to delay the alarm for an additional 6 minutes after it sounds.

7 FM Wire Antenna

Adjust the FM Wire Antenna to adjust the reception of the FM radio.

8 Auxiliary Input

Use the Auxiliary Input to connect an MP3 player or other audio device to the unit.

9 Clock/iPod Menu/Display Button

With the power off, press and hold the Clock/iPod Menu/Display Button to set the unit's time.

Press the Clock/iPod Menu/Display Button to move backwards through the iPod's menus in iPod mode.

Press the Clock/iPod Menu/Display Button to view the time when in radio mode.

10 Play/Pause Button

Press the Play/Pause Button to play or pause a docked iPod.

11 Skip/Search/Tuning/Time Button

Press the Skip/Search/Tuning/Time Button to skip between tracks on a docked iPod.

Press and hold the Skip/Search/Tuning/Time Button to search through an individual track on a docked iPod.

Press the Skip/Search/Tuning/Time Button to tune the AM and FM radio.

Press the Skip/Search/Tuning/Time Button to adjust the time when setting the clock and alarms.

12 AL 2/M- Button

With the power off, press and hold the AL 2/M- Button to set alarm 2.

Press the AL 2/M- Button to cycle through saved radio stations.

13 Enter/Memory Button

Press the Enter/Memory Button to make selections on a docked iPod.

Press the Enter/Memory Button to save the current AM or FM radio station to the unit's memory.

14 DC Power Input

 
Use the DC Power Input to connect the unit to a power source such as a standard AC outlet (120V~60Hz).

15 Backup Battery Compartment (9-Volt Battery Required, Not Included)

16 Reset Button

Press the Reset Button using a paperclip or like object to restore the unit to its original manufacturers settings.

Location of Controls

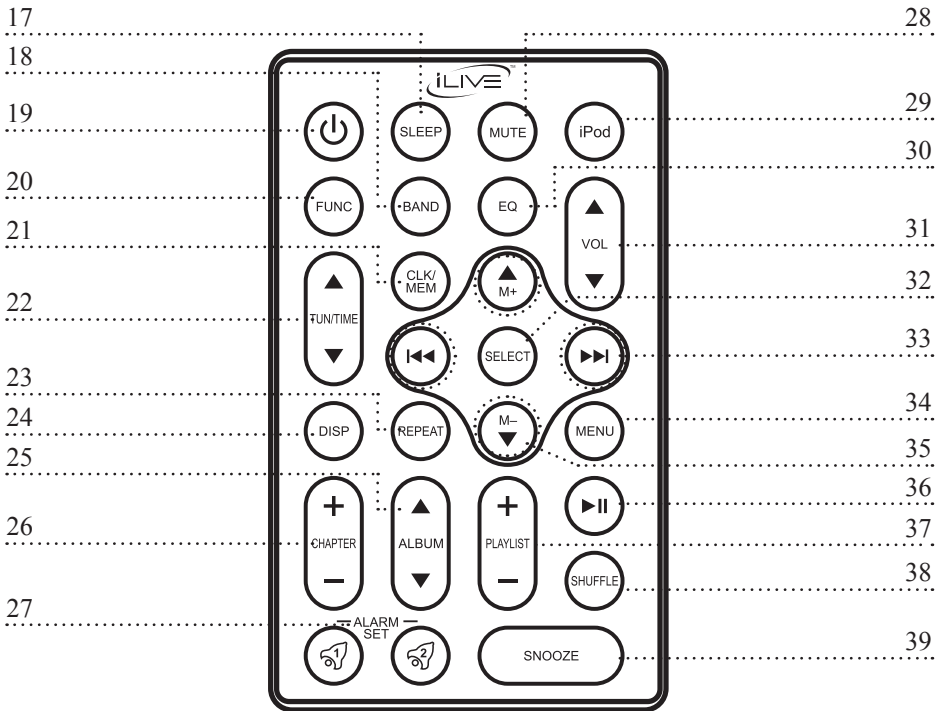

Control Definitions

- 17 Sleep Button**
Press the Sleep Button consecutively to set the sleep timer between 10-90 minutes in 10 minute increments.
- 18 Band Button**
Press the Band Button to switch between AM and FM radio in radio mode
- 19 Power Button**
Press the Power Button to turn the unit off and on.
- 20 Function Button**
Press the Function Button to switch between AM radio, FM radio, iPod, and Aux modes.
- 21 Clk/Mem Button**
With the power off, press and hold the Clk/Mem Button to set the clock.
Press the Clk/Mem Button to save the current radio station to the unit's memory in radio mode.

Control Definitions

22 **Tuning/Time Button**

Press the Tuning/Time Button to tune the AM and FM radio when in radio mode.

Press the Tuning/Time Button to adjust the time when setting the clock.

23 **Repeat Button**

Press the Repeat Button to repeat the current audio track from a docked iPod.

Press the Repeat Button twice to repeat an entire album or playlist from a docked iPod.

24 **Display Button**

Press the Display Button to view the time when in radio mode.

25 **Album Button**

Press the Album Button to cycle through albums on a docked iPod.

26 **Chapter Button**

Press the Chapter Button to cycle through chapters on a docked iPod.

27 **Alarm Set Buttons**

Press the Alarm Set Buttons to set and activate alarm 1 and alarm 2.

28 **Mute Button**

Press the Mute Button to mute the volume of the unit.

29 **iPod Button**

Press the iPod Button to switch the unit to iPod mode.

30 **EQ Button**

Press the EQ Button to switch between rock, pop, classic, jazz, and flat equalizer settings.

31 **Volume Button**

Press the Volume Button to adjust the volume of audio output from the unit.

32 **Select Button**

Press the Select Button to make selections on a docked iPod.

33 **Skip/Search Buttons**

Press the Skip/Search Buttons to skip through tracks on a docked iPod.

Press and hold the Skip/Search Button to search through an individual song on a docked iPod.

34 **Menu Button**

Press the Menu Button to go back through the menus on a docked iPod.

35 **M+/M- Buttons**

Press the M+/M- Buttons to cycle through radio stations saved to the unit's memory.

36 **Play/Pause Button**

Press the Play/Pause Button to play or pause a docked iPod.

37 **Playlist Button**

Press the Playlist Button to cycle through playlists on a docked iPod.

38 **Shuffle Button**

Press the shuffle Button to play songs from a docked iPod in a random order.

39 **Snooze Button**

Press the Snooze Button, after the alarm has sounded, to delay the alarm for 10 minutes.



Service Information

Address 2116 Carr Street, St. Louis MO, 63106

Phone 1-314-621-2881

Fax 1-314-588-1805

Email customerservice@ilive.net

Website www.ilive.net

To download this Instruction Manual in English, Spanish, or French visit the Support section at www.ilive.net.

Para descargar este manual de instrucción en inglés, español, o francés visite la sección de la ayuda en www.ilive.net.

Pour télécharger ce manuel d'instruction en anglais, espagnol, ou le Français visitez la section de soutien à www.ilive.net.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>