



## USER'S GUIDE

V:1036-0209-10



---

# ICP200B

## Clock Radio for iPhone/iPod

---

*For the most up-to-date version of this User's Guide, go to [www.ilive.net](http://www.ilive.net)*

## WARNINGS AND PRECAUTIONS

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- **AVERTISSEMENT:** Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **PRECAUTION:** *Danger d'explosion si les piles sont remplacées de façon incorrecte. Remplacer les piles seulement par le même type de pile ou l'équivalent.*
- **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- **WARNING:** The remote control's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste.
- **WARNING:** Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.

Main plug is used as disconnect device and it should remain readily operable during intended use.

Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.

*No mezcle baterías viejas y nuevas.*

*No mezcle baterías alcalinas, estándar (carbono-zinc) o recargables (ni-cad, ni-mh, etc.).*

**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN

**WARNING:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player's lid is open and the system's interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.

## IMPORTANT SAFETY INSTRUCTIONS

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



## FCC WARNINGS

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## ADDITIONAL WARNINGS

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.  
*L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.*
- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.  
*La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.*
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.  
*Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.*
- The marking information is located on the bottom of apparatus.  
*Les précautions d'emploi sont inscrites en bas de l'appareil.*

# CLOCK RADIO WITH DOCK FOR IPOD AND IPHONE

## FEATURES

- Works with iPhone
- Made for iPod
- FM radio
- Station memory presets (20 FM)
- Dual alarms
- Digital clock
- Snooze
- Sleep timer
- Wake to iPhone/iPod, radio, or buzzer
- Gradual wake
- Line input (3.5mm)
- Video output
- Basic iPhone/iPod controls
- Built-in speakers
- White dot-matrix display
- Supports Universal docking brackets
- DC power input: requires an AC/DC power adapter (included)
- Battery backup

## INCLUDED

- ICP200B
- Docking brackets for iPhone/iPod (5)
- AC/DC power adapter

## TABLE OF CONTENTS

<b>INTRODUCTION</b>	<b>6</b>
<b>SETUP</b>	<b>8</b>
<b>iPod/iPhone AND RADIO</b>	<b>9</b>
<b>CLOCK AND ALARMS</b>	<b>10</b>
<b>OTHER</b>	<b>11</b>
<b>COMPANY INFORMATION</b>	<b>12</b>

# INTRODUCTION

## PLAY/PAUSE

Press to play or pause a docked iPhone or iPod.

## SLEEP

Press repeatedly to set the sleep timer.

## POWER/SOURCE

Press to power the clock radio on. Press and hold to power the clock radio off. While on, press to switch between Radio, iPod, and AUX modes.

## Dock for iPod/iPhone

Plays and charges a docked iPhone or iPod.

## CLOCK/ALARM SET

 
In off mode, press to set the clock. In on mode, press to set the alarm.

## MEM

Press and hold to save the current radio station as a preset. Press to cycle through current radio presets.

## ALARM

Press to activate alarm 1 or alarm 2.

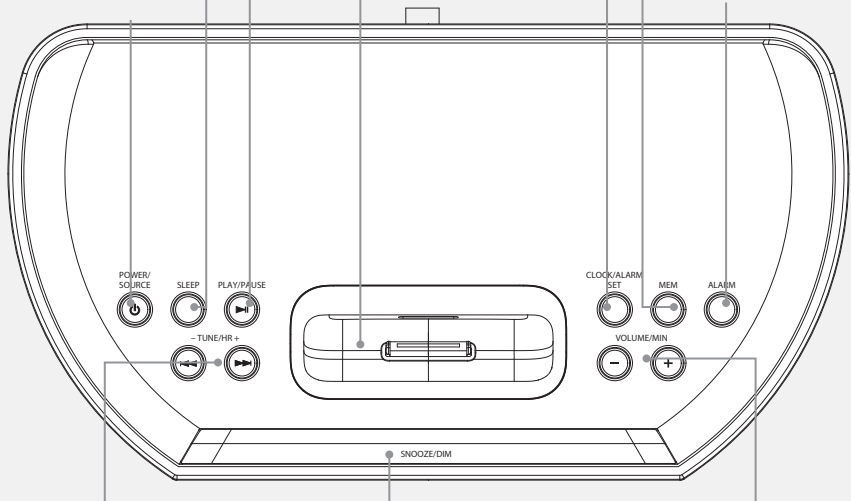

## SKIP/SEARCH/ TUNING/HR

Press to skip between tracks on a docked iPhone or iPod. Press and hold to search through an individual track on a docked iPhone or iPod. Press to tune the FM radio. Press to adjust the hour when setting the time or alarm time.

## SNOOZE/DIM

After the alarm sounds, press to delay the alarm for an additional 10 minutes.

## VOLUME/MIN (+/-)

Press to adjust the volume. Press to adjust the minute when setting the time or alarm time.

 
**RESET**

Press to reset the clock radio to it's original settings.

**VIDEO OUTPUT**

Use to output video form a docked iPhone or iPod to a connected television.

**FM ANTENNA**

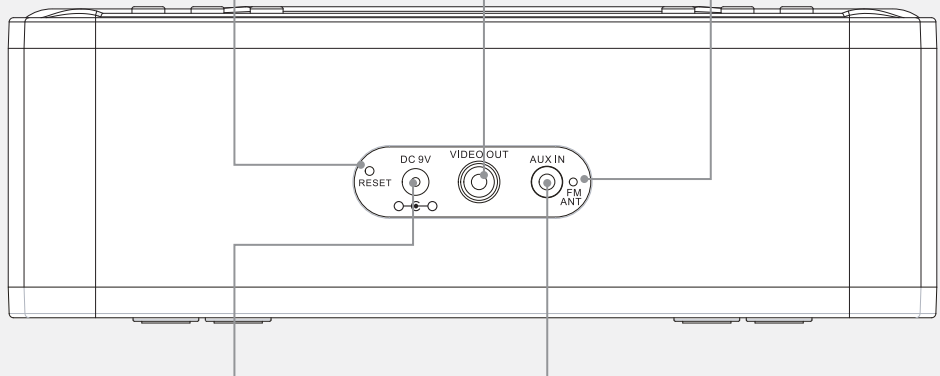


**DC POWER INPUT**

**AUXILIARY INPUT**  
Use to connect an MP3 player to the clock radio.

## SETUP

### POWER

 Plug the included AC/DC power adapter into the DC POWER INPUT on the clock radio and an AC power outlet to power the clock radio

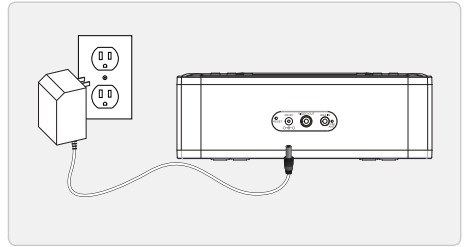


### BACKUP BATTERY

Requires 2 AAA batteries (not included)

The backup battery is meant for short-term power outages.

 The clock radio cannot run off of the backup alone.

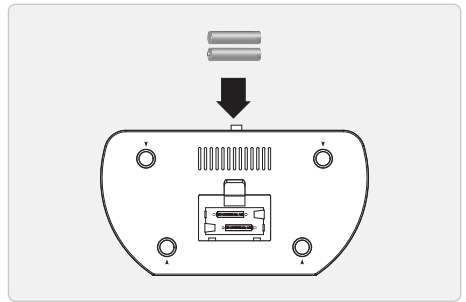



## TUNING THE FM RADIO

- 1 Press the **POWER/SOURCE** button to power on the clock radio.
- 2 Press the **POWER/SOURCE** button to switch to RADIO mode.
- 3 Press the **SKIP/SEARCH/TUNING/HR** buttons to tune the FM radio.

## SAVING A PRESET

- 1 Follow the instructions for TUNING THE FM RADIO.
- 2 Tune to the desired station, and press and hold the **MEM** button.  
*The preset channel number will begin to blink.*
- 3 Press the **MEM** button to select a preset channel to save the current radio station to.
- 4 Press and hold the **MEM** button to save the current radio station to the selected preset channel.

## LISTENING TO A PRESET

- 1 Follow the instructions for SAVING A PRESET.
- 2 Press the **MEM** button to cycle through FM radio presets.

## DOCKING AN iPhone or iPod

- 1 Locate the numbered bracket that fits the iPod/iPhone model that will be docked.  
*Each included bracket has a number on it, indicating which iPod/iPhone model that bracket is compatible with. See the separate bracket chart page to identify which bracket is needed.*
- 2 Snap the bracket into place over the iPod/iPhone connector in the dock for iPod/iPhone.
- 3 Connect the iPhone or iPod to the connector inside the Dock for iPod.  
*When the speaker is plugged in, using AC power, the docked iPod/iPhone will charge.*

## PLAYING AN iPhone or iPod

- 1 Follow the instructions for DOCKING AN iPod.
- 2 Press the **POWER/SOURCE** button to switch to iLive mode.
- 3 Press the **PLAY/PAUSE** button to begin playing music from the docked iPhone or iPod.

# CLOCK AND ALARMS

## SETTING THE CLOCK

- 1 Press and hold the **POWER/SOURCE** button to power the clock radio off.
- 2 Press the **CLOCK/ALARM SET** button.
- 3 Press the **SKIP/SEARCH/TUNING/HR** buttons to adjust the hour. Press the **VOLUME/MIN** buttons to adjust the minute.
- 4 Press the **CLOCK/ALARM SET** button to finish setting the clock and alarms.

## SETTING THE ALARMS

- 1 Press the **POWER/SOURCE** button to power the clock radio on.
- 2 Press the **CLOCK/ALARM SET** button.  
*The time on the display will begin to blink and AL1 will appear to indicate you are setting alarm 1.*
- 3 Press the **POWER/SOURCE** button to switch between waking to iPod, Radio, or Buzzer.
- 4 Press the **SKIP/SEARCH/TUNING/HR** buttons to adjust the hour. Press the **VOLUME/MIN** buttons to adjust the minute.
- 5 Press the **CLOCK/ALARM SET** button.  
*The time on the display will begin to blink and AL2 will appear to indicate you are setting alarm 2.*
- 6 Press the **POWER/SOURCE** button to switch between waking to iPod, Radio, or Buzzer.
- 7 Press the **SKIP/SEARCH/TUNING/HR** buttons to adjust the hour. Press the **VOLUME/MIN** buttons to adjust the minute.
- 8 Press the **CLOCK/ALARM SET** button to set the volume.  
*The volume indicator on the display will begin flashing.*
- 9 Press the **CLOCK/ALARM SET** button to finish setting the alarms.

## ACTIVATING THE ALARMS

- 1 Follow the instructions for SETTING THE CLOCK AND ALARMS.
- 2 Press the **POWER/SOURCE** button to turn the clock radio off.
- 3 Press the **ALARM** button repeatedly to activate alarm 1, alarm 2, or both alarms.  
*When the AL1 or AL2 indicator appears on the display, that alarm is active and will sound at the set alarm time.*

## SLEEP TIMER

- 1 With the clock radio powered on and playing, press the **SLEEP** button repeatedly to set the sleep timer.
- 2 After the set amount of time has expired, the clock radio will automatically power off.

## SETTING THE DIMMER

- 1 Press the **SNOOZE/DIM** button repeatedly to adjust the brightness of the display.

## USING THE AUX INPUT

- 1 Connect an MP3 player or other audio source to the **AUXILIARY INPUT** using a 3.5mm line input cable (not included).
- 2 Press the **POWER/SOURCE** button to switch to AUX mode.
- 3 Use the connected MP3 player or other audio source's native controls to play music through the boombox.

## USING THE VIDEO OUTPUT

- 1 Connect a television to the **VIDEO OUTPUT** using a RCA video cable (not included).
- 2 Adjust the connected television to the input setting used when connecting the television to the clock radio.
- 3 Adjust the settings on your iPod or iPhone to allow TV OUT.
- 4 Video played from a docked iPhone or iPod will now play through the connected television.

## COMPANY INFORMATION

### GREEN INITIATIVE

#### **Environmental Commitment to ‘Protect for Today and Sustain for Tomorrow’**

2009 marked the official launch of DPI, Inc.’s corporate campaign for a greener and cleaner world. DPI is building upon environmental initiatives introduced at all of their facilities to help formulate and sustain significant and important conservation efforts within its manufacturing and marketing communities. In addition to targeting and selecting energy efficient product features, and structuring ‘green office’ procedures, other initial program efforts include:

- Reduction of all packaging sizes
- Recyclable plastics for clamshell packages, with a plan to eventually replace plastic with recyclable paper
- Recycled fiber board in place of the polyfoam in packing boxes
- Recycled plastics in place of the virgin material in product construction

### INTERNATIONAL SUPPORT

To download this User’s Guide in English, Spanish, or French, visit the support section at [www.ilive.net](http://www.ilive.net).

Para transferir esta guía de usuario en inglés, español, o francés, visite la sección de la ayuda en [www.ilive.net](http://www.ilive.net).

Pour télécharger ce guide de l'utilisateur en anglais, espagnol, ou français, visitez la section de soutien chez [www.ilive.net](http://www.ilive.net).

### CONTACT INFORMATION

Address: 2116 Carr Street, St. Louis MO, 63106

Phone: 1-314-621-2881

Fax: 1-314-588-1805

Email: [customerservice@ilive.net](mailto:customerservice@ilive.net)

Parts Email: [partsinfo@dpi-global.com](mailto:partsinfo@dpi-global.com)

Website: [www.ilive.net](http://www.ilive.net)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>