



IS608B INSTRUCTION MANUAL

Contents

Warnings and Precautions	2
Important Safety Instructions.....	3
In the Box & Features.....	4
Powering the Unit & Changing the Remote's Battery.....	5
Docking an iPod & Playing an iPod.....	6
Setting the Time & Setting the Alarms	7
Tuning the AM/FM Radio & Saving Radio Stations to the Unit's Memory	8
Connecting to an Audio Player using the Aux Input	9
Locations of Controls & Control Definitions.....	11-15
Service Information.....	16

Warnings and Precautions

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside. Please refer any servicing to qualified service personnel.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

WARNING: Danger of explosion if the remote control’s batteries are incorrectly installed. Replace only with the same or equivalent battery.

WARNING: The remote control’s button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste

WARNING: Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important Safety Instructions

- Read Instructions** - All the safety and operating instruction should be read before the product is operated.
- Retain Instructions** - The safety and operating instruction should be retained for future reference.
- Heed Warnings** - All warning on the product and in the operating instructions should be adhered to.
- Follow instructions** - All operating and use instructions should be followed.
- Cleaning** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with a dry cloth.
- Attachments** - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
- Water and Moisture** - Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement, or near a swimming pool, and the like. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
- Accessories** - Do not place this product on an unstable cart, stand tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
- A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

See figure:



 
- Ventilation** - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction have been adhered to.
- Power Sources** - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
- Grounding or Polarization** - This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety

feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

Alternate Warnings - This product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.

- Power-Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and point where they exit from the product.
- Protective Attachment Plug** - The product is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.
- Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

See figure:

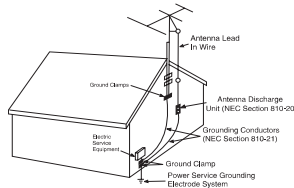


- Lightning** - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
- Power Lines** - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- Overloading** - Do not overload wall outlets, extension cords, or integral convenience

receptacles as this can result in a risk of fire or electric shock.

- Object and Liquid Entry** - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- Servicing** - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- Damage Requiring Service** - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - When the power-supply cord or plug is damaged,
 - If liquid has been spilled, or objects have fallen into the product,
 - If the product has been exposed to rain or water,
 - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - If the product has been dropped or damaged in any way, and
 - If the product exhibits a distinct change in performance - this indicates a need for service.
- Replacement Parts** - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
- Safety Check** - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
- Wall or Ceiling Mounting** - The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
- Heat** - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. Battery shall not be exposed to excessive heat such as sunshine, fire, or the like.
- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- Excessive sound pressure from earphones and headphones can cause hearing loss.

In the Box

 - IS608B
- Brackets for iPods
- Remote Control
- Documentation

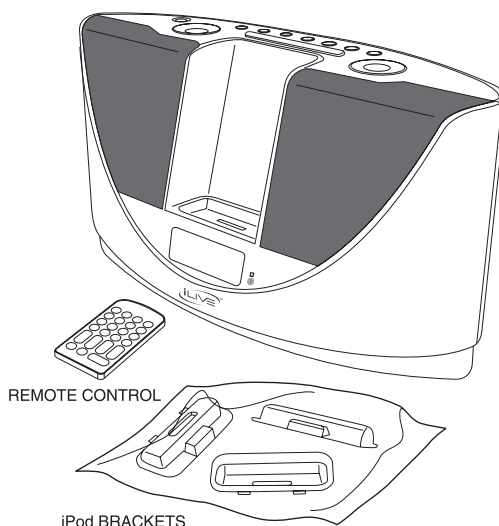


Features


- Certified iPod Connector installed for iPod docking
- Recharge Circuit for iPod/mini/nano/photo/video
- Controls Connected iPod players
- Stereo Speakers built in
- Digital Tune AM/FM Stereo Radio with Station Memory Presets
- 5-Preset EQ with Bass Sound
- Digital Volume Control
- Remembers the Last Volume & Source Setting
- Jacks
- Line-In Jack for Shuffle and other Audio Players
- Headphone Jack, 3.5mm
- LCD Segment Display
- Digital Clock with Adjustable Sleep/Snooze Timer
- Dual Alarm
- Gradual Wake
- Wake to iPod, Radio or Buzzer
- AC-Powered
- Full-Function Remote Control
- Controls Docked iPod & Unit Functions
- iPod Docking Brackets
- Remote Control, Button Cell Battery included

Powering the Unit

 Power the unit by connecting it to a standard AC outlet (120V ~ 60Hz) via the attached AC cord.

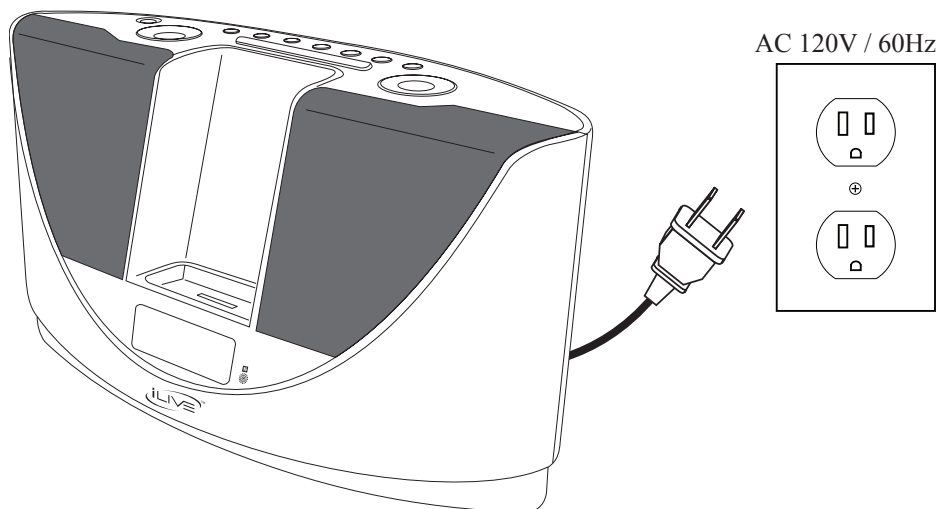

Changing the Remote Battery

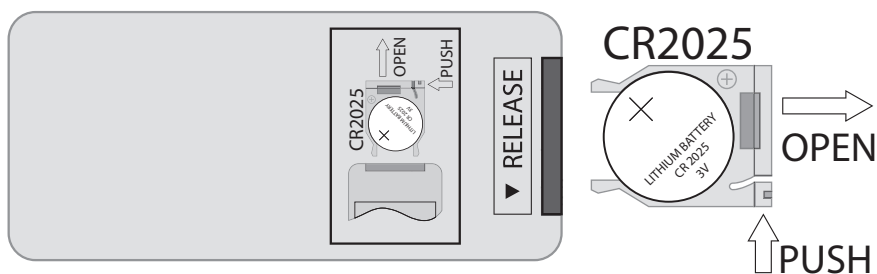 

1. Push the Release Button and pull out the Battery Compartment to access the battery.
2. Replace the old battery with an equivalent new battery (CR2025).
3. The positive side of the battery, as indicated by a plus symbol, must be facing up when inserted into the remote.

Docking an iPod

1. Locate the numbered *Bracket* that fits the iPod that will be docked.

Each included Bracket has a number on it, indicating which iPod model that bracket is compatible with. See the separate bracket chart page to identify which bracket is needed.

 
2. Snap the *Bracket* into place over the iPod connector in the **Docking Station**.

All Brackets will only fit one way onto the Dock.

When inserting an iPod nano (first or second generation), slide the Dock connection on the unit so that it matches the opening on the iPod nano (first or second generation).

3. Connect the iPod to the iPod connector inside the **Docking Station**.

Once an iPod is connected to the **Docking Station**, the unit will charge the docked iPod.

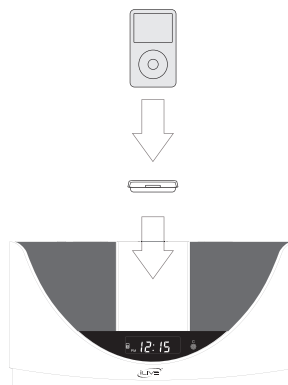

Playing an iPod

1. Dock an iPod onto the unit by following the “Docking an iPod” instructions on page 6.
2. Press the **Power/Alarm Off Button** to turn the unit on.
3. Press the **iPod Button** to switch the unit to iPod mode.
4. Press the **Play/Pause/Preset + Button** to begin playing a docked iPod.
5. Press the **Skip/Search Buttons** to skip through songs on a docked iPod. Press and hold the **Skip/Search Buttons** to search through an individual song on a docked iPod.

Setting the Time

1. Turn the unit off by pressing the **Power/Alarm Off Button**.
 2. Press and hold the **Clock/Preset Button** until the time begins to flash on the **LCD Display**.
 3. Press the **Skip/Search Buttons** to adjust the hour.
 4. Press the **Clock/Preset Button** to set the hour.
 5. Press the **Skip/Search Buttons** to adjust the minute.
 6. Press the **Clock/Preset Button** to set the minute and finish setting the time.
-

Setting the Alarms

1. Turn the unit off by pressing the **Power/Alarm Off Button**.
 2. Press and hold the **ALM 1** or **ALM 2 Buttons** until the alarm time begins to flash on the **LCD Display**.
 3. Press the **Skip/Search Buttons** to adjust the hour.
 4. Press the **ALM 1** or **ALM 2 Buttons** to set the hour.
 5. Press the **Skip/Search Buttons** to adjust the minute.
 6. Press the **ALM 1** or **ALM 2 Buttons** to set the minute and time.
 7. Press the **Skip/Search Buttons** to set the alarms to sound to the radio, iPod, or buzzer.
-

Tuning the AM/FM Radio

1. Turn the unit on by pressing the **Power/Alarm Off Button**.
 2. Press the **Source Button** to switch the unit to radio mode.
 3. Press the **Stop/AM/FM Button** to switch between AM and FM radio modes.
 4. Press the **Skip/Search/Tune/Hour/Minute Buttons** to tune the AM or FM radio.
-

Saving Radio Stations to the Unit's Memory

1. Tune to the desired radio station by following the "Tuning the AM/FM Radio" instructions listed above.
 2. Press and hold the **Clock/Preset Button** to begin saving the current AM or FM radio station.
 3. Press the **Play/Pause/Preset + Buttons** to cycle through the numbered memory slots on the unit.
 4. Press the **Clock/Preset Button** to save the current AM or FM radio station to the selected memory slot.
 5. To cycle through saved radio stations, press the **Play/Pause/Preset + Button** when in radio mode.
-

 
Connecting to an Audio Player using the Aux Input

When connecting two products using an RCA Cable, match the colored ports with the same colored connection. (Red to Red, White to White, and Yellow to Yellow)

1. Plug one end of a 3.5 mm Cable (not included) or a 3.5 mm - RCA Cable (not included) into the **AUX (Auxiliary) Input** on the unit.
 2. Plug the other end of the 3.5 mm Cable into the audio output/headphone output on an Mp3 Player or Other Audio Source.
 3. Press the **Power/AL Off Button** to turn the unit on.
 4. Press the **Source Button** to switch the unit to Aux mode.
 5. Audio played from the Mp3 Player or Other Audio Source will now be heard on the unit.
-

If connecting to the headphone output of an audio source, the source's volume controls may need to be adjusted for optimal sound.

Locations of Controls

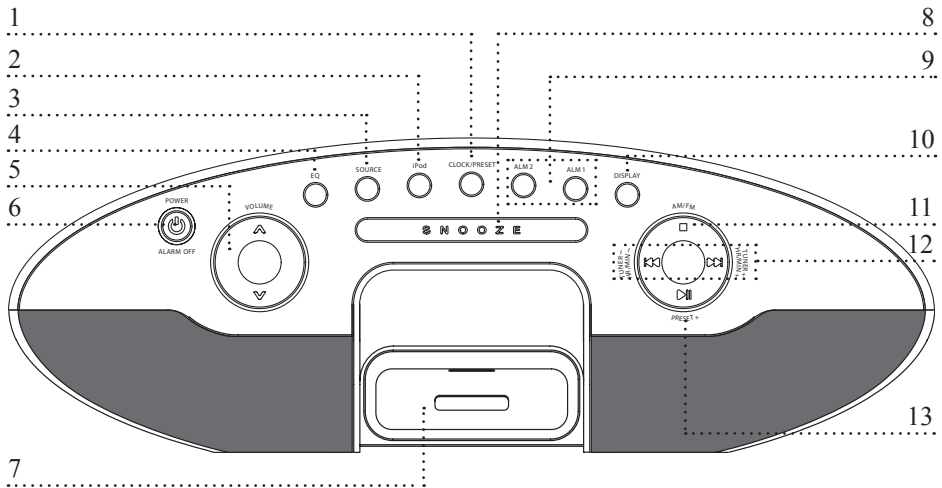

Control Definitions

1 Clock/Preset Button

Press and hold the Clock/Preset Button, with the unit turned off, to set the clock.

Press the Clock/Preset Button, in radio mode, to save a radio station to the unit's memory.

2 iPod Button

Press the iPod Button to switch the unit to iPod mode.

3 Source Button

Press the Source Button to switch the unit between radio and aux mode.

4 EQ Button

Press the EQ Button to switch the unit between rock, classic, jazz, pop, and normal equalizer modes.

5 Volume Buttons

Press the Volume Buttons to adjust the volume of audio output from the unit.

6 Power/Alarm Off Button

Press the Power/Alarm Off Button to turn the unit off and on.

Press the Power/Alarm Off Button to turn the alarm off after it has sounded.

7 Docking Station

Use the Docking Station to connect an iPod to the unit.

8 Snooze Button

Press the Snooze Button to delay the alarm for an additional 6 minutes, after the alarm has sounded.

Press & hold the Snooze Button consecutively to set the sleep timer between 10-90 minutes in increments of 10.

9 ALM 1 & ALM 2 Buttons

Press and hold the ALM 1 Button, with the unit turned off, to set alarm 1.

Press and hold the ALM 2 Button, with the unit turned off, to set alarm 2.

10 Display Button

Press the Display Button to view the time on the LCD Display when in radio or aux mode.

11 Stop/AM/FM Button

Press the Stop/AM/FM Button to stop a docked iPod during play.

Press the Stop/AM/FM Button in radio mode to switch between AM and FM radio.

12 Skip/Search/Tune/Hour/Minute Buttons

Press the Skip/Search/Tune/Hour/Minute Buttons to skip from one song to the next on a docked iPod.

Press and hold the Skip/Search/Tune/Hour/Minute Buttons to search through an individual track on a docked iPod.

Press the Skip/Search/Tune/Hour/Minute Buttons to tune the AM and FM radio.

 
 
 
Press the Skip/Search/Tune/Hour/Minute Buttons to adjust the hour and minute when setting the clock or alarms.

13 Play/Pause/Presets + Button

Press the Play/Pause/Presets + Button to play or pause a docked iPod.

Press the Play/Pause/Presets + Button to cycle through saved AM and FM radio stations.

Locations of Controls

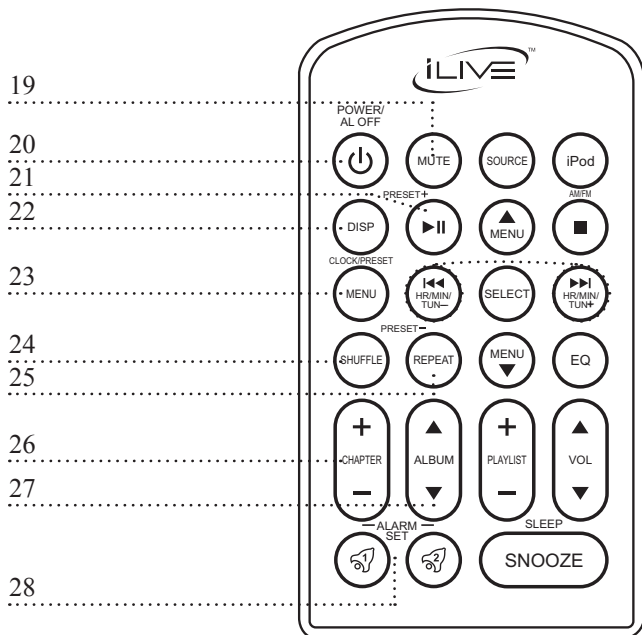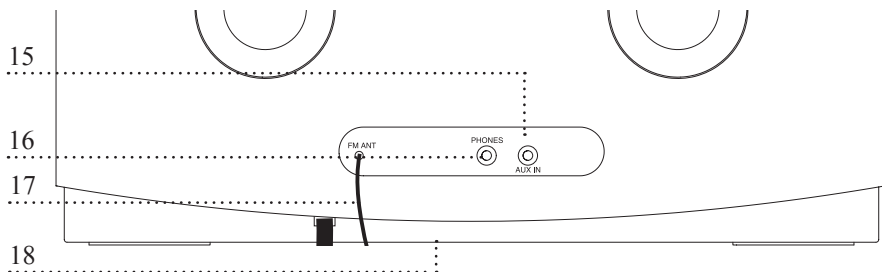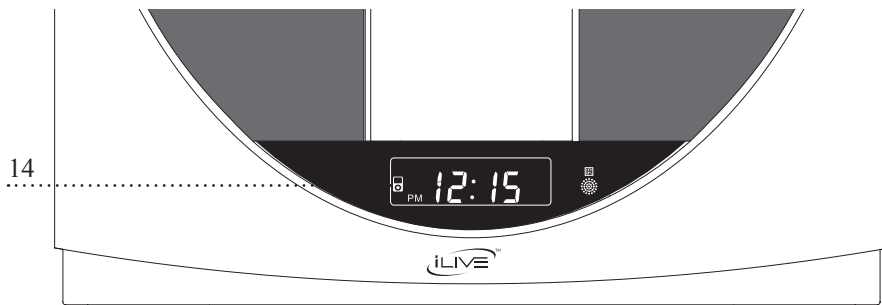

Control Definitions

14 LCD Display

Use the LCD Display to view the time, alarm time, radio frequency and unit's current source.

15 Auxiliary Input

Use the Auxiliary Input to connect an MP3 player or other audio device to the unit.

16 Headphone Jack

Use the Headphone Jack to connect a set of headphones or earbuds to the unit.

17 FM Antenna

The FM Wire Antenna provides flexibility and range when adjusting the FM reception. An AM Antenna is built into the Clock Radio.

18 Battery Backup Compartment (requires 3 - AAA batteries, not included)

The Battery Back-Up will save the clock and alarm settings in case of a power outage.

19 Mute Button

Press the Mute Button to mute the volume of the unit.

20 Power/Alarm Off Button

Press the Power/Alarm Off Button to turn the unit off and on.

Press the Power/Alarm Off Button to turn the alarm off after it has sounded.

21 Play/Pause/Preset + Button

Press the Play/Pause/Preset + Button to play or pause a docked iPod.

Press the Play/Pause/Preset + Button to cycle through saved AM and FM radio stations.

22 Display Button

Press the Display Button to view the time on the LCD Display when in radio mode.

23 Menu/Clock/Preset Button

Press the Menu/Clock/Preset Button to move back through menus on a docked iPod.

Press and hold the Menu/Clock/Preset Button, with the unit turned off, to set the clock.

Press the Menu/Clock/Preset Button, in radio mode, to save a radio station to the unit's memory.

24 Shuffle Button

Press the Shuffle Button to play songs from a docked iPod in random order.

25 Repeat/Preset - Button

Press the Repeat/Preset - Button once to repeat the current track playing from a docked iPod.

Press the Repeat/Preset - Button twice to repeat the current album or playlist playing from a docked iPod.

Press the Repeat/Preset - Button to cycle through saved AM and FM radio stations.

26 Chapter Button

Press the Chapter Button to cycle through chapters on a docked iPod.

27 Album Button

 
Press the Album Button to cycle through albums on a docked iPod.

28 ALM 1 & ALM 2 Buttons

Press and hold the ALM 1 Button, with the unit turned off, to set alarm 1.

Press and hold the ALM 2 Button, with the unit turned off, to set alarm 2.

Locations of Controls

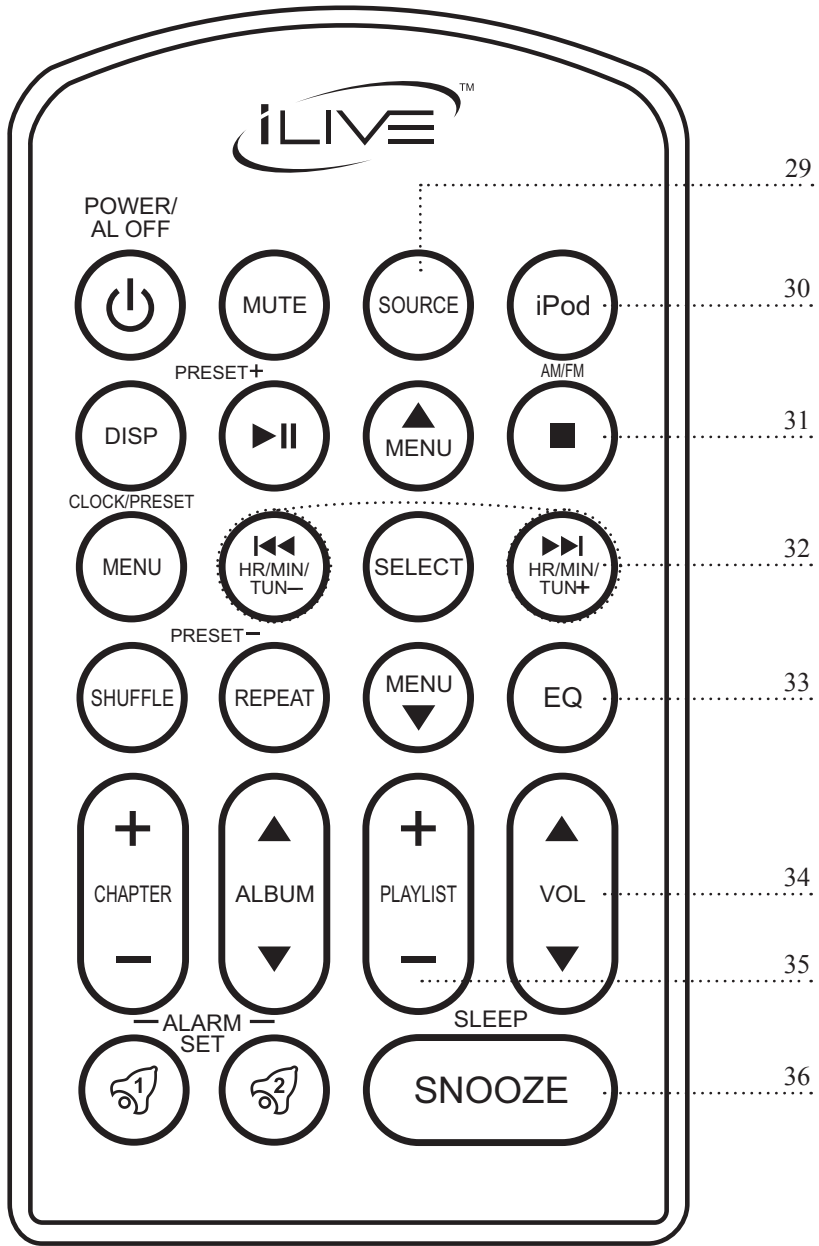

Control Definitions

29 Source Button

Press the Source Button to switch the unit between radio and aux mode.

30 iPod Button

Press the iPod Button to switch the unit to iPod mode.

31 Stop/AM/FM Button

Press the Stop/AM/FM Button to stop a docked iPod during play.

Press the Stop/AM/FM Button in radio mode to switch between AM and FM radio.

32 Skip/Search/Tune/Hour/Minute Buttons

Press the Skip/Search/Tune/Hour/Minute Buttons to skip from one song to the next on a docked iPod.

Press and hold the Skip/Search/Tune/Hour/Minute Buttons to search through an individual track on a docked iPod.

Press the Skip/Search/Tune/Hour/Minute Buttons to tune the AM and FM radio.

Press the Skip/Search/Tune/Hour/Minute Buttons to adjust the hour and minute when setting the clock or alarms.

33 EQ Button

Press the EQ Button to switch the unit between rock, classic, jazz, pop, and normal equalizer modes.

34 Volume Buttons

Press the Volume Buttons to adjust the volume of audio output from the unit.

35 Playlist Button

Press the Playlist Button to cycle through playlists on a docked iPod

36 Snooze/Sleep Button

Press the Snooze/Sleep Button to delay the alarm for an additional 6 minutes, after the alarm has sounded.

Press & hold the Snooze/Sleep Button consecutively to set the sleep timer between 10 and 90 minutes.



Service Information

Address 2116 Carr Street, St. Louis MO, 63106

Phone 1-314-621-2881

Fax 1-314-588-1805

Email customerservice@ilive.net

Website www.ilive.net

To download this Instruction Manual in English, Spanish, or French visit the Support section at www.ilive.net.

Para descargar este manual de instrucción en inglés, español, o francés visite la sección de la ayuda en www.ilive.net.

Pour télécharger ce manuel d'instruction en anglais, espagnol, ou le Français visitez la section de soutien à www.ilive.net.

© 2007 DPI, Inc. iPod not included. iPod is a trademark of Apple Inc., registered in the U.S. and other countries. TruBass, SRS and the SRS logo are trademarks of SRS Labs, Inc. All other trademarks appearing herein are the property of their respective owners.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>