



*IHT3817DT*  
**INSTRUCTION MANUAL**



# Warnings and Precautions

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player’s lid is open and the system’s interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside. Please refer any servicing to qualified service personnel.

**CAUTION:** FOR CONTINUED PROTECTION AGAINST RISK OF FIRE, ONLY REPLACE T1.6L/250V FUSE WITH EQUIVALENT TYPE AND VOLTAGE.

 
**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

**WARNING:** Danger of explosion if the remote control’s batteries are incorrectly installed. Replace only with the same or equivalent battery.

**WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



# Important Safety Instructions

**1. Read these instructions.** All the safety and operating instruction should be read before the product is operated.

**2. Keep these instructions.** The safety and operating instruction should be retained for future reference.

**3. Heed all warnings.** All warning on the product and in the operating instructions should be adhered to.

**4. Follow all instructions.** All operating and use instructions should be followed.

**5. Water and Moisture:** Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement, or near a swimming pool, and the like. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.

**6. Cleaning:** Clean only with a dry cloth. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners.

**7. Do not block any ventilation openings.** Install in accordance with the manufacturer's instructions. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface.

**8. Heat:** Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

**9. Grounding or Polarization:** Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

**10. Power-Cord Protection:** Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

**11. Accessories:** Only use attachments/accessories specified by the manufacturer. Do not place this product on an unstable cart, stand tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the

product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

**12. A product and cart combination should be moved with care.** Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



S3125A

PORTABLE  
CART  
WARNING

**13. Lightning:** Unplug this apparatus and disconnect the antenna or cable system during lightning storms or when unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.

**14. Servicing:** Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

**15. Power Sources:** Only connect to the type of house-hold power supply as indicated in the operating instructions and rating label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.

 
**16. Overloading:** Do not overload wall outlets or extension cords as this can result in a risk of fire or electric shock.

**17. Object and Liquid Entry:** Never push objects of any kind or spill liquid into this product through openings as this could result in a risk of fire or electric shock.

**18. Replacement Parts and Safety Check:** When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer. Ask the service technician to perform safety checks to ensure proper operation to avoid possible fire, electric shock, or other hazards.

**19. Outdoor Antenna Grounding:** If an outside antenna or cable system is connected to the product, be sure the antenna or cable

system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna connection to grounding electrodes, and requirements for the grounding electrode.

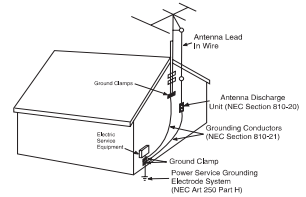

**20. Wall or Ceiling Mounting:** The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

**21. Where the AC plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.**

 
**22. Ventilation:** Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

**23. Protective Attachment Plug:** The product is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.

**24. Power Lines:** An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

# Features

---

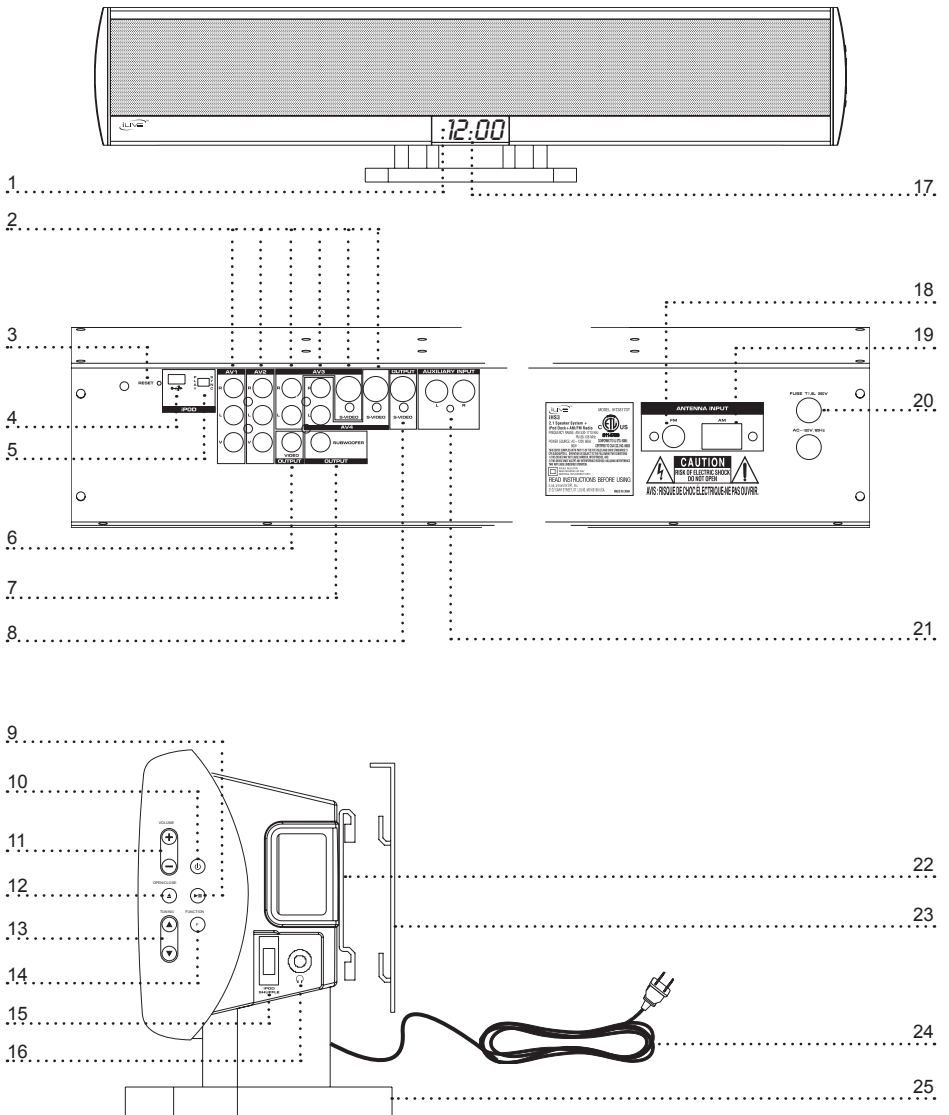

# Features Defined

---

- 1 **LCD Display** View the Time, PM Indicator, iPod Indicator, Aux Input Indicator, AV Input Indicator, EQ Mode, and Radio Frequency through this Liquid Crystal Display.

---

  - 2 **AV Inputs 1-4** Connect an audio or audio/video source, such as a CD or DVD player, to one of these four inputs. Note that inputs 3 and 4 are paired with AV3 S-Video and AV4 S-Video inputs. The S-Video Inputs provide improved picture quality.

---

  - 3 **RESET** Press the RESET button using a paperclip or like object to restore factory default settings on the unit.

---

  - 4 **Mini-USB** Use this mini-USB port to connect the unit to a computer and sync your iPod directly from the player's docking station.

---

  - 5 **Sync / Play** When the included USB cord is connected, use this toggle switch to change control between the unit and a computer.

---

  - 6 **Video Out** Plug the yellow connector of an AV Cord in the Video Output to send a video signal from an iPod to a display with a composite video input.

---

  - 7 **Subwoofer Output** Use the SW Line-out to connect the unit to an external Subwoofer.

---

  - 8 **S-Video Output** Connect your display via the S-Video Output for improved picture quality.

---

  - 9 **PLAY/PAUSE** Press the PLAY/PAUSE button to play or pause an iPod.

---

  - 10 **POWER** Press the POWER button to turn the unit on or off.

---

  - 11 **VOLUME** Press the (+) button to increase the volume and the (-) button to decrease the volume.

---

  - 12 **OPEN/CLOSE** Press the OPEN/CLOSE button to extend and retract the motorized iPod dock.

---

  - 13 **TUNING** Press the (+) and (-) buttons to cycle through different radio frequencies.

---

  - 14 **FUNCTION** Press the F button to switch between iPod, radio, AUX (AUX In), iPod 2 (iPod Shuffle port), AV1, AV2, AV3, or AV4 control.

---

  - 15 **iPod Shuffle** Use the iPod shuffle port to connect a first generation iPod shuffle to the player.

---

  - 16 **Headphone Jack** Use the Headphone Jack to plug in a set of headphones (not included).

---

  - 17 **iPod Motorized Docking Station** Select the correct insert and connect your iPod, iPod mini, or iPod nano.

---

  - 18 **FM Antenna** The FM detachable and extendable antenna provides flexibility and range when adjusting the FM reception.

---

  - 19 **AM Antenna** The AM detachable antenna provides flexibility and range when adjusting the AM reception.

---

  - 20 **Fuse (T1.6L/250V Fuse)** If this fuse is blown, unplug the unit and replace it with an equivalent type.

---

  - 21 **AUX In** Use the AUX In port to connect external audio source to the unit.

---

  - 22 **Wall Mount** After removing the table top stand, use the Wall Mount when attaching the player to a wall.
    - *To ensure a reliable and sturdy installation, please consult a professional installer before mounting the unit to a wall.*

---

  - 23 **Wall Mount Brackets** Screw the Wall Mount Brackets into a wall stud before hanging the unit onto the brackets.

---

 
  - 24 **AC Cord (120V ~ 60 Hz)** The attached AC Cord provides power to the player.

---

  - 25 **Table Stand** Use the Table Stand when placing the player on an entertainment center, table, or desk.
-

# Peripherals

26	.....	35
27	.....	36
28	.....	37
29	.....	38
30	.....	39
31	.....	40
32	.....	41
33	.....	42
34	.....	43
	.....	44
	.....	45
	.....	46

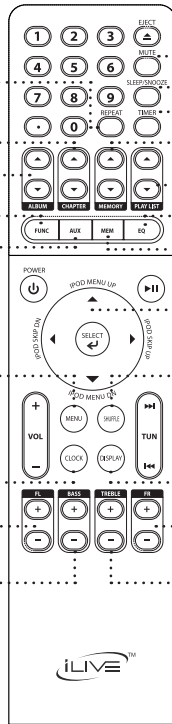

Buttons that are not defined in the Peripherals Defined section, are defined in the Features Defined section.

## iPod Inserts

Model	#	iPod Capacity
iPod mini	3	4GB, and 6GB
iPod	4	20GB, and U2 Special Edition
	5	40GB
iPod with color display	6	20GB, 30GB, and U2 Special Edition
	7	40GB
iPod nano	8	1GB, 2GB, and 4GB
iPod with video	9	30GB
	10	60GB, and 80GB
iPod nano (second generation)	11	2GB, 4GB, and 8GB

# Peripherals Defined

---

- 26 REPEAT** Press the REPEAT button to set an iPod to repeat one song, or all songs.
- 
- 27 CHAPTER** Press up on the CHAPTER button to increase the chapter number, or press down on the CHAPTER button to decrease the chapter number.
- 
- 28 ALBUM** Press up or down on the ALBUM button to cycle through the iPod's albums.
- 
- 29 FUNCTION** Press the FUNCTION button to switch between radio, iPod Docking Station and IPOD SHUFFLE port.
- 
- 30 AUX** Press the AUX button to switch the between AV1-4 inputs..
- 
- 31 MENU** Press the MENU button to enter the menu on an iPod.
- 
- 32 CLOCK** With the power off, press and hold the CLOCK button to set the clock.
- 
- 33 FL** Press the FL buttons to adjust the balance of the unit's left speaker.
- 
- 34 BASS** Press the BASS buttons to adjust the bass level.
- 
- 35 MUTE** Press the MUTE button to decrease the volume entirely.
- 
- 36 SLEEP/SNOOZE** Press the SLEEP/SNOOZE button to set the sleep timer (5 - 90 minutes), or activate the snooze (5 minutes) after the alarm has gone off.
- 
- 37 TIMER** Press the TIMER button to set the unit to come on or turn off at a certain time.
- 
- 38 MEMORY** Press MEMORY buttons to cycle up and down through preset radio stations.
- 
- 39 PLAYLIST** Press the PLAYLIST buttons to cycle up and down through the playlists on an iPod.
- 
- 40 EQ** Press the EQ button to switch equalizer modes between Classic, Jazz, Rock, Pop, Flat, SRS (SRS TruBass®), 3D (3D Enhanced Audio).
- 
- 41 MEM** Use the MEM button to save stations to the unit's memory.
- 
- 42 Navigation Controls/SELECT** Use the Navigation Controls to move through an iPod menu system, change the radio station, or set the clock. Press the SELECT button to select a song, photo, or video on your iPod, or when the power is off, use the SELECT button to set the clock.
- 
- 43 SHUFFLE** Press the SHUFFLE button to randomly play songs on an iPod.
- 
- 44 DISPLAY** Press the display button to cycle between the clock and the current function.
- 
- 45 FR** Press the FR buttons to adjust the balance of the unit's right speaker.
- 
- 46 TREBLE** Press the TREBLE buttons to adjust the treble level.
-

# Operations

---

## Setting the Clock

- a. With the unit off, press the CLOCK button on the remote.
- b. When the time begins to blink on the LCD Display, press the SKIP UP button to cycle up through the hour and press the SKIP DN button to cycle up through the minute.
- c. Wait 9 seconds, and the clock will be set with the specified time.

## Setting the Timer

- a. With the player off, press the TIMER button to cycle through the different timer options (timer ON, timer OFF, ON, and OFF).
- b. At the “timer on” or “timer off” functions, indicated by “ON” or “OFF” followed by a time, press the IPOD FWD/HR button to cycle up through the hour and press the IPOD REW/MIN button to cycle up through the minute.
- c. After the “timer on” and/or “timer off” functions are set, press the TIMER button until the LCD Display reads “ON” by itself.
- d. Wait for 5 seconds and the timer functions will be set with the specified time.

## Saving Radio Stations to the Memory

- a. Press the FUNCTION button consecutively until the FM or AM radio mode is on.
- b. Tune to the desired station.
- c. Using the Remote Control, press the MEM button.
- d. Press the IPOD FWD/HR. and IPOD REV/MIN buttons to select a Preset to save the current station under.
- e. After the preset has been selected press the MEM button. The current radio frequency is now saved to the selected preset.

---

*continued*



# Operations

---

## Viewing Video or Photos from your iPod on an External Device

- a. Connect a composite video cable from the player's video out jack to a composite video input jack on a TV. You can also connect the player to a TV with an S-Video cable. (composite video cable not included)
- b. Insert your iPod Video into the player and navigate to either the Photos or Videos on the iPod.
- c. On the iPod, select either Slideshow Settings in Photos or Video Settings in Videos.
- d. On the iPod, set the TV Out setting to On.
- e. Press the FUNCTION button until the player's mode is set to IPOD, as indicated on the LCD Display.
- f. Make sure your external viewing device is set to the proper input. You will now be able to control your iPod from the player's control panel and remote, and view your iPod on a video display.

 
 
 
 
## Connecting Other Digital Audio Devices

- a. Use a line-in cord to connect an iPod shuffle or other audio device to the line-in port. (line-in cord included)
- b. Press the FUNCTION button to set the player to AV 1, 2, 3, or 4 mode, as indicated by the LCD Display.
- c. An iPod shuffle or other audio devices other will now play through the speakers of the player.

*Operations that are not listed in the operations section, are explained in the Features Defined or Peripherals Defined sections.*



# Table Stand

*The attached table stand can be removed by unscrewing the four dark colored screws. It is recommended that you remove the table stand when mounting the unit on a wall.*

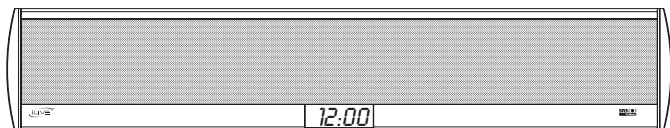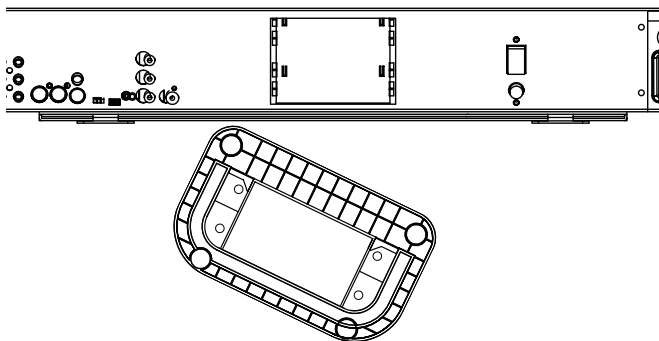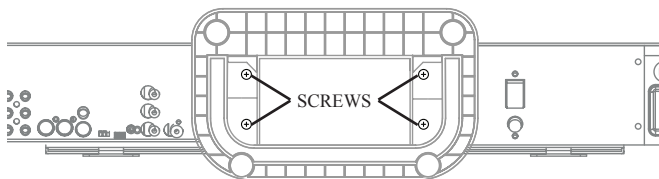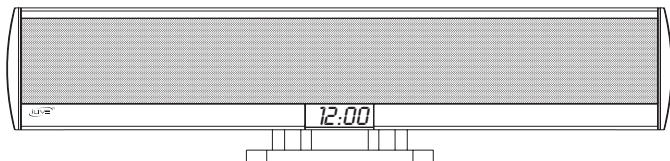


# Wall Mount

  ---

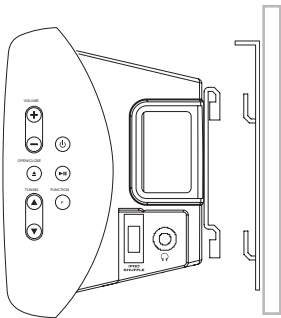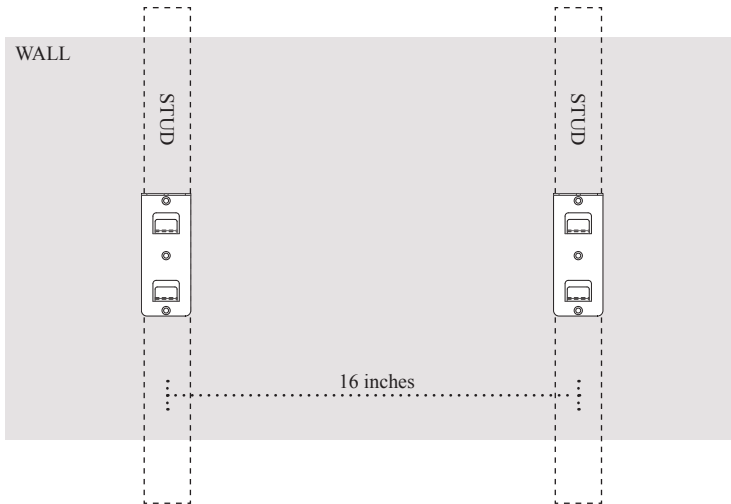

Hanging the wall mount is as easy as screwing the two included brackets into the wall and hanging the player on them. It is recommended that you use 3 screws to secure each individual bracket to the wall.

Be sure to drill the brackets into the studs of the wall to ensure a firm and sturdy hold. Most houses have the studs spaced on 16 inch centers.

 *To ensure a reliable and sturdy installation, please consult a professional installer before mounting the unit to a wall.*



## Service Information

**Address** 2116 Carr Street, St. Louis MO, 63106

**Phone** 1-314-621-2881

**Fax** 1-314-588-1805

**Email** [customerservice@ilive.net](mailto:customerservice@ilive.net)

**Website** [www.ilive.net](http://www.ilive.net)

---

To download this Instruction Manual in English, Spanish, or French visit the Support section at [www.ilive.net](http://www.ilive.net).

Para descargar este manual de instrucción en inglés, español, o francés visite la sección de la ayuda en [www.ilive.net](http://www.ilive.net).

Pour télécharger ce manuel d'instruction en anglais, espagnol, ou le Français visitez la section de soutien à [www.ilive.net](http://www.ilive.net).

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>