ISBW2113B Bluetooth Indoor/Outdoor Speakers

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to

B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occu-in a particular installation. If this sequence harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the is encouraged to vity to correct the interference by one or more of the following measure and the sequence of the sequence of the sequence of the sequence television reception, which can be determined by turning the equipment off and on, the second sequence of the sequence of the sequence television reception with the sequence the more of the following measure the second sequence the interference by one or more of the following measure television the interference by one or more of the following measure television the second sequence television to the second sequence television television the second sequence television t

Reorient or relocate the receiving antenna. Increase the separation between the equipment and rece

IMPORTANT SAFETY INSTRUCTIONS

FCC Warnings

Read these Instructions. Keep these Instructions. Heed all Warnings.

JUV=

- Follow all instructions.
- Do not use this apparatus ne Clean only with a dry cloth. us near water

- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatu (including amplifiers) that produce heat. (including amplifiers) that produce heat. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blacks with one wider than the other. A grounding type plug has two blades and a third grounding proog. The wide blade or the third group are provided for your safety. When the provided plug desen oft in into your outlet, consult an electrician for replacement of the obsolete outlet. 9
- Protect the power cord from being walked on or pinched particularly at plugs, convenience recept and the point where they exit from the apparatus tacles
- Only use attachments/accessor specified by the manufacturer ssories
- specified by the manufacturer. 12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/paratus combination to avoid inju-from tp-over. Upplug this apparatus during lightning storms or when unused for long periods of time.
- storms or when unused for long p Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or pulgs is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. 13.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus. L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenun de liquida, tel qu'un vasa, ne doit être placé sur l'objet. Mani plug is used a disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains completely. name ping snout de disconnecteu n'un un main societ d'une compret La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complétement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable. Caution marking is located at the rear or bottom of the apparatus
- autori marking is tocated at the tear of bottom of the apparatus. Itention marquage est situé sur le paneau arrière ou inférieur de l'unité. The marking information is located at the rear or bottom of apparatus. Le marquage est situé sur le paneau arrière ou inférieur de l'unité.

- WARNINGS AND PRECAUTIONS
- CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- .
- AVERTISSEMENT: Pour réduire le risque d'incendie ou de choo électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- CAUTION: Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- responsible for compliance could void the user's authority to operate the equipment. WARNING: Do not place this unit directly onto furniture surfaces with any type of soft, porous or sensitive finish. As with any nibber compound made with oils, the feet could cause marks or staining where the feet reside. We recommend using a pottective burrier such as a clob or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining. WARNING: Use of this unit near fluorescent lighting may cause interference regarding use of the renote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause. CALTEDIN: Dueme of camedorae of the them is in corresults maleard
- CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- PRÉCAUTION: Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent. WARNING: There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- WARNING: The remote control's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste
- nue put me trans, instead recycle or dispose of as hazardous waste WARNING: Lithuin batterise, like all rechargedbe batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for dispose or recycling practices in your area. They should never be incimerated since they might explode WARNING: Shock hazard Do Nor Open. AVIS: REQUE DE CHOC ÉLECTRQUE NE PAS OUVRIR Mains pluts insue an disconned tedrine and its hourd income and house in markle hast.
- Mains plug is used as disconnect device and it should remain readily operable du intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected form the mains socket outlet completely. during mains ping snoud oe acconnected tomi me mains socket outer (La prise du secteur est utilisé pour déconnecter le système. La prise du secteur ne doit pas être obstruée ou doit être facileme accessible pendant son utilisation. Pour être complètement décon l'alimentation d'entrée, la prise doit être débranchée du secteur.

Do not mix old and new batteries Do not mix alkaline, standard (carbon-zine), or rechargeable (ni-cad, ni-mh, etc) batteries

No mezcle baterías viejas y nuevas. No mezcle baterías alcalinas, estándar (carbono-zinc) o recargables (ni-cad, ni-mh, etc.). WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK. DO NOT REMOVE ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

CAUTION

ATTENTION HEQUE D' ELECTRODUTION



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerou voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.




vithin an equilate the



is symbol indicates that this product orporates double insulation between hazardous mains voltage and user accessible parts



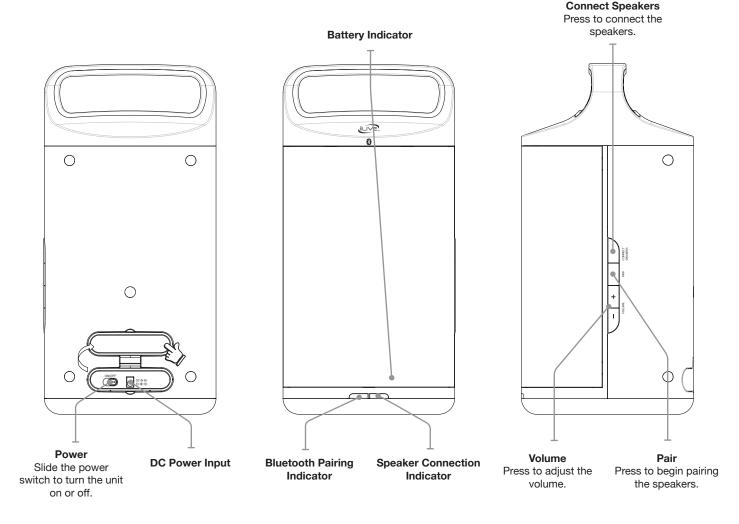

For Warranty Information and the most up-to-date version of this User's Guide, go to www.iLiveElectronics.com

Customer Service: 1-888-999-4215

Email Support: prodinfo@dpiinc.com, Email Parts: partsinfo@dpiinc.com Copyright © 2013 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.

Setup

Charging the Internal Batteries

DC power input: requires an AC/DC power adapter (included)

 Connect one end of the included AC/DC power adaptor to the unit and one end to an AC power outlet to recharge the battery.


Note: Each speaker must be charged independently.

Note: Battery life when not in use is roughly 6 months. The battery must then be fully recharged.

Battery Indicator

Status	Indicator
Power Off	No light
Charging	Red light
Fully Charged	No light
Low battery	Flashing red light

(Please charge each speaker for at least 2.5 hours before using).

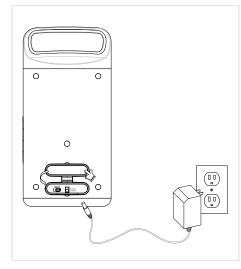

Speaker Connection & Bluetooth Setup

Playing Audio Wirelessly

track.

Bluetooth Device.

Bluetooth Device.

through the speakers.

1.

2.

3.

4.

Follow the instructions for Pairing a

connected Bluetooth Device to select a

To play, pause or skip the selected track.

use the native controls on the connected

Any audio played through the connected

Bluetooth device will now be heard

Use the native controls on the

Pairing the Speakers

(This process should be done FIRST before pairing a Bluetooth device. This should only need to be done upon first use.)

 Power on the speakers by sliding the power switch to the **ON** position on both units (first make sure both speakers are fully charged).

> The Bluetooth Indicator and Speaker Connection Indicator will flash slowly in unison. If the Speaker Connection Indicator is not flashing, but is solid white both speakers your speakers are already paired. You can skip to the Pairing a Bluetooth Device section.

2. Press the **Connect Speakers** button on both speakers simultaneously.

The Speaker Connection Indicators will flash quickly.

 Wait until both Speaker Connection Indicators are solid white, this means the speakers have been successfully paired.

Please note that this process can take up to 1 minute.

Note : For all future uses please turn on both speakers and wait for them to connect (it may take up to 1 minute for them to pair automatically even after initial use). There should be no need to press Connect Speaker button again.

If any pairing issues should occur, please follow the above steps again.

Pairing a Bluetooth Device

1. Make sure you have first followed the instructions for <u>Pairing the Speakers.</u>

When pairing, the device should remain within 3 feet of the speakers.

 Press the Pair button on ONLY one of the speakers. The pair indicator will begin flash quickly.

> Using the native controls on your Bluetooth device, select the "ISBW2113" in your Bluetooth settings to pair.

> If your device requests a password, enter the default password " 0 0 0 0 ".

Refer to the user's manual for your specific device for instructions on pairing and connecting Bluetooth devices.

3. When successfully paired, the pairing indicator will stop flashing and will remain solid.

After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device.

If your device should become unpaired, follow the above steps again.

If any pairing issues should occur, un-pair the unit on your Bluetooth device and follow the above steps again.

Note : If two speakers with the ISBW2113 name appear on the pairing list of your device, please erase one of ISBW2113 listed in your Bluetooth device and repeat the above steps again.



International Support

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at: www.iLiveElectronics.com Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en **www.iLiveElectronics.com**

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur www.iLiveElectronics.com

For Warranty Information and the most up-to-date version of this User's Guide, go to www.iLiveElectronics.com Email Support: prodinfo@dpiinc.com, Email Parts: partsinfo@dpiinc.com Customer Service: 1-888-999-4215

Copyright @ 2013 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com