



USER'S GUIDE

V:1028-0721-10



ITP100B

Bar Speaker with Dock for iPhone/iPod

For the most up-to-date version of this User's Guide, go to www.ilive.net

Warnings and Precautions

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- **AVERTISSEMENT:** Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- **CAUTION:** Use of any controls or adjustments or performance of procedures other than those herein specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **PRÉCAUTION:** *Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.*
- **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- **WARNING:** The remote control's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste

- **WARNING:** Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.
- **WARNING:** Shock hazard - Do Not Open.
- **AVIS:** *RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR*

Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.

La prise du secteur est utilisé pour déconnecter le système.

La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.

Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.

No mezcle baterías viejas y nuevas.

No mezcle baterías alcalinas, estándar (carbono-zinc) o recargables (ni-cad, ni-mh, etc.).



WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Important Safety Instructions

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.



12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

FCC Warnings

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.
- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.
- Caution marking is located at the rear or back of the apparatus.
Attention marquage est situé à l'arrière ou à l'arrière de l'appareil
- The marking information is located at the rear or back of apparatus.
Les informations de marquage est situé à l'arrière ou à l'arrière de l'appareil.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

BAR SPEAKER WITH DOCK FOR IPHONE/IPOD

Features

- Works with iPhone
- Made for iPod
- FM radio
- Station memory presets (20 FM)
- Treble and bass controls
- 2 channel stereo system
- Digital clock
- Single alarm
- Gradual wake
- Wake to iPhone/iPod or radio
- White LCD display
- Sleep timer
- Video output
- Line input (3.5mm)
- Remote control
- Last user setting memory
- Auxiliary input (RCA)
- Basic iPhone/iPod controls
- Supports Universal docking brackets
- Soft-eject iPod docking drawer
- Cloth net speaker grill
- DC power: requires AC/DC power adapter (included)


Included

- ITP100B
- AC/DC power adapter
- Remote control: requires 2 AAA batteries (included)
- Docking brackets for iPhone/iPod

TABLE OF CONTENTS

INTRODUCTION	6
SETUP	8
CLOCK	9
IPHONE AND IPOD & VIDEO OUTPUT	10
FM RADIO, AUX INPUT, AND LINE INPUT	11
COMPANY INFORMATION	12

 INTRODUCTION

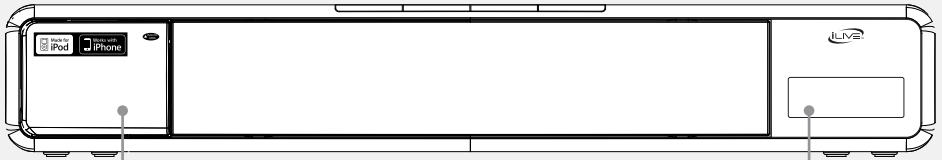

**SOFT EJECT
DOCK FOR
iPhone/iPod**

DISPLAY

POWER/AL OFF

Press to turn the power off or on. Press to turn the alarm off after it has sounded.

 
**SOURCE/CLOCK
ADJUST**

Press to switch between iPod, FM, AUX and LINE IN modes. In power off mode, press and hold to set the clock.

**AUX IN (Stereo
RCA)**


LINE IN (3.5mm)

**FM WIRE
ANTENNA**

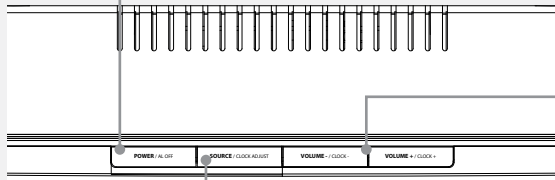

**VOLUME/CLOCK
(-/+)**

 Press to adjust the volume. When setting the clock, press to adjust the hour and minute.

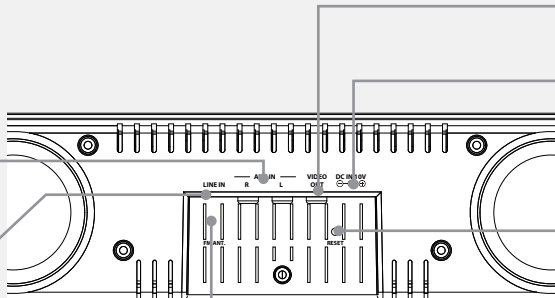


**VIDEO OUT
(COMPOSITE)**

DC POWER INPUT

RESET

 
Press to reset the bar speaker to its default settings.

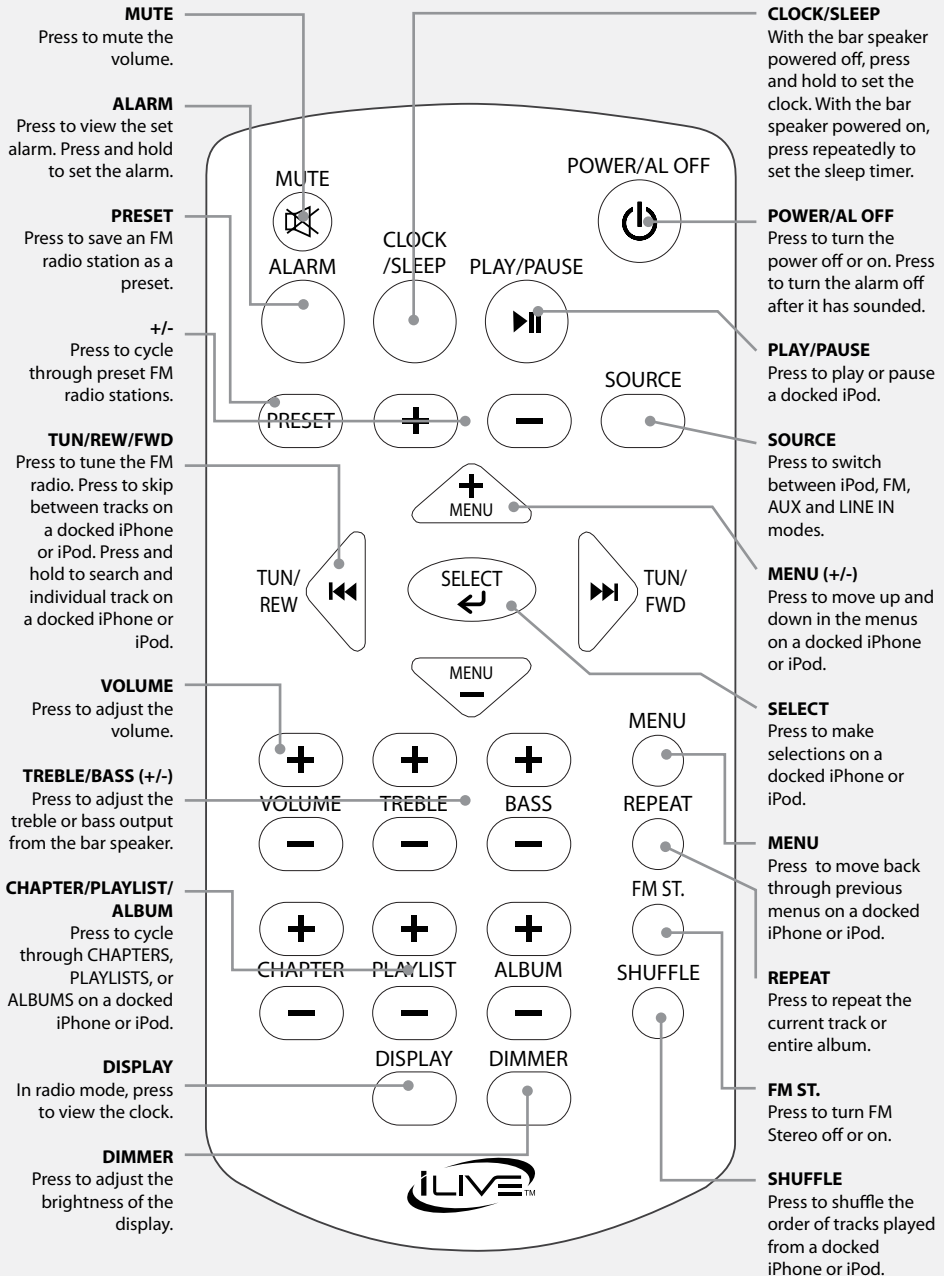

SETUP


Power

 Plug the included AC/DC power adapter into the **DC POWER INPUT** on the bar speaker and a standard AC power outlet

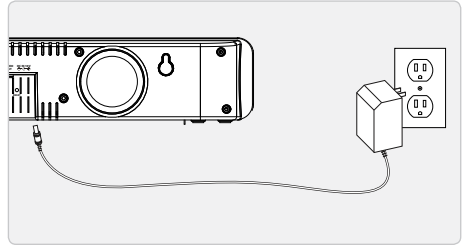

Remote

 Requires 2 AAA batteries (included)

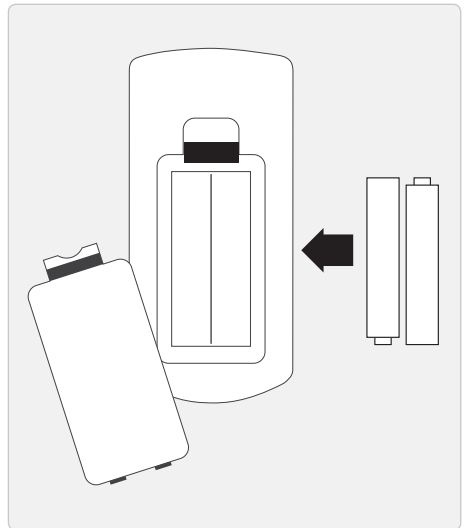

Setting the Sleep Timer

- 1 Press the **POWER** button to turn the bar speaker on.
- 2 Press the **CLOCK/SLEEP** button on the remote repeatedly to set the sleep timer.
- 3 After the set amount of time has expired, the bar speaker will automatically power off.

Setting the Clock

- 1 Press the **POWER** button to turn the bar speaker off.
- 2 Press and hold the **SOURCE/CLOCK ADJUST** button for 3 seconds.
The time on the display will begin blinking.
- 3 Press the **VOLUME/CLOCK (+/-)** buttons to adjust the hour.
- 4 Press the **SOURCE/CLOCK ADJUST** button.
- 5 Press the **VOLUME/CLOCK (+/-)** buttons to adjust the minute.
- 6 Press the **SOURCE/CLOCK ADJUST** button to finish setting the time.

Setting the Alarm

- 1 Press the **POWER** button to turn the bar speaker off.
- 2 Press and hold the **ALARM** button, on the remote, for 3 seconds.
The alarm time on the display will begin blinking.
- 3 Press the **TUN/REW/FWD** buttons on the remote to adjust the hour.
- 4 Press the **ALARM** button.
- 5 Press the **TUN/REW/FWD** buttons to adjust the minute.
- 6 Press the **ALARM** button.
- 7 Press the **TUN/REW/FWD** buttons to switch between wake to iPod or wake to FM radio, as indicated on the display.
- 8 Press the **ALARM** button to finish setting the alarm.

IPHONE AND IPOD & VIDEO OUTPUT

Docking an iPhone/iPod

- 1 Press the top right corner of the **SOFT EJECT DOCK FOR iPhone/iPod** to expose the dock for iPhone/iPod.
- 2 Swing the **STABILITY LEVER** down to stabilize the bar speaker while docking an iPhone or iPod.
- 3 Locate the numbered bracket that fits the iPhone/iPod model that will be docked.

 
Each included bracket has a number on it, indicating which iPhone/iPod model that bracket is compatible with. See the separate bracket chart page to identify which bracket is needed.

- 4 Snap the bracket into place over the iPhone/iPod connector in the dock.
- 5 Connect the iPhone or iPod to the connector inside the Dock for iPhone/iPod.

When the speaker is plugged in, using AC power, the docked iPhone or iPod will charge.

Playing an iPhone/iPod

- 1 Follow the instructions for DOCKING AN iPhone/iPod.
- 2 Press the **POWER** button to turn the bar speaker on.
- 3 Press the **SOURCE/CLOCK ADJUST** button to switch to iPOD MODE.
- 4 Press the **PLAY/PAUSE** button on the remote to begin playing music from a docked iPhone or iPod.

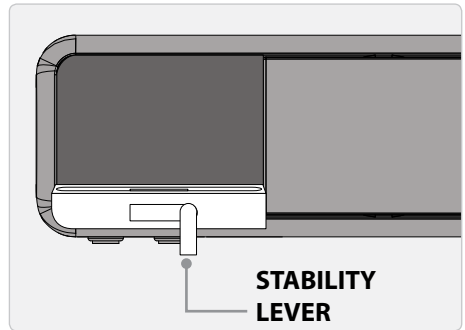

Using the Video Output

- 1 Connect an RCA video cable (not included) to the **VIDEO OUTPUT** on the bar speaker and the video input on a television.
- 2 Power the bar speaker on and press the **SOURCE/CLOCK ADJUST** button to switch to iPod mode.
- 3 Follow the instructions for DOCKING AN iPhone/iPod
Make sure the iPhone or iPod's TV OUT setting is set to ON.
- 4 Adjust the connected television to the correct input setting.
- 5 Video played through the docked iPod will now play through the connected television.

FM RADIO, AUX INPUT, AND LINE INPUT

Using the Line Input

- 1 Connect an audio source to the **LINE INPUT** using an 3.5mm line input cable (not included).
- 2 Press the **POWER** button to turn the bar speaker on.
- 3 Press the **SOURCE/CLOCK ADJUST** button to switch to LINE IN MODE.
- 4 Use the native controls on the connected audio device to begin playing music through the connected bar speaker.

Using the AUX Input

- 1 Connect an audio source to the **AUX INPUT** using an RCA stereo cable (not included).
When connecting the RCA stereo cable, match the colored plugs on the cable to the colored connections on the bar speaker.
- 2 Press the **POWER** button to turn the bar speaker on.
- 3 Press the **SOURCE/CLOCK ADJUST** button to switch to AUX MODE.
- 4 Use the native controls on the connected audio device to begin playing music through the connected bar speaker.

Playing the FM Radio

- 1 Press the **POWER** button to turn the bar speaker on.
- 2 Press the **SOURCE/CLOCK ADJUST** button to switch to FM RADIO MODE.
- 3 Press the **TUN/REW/FWD** buttons on the remote to tune the FM radio.
Adjust the FM WIRE ANTENNA to improve FM radio reception.

Saving Radio Stations

- 1 Follow the instructions for PLAYING THE FM RADIO.
- 2 Tune to the desired FM radio station.
- 3 Press the **PRESET** button on the remote.
- 4 Press the +/- buttons on the remote to select a preset.
- 5 Press the **PRESET** button to save the current FM radio station to the selected preset.
- 6 Press the +/- buttons to cycle through FM radio presets.

Company Information

Green Initiative



Environmental Commitment to ‘Protect for Today and Sustain for Tomorrow’

2009 marked the official launch of DPI, Inc.’s corporate campaign for a greener and cleaner world. DPI is building upon environmental initiatives introduced at all of their facilities to help formulate and sustain significant and important conservation efforts within its manufacturing and marketing communities. In addition to targeting and selecting energy efficient product features, and structuring ‘green office’ procedures, other initial program efforts include:

- Reduction of all packaging sizes
- Recyclable plastics for clamshell packages, with a plan to eventually replace plastic with recyclable paper
- Recycled fiber board in place of the polyfoam in packing boxes
- Recycled plastics in place of the virgin material in product construction

International Support

To download this User’s Guide in English, Spanish, or French, visit the support section at www.ilive.net.

Para transferir esta guía de usuario en inglés, español, o francés, visite la sección de la ayuda en www.ilive.net.

Pour télécharger ce guide de l’utilisateur en anglais, espagnol, ou français, visitez la section de soutien chez www.ilive.net.

Contact Information

Phone: 1-888-999-4215

Email: customerservice@ilive.net

Parts Email: partsinfo@dpi-global.com

Website: www.ilive.net

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>