

# FLEX SHAFT GRINDER MODEL G9928 INSTRUCTION MANUAL



COPYRIGHT © MARCH, 2002 BY GRIZZLY INDUSTRIAL, INC.
1821 VALENCIA ST., BELLINGHAM, WA 98227
WARNING: NO PORTION OF THIS MANUAL MAY BE REPRODUCED IN ANY SHAPE
OR FORM WITHOUT THE WRITTEN APPROVAL OF GRIZZLY INDUSTRIAL, INC.
PRINTED IN CHINA



Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints.
- Crystalline silica from bricks, cement and other masonry products.
- Arsenic and chromium from chemically-treated lumber.

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: Work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

# **SAFETY**

# **A**WARNING

### For Your Own Safety Read Instruction Manual **Before Operating This Equipment**

The purpose of safety symbols is to attract your attention to possible hazardous conditions. This manual uses a series of symbols and signal words which are intended to convey the level of importance of the safety messages. The progression of symbols is described below. Remember that safety messages by themselves do not eliminate danger and are not a substitute for proper accident prevention measures.

# 

Indicates an imminently hazardous situation which, if not avoided, WILL result in death or serious injury.

# **AWARNING**

Indicates a potentially hazardous situation which, if not avoided, **COULD** result in death or serious injury.

# **ACAUTION**

Indicates a potentially hazardous situation which, if not avoided, MAY result in minor or moderate injury. It may also be used to alert against unsafe practices.

NOTICE This symbol is used to alert the user to useful information about proper operation of the equipment.

## **AWARNING Safety Instructions For Power Tools**

- KEEP ALL SAFETY DEVICES IN 1. PLACE and in working order.
- REMOVE ADJUSTING KEYS AND WRENCHES. Form habit of checking to see that keys and adjusting wrenches are removed from tool before operation.
- KEEP WORK AREA CLEAN. 3. Cluttered areas and benches invite accidents.
- 4. DO NOT USE IN DANGEROUS **ENVIRONMENT**. Do not use power tools in damp or wet locations, or where any flammable or noxious fumes may exist. Keep work area well lighted.

- 5. KEEP CHILDREN AND VISITORS AWAY. All children and visitors should be kept a safe distance from work area.
- 6. MAKE WORKSHOP CHILD PROOF with padlocks, master switches, or by removing starter kevs.
- 7. DO NOT FORCE TOOL. It will do the job better and safer at the rate for which it was designed.
- USE THE RIGHT TOOL. Do not 8. force tool or attachment to do a job for which it was not designed.
- DO NOT USE UNDER THE INFLU-9. ENCE OF DRUGS OR ALCOHOL.

# **AWARNING**Safety Instructions For Power Tools

- 10. WEAR PROPER APPAREL. Do not wear loose clothing, gloves, neckties, rings, bracelets, or other jewelry which may get caught in moving parts. Non-slip footwear is recommended. Wear protective hair covering to contain long hair.
- 11. ALWAYS USE SAFETY GLASSES. Also use face or dust mask if cutting operation is dusty. Everyday eyeglasses only have impact resistant lenses, they are NOT safety glasses.
- 12. WEAR APPROVED HEARING PROTECTION.
- 13. SECURE WORK. Use clamps or a vise to hold work when practical. It is safer than using your hand and frees both hands to operate tool.
- **14. DO NOT OVERREACH.** Keep proper footing and balance at all times.
- 15. MAINTAIN TOOLS WITH CARE. Keep tools sharp and clean for best and safest performance. Follow instructions for lubricating and changing accessories.
- 16. REDUCE THE RISK OF UNINTEN-TIONAL STARTING. Make sure switch is in off position before plugging in.
- **17. DISCONNECT TOOLS** before servicing and changing accessories.
- 18. USE THE RECOMMENDED

- ACCESSORIES. Consult the owner's manual for recommended accessories. The use of improper accessories may cause risk of injury.
- 19. CHECK DAMAGED PARTS. Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced.
- 20. NEVER ALLOW UNTRAINED USERS TO RUN THIS TOOL WHILE UNSUPERVISED.
- 21. IF YOU ARE UNSURE OF THE INTENDED OPERATION, STOP USING THE TOOL.
- 22. DO NOT BEND SHAFT MORE THAN 90 DEGREES. Make sure the Flexible Shaft (P9928021) is not bent more than a 90 degree angle. If the Flexible Shaft is kinked or crimped, it could cause inefficient grinder operation and create a safety hazard. Note: Performance of the Flexible Shaft Grinder may vary depending on local line voltage or use of an extension cord.

# INTRODUCTION

### Commentary

We are proud to offer the Grizzly Model G9928 Flex Shaft Grinder. This model is part of a growing Grizzly family of fine power tools. When used according to the guidelines set forth in this manual, you can expect years of trouble-free, enjoyable operation and proof of Grizzly's commitment to customer satisfaction.

The Model G9928 features a 42" long flex shaft to maneuver around your workpiece, a foot pedal to control the speed from 0 to 15,000 R.P.M., a motor hanger, and a 5/32" keyed chuck handpiece. To use chisels, please order H0757 4-Pc. Carving Chisels from the current catalog.

We are pleased to provide this manual with the Model G9928. It was written to encourage safety considerations and guide you through general operating procedures and maintenance. This manual represents our effort to produce the best documentation possible.

The specifications, details, and photographs in this manual represent the Model G9928 as supplied when the manual was prepared. However, owing to Grizzly's policy of continuous improvement, changes may be made at any time with no obligation on the part of Grizzly. If you have any comments regarding this manual, please write to us at the address below:

Grizzly Industrial, Inc.

c/o Technical Documentation
P.O. Box 2069

Bellingham, WA 98227-2069

Most importantly, we stand behind our tools. If you have any service questions or parts requests, please call or write us at the location listed below.

Grizzly Industrial, Inc. 1203 Lycoming Mall Circle Muncy, PA 17756 Phone: (570) 546-9663

Fax: (800) 438-5901 E-Mail: techsupport@grizzly.com Web Site: http://www.grizzly.com



Read the manual before assembly and operation. Become familiar with this tool, its safety instructions, and its operation before beginning any work. Serious personal injury may result if safety or operational information is not understood or fol-

### **OPERATION**

# **AWARNING**



Operating this tool can propel objects into the air, causing immediate eye damage. To protect yourself, always wear American National Standards Institute (ANSI) approved safety glasses or goggles when operating this equipment.

### **OPERATION**

- Before using the Flexible Shaft Grinder, determine a location in the work area to mount the Holder and the Hanger. Drive (2) wood screws through (2) Electrical Rings and through the Hanger to the mounting location selected. Attach the Hanger to the Motor Housing with (2) screws.
- 2. The Flex Shaft and Flex Shaft Housing need to be lubricated with a light lithium lubricant or machine oil. Use only as small amount. Too much lubricant can become messy and possibly get on your workpiece. Do not use automotive grease as it is too viscous.
- 3. A setscrew holds the Flex Shaft to the Motor Shaft. When the Flex Shaft is secure to the Motor Shaft, thread the end of the Flex Shaft Housing onto the base of the Motor Housing. Be sure that the Flexible Shaft assembly is not bent more than 90 degrees or kinked.
- 4. The Grinder Head fits onto the end of the Flex Shaft. It is secure when you hear a snap. To remove the Grinder Head from the Flex Shaft, firmly grasp the Grinder Head and Flex Shaft with two hands and pull apart.




Under normal working conditions and use, it is normal for the Motor Housing to become hot. However, the hot surface may cause personal injury if touched or present a possible danger of an extreme fire hazard if near flammable material. If the Flexible Shaft Grinder is used for a prolonged period of time and the motor housing becomes EXTREMELY HOT, stop using the machine and let it cool down.

- Loosen the Drill Chuck with the Chuck Key. Insert the desired bit and tighten the Drill Chuck with the Chuck Key.
- 6. Attach the Foot Control as follows. Insert the Plug into the Female Plug. Insert the Power Plug into the electrical outlet. The depth of the Foot Control can be set by using the setscrew on the Foot Control, this will allow the operator to adjust for desired maximum speed. Tightening and lowering the screw will allow for greater speeds. Loosening and raising the screw will limit the speed allowed by the Foot Control.
- Make sure all safety instructions have been followed before turning the machine "ON".
- **8.** Once the tool is on, select the desired speed by using the Foot Control.

G9928 Flex Shaft Grinder

### MAINTENANCE

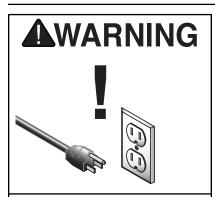

Disconnect power to the machine when performing any maintenance, assembly or adjustments. Failure to do this may result in serious personal injury.

### CARBON BRUSH REPLACEMENT

Normal Carbon Brush life is 500-2000 hours, depending on use. Always replace both brushes when it is time for replacement.


- 1. Use a small screwdriver and remove the Carbon Brushes from the sides of the Motor Housing. Be careful when removing the brushes, as the brushes are spring-loaded and may spring out. If the brush does not spring out, gently remove it using the tip of the screwdriver. Examine the brush surface for scratches or breakage. If the brush is broken, replace immediately with a replacement brush from Grizzly Industrial. Inc.
- If the brush is not broken and is dirty, remove the dirt using a pencil eraser. Gently rub with the eraser until all of the dirt has been removed. Remove all eraser dust so it will not interfere with the machine.
- 3. Reinstall the brushes and gently tighten with the screwdriver.

### LUBRICATING FLEX SHAFT

The Flex Shaft and Flex Shaft Housing should be lubricated after every 8 hours of use. A small amount of light lithium lubricant or machine oil applied to the length of the Flex Shaft is all that is needed. Too much lubricant can become messy and possibly get on your workpiece. Do not use automotive grease as it is too viscous.

### REPLACEMENT ACCESSORIES

Should you need to order replacement parts for your Model G9928, please refer to the following parts diagram and list.

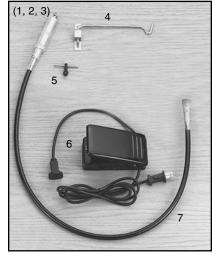

Ref Part #		Description	
01	P9928022	CHUCK HOUSING	
02	P9928023	BEARING 608Z	
03	P9928024	CHUCK	
04	P9928001	HANGER	
05	P9928025	CHUCK KEY	
06	P9928027	FOOT CONTROL	
07	P9928021	FLEX SHAFT	
80	P9928008	CARBON BRUSH (NOT SHOWN)	

### WARRANTY AND RETURNS

Grizzly Industrial, Inc. warrants every product it sells for a period of 1 year to the original purchaser from the date of purchase. This warranty does not apply to defects due directly or indirectly to misuse, abuse, negligence, accidents, repairs or alterations or lack of maintenance. This is Grizzly's sole written warranty and any and all warranties that may be implied by law, including any merchantability or fitness, for any particular purpose, are hereby limited to the duration of this written warranty. We do not warrant or represent that the merchandise complies with the provisions of any law or acts unless the manufacturer so warrants. In no event shall Grizzly's liability under this warranty exceed the purchase price paid for the product and any legal actions brought against Grizzly shall be tried in the State of Washington, County of Whatcom.

We shall in no event be liable for death, injuries to persons or property or for incidental, contingent, special, or consequential damages arising from the use of our products.

To take advantage of this warranty, contact us by mail or phone and give us all the details. We will then issue you a "Return Authorization Number," which must be clearly posted on the outside as well as the inside of the carton. We will not accept any item back without this number. Proof of purchase must accompany the merchandise.

The manufacturers reserve the right to change specifications at any time because they constantly strive to achieve better quality equipment. We make every effort to ensure that our products meet high quality and durability standards and we hope you never need to use this warranty.

Please feel free to write or call us if you have any questions about the machine or the manual.

> Grizzly Industrial, Inc. 1203 Lycoming Mall Circle Muncy, PA 17756 Phone: (570) 546-9663

Fax: (800) 438-5901

F-Mail: techsupport@grizzly.com

Web Site: http://www.grizzly.com

Thank you again for your business and continued support. We hope to serve you again soon!

### **WARRANTY CARD**

N	ame		
St	treet		
С	ity	State	Zip
ΡI	hone Number	E-Mail	FAX
			Serial #
Th			pasis. It will be used for marketing purposes to help
			e, all information is strictly confidential.
1.	How did you learn about us?		9. How many of the machines checked above are
	Advertisement	Friend	Grizzly?
	Catalog	Card Deck	40.1411
	World Wide Web		10. Which portable/hand held power tools do you own
	Other		Check all that applyBelt SanderOrbital Sander
2	What is your annual ho	susphold incomo?	Biscuit JoinerPalm Sander
۷.		\$60,000-\$69,999	Circular SawPortable Planer
	\$30,000-\$39,999	\$70,000-\$79,999	Detail Sander Saber Saw
	\$40,000-\$49,999	\$80,000-\$89,999	Drill/DriverReciprocating Saw
	\$50,000-\$59,999	\$90,000 +	Miter SawRouter
	φου,σου φου,σου	φ30,000 1	Other
3.	What is your age group	?	
	20-29	50-59	11. What machines/supplies would you like Grizzl
	30-39	60-69	Industrial to carry?
	40-49	70 +	
,	Haw long have you have	an a waadwarkar0	
4.	How long have you bee0 - 2 Years		
	2 - 8 Years	20+ Vears	
	2 - 0 16013	20+ 16ai3	12. What new accessories would you like Grizzl
5.	How would you rank yo	our woodworking skills?	Industrial to carry?
	Simple	Advanced	
	Intermediate	Master Craftsman	
6	What atationany woods	vorking toolo do vou own?	-
о.	Check all that apply.	orking tools do you own?	
	Air Compressor	Panel Saw	13. What other companies do you purchase your tool
	Band Saw	Planer	and supplies from?
	Band Saw Drill Press	Power Feeder	
	Drum Sander	Radial Arm Saw	
	Dust Collector	Shaper	
	Spindle Sander	Jointer	4.4 De constituir la constituir de la co
	Table Saw Mortiser	Lathe	14. Do you think your purchase represents good value
	Mortiser	Wide Belt Sander	YesNo
	Horiz.Boring Machine		15. Would you recommend Grizzly to a friend?
	Vacuum Veneer Press Other		YesNo
	OuleI		
7	How many of your wo	odworking machines are	16. Would you allow us to use your name as a refer
٠.	Grizzly?		ence for Grizzly customers in your area? Note: We
	- ,	<del></del>	never use names more than three times.
	Which benchtop tools	do you own? Check all	YesNo
	that apply.		17 Comments
	1"x42" Belt Sander	6" - 8" Grinder	17.Comments:
	5" - 8" Drill Press	Mini Lathe	
	8" Table Saw Scroll Saw	8" - 10" Bandsaw	
	Scroll Saw Spindle/Belt Sande	DISC/Delt Sander	
	10"-12"Thickness F	iiviii ii Joii itei Planer	
	10 12 111101111033 1		

Other

### Send a Grizzly Catalog to a friend:

Name		
Street		
City	State	Zip

### FOLD ALONG DOTTED LINE



Place Stamp Here



GRIZZLY INDUSTRIAL, INC. P.O. BOX 2069 BELLINGHAM, WA 98227-2069



TAPE ALONG EDGES--PLEASE DO NOT NAIL





Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com