

# MODEL H0582 1" HEAVY-DUTY PIN-CLUTCH IMPACT WRENCH INSTRUCTION SHEET

| <b>A</b> WARNING |  |  |
|------------------|--|--|
|                  | EYE/EAR INJURY HAZARD!<br>Wear safety glasses and<br>hearing protection when<br>using this tool! |  |
|                  | INJURY HAZARD! Always disconnect tool from air to prevent unexpected operation during service!   |  |
|                  | DO NOT EXCEED 120 PSI! Personal injury could occur.  |  |
|                  | SHATTERING HAZARD!<br>Use sockets rated for<br>impact wrench use only.                           |  |

## **Specifications**

| Drive Size                 | 1"          |
|----------------------------|-------------|
| Bolt Size Capacity         | 13/4"       |
| No-Load Speed              | 3,800 RPM   |
| Maximum Torque             | 1,200 ft/lb |
| Air Inlet Size             | 1/4" NPT    |
| Air Consumption            | 12 CFM      |
| Operating Pressure         | 90 PSI      |
| Maximum Operating Pressure | 120 PSI     |
| Weight                     | 12.75 lbs   |

### **Inventory**

| A. | Impact Wrench | 1 |
|----|---------------|---|
|    | Handle        |   |
| C. | Nut           | 1 |

### Setup

Secure the handle to the impact wrench with the nut, so the assembled tool looks like **Figure 1**.

If you need help with your new pneumatic tool, call our Tech Support at: (570) 546-9663.

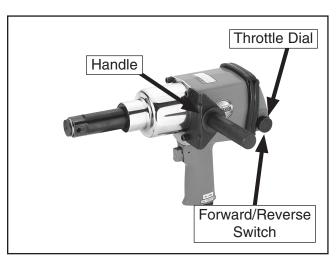


Figure 1. Model H0582

### **Operation**

For best performance, connect your wrench to the air supply with a 1/2" air line and fittings. Slide the forward/reverse switch left or right to make the wrench turn clockwise or counterclockwise. Adjust the throttle dial to increase or decrease torque.

### **Maintenance**

The impact wrench MUST be regularly lubricated with 3-4 drops of air tool oil directly into the air fitting before each use. For best results, we recommend using an in line filter, lubricator, and regulator, as shown in **Figure 2.** 

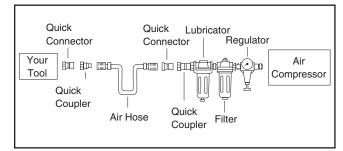



Figure 2. Installing your tool.

COPYRIGHT © OCTOBER, 2008 BY GRIZZLY INDUSTRIAL, INC.

WARNING: NO PORTION OF THIS MANUAL MAY BE REPRODUCED IN ANY SHAPE
OR FORM WITHOUT THE WRITTEN APPROVAL OF GRIZZLY INDUSTRIAL, INC.

#TR11306 PRINTED IN TAIWAN

# \*H0582 Parts Breakdown and List

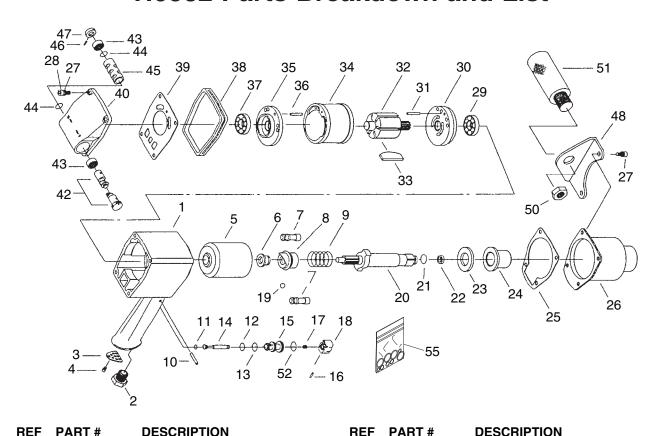

| REF | PART#     | DESCRIPTION           |
|-----|-----------|-----------------------|
| 1   | PH0582001 | HOUSING               |
| 2   | PH0582002 | AIR INLET             |
| 3   | PH0582003 | EXHAUST DEFLECTOR     |
| 4   | PH0582004 | SCREW                 |
| 5   | PH0582005 | HAMMER CAGE           |
| 6   | PH0582006 | DRIVE CAM BASE        |
| 7   | PH0582007 | HAMMER PIN            |
| 8   | PH0582008 | DRIVE CAM             |
| 9   | PH0582009 | SPRING                |
| 10  | PH0582010 | ROLL PIN              |
| 11  | PORP004   | O-RING 3.8 X 1.9 P4   |
| 12  | PORP009   | O-RING 8.8 X 1.9 P9   |
| 13  | PORS012-5 | O-RING 12 X 1.5 S12.5 |
| 14  | PH0582014 | VALVE STEM            |
| 15  | PH0582015 | VALVE BUSHING         |
| 16  | PH0582016 | SCREW                 |
| 17  | PH0582017 | VALVE SPRING          |
| 18  | PH0582018 | TRIGGER               |
| 19  | PH0582019 | STEEL BALL            |
| 20  | PH0582020 | ANVIL                 |
| 21  | PORS016   | O-RING 15.5 X 1.5 S16 |
| 22  | PH0582022 | ANVIL COLLAR          |
| 23  | PH0582023 | SPACER                |
| 24  | PH0582024 | BUSHING               |
| 25  | PH0582025 | GASKET                |
| 26  | PH0582026 | HAMMER COVER          |

| KEF | PARI#     | DESCRIPTION           |
|-----|-----------|-----------------------|
| 27  | PH0582027 | SCREW & SPRING WASHER |
| 29  | PH0582029 | BALL BEARING          |
| 30  | PH0582030 | FRONT END PLATE       |
| 31  | PRP15M    | ROLL PIN 3 X 8        |
| 32  | PH0582032 | ROTOR                 |
| 33  | PH0582033 | ROTOR BLADE           |
| 34  | PH0582034 | CYLINDER              |
| 35  | PH0582035 | REAR END PLATE        |
| 36  | PRP37M    | ROLL PIN 3 x 14       |
| 37  | PH0582037 | BALL BEARING          |
| 38  | PH0582038 | HOUSING BAND          |
| 39  | PH0582039 | GASKET (A)            |
| 40  | PH0582040 | REAR COVER            |
| 42  | PH0582042 | REGULATOR (A & B)     |
| 43  | PH0582043 | REGULATOR BUSHING     |
| 44  | PORP018   | O-RING 17.8 X 2.4 P18 |
| 45  | PH0582045 | VALVE BUSHING         |
| 46  | PRP17M    | ROLL PIN 3.5 X 24     |
| 47  | PH0582047 | REVERSE VALVE KNOB    |
| 48  | PH0582048 | PLATE                 |
| 49  | PW02      | FLAT WASHER 3/8       |
| 50  | PN09M     | HEX NUT M12-1.75      |
| 51  | PH0582051 | HANDLE                |
| 52  | PORP014   | O-RING 13.8 X 2.4 P14 |
| 55  | PH0582055 | COMPLETE O-RING KIT   |
|     |           | ·                     |

<sup>\*</sup> Not all parts shown are available for purchase.

†

<sup>†</sup> Not included; item shown for aftermarket purchase only.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com