

# ELECTRIC 3/6" CROWN STAPLER MODEL H3119 INSTRUCTION MANUAL



COPYRIGHT © OCTOBER, 2002 BY GRIZZLY INDUSTRIAL, INC.
1821 VALENCIA ST., BELLINGHAM, WA 98227
WARNING: NO PORTION OF THIS MANUAL MAY BE REPRODUCED IN ANY SHAPE
OR FORM WITHOUT THE WRITTEN APPROVAL OF GRIZZLY INDUSTRIAL, INC.
PRINTED IN CHINA

# **WARNING**

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints.
- Crystalline silica from bricks, cement, and other masonry products.
- Arsenic and chromium from chemically treated lumber.

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

## SAFETY

## **AWARNING**

## For Your Own Safety Read Instruction Manual **Before Operating This Equipment**

The purpose of safety symbols is to attract your attention to possible hazardous conditions. This manual uses a series of symbols and signal words which are intended to convey the level of importance of the safety messages. The progression of symbols is described below. Remember that safety messages by themselves do not eliminate danger and are not a substitute for proper accident prevention measures.

Indicates an imminently hazardous situation which, if not avoided, WILL result in death or serious injury.

# WARNING

Indicates a potentially hazardous situation which, if not avoided, COULD result in death or serious injury.

**ACAUTION** 

Indicates a potentially hazardous situation which, if not avoided, MAY result in minor or moderate injury. It may also be used to alert against unsafe practices.

NOTICE This symbol is used to alert the user to useful information about proper operation of the equipment.

## **AWARNING** Safety Instructions

- **KEEP ALL SAFETY DEVICES IN** PLACE and in working order.
- **REMOVE ADJUSTING KEYS AND** WRENCHES. Form habit of checking to see that keys and adjusting wrenches are removed from winch before operation.
- KEEP CHILDREN AWAY. All children should be kept at a safe distance from winch.
- DO NOT USE UNDER THE INFLU-**ENCE OF DRUGS OR ALCOHOL.**
- **NEVER ALLOW UNTRAINED** USERS TO RUN THIS TOOL WHILE UNSUPERVISED.
- WEAR PROPER APPAREL. Do not wear loose clothing, gloves, neckties, rings, bracelets, or other jewelry which may get caught in moving parts. Non-slip footwear is recommended. Wear protective hair covering to contain long hair.
- 7. ALWAYS USE SAFETY GLASS-ES. Also use face or dust mask if cutting operation is dusty. Everyday eyeglasses only have impact resistant lenses, they are NOT safety glasses.
- IF YOU ARE UNSURE OF THE INTENDED OPERATION, STOP **USING THE TOOL.**

## **AWARNING**

## **Safety Instructions For Power Tools**

for the tool. Make sure your extension cord is in good condition. Conductor size should be in accordance with the chart below. The amperage rating should be listed on the motor or tool nameplate. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating. Your extension cord must also contain a ground wire and plug pin. Always repair or replace extension cords if they become damaged.

Minimum Gauge for Extension Cords

| AMP    | LENGTH |      |       |
|--------|--------|------|-------|
| RATING | 25ft   | 50ft | 100ft |
| 0-6    | 18     | 16   | 16    |
| 7-10   | 18     | 16   | 14    |
| 11-12  | 16     | 16   | 14    |
| 13-16  | 14     | 12   | 12    |
| 17-20  | 12     | 12   | 10    |
| 21-30  | 10     | 10   | No    |

- 10. WEAR PROPER APPAREL. Do not wear loose clothing, gloves, neckties, rings, bracelets, or other jewelry which may get caught in moving parts. Non-slip footwear is recommended. Wear protective hair covering to contain long hair.
- 11. ALWAYS USE SAFETY GLASSES. Also use face or dust mask if cutting operation is dusty. Everyday eyeglasses only have impact resistant lenses, they are NOT safety glasses
- **12. SECURE WORK.** Use clamps or a vise to hold work when practical. It's safer than using your hand and frees both hands to operate tool.
- **13. DON'T OVERREACH.** Keep proper footing and balance at all times.

- 14. MAINTAIN TOOLS WITH CARE. Keep tools sharp and clean for best and safest performance. Follow instructions for lubricating and changing accessories.
- DISCONNECT TOOLS before servicing and changing accessories, such as blades, bits, cutters, and the like.
- 16. REDUCE THE RISK OF UNIN-TENTIONAL STARTING. Make sure switch is in off position before plugging in.
- 17. USE RECOMMENDED ACCES-SORIES. Consult the owner's manual for recommended accessories. The use of improper accessories may cause risk of injury.
- 18. CHECK DAMAGED PARTS.


  Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced.

## **AWARNING**

No list of safety guidelines can be complete. Operating this tool may require additional safety precautions specific to your working environment. Failure to use reasonable caution while operating this tool could result in serious personal injury.

## INTRODUCTION

#### Commentary

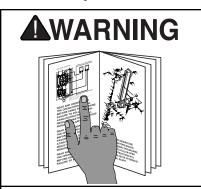

Lack of familiarity with this manual could cause serious personal injury. Spend a sufficient amount of time becoming familiar the contents of this manual, including all the safety warnings.

We are proud to offer the Grizzly Model H3119 Electric  $\frac{3}{16}$ " Crown Stapler. This model is part of a growing Grizzly family of fine power tools. When used according to the guidelines set forth in this manual, you can expect years of trouble-free, enjoyable operation and proof of Grizzly's commitment to customer satisfaction.

The Model H3119 is a high powered electric stapler capable of firing 20 gauge,  $^3\!/_6"$  crown staples in lengths ranging from  $^1\!/_4"$  to  $^9\!/_6".$  The quick loading magazine holds 85 staples and the weight is 3.25 lbs.

The Model H3119 is best suited for installation of carpet, insulation, ceiling tiles, cabinets and HVAC systems. We are pleased to provide this manual with the Model H3119. It was written to encourage safety considerations and guide you through general operating procedures and maintenance. This manual represents our effort to produce the best documentation possible.

The specifications, details, and photographs in this manual represent the Model H3119 as supplied when the manual was prepared. However, owing to Grizzly's policy of continuous improvement, changes may be made at any time with no obligation on the part of Grizzly. If you have any comments regarding this manual, please write to us at the address below:

Grizzly Industrial, Inc.

c/o Technical Documentation
P.O. Box 2069

Bellingham, WA 98227-2069

Most importantly, we stand behind our tools. If you have any service questions or parts requests, please call or write us at the location listed below.

Grizzly Industrial, Inc. 1203 Lycoming Mall Circle Muncy, PA 17756 Phone: (570) 546-9663 Fax: (800) 438-5901

E-Mail: techsupport@grizzly.com Web Site: http://www.grizzly.com

## **OPERATION**

#### **Getting Started**

Please take the time to become familiar with this instruction manual. The information contained will allow you to get the maximum enjoyment and use from your new tool.

#### **Loading The Stapler**

The Model H3119 can hold up to 85 staples in the quick loading magazine.

#### To load the stapler:

- 1. Unplug the tool from the power source!
- 2. Press the silver lever while sliding back on the staple magazine.
- 3. Point the tip of the stapler upward to reveal the stapler loading area. The loading area consists of a groove or channel that runs along the bottom of the stapler.
- 4. Load a stick of 20 gauge  $\%_{16}$ " crown staples  $\%_{16}$ " to  $\%_{16}$ " long into the loading area.
- Slowly slide the staple magazine back into the closed position until the silver lever latches in the closed position.

#### Using The Stapler



DO NOT pull the trigger until the tip of the stapler is against the surface to be stapled. The stapler does NOT have a safety mechanism.

- Be sure the stapler is loaded and the magazine is closed securely.
- 2. Wear safety glasses when using the stapler
- **3.** Plug the stapler into a 110V power source.
- **4.** Place the tip of the stapler against the workpiece and pull the trigger.

## **A**CAUTION

Avoid repeatedly shooting staples into the exact same location without moving the tip of the stapler. A staple could become jammed in the tip of the stapler.

#### **Clearing Jammed Staples**

Staple jams are an inevitable part of operating any stapler.

#### To clear a jammed stapler:

- Unplug the tool from the power source!
- **2.** Open the staple magazine and remove all un-jammed staples.
- The jammed staple may be easily removed at this time; otherwise, the stapler tip will need to be disassembled.
- To disassemble the tip, use an allen wrench to remove the three allen head cap screws from the face of the tip.
- Once the screws are removed and the staple magazine is open, the tip piece should pull away from the stapler.
- **6.** The jammed staple should now be easy to remove.
- **7.** Once the jammed staple is removed, re-assemble the stapler.

#### **Maintenance**

Unplug the stapler from the power source before performing any maintenance!

#### **Cleaning The Stapler**

While wearing safety glasses, periodically clean the stapler with compressed air. DO NOT use flammable products to clean the stapler.



Gasoline or petroleum products used to clean the tool could explode causing serious personal injury. DO NOT use gasoline or petroleum products to clean the tool.

## WARRANTY AND RETURNS

Grizzly Industrial, Inc. warrants every product it sells for a period of **1 year** to the original purchaser from the date of purchase. This warranty does not apply to defects due directly or indirectly to misuse, abuse, negligence, accidents, repairs or alterations or lack of maintenance. This is Grizzly's sole written warranty and any and all warranties that may be implied by law, including any merchantability or fitness, for any particular purpose, are hereby limited to the duration of this written warranty. We do not warrant or represent that the merchandise complies with the provisions of any law or acts unless the manufacturer so warrants. In no event shall Grizzly's liability under this warranty exceed the purchase price paid for the product and any legal actions brought against Grizzly shall be tried in the State of Washington, County of Whatcom.

We shall in no event be liable for death, injuries to persons or property or for incidental, contingent, special, or consequential damages arising from the use of our products.

To take advantage of this warranty, contact us by mail or phone and give us all the details. We will then issue you a "Return Authorization Number," which must be clearly posted on the outside as well as the inside of the carton. We will not accept any item back without this number. Proof of purchase must accompany the merchandise.

The manufacturers reserve the right to change specifications at any time because they constantly strive to achieve better quality equipment. We make every effort to ensure that our products meet high quality and durability standards and we hope you never need to use this warranty.

Please feel free to write or call us if you have any questions about the machine or the man-

Grizzly Industrial, Inc. 1203 Lycoming Mall Circle Muncy, PA 17756 Phone: (570) 546-9663 Fax: (800) 438-5901


E-Mail: techsupport@grizzly.com

Web Site: http://www.grizzly.com

Thank you again for your business and continued support. We hope to serve you again soon!

H3119 Electric 3/16" Crown Stapler

-6-

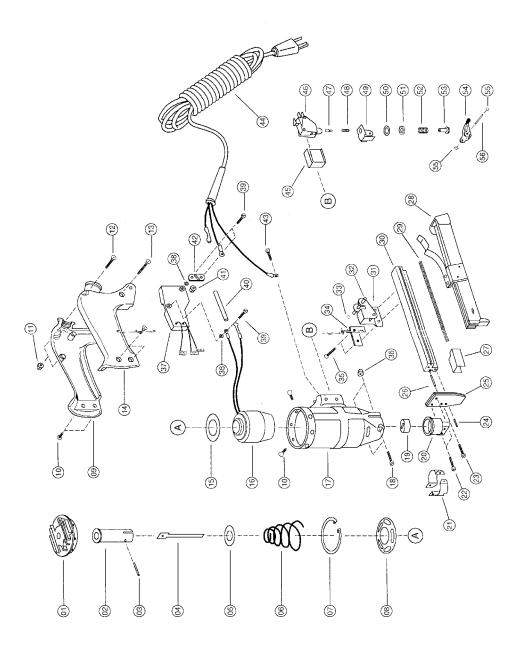

| 01 | PH3119001 | CYLINDER CAP ASSEMBLY            |  |
|----|-----------|----------------------------------|--|
| 02 | PH3119002 | PLUNGER                          |  |
| 03 | PH3119003 | PIN                              |  |
| 04 | PH3119004 | PLUNGER BLADE                    |  |
| 05 | PH3119005 | PLUNGER RET. WASHER              |  |
| 06 | PH3119006 | RETURN SPRING                    |  |
| 07 | PH3119007 | CLIP                             |  |
| 08 | PH3119008 | LOCATOR RING                     |  |
| 09 | PH3119009 | HANDLE (RIGHT)                   |  |
| 10 | PFH27     | FLAT HD ALLEN SCR 8-32 X 3/4"    |  |
| 11 | PLN09     | LOCK NUT 8-32                    |  |
| 12 | PSB67     | CAP SCREW 8-32 X 7/8"            |  |
| 13 | PFH28     | FLAT HD ALLEN SCR 8-32 X 1-5/16" |  |
| 14 | PH3119014 | HANDLE (LEFT)                    |  |
| 15 | PH3119015 | RING                             |  |
| 16 | PH3119016 | COIL/WASHER ASSEMBLY             |  |
| 17 | PH3119017 | STAPLER BODY                     |  |
| 18 | PSB38     | SCREW 10-32 X 3/8"               |  |
| 19 | PH3119019 | BUMPER                           |  |
| 20 | PH3119020 | NOSE RETAINER                    |  |
| 21 | PH3119021 | CLAMP                            |  |
| 22 | PSB68     | CAP SCREW 10-32 X 1/2"           |  |
| 23 | PSB33     | SCREW 10-24 X 3/4"               |  |
| 24 | PH3119024 | PIN                              |  |
| 25 | PH3119025 | NOSE                             |  |
| 26 | PH3119026 | PIN                              |  |
| 27 | PH3119027 | PUSHER                           |  |
| 28 | PH3119028 | MAGAZINE BASE                    |  |
|    |           |                                  |  |

DESCRIPTION

REF PART#

| REF | PART #    | DESCRIPTION               |
|-----|-----------|---------------------------|
| 29  | PH3119029 | SPRING                    |
| 30  | PH3119030 | BASE                      |
| 31  | PH3119031 | MAGAZINE SUPPORT          |
| 32  | PH3119032 | PIN                       |
| 33  | PH3119033 | E-CLIP                    |
| 34  | PH3119034 | SUPPORT SPACER            |
| 35  | PSB41     | SCREW 10-24 X 1/2"        |
| 36  | PLN10     | LOCK NUT 10-32            |
| 37  | PH3119037 | POWER SUPPLY              |
| 38  | PLW08     | LOCK WASHER #6            |
| 39  | PS36      | PHLP HD SCR 6-32 X 3/8"   |
| 40  | PH3119040 | INSULATION SLEEVING       |
| 41  | PLN11     | LOCK NUT 6-32             |
| 42  | PH3119042 | FUSE HOLDER               |
| 43  | PSB69     | CAP SCREW 6-32 X 3/8"     |
| 44  | PH3119044 | CORD ASSEMBLY             |
| 45  | PH3119045 | SWITCH PROTECTOR          |
| 46  | PH3119046 | SWITCH ASSEMBLY           |
| 47  | PH3119047 | CONTACT PIN               |
| 48  | PH3119048 | SPRING                    |
| 49  | PH3119049 | TRIGGER BRACKET           |
| 50  | PLW01     | LOCK WASHER 5/16"         |
| 51  | PN20      | HEX NUT 5/16"-24          |
| 52  | PH3119052 | SPRING                    |
| 53  | PH3119053 | CONTACT BUTTON            |
| 54  | PH3119054 | TRIGGER                   |
| 55  | PH3119055 | RETAINING RING            |
| 56  | PH3119056 | TRIGGER PIN               |
| 57  | PH3119057 | CARRYING CASE (NOT SHOWN) |

# **NOTES**

# **NOTES**

-10-

 
### **WARRANTY CARD**

| Name  |  |   |
|---|--|---|
| Street  |  |   |
| City  | State  | Zip   |
| Phone Number  | E-Mail   | FAX   |
| Model #   |  |   |
| The following information is given us develop better products and se  | on a voluntary<br>rvices. Of cours             | Serial #basis. It will be used for marketing purposes to help se, all information is strictly confidential.   |
| How did you learn about us? AdvertisementCatalogWorld Wide WebOther   | _Friend<br>_Card Deck                          | 9. How many of the machines checked above ar Grizzly?  10. Which portable/hand held power tools do you own Check all that apply.  |
| \$30,000-\$39,999\$70,00  | 00-\$69,999<br>00-\$79,999<br>00-\$89,999      | Belt Sander Orbital Sander Biscuit Joiner Palm Sander Circular Saw Portable Planer Detail Sander Saber Saw Drill/Driver Reciprocating Saw Miter Saw Router Other  |
| 3. What is your age group?20-2950-5930-3960-6940-4970 +   |  | 11. What machines/supplies would you like Grizzl Industrial to carry?   |
| 4. How long have you been a woodv0 - 2 Years8 - 202 - 8 Years20+ Y  | vorker?<br>Years<br>ears                       | 12. What new accessories would you like Grizzl  |
| 5. How would you rank your woodwoSimpleAdvarIntermediateMaste   | nced   | Industrial to carry?  |
| Dust CollectorShape<br>Spindle SanderJointe<br>Table SawLathe   | Saw<br>r<br>r Feeder<br>I Arm Saw<br>er<br>r   | 13. What other companies do you purchase your tool and supplies from?  14. Do you think your purchase represents good value YesNo  15. Would you recommend Grizzly to a friend? YesNo   |
| 7. How many of your woodworking Grizzly?  |  | 16. Would you allow us to use your name as a reference for Grizzly customers in your area? Note: Working the Note: Working the Note: Working the Note in the Note |
| 8. Which benchtop tools do you ov that apply. 1"x42" Belt Sander6" - 8"5" - 8" Drill PressMini L8" Table Saw8" - 10Scroll SawDisc/ESpindle/Belt SanderMini J10"-12"Thickness Planer Other | ' Grinder<br>athe<br>0" Bandsaw<br>Belt Sander | YesNo 17.Comments:  |

# Send a Grizzly Catalog to a friend:

| Name   |       |     |
|--------|-------|-----|
| Street |       |     |
| City   | State | Zip |

FOLD ALONG DOTTED LINE

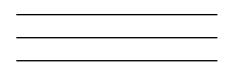



Place Stamp Here



GRIZZLY INDUSTRIAL, INC. P.O. BOX 2069 BELLINGHAM, WA 98227-2069



TAPE ALONG EDGES--PLEASE DO NOT NAIL





Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com