

FOR A GOOD REASON

**GRUNDIG**

**LADY SHAVER**

LS 4940

en



# SAFETY

---

Please note the following instructions when using the appliance:

- This appliance is designed for domestic use only.
- This appliance is designed solely for shaving human hair. Any other use is expressly prohibited.
- When the appliance is being charged, on no account should it come into contact with water or any other liquid.



- Never use the appliance if it, the blade foil or the shaving head are visibly damaged.
- Only use the SW-030100 EUL power supply unit provided.
- Caution! Always keep the power adapter dry.
- Do not immerse the appliance in water.
- The appliance may only come into contact with water once it is disconnected from the power supply unit and the power supply unit is no longer in the socket.
- Do not drop the appliance.
- The appliance may not be used by the following people, including children: those with limited physical, sensory or mental capabilities and also those with a lack of experience and knowledge. This does not apply to the latter if they were instructed in the use of the appliance or if they use it under the supervision of a person responsible for safety. Children should always be supervised to ensure that they do not play with the appliance.
- Do not open the appliance under any circumstances. No warranty claims are accepted for damage caused by improper handling.

# OVERVIEW

---

Dear customer,

Congratulations on the purchase of your LS 4940 lady shaver.

Read the following user notes carefully to ensure you can enjoy your quality product from Grundig for many years to come.

## Special features

- Blade foil with two long-hair side trimmers for thorough removal of all hair.
- The cutting system can be cleaned in water as it is when removed.  
Replace it when it is dry.
- The lady shaver is designed to remove unwanted hair on the arms, legs and also for especially sensitive areas such as the bikini line, underarms or the face.

## Controls

See the illustrations on page 2.

- A** Protective cap.
- B** Blade foil.
- C** Switch for turning on and off.
- D** Charging display.
- E** Power cord socket.

## Accessories

- F** Power supply unit.
- G** Cleaning brush.
- H** Storage case.

## A responsible approach!



GRUNDIG focuses on contractually agreed social working conditions with fair wages for both internal employees and suppliers, as well as on the efficient use of raw materials with continual waste reduction of several tonnes of plastic each year – and availability of at least 5 years for all accessories.

For a future worth living.  
For a good reason. Grundig.

## Rechargeable battery operation

When operating the appliance with the built-in nickel metal hydride battery, only use the power unit supplied for charging.

Check if the type plate on the power supply unit corresponds to your local mains supply.

- 1 Press the button **C** to switch off the appliance.
- 2 Plug the power cord into the appliance socket **E** and the power supply unit **F** into the wall socket.
  - During the charging process, the display **D** lights up red.
  - Once the appliance is fully charged, the charging display does not switch off or change its colour.
- 3 Pull the power cord out of the the appliance socket **E** and the power supply unit out of the wall socket.

## Notes

- Charge up the batteries completely (for at least 12 hours) before you first use them or if you have not used them for a long time.
- Never charge the appliance for longer than 24 hours.
- The ambient temperature should be between 5 °C and 40 °C.
- Once you have used the appliance, charging time is approx. 8 hours.
- In its fully charged state, the appliance can run for approx. 60 minutes. It is not advisable to charge the batteries after each use. Only charge the batteries when they are completely discharged. This increases their service life. Do not charge them every day.

# POWER SUPPLY

---

## Mains operation

Only operate the appliance with the power supply unit provided.

Check that the voltage indicated on the type plate of the power supply unit corresponds to your local power supply.

The only way to disconnect the appliance from the power supply is to unplug the power supply unit.

- 1 Insert the power cord into the socket **E** on the appliance.
- 2 Plug the power supply unit **F** into the power socket.

## Caution

- Only use the appliance in battery mode when in the bathroom or beside a water connection; never run it from the mains.

## Shaving

- 1 Remove the plastic protective cap **A**.

### Caution

- The blade foils and side trimmers for long hair must not be damaged. Replace any damaged parts before shaving.
- 2 Press the button **C** to switch on the appliance.



- 3 Shave with slow, gentle movements against the direction of hair growth. Hold the appliance at a 90° angle to your skin.

### Caution

- Do not press too hard as you may damage the blade foils.
- 4 After use, switch off the appliance with the switch **C** and put the plastic cap **A** back on.

## Trimming

Use the extended trimmer for longer hair.

- 1 Press the button **C** to switch on the appliance.
- 2 Shave with slow, gentle movements against the direction of hair growth.

## Useful tips

- Always pull the skin taut when shaving difficult areas, such as your underarms.
- Always shave against the natural direction of hair growth.
- In the case of thick or copious hair growth which cannot be removed by just one shave, do one quick shave and then a more thorough second one.

# CLEANING AND CARE

## General information


The device must be cleaned regularly so that you can continue to enjoy its top performance and optimum results. Clean the housing with a soft, damp cloth and a mild detergent. Do not use household cleaning agents.

## Caution

- Never hold the appliance in water or any other liquid.

## Cleaning the shaving head

- 1 Turn the appliance off and unplug the cable. Pull the power supply unit out of the mains socket.
- 2 Pull up the shaving head **B** out of the attachment.

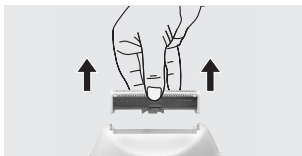

- 3 Knock the bottom of the shaving head **B** gently against a flat surface.



## Note

- Alternatively, you can rinse the shaving head under running water.

## Caution

- Never clean the blade foil of the shaving head with the cleaning brush supplied.
- 4 Clean the bottom of the shaving head with the cleaning brush **G** supplied.



- 5 Insert the blade foil in the shaving head again.



# CLEANING AND CARE

---

## Storage

If you do not want to use the appliance for a long period of time, please store it carefully.

- Ensure that it is switched off and is dry.
- Store the appliance and the power supply unit in the storage case provided in a cool, dry place.
- Make sure the appliance is kept out of reach of children.

## Environmental note

This product is manufactured from high-quality parts and materials which can be reused and recycled. Therefore, do not dispose of the device and the built-in rechargeable battery along with normal household waste at the end of its service life.

Take it to a collection point for the recycling of electrical and electronic equipment where the battery is taken out of the device and disposed separately. This is indicated by this symbol on the product, in the operating manual and on the packaging.



Please find out about collection points operated by your local authority.

Help protect the environment by recycling used products.

## Technical data



This product conforms to the European directives 2004/108/EC, 2006/95/EC and 2009/125/EC.

## Power supply

Power supply unit SW-030100 EUL  
100 - 240 V ~, 50-60 Hz

Batteries: Nickel metal hydride



Technical and design modifications reserved.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>