

**PRO CERAMIC  
HAIR CLIPPER  
SET**

**MC 6540**



**GRUNDIG**








---

<b>DEUTSCH</b>	6 - 15
<b>ENGLISH</b>	16 - 25
<b>POLSKI</b>	26 - 35

# SAFETY

---

Please note the following information when using the appliance:

- The appliance is designed for domestic use only.
  - Observe these instructions in order to prevent damage to the appliance or danger arising from improper use. Keep them in a safe place.
  - Never use the appliance in the bath, shower or over a wash-basin filled with water; nor should it be operated with wet hands.
- 
- Do not immerse the appliance in water or let it come into contact with water, even during cleaning.
  - Do not drop the appliance.
- Do not use the appliance near water in bathtubs, wash basins or other vessels.
  - Pull out the mains plug after use.
  - If the appliance is used in the bathroom, it is essential that the mains adapter is pulled out after use, as water close to the appliance can still constitute a danger, even if it is switched off.
  - Never use the appliance if it is visibly damaged.
  - Keep the appliance away from children.
  - Do not open the appliance under any circumstances. No warranty claims are accepted for damage resulting from improper handling.

# OVERVIEW

---

Fold out page 2 so that you have the illustrations in front of you.

## Controls

- A** On/off switch.
- B** LED, lights red when the appliance is connected to the mains.
- C** Lever for moving the lower blade.
- D** Cutting head.
- E** Socket for mains adapter lead.

## Accessories

- F** Combs of various sizes for different trimming grades (#1 to #7).
- G** Two combs for side-on fine trimming (right and left).
- H** Comb for short hair and graduation (blending).
- I** Mains adapter.

## Other accessories

- 1 x Scissors.
- 1 x Face/neck cleaning brush.
- 3 x Hair clips.
- 1 x Appliance cleaning brush.
- 1 x Oil for cutting head.

# POWER SUPPLY

---

## Operation with rechargeable batteries

When using the built-in rechargeable nickel metal hydride batteries, use the mains adapter supplied as a charger.

- 1 Plug the mains adapter into the **E** socket, and plug the mains adapter into the mains socket.

### Notes

- Completely charge up the batteries (16 hours) before you first use them or if you have not used them for a long time.
- When switched off the charging time is approximately 8 hours. If you switch on the appliance while it is charging, charging will stop.
- The ambient temperature should be between 5 °C and 40 °C.

- When fully charged, the appliance works for around 45 minutes. It is not advisable to charge the batteries after every use, especially if you do not use the appliance for the full 45 minutes. Only charge the batteries when they are completely discharged. This increases their life. Do not charge them every day.

### Environmental note

- This appliance contains nickel metal hydride batteries. Do not dispose of it with your household waste at the end of its service life. Open the housing. Remove the batteries and take them to a battery collection box in a shop or public collection point.




# POWER SUPPLY

---

## Mains operation (with mains adapter)

Check that the voltage on the mains adapter type plate corresponds to your local mains supply. The only way to disconnect the device from the mains supply is to unplug the adapter.

- 1 Insert the mains adapter plug in the  socket.
- 2 Insert the mains adapter plug in the socket.
  - The built-in batteries are switched off.

### Note

- Only use the appliance in battery mode when in the bathroom or beside a water connection; never run it from the mains.

# OPERATION

---

## Special features

The appliance has a ceramic/stainless steel cutting head **D**. You can adjust the steel blade while trimming using the lever **C**. This allows you to finely adjust the trimming length.

## Trimming hair

- 1 Put on a comb for the cutting grade you need (see the table below).



- 2 To do this, put the teeth of the cutting head in the central groove of the comb and gently press on the bottom of the blade head until it catches (**1** and **2**).
- 3 Place a towel around the neck and shoulder of the person whose hair you are trimming. Make sure the person is seated so that their head is roughly at your eye level. Before trimming, comb the hair so that it falls naturally and you can see the direction in which it grows.
- 4 Switch on the appliance using the switch **A** and start trimming.
- 5 Turn off the appliance using the **A** switch when you have finished trimming.
- 6 Take off the comb. Gently pull the bottom catch away from the cutting head until it comes loose. Then lift off the comb.

# OPERATION

---

## Using the lever

You can continuously adjust the lever while trimming. This adjusts the trimming length without you having to attach a comb.

When the lever is at the top, the cutting length is shortest. The further you push down the lever, the greater the cutting length.

With the lever right down, the cutting length is the same as with a 3 mm comb attachment.

Using the lever extends the life of the blades, because the cutting angle changes with each adjustment.

If the blades are blocked by very thick hair, you can unblock them by moving the lever without having to remove the lower steel blade.

When you have finished trimming, clean the blades of hair clippings by quickly moving the lever from maximum to minimum with the appliance still on.

## Comb attachment grades

Comb #1	3 mm
Comb #2	6 mm
Comb #3	9 mm
Comb #4	12 mm
Comb #5	16 mm
Comb #6	20 mm
Comb #7	25 mm

### Note

- All the lengths here are approximate.

# OPERATION

---

## Useful tips

- Hold the appliance with a relaxed and comfortable grip.
- Always cut against the natural direction of the hair.
- As you cut, take a break at regular intervals. You can always make a correction, but not once the hair has been cut.
- Only cut a small amount the first time you use the trimmer. This is the only way to get used to the variable grades.
- Do not force the comb through the hair. Let it guide you.
- Keep combing the hair. Only look for hair which is too long and comb out clippings.
- To ensure good results, the hair should be dry.

## Environmental note

This product has been made from high-quality parts and materials which can be re-used and recycled.

Therefore, do not throw the product away with normal household waste at the end of its life. Take it to a collection point for recycling electrical and electronic devices. This is indicated by this symbol on the product, in the operating manual and on the packaging.



Please find out about collection points operated by your local authority.

Help protect the environment by recycling used products.

# CLEANING AND CARE

---

## Cleaning and care

- 1 Switch off the appliance and unplug it if you are running it from the mains.
- 2 Take off the comb and clean the blades with the brush supplied.
- 3 Only clean the housing and the comb with a damp, soft cloth.

### Note

- Never immerse the appliance, lead or mains adapter in water or other liquids.
- 4 Before using the appliance again, dry all parts completely using a towel.
  - 5 Do not use cleaning agents.
  - 6 Put on the protective cover supplied.

### Note

- Remove any clippings after each use.

## Adjusting the blades

When new, the blades are optimally aligned. However, you need to readjust the blades if you replace them or if you have removed the lower blade for cleaning.

- 1 Loosen the screws.
- 2 Align the teeth of upper blade (ceramic) and the lower blade (stainless steel). The points of the teeth on the upper blade should be roughly 1.2 mm behind those of the lower blade.
- 3 If the blades are not correctly aligned, switch off the appliance, loosen the screws again and readjust the blades.
- 4 Tighten the screws once you have aligned the blades.

# CLEANING AND CARE

---

## Note

- Normally you do not need to oil the blades, because they are made of two different materials (ceramic and steel). If you want to maintain the original condition of the blades for as long as possible, it is worth oiling the cutting head at regular intervals.

## Storage

If you do not want to use the appliance for a long period of time, please store it carefully.

- 1 Ensure that it is unplugged and is completely dry.
- 2 Store the parts in the original packaging in a cool, dry place. To prevent damage to the cutting head, put on the protective cover supplied.
- 3 Make sure the appliance is kept out of reach of children.

# INFORMATION

---



This product fulfils the European directives 89/336/EEC and

73/23/EEC.



Ni-MH



## Technical data

### Power supply

Batteries: Nickel metal hydride

Mains adapter

### Guarantee

The guarantee does not cover the cutting head or defects which do not significantly impair the value or function of the appliance. The guarantee is invalidated if the appliance is damaged, opened or improperly used.

Technical and design modifications reserved.

**Grundig Multimedia B.V.**

Atrium, Strawinskylaan 3105 • NL-1077 ZX Amsterdam • <http://www.grundig.com>



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>