


FOR A GOOD REASON

GRUNDIG

**PROFESSIONAL
HAIR CLIPPER
WET AND DRY**

MC 9540

 
en

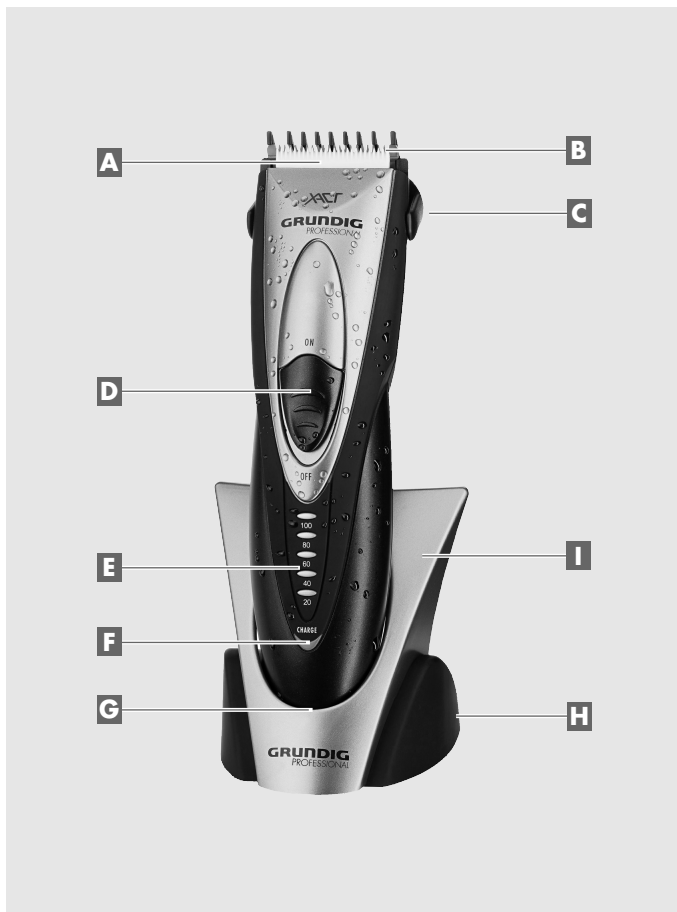



SAFETY

Please note the following information when using the appliance:

- To prevent damage and danger from improper use, please observe the operating instructions and keep them in a safe place.
 - Never use the appliance in the bath, shower or over a washbasin filled with water when it is connected to the mains plug; nor should it be operated with wet hands in this case.
- 
- When the appliance is being charged or operated via a mains plug it must not come into contact with water or any other liquid. Even the proximity to water is a hazard.
 - Always pull out the mains adapter after charging.
 - Caution! Always keep the power supply unit dry.
 - Do not charge the appliance in the bathroom.
 - Do not use the appliance if it is connected to the mains with the power supply unit.
 - Make sure that the accessories are properly attached to prevent them falling into water.
 - Do not immerse the appliance in water completely.
 - The appliance may only come into contact with water when it is disconnected from the mains adapter and this is not plugged in.
 - Do not drop the appliance.
 - Keep the appliance away from children.
 - Do not open the appliance under any circumstances. No warranty claims are accepted for damage caused by incorrect handling.

- The appliance may not be used by the following people, including children: those with limited physical, sensory or mental capabilities and also those with a lack of experience and knowledge. This does not apply to the latter if they were instructed in the use of the device or if they use it under the supervision of a person responsible for safety. Children should always be supervised to ensure that they do not play with the appliance.

A responsible approach!



GRUNDIG focuses on contractually agreed social working conditions with fair wages for both internal employees and suppliers, as well as on the efficient use of raw materials with continual waste reduction of several tonnes of plastic each year – and availability of at least 5 years for all accessories.

For a future worth living.
For a good reason. Grundig.

OVERVIEW

Dear customer,

Congratulations on the purchase of your MC 9540 professional hair trimmer.

Read the following user notes carefully to ensure you can enjoy your quality product from Grundig for many years to come.

The high-quality and professional styling appliances in the new product range fulfil the highest standards for salon results at home.

Controls

- A** Ceramic blade of the cutting head.
- B** Steel blade of the cutting head.
- C** Side pins for fitting the comb attachments.
- D** Switch for switching on and off.
- E** Green displays for the charging status of the rechargeable batteries (rechargeable battery capacity between 20 and 100 %).

- F** Red charging indicator.
Flashes when the rechargeable batteries are low.
- G** Socket for plugging in the mains adapter plug or connecting to the charging unit.
- H** Socket of the charging unit for the mains adapter cable (back of the charging unit).
- I** Charging unit.

Accessories

- 1** Seven comb attachments for different trimming lengths (2 to 20 mm).
- 7**
- 8** Attachment for thinning out hair.
- 9** Power supply unit.
- 10** Comb.
- 11** Cleaning brush.
- 12** Oil.
- 13** Storage case.

Operation with rechargeable batteries

When using the built-in rechargeable nickel metal hydride batteries, use the mains adapter **9** supplied as a charger.



- 1 Plug the mains adapter **9** into the **G** socket, and plug the mains adapter into the mains socket.
 - The indicator **F** lights up red.
 - The green status displays show how the charging is progressing. They flash until the respective capacity has been reached (20, 40, 60, 80 and 100 %) and then remain lit.
 - Once charging is complete, all status displays are lit in green.

Notes

- Completely charge up the batteries (24 hours) before you first use them or if you have not used them for a long time.
- After the batteries are first charged, the charging time is approx. 12 hours when the appliance is switched off. If you switch on the appliance while it is charging, charging will stop.
- The ambient temperature should be between 5 °C and 40 °C.
- When fully charged, the appliance works for around 45 minutes. It is not advisable to charge the batteries after every use, especially if you do not use the appliance for the full 45 minutes. Only charge the batteries when they are completely discharged. This increases their life. Do not charge them every day.
- The green status displays show the capacity of the respective rechargeable batteries. If, for example, a capacity of only 40 % is reached, the green displays 20 and 40 light up. If the rechargeable batteries are completely empty the red charge indicator flashes.

POWER SUPPLY

Using the charging unit

- 1 Plug the socket  of the appliance into the plug in the charging unit.
- 2 Plug the mains adapter cable  into the socket of the charging unit.
- 3 Insert the mains adapter plug in the socket.

Note



- Ensure that the appliance and the charging station are completely dry before charging.

Environmental note

- This appliance contains nickel metal hydride batteries. Do not dispose of it with your household waste at the end of its service life. Open the housing. Take the used batteries out and make sure to dispose of them in an environmentally sound manner, for example using public recycling sites. Find out about the legal regulations which apply in your area.

Mains operation (with mains adapter)

Check if the mains voltage on the supplied mains adapter type plate corresponds to your local mains supply. The only way to disconnect the device from the mains supply is to unplug the adapter.

- 1 Insert the mains adapter plug into the  socket.
- 2 Insert the mains adapter plug  in the socket.
 - The built-in batteries are switched off.

Note

- When in the bathroom or beside a water connection, you must only use the appliance in battery mode; never run it from the mains.

OPERATION

Special features

 
The appliance has a ceramic/ stainless steel (**A** and **B**) cutting head.

It guarantees exceedingly precise trimming and is maintenance-free.


The hair trimmer is suitable for use on dry and wet hair.

Trimming hair

- 1 Put on comb **1** to **7** for the cutting grade you need (see the table on page 10).

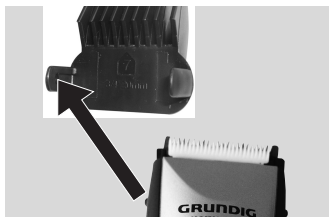

 - 2 To do this, latch the holders of the comb attachment into the pins **C** on the right and left side of the appliance. First, push the left holder over the left pin, then the right holder over the right pin. Ensure that the holder you fixed first does not spring off the pin while you are doing this.

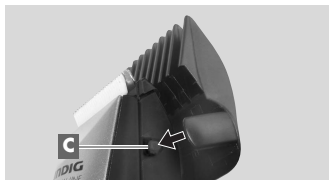

- 3 Place a towel around the neck and shoulder of the person whose hair you are trimming. Make sure the person is seated so that their head is roughly at your eye level. Before trimming, comb the hair so that it falls naturally and you can see the direction in which it grows.
- 4 Switch on the appliance using the switch **D** and start trimming.
- 5 Turn off the appliance using the **D** switch when you have finished trimming.
- 6 Take off the comb.

OPERATION

Comb attachment grades

Comb #1	2 mm
Comb #2	3 mm
Comb #3	6 mm
Comb #4	9 mm
Comb #5	12 mm
Comb #6	16 mm
Comb #7	20 mm
Comb #8*	

* is designed for thinning out hair.

Note

- The stated trim lengths describe the remaining hair length. All the lengths here are approximate.
- If you use the trimmer without a comb, the cutting length is 1.5 mm.

Note

- Without the mains adapter, the charged appliance can be used for wet hair in the bathroom. Never immerse the appliance in water and never let the charging station, mains adapter and cable come into contact with water.

Useful tips

- Hold the appliance with a relaxed and comfortable grip.
- Always cut against the natural direction of the hair.
- As you cut, take a break at regular intervals. You can always make a correction, but not once the hair has been cut.
- Only cut a small amount the first time you use the trimmer. This is the only way to get used to the variable grades.
- Do not force the comb through the hair. Let it guide you.
- Keep combing the hair. Only look for hair which is too long and comb out clippings.

CLEANING AND CARE

Cleaning and care

- 1 Switch off the appliance and unplug it if you are running it from the mains.
- 2 Take off the comb.
- 3 Clean the housing, the cutting head and the comb attachment with a soft damp cloth or the supplied brush.

Note

- The cutting head and the appliance can be cleaned under running water. However, you must never completely immerse the appliance in water.
- 4 Before using the appliance again, dry all parts completely using a towel.
 - 5 Do not use cleaning agents.
 - 6 Put the comb back on again.

Notes

- Remove any clippings after each use.
- Normally the cutting head of your appliance does not need to be oiled. If you want to maintain the original condition of the cutting head for as long as possible, it is worth oiling it at regular intervals (with the oil provided).

CLEANING AND CARE

Storage

If you do not want to use the appliance for a long period of time, please store it carefully.

- 1 Ensure that it is unplugged and completely dry.
- 2 Store the parts in the original packaging in a cool, dry place.
- 3 Make sure the appliance is kept out of reach of children.

Environmental note

This product has been manufactured with high-quality parts and materials which can be reused and are suitable for recycling.

This device uses wet dry technology which protects the inner electrical parts and battery from fluids.

Therefore the battery cannot be removed, this is done at the end of life of the device by our recycling partner.

Do not dispose the product with normal domestic waste at the end of its service life. Take it to a collection point for the recycling of electrical and electronic equipment. This is indicated by this symbol on the product, in the operating manual and on the packaging.



Please contact your local authority to find out where your local collection points are.

Reusing and recycling old appliances is an important contribution to protecting our environment.

Guarantee

The guarantee does not cover the cutting head or defects which do not significantly impair the value or function of the appliance. The guarantee is invalidated if the appliance is damaged, opened or improperly used.

Technical data



This product fulfils the European directives 2004/108/EC, 2006/95/EC and 2009/125/EC.

Power supply

Batteries: Nickel metal hydride

Mains adapter:

100 – 240 V~, 50/60 Hz

3.4 V DC 1000 mA

Weight (WEEE)

305 g



Ni-MH



Technical and design modifications reserved.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>