

FOR A GOOD REASON

**GRUNDIG**

**HOT AIR  
HAIR STYLER**

HS 4020





# SAFETY

---

Please note the following instructions when using the appliance:

- This appliance is intended for domestic use only.
- Never use the appliance in the bath, shower or over a wash basin filled with water; nor should it be operated with wet hands.



- Do not immerse the appliance in water or let it come into contact with water, even during cleaning.
- Do not use the appliance near water in bathtubs, wash basins or other vessels.
- If the appliance is used in the bathroom, it is essential that the power plug is pulled out after use, as water close to the appliance can still pose a hazard, even if the appliance is switched off.
- If not already in use, for additional protection it is recommended to install a residual-current-operated protective device (RCD) with a rated residual operating current not exceeding 30 mA in the electrical circuit of your bathroom. Ask your plumber for advice.
- Never place the appliance on soft cushions or blankets during operation.
- Ensure the air intake and outlet openings are not covered during operation.
- The appliance is equipped with an overheating protection system.
- Pull out the power plug after use. Do not disconnect the plug by pulling on the cable.
- Never use the appliance if it or the power cord is visibly damaged.
- If the power cord is damaged, it must be replaced by the manufacturer, its service centre or a similarly qualified person to prevent danger arising.
- Keep the appliance out of the reach of children.
- The appliance may not be used by the following people, including children: persons with limited physical, sensory or mental capabilities and also those with a lack of experience and knowledge. This does not apply to the latter if they were instructed in the use of the appliance or if they use it under the supervision of a person responsible for their safety. Children should always be supervised to ensure that they do not play with the appliance.
- Do not open the appliance under any circumstances. No warranty claims are accepted for damage caused by improper handling.
- A very warm flow of air is required to achieve a perfect result. Please note that a metallised brush can become extremely hot during prolonged or intensive use. To avoid injury, adjust the usage time of the appliance to the accessory being used.

# OVERVIEW

---

Dear customer,

Congratulations on the purchase of your HS 4020 professional Hair Styler.

Please read the following instructions carefully to allow you to enjoy your quality product from Grundig for many years to come.

## Special features

The hot air brushes of your Hair Styler have ceramic coatings so that they are especially gentle on your hair.

- The size of curls depends on the diameter of the styling attachment in use.
- The ø 25 mm styling attachment is suitable for smaller curls and waves.
- The ø 38 mm styling attachment is suitable for softly cascading hair styles such as larger curls and waves.

## A responsible approach!



GRUNDIG focuses on contractually agreed social working conditions with fair wages for both internal employees and suppliers, as well as on the efficient use of raw materials with continual waste reduction of several tonnes of plastic each year – and availability of at least 5 years for all accessories.

For a future worth living.

For a good reason. Grundig.

## Control elements

- A** Detachable hot air brush (styling attachment)
- B** Catch for detaching the styling attachment
- C** Switches the device on and off. Controller for two temperature and blower levels and cold air setting
- D** Swivelling power cord
- E** Air inlet grille
- F** Handle

## Accessories

- 1** Ceramic-coated heated brush, medium, ø 38 mm
- 2** Ceramic-coated heated brush, small, ø 25 mm

# OPERATION

---

## Settings

Your appliance has the following setting options:

### Temperature level/blower level **C**

- **0** : off
- **1** : gentle air flow and moderate temperature for gentle drying and styling
- **2** : stronger airflow and high temperature for fast drying and styling

### Cold air setting **C**

- **\*** : interrupts the hot air supply and provides cold air for fixing a hairstyles

## Changing the styling attachments

- 1** Remove the styling attachment currently **B** in place by pressing the catch and pulling off the heated brush.
- 2** Place on a different styling attachment and allow to latch in place. The two markings (**A**) must be opposite each other.

### Notes:

- The size of curls depends on the diameter of the styling attachment in use.
- The styling attachment with a diameter of 25 mm creates small and medium curls and is especially suitable for short hair.
- The styling attachment with a diameter of 38 mm can be used to attain greater volume with longer hair.

## Operation

Check if the mains voltage on the type plate (on the handle of the appliance) corresponds to your local mains supply.

- 1** Towel dry your hair thoroughly after washing.
- 2** Plug the power cord **D** into the wall socket.
- 3** Turn on the appliance with the switch **C** and set the temperature/blower level.
- 4** If required you can interrupt the hot air supply when drying by turning the switch **C** to **»\*«** (cold air setting).

### Note

- The cold air setting interrupts the hot air operation and provides a cool air flow. This allows you to fix your hairstyle better and more lastingly.
- 5** After use, switch off the appliance with the **C** button and pull out power cord **D** from the wall socket.

### Caution

- Never wind the power cord around the appliance, as this can result in damage. Check the power cord and the appliance regularly for visible damage.

## Cleaning and care

Pull the plug out before cleaning.

Never submerge the appliance in water.

Use a soft dry cloth for cleaning the housing. Remember to clean the air inlet grille **E** occasionally with a soft brush to remove any hairs and dust.

## Environmental note

This product has been made from high-quality parts and materials which can be re-used and recycled.

Therefore, do not throw the product away with normal household waste at the end of its service life. It should be taken to a collection point for recycling electrical and electronic devices. This is indicated by this symbol on the product, in the operating manual and on the packaging.



Please find out about collection points operated by your local authority.

Help protect the environment by recycling used products.

## Technical data



This product conforms to the European directives

2004/108/EC, 2006/95/EC and 2009/125/EC.

## Power supply

230 - 240V~, 50 - 60 Hz

## Power

750 - 800 W

Technical and design modifications are reserved.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>