

**GRUNDIG**

**HIFI STEREO MICRO SYSTEM**

**CIRFLEXX**

UMS 4100


**ENGLISH**

# CONTENTS

---

<b>3</b>	<b>Set-up and safety</b>
<b>4</b>	<b>Overview</b> Operating controls of the stereo system The display on the stereo system The back of the stereo system The remote control
<b>12</b>	<b>Connection and preparation</b>
<b>14</b>	<b>Settings</b> Setting the clock Tuning and storing radio stations Deleting settings
<b>19</b>	<b>General functions</b>
<b>21</b>	<b>Tuner mode</b> RDS station service
<b>26</b>	<b>CD mode</b> Basic CD mode functions Special CD mode features Creating a track memory – playing back tracks in selected order
<b>32</b>	<b>Timer mode</b> Switch-on timer Sleep timer
<b>34</b>	<b>Information</b> Cleaning the CD unit, Technical data Additional information for units sold in the U.K. Rectifying minor problems GRUNDIG Service


# SET-UP AND SAFETY

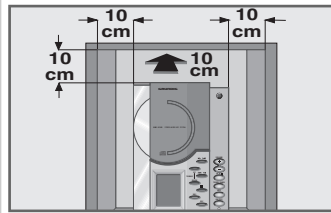

Please note the following information when setting up the system:


This stereo system is designed for the playback of audio signals. Any other use is expressly prohibited.

If you want to set up the stereo system on wall shelves or in cupboards, please ensure that the device is adequately ventilated. There must be at least 10 cm of space at the side, above and at the back of the device.

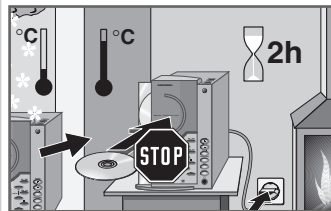


Please note when setting up the stereo system that furniture surfaces are coated with various types of paint and plastic, which often contain chemical additives. These additives may cause corrosion to the feet of the unit. This may leave stains on the surface of the furniture which can be difficult or impossible to remove.

If the stereo system is exposed to sudden changes in temperature, for example when taken from the cold into a warm room, wait at least two hours before using it.

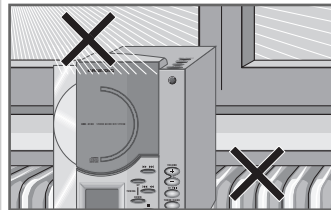

The stereo system is designed for use in dry rooms. If you do use it in the open, please ensure that it is protected from moisture, such as rain or water splashes.


Do not place the stereo system close to heating units or in direct sunlight, as this will impair cooling.

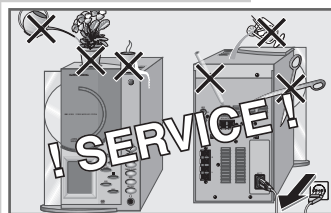

Do not place any vessels such as vases on the stereo system. Do not insert any foreign bodies in the CD compartment.

Do not open the stereo system under any circumstances. The manufacturer accepts no liability for damage resulting from improper handling.

Thunderstorms are a danger to all electrical devices. Even if the stereo system is switched off, it can be damaged by a lightning strike to the mains or the antenna cable. Always disconnect the mains and antenna plugs during a storm.

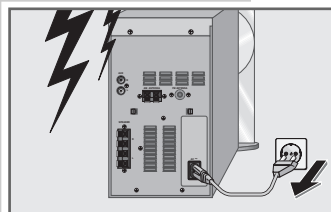

# OVERVIEW

## Operating controls of the stereo system

### Operating controls on the front

#### General

##### ON/OFF

Switches the stereo system to and from stand-by mode.



Infrared receiver for remote control signals.



Headphone jack for connecting a stereo headphone set with a jack plug (ø 3.5 mm).  
The loudspeakers of the stereo system are automatically switched off.

##### + VOLUME -

Adjusts the volume.

##### UBS

For "boosting" the bass.

##### DSC

Selects the sound settings.


#### Tuner mode

##### TUNER BAND


Selects the »TUNER« input source.  
Selects the frequency band »FM« or »MW«.

##### TUNING UP/DOWN

Hold down to start the station search.  
Press briefly to change the frequency in small steps.

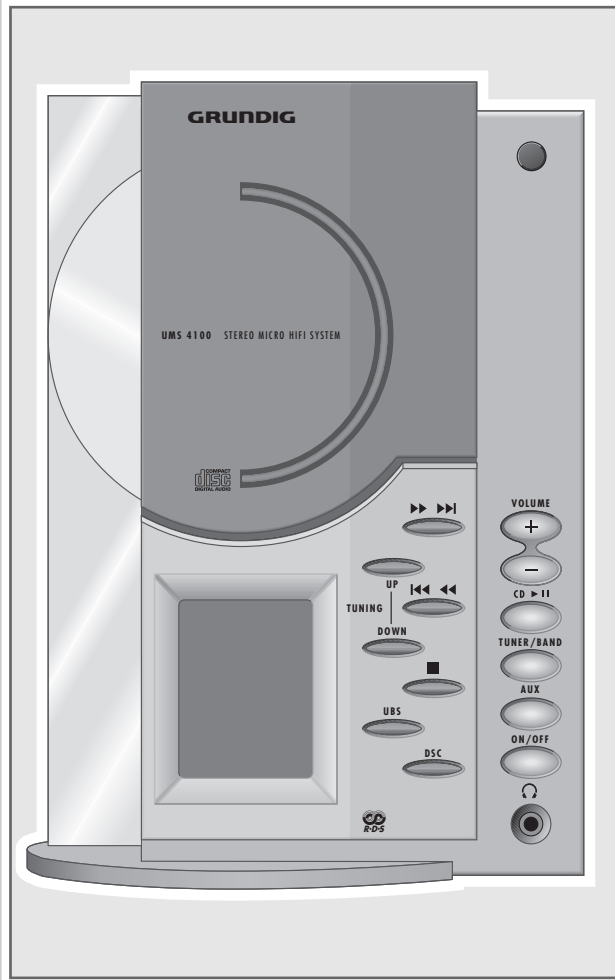

# OVERVIEW

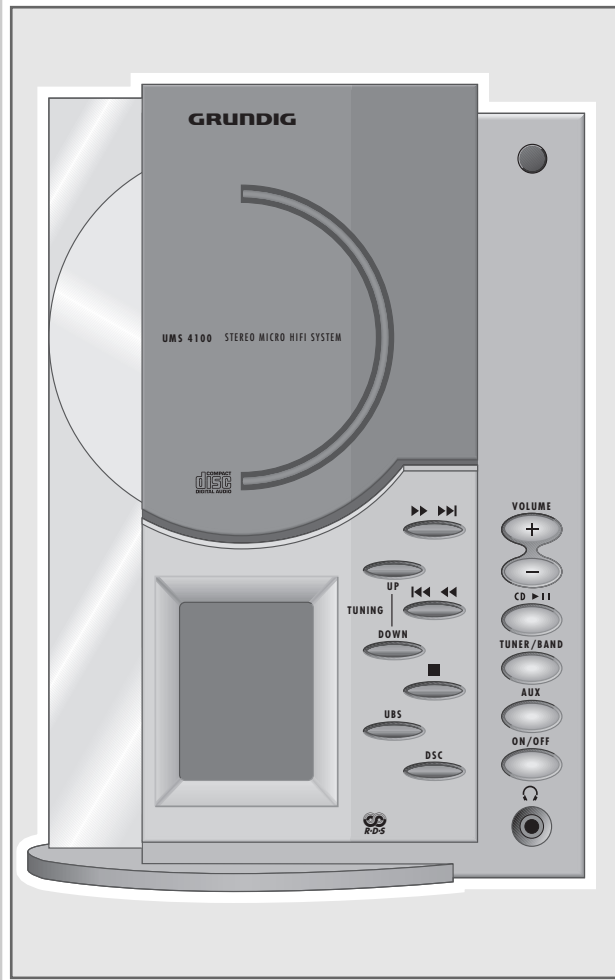

Select stored radio stations.

## CD mode

### CD > II

Selects the »CD« input source.  
Starts and interrupts CD playback.



Press briefly to select the next track.  
Hold down to look for a particular passage.



Press briefly to select the previous track.  
Hold down to look for a particular passage.



Ends CD playback.  
Deletes the track memory for the CD.

## AUX operation

### AUX

Selects the input source »AUX« (external device).

## Operating controls on the top of the device

### General

#### SLEEP

For setting the sleep timer.

#### INTRO/REPEAT TIMER

For setting the switch-on timer.

# OVERVIEW

**PROGR/RANDOM TIME** For setting the time manually.

## Tuner mode

**PROGR/RANDOM TIME** Hold down to start the automatic station search (ASP). Press briefly to stop the automatic station search. Press briefly to store a radio station.

## CD mode


**CD DOOR OPEN/CLOSE** Opens and closes the CD compartment.

**INTRO/REPEAT TIMER** Plays a brief extract of all tracks on the CD (Intro).  
For repeating a track or a whole CD.

**PROGR/RANDOM TIME** For storing a CD track memory.  
For playing CD tracks in random order.

## Operating controls on the bottom of the device

**RESET** Returns the device to its original setting.

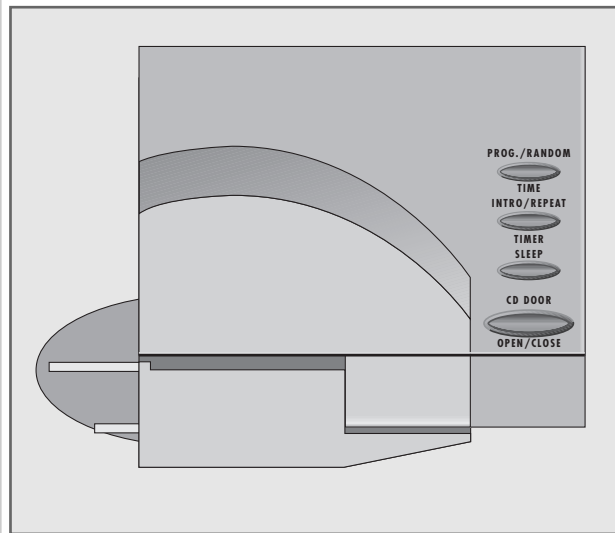

# OVERVIEW

## The display on the stereo system



*8888:888*

Displays the time and the RDS time update.

**JAZZ** 

The »JAZZ« sound setting is activated.

**UBS** 

The bass boost is activated.

*8888.888*

In tuner mode it displays the frequency band, frequency, RDS time and radio text.

*88* **PRESET**

Displays the memory position for a radio station.



Displays stereo reception.

**MHz**

Frequency display (FM).

**kHz**

Frequency display (AM).

**CT**

The RDS time synchronization is activated.



An RDS station is being received.



The Traffic function is activated. An RDS station with traffic news is being received.

**EON**

The Traffic function is activated. An RDS station with EON (Enhanced Other Network) is being received.

**PTY**

The PTY function (programme type) is activated.

**TEXT**

The Radiotext function is activated.

# OVERVIEW



8888:888

In CD mode: displays the total playing time and the current playing time.



Displays playback of a CD.



The CD playback is interrupted (Pause).

88 TRACK

Displays the number of CD tracks, the number of the current track and the number of stored tracks.

1 2 3

Number field: the number of the current CD track flashes during playback, when creating a track memory the stored tracks are displayed.

OVER

Displays that a CD has more than ten tracks.



The current CD track is played back repeatedly.



All the tracks on the CD are played back repeatedly.

INTRO

The device plays short introductions of all tracks on the CD.

RANDOM

The tracks on the CD are played back in random order.

PROG

Flashes when a track memory is created. Displays the playback of a track memory.



The switch-on timer is activated.




The sleep timer is activated.



# OVERVIEW

## The back of the stereo system

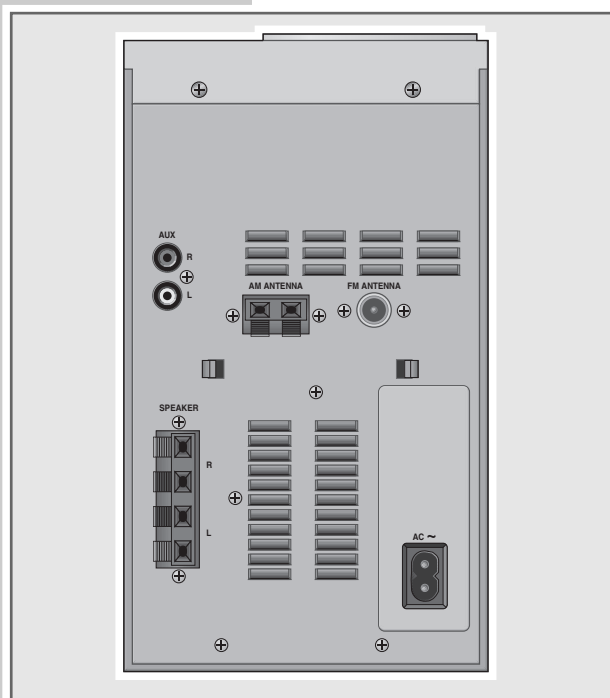

- FM ANTENNA** Antenna socket for the rooftop antenna or the wire aerial supplied.
- AM ANTENNA** Aerial terminals for the wire frame antenna supplied.
- AUX** Audio signal input for an external device.
- SPEAKER  
RL + RL-** Connections for the loudspeakers supplied.  
**R** = right channel, **L** = left channel.
- ~ AC** Socket for power cord.  
The only way to isolate the stereo unit is to pull out the mains plug.

## General instructions for laser devices

The laser installed in the device conforms to LASER CLASS 1 and is designed to ensure that the maximum permissible emission value cannot be exceeded under any circumstances.


### Caution:

If operating devices or methods other than those specified here are employed, it may lead to dangerous exposure to emissions. Invisible laser radiation is emitted if the CD compartment is opened or the safety locking mechanism is shorted. Do not expose yourself to this radiation.



# OVERVIEW

## The remote control

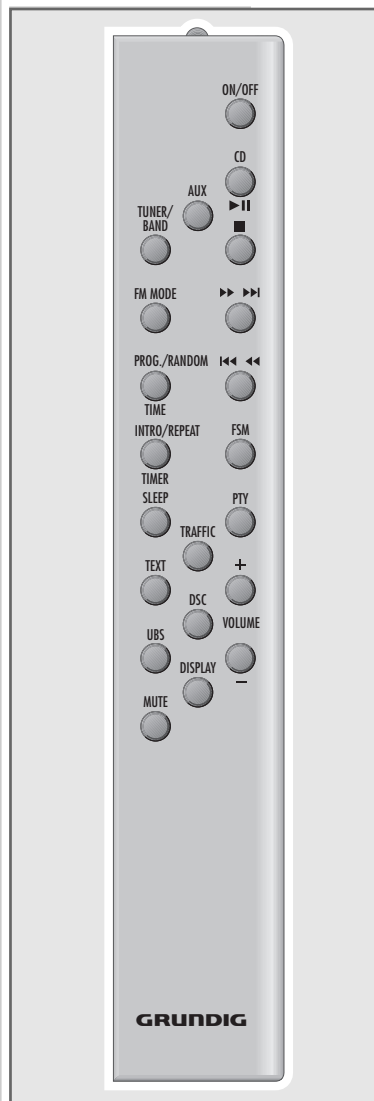

### **ON/OFF**

Switches the stereo system to and from stand-by mode.

### **CD ► II**

Selects the »CD« input source. Starts and interrupts CD playback.



In tuner mode: deletes individual preset stations.  
In CD mode: ends playback of the CD.



In tuner mode: selects stored radio stations.  
In CD mode: press briefly to select a track.  
Hold down to search for a particular passage.

### **FSM**

Selects the Favourite Station Memory (preferred station position 01).

### **PTY**

Selects programme types.

### **TRAFFIC**

Switches the Traffic function on and off.

### **+ VOLUME -**

Adjusts the volume.

### **DISPLAY**

In tuner mode: for switching the display between station name, frequency and time.  
In CD mode: for switching the display between the playing time of a track and the time.

### **MUTE**

Switches the loudspeaker on and off again.

### **UBS**

For "boosting" the bass.

### **DSC**

Selects the sound settings.


### **TEXT**

Switches the Radiotext function on and off.

### **SLEEP**

For setting the sleep timer.

# OVERVIEW

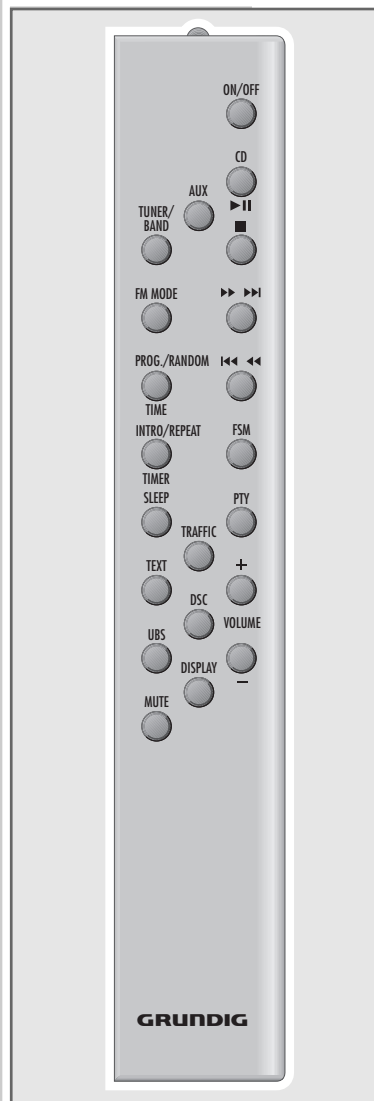

## **INTRO/REPEAT TIMER**

In CD mode: plays a brief extract of all tracks on the CD.  
For repeating a track or the whole CD.  
For setting the ON/OFF timer.

## **PROG./RANDOM TIME**

In tuner mode: for storing radio stations.  
In CD mode: for storing a track memory. For playing  
back titles in random order.  
In stand-by mode: for setting the time manually.

## **FM MODE**

Chooses between mono and stereo reception.

## **TUNER/BAND**

Selects the input source »*TUNER*«. Selects the frequency  
bands »*FM*« or »*MW*«.

## **AUX**

Selects the »*AUX*« input source.

# CONNECTION AND PREPARATION


## Connecting the antenna

- 1 Insert the rooftop antenna in the antenna socket »**FM ANTENNA**« on the stereo system.

### Note:

If no rooftop antenna is available, use the auxiliary antenna supplied. This aerial provides reasonably good reception of local FM (VHF) stations. Do not shorten the auxiliary antenna.

- 2 Insert the wire frame antenna into the »**AM ANTENNA**« terminals on the stereo system. Adjust the position of the wire frame antenna until reception is at its best.

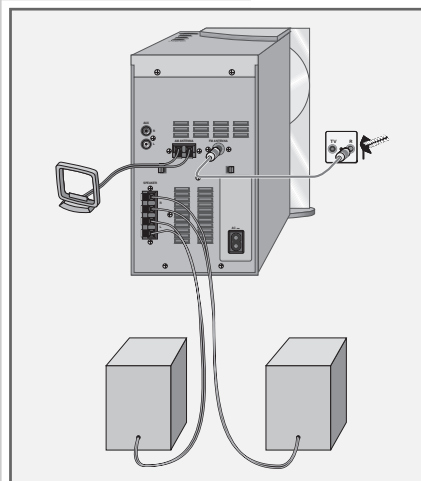

## Connecting the loudspeakers


- 1 Connect the loudspeaker cables to the »**SPEAKER RL + RL -**« terminals on the stereo system and the »**+ INPUT -**« terminals on the loudspeakers. Connect the cables labelled in red to the red terminal.

## Connecting an external device


- 1 Connect the audio output sockets of the external device (for example a television or DVD-player) to the »**AUX**« sockets on the stereo system using a cinch cable.

### Note:

Switch the stereo system off before you connect external devices. Make sure the stereo channels are properly connected: R = right channel (red), L = left channel (white).

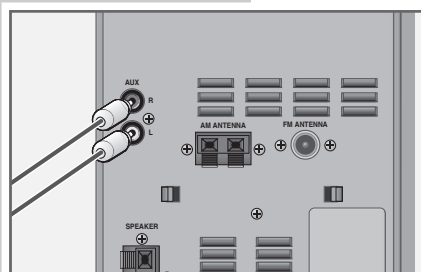


# CONNECTION AND PREPARATION

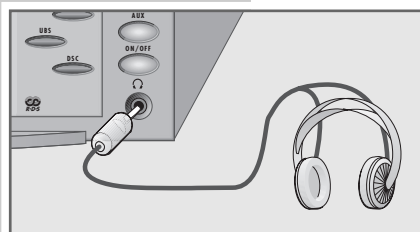

## Connecting headphones

- 1 Insert the headphone plug (ø 3.5 mm) into the »🎧« socket on the front of the stereo system.
  - The loudspeakers of the stereo system are switched off.

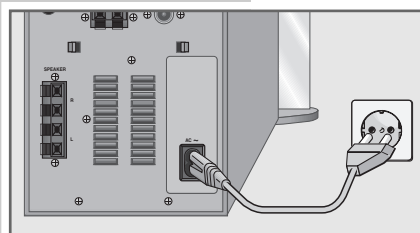


## Connecting the power cord

### Note:

Check that the mains voltage on the type plate (on the back of the device) corresponds to your local mains supply.  
The only way to disconnect the device from the mains supply is to pull out the plug.

- 1 Plug the power cord supplied into the »~AC« socket on the device.
- 2 Insert the power plug into the mains socket.

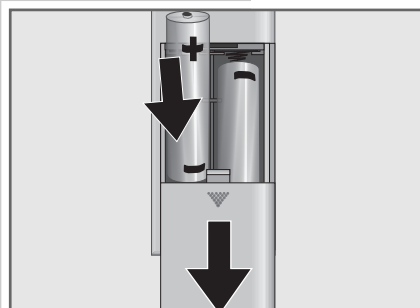

## Inserting the batteries in the remote control

- 1 Open the battery compartment by pushing down the lid of the battery compartment.
- 2 When inserting the batteries (mignon type, for example AA, R 6, UM3), observe the polarity marked on the base of the battery compartment.

### Note:

If the device no longer reacts properly to remote control commands, the batteries may be flat. Always remove flat batteries. No liability is accepted for damage resulting from leaking batteries.

### Environmental note:

Batteries, including those which are heavy metal-free, may not be disposed of with household waste. Please dispose of used batteries in an environmentally sound manner. Find out about the legal regulations which apply in your area.

# SETTINGS

## Setting the clock

The following settings can only be carried out in stand-by mode.

- 1 To set the 12-hour format, briefly press »**TIME**«.   
– Display: »12HR« briefly, then the current time e.g. »PM 1:25« (»AM« for the morning, »PM« for the afternoon/evening).
- 2 To set the 24-hour format, press »**TIME**« again.   
– Display: »24HR« briefly, then the current time e.g. »13:25«.
- 3 To set the time, press and hold down »**TIME**«.   
– Display: The hours flash.
- 4 Set the hours using »**TUNING UP/DOWN**« on the device.
- 5 Confirm the input with »**TIME**«.   
– Display: The minutes flash.
- 6 Set minutes with »**TUNING UP/DOWN**« on the device.

### Note:


You must reset the time after a power failure or when the mains plug is pulled out.

- 7 Confirm the input with »**TIME**«.   
– Display: e.g. »CT ON«.   
– The RDS time synchronization is activated.

### Note:

If the RDS time information is received via an RDS station, the time sets itself automatically.

When receiving and RDS station, the time is continuously updated later provided that an appropriate time signal is transmitted and the function is switched on.




PM  
1:25



10:14



12:14



CT ON

## SETTINGS

---



CT OFF

The CT time signal is transmitted once every minute by the station. You must receive the RDS station for several minutes before the time information can be transferred to the stereo system. However, not every RDS station transmits the time signal.

- 8 If you wish, you can switch off the RDS time synchronization with »**TUNING UP/DOWN**«. – Display: »CT OFF« briefly, then the current time.
- 9 To switch the function on again, repeat steps 1 to 8.

**Notes:**

If, when setting the time, no button is pushed for a period of longer than 10 seconds, the system will end the process automatically. You then have to start again at the beginning.

During setting, the display can be illuminated for approximately 8 seconds by pressing any of the buttons.

## Tuning and storing radio stations

### Automatic station search (ASP)

After the stereo system has been connected to the mains for the first time, the device searches in tuner mode on the FM waveband for the 40 stations with the strongest reception strength and stores them. In this process, preference is given to RDS stations.

- 1 After connection, switch on the stereo system with »**TUNER/BAND**«.
  - Display: »FM«, the frequency in rapid run-through, »PRESET« flashes.
  - The search has begun. After the search has finished, the station stored in position 01 can be heard.

#### Note:

The automatic station search can be interrupted with »**PROGR**«.



### Automatic station search

- 1 Switch on the stereo using the »**TUNER/BAND**« button.
  - Display: »TUNER«, then the waveband and frequency or station name.
- 2 Select the frequency band (FM or MW) by pressing the »**TUNER/BAND**« button.
  - Display: »FM« or »MW«.
- 3 Activate the station search by pressing »**TUNING UP/DOWN**« on the device until the frequency display changes to rapid run-through.
  - The search stops when a programme is found.
- 4 To switch to manual tuning, press »**TUNING UP/DOWN**« once on the device briefly.



# SETTINGS



FM 87.65 MHz

## Manual station search

- 1 To move the frequency forward in steps, briefly press »**TUNING UP/DOWN**« on the device several times.
  - The frequency changes in steps of 50 kHz.




PRESET  
02  
FM 90.10 MHz  
RDS

## Saving stations on channel positions

- 1 Select the frequency band (FM or MW) by pressing the »**TUNER/BAND**« button.
- 2 Press »**TUNING UP/DOWN**« to tune to the station you want to store.
- 3 Briefly press »**PROGR**« to activate the storing function.
  - Display: the next free channel position, e.g. »02«, »**PRESET**« flashes for approximately 10 seconds.
- 4 Press »|◀◀ ◀◀« or »▶▶ ▶▶|◀« to select the channel position desired.

### Note:

Only free channel positions can be selected. If a station is to be stored on a channel position that is already occupied, this must first be deleted.

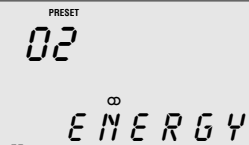

PRESET  
02  
ENERGY  
RDS

- 5 Press »**PROGR**« again to store the station.
  - Display: »**PRESET**« and, for example, »02«.
- 6 To store more stations repeat steps 2 to 5.

# SETTINGS

## Storing your favourite stations (Favourite Station Memory)



- 1 Press »**TUNING UP/DOWN**« on the device to tune to the station you want to store.
- 2 Press »**PROGR**« to activate the storing function.  
– Display: »**PRESET**« flashes for approximately 10 seconds.
- 3 Select channel position 01 with »**FSM**« on the remote control.
- 4 Press »**PROGR**« again to store the station.
- 5 To call up your favourite station, press »**FSM**« on the remote control.

## Deleting individual stations



- 1 Select the preset station to be deleted with »|◀◀ ◀◀« or »▶▶ ▶▶|« on the device.
- 2 To delete the selected station, keep »■« pressed for a moment.  
– Display: »**PRESET**« and, for example, »03« disappear.

### Note:

If the device is separated from the mains for a long time, all the preset stations are deleted.

## Deleting settings

This function enables you to delete all the stored settings.

- 1 With the device on, press the »**RESET**« button on the bottom of the device using an implement such as a paper clip.

# GENERAL FUNCTIONS

## Switching on and off

- 1 Switch on the stereo system out of stand-by mode with »**ON/OFF**«  
– The last input source used is automatically selected.

### Note:

The following buttons on the device can also be used to switch on the stereo system:

- »**TUNER/BAND**« – Tuner mode
- »**CD ► II**« – CD mode
- »**AUX**« – External device mode

- 2 Press the »**ON/OFF**« button to switch the device to stand-by mode.  
– Display: »*GOOD BYE*« briefly, then the current time.

### Note:

The only way to separate the stereo system from the mains supply is to pull the plug.

A rectangular digital display showing the text "GOOD BYE" in a monospaced font. A line from the text "Display: »GOOD BYE«" in the text above points to this display.

A rectangular digital display showing "PRESET 04" at the top, "TUNER" in the middle, and "RDS" at the bottom. A line from the text "Display: »TUNER«, »CD« or »AUX«." in the text above points to this display.

A rectangular digital display showing "PRESET 04" at the top, "VOL 6" in the middle, and "RDS" at the bottom. A line from the text "Press »+ VOLUME - « to adjust the volume." in the text above points to this display.

A rectangular digital display showing "PRESET 04" at the top, "MUTE" in the middle, and "RDS" at the bottom. A line from the text "Press »MUTE« on the remote control to switch the sound on or off." in the text above points to this display.

## Selecting the input source

- 1 Select the input source with »**TUNER**«, »**CD ► II**« or »**AUX**«.  
– Display: »*TUNER*«, »*CD*« or »*AUX*«.

## Adjusting the volume

- 1 Press »+ **VOLUME** - « to adjust the volume.  
– Display: briefly »*VOL*« (from »*0*« to »*39*«, above it »*MAX*«).

## Muting

This function enables you to mute the device.

- 1 Press »**MUTE**« on the remote control to switch the sound on or off.  
– Display: »*MUTE*« when mute is on.

# GENERAL FUNCTIONS

## Sound settings

You can select between five different sound settings:

You can select between »FLAT«, »CLASSIC«, »POP«, »JAZZ« and »ROCK« according to the type of music you are listening to. The basic setting is »FLAT«.

1 Select the sound setting by pressing »DSC«.

- Display: »FLAT «, »CLASSIC «, »POP «, »JAZZ « or »ROCK «.



## Boosting the bass

1 Press »UBS« to switch the bass booster on or off.

- Display: »UBS «.





# TUNER MODE

---

## **Automatic station search (ASP)**

By starting the automatic station search, you can delete all the existing preset stations and at the same time allocate new radio stations to them.

- 1 Start the automatic search in tuner mode by pressing and holding down »**PROGR**«.
  - After the search has finished, the station stored in position 01 can be heard.

### **Note:**

The automatic station search can be interrupted with »**PROGR**«.

# TUNER MODE

## RDS station service




 

RDS (Radio Data System) is an information system which is transmitted additionally by most FM stations.

If the device is currently receiving an RDS station, it displays the station name, for example »FANTASY«, and »RDS«.

### Note:

It may take some time before all the RDS information is available.

## Searching for RDS stations

- 1 Search for the desired RDS station by repeatedly pressing »  « or »  « until an RDS station is received and »RDS« appears in the display.
  - After a short time the station name appears if the reception strength is sufficient.

## Calling up RDS information

If an RDS station is being received, the frequency briefly appears in the display, and afterwards the station name permanently.


- 1 Press the »**DISPLAY**« button once on the remote control.
  - The wavelength and the frequency appear in the display.
- 2 Press the »**DISPLAY**« button on the remote control again.
  - The time appears in the display.
- 3 Press »**DISPLAY**« on the remote control for the third time.
  - The station name appears again in the display continuously.

### Note:

The time display is updated every minute. The accuracy depends on the information transmitted by the station itself. You must be tuned to the RDS station for several minutes before the time information can be transmitted. During this procedure, »**CT**« flashes in the display.



# TUNER MODE

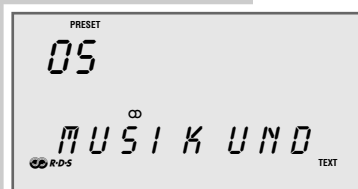

## Radiotext

Some RDS stations provide Radiotext as additional information. Radiotext appears as ticker text in the display. As this information is transmitted character by character, it may take some time before the text is received in full.

- 1 Call up the radiotext by pushing »**TEXT**« on the remote control.
  - The information appears after a short time.
- 2 For a fast run-through of the radiotext, press and hold down »**TEXT**«.

### Note:

If reception is poor there may be gaps in the Radiotext message. If the station does not currently provide radiotext, »**NO TEXT**« appears in the display.

- 3 Press »**TEXT**« to quit the radiotext level.


## Programme types (PTY)

- 1 To call up the current programme type, press »**PTY**« on the remote control.
  - Display: the current programme type, e.g. »**NEWS**«, and »**PTY**«.
  - If no programme type code is transmitted, »**NO PTY**« appears in the display.
- 2 Press »**PTY**« repeatedly on the remote control for a selection of other programme types.
- 3 Press »**TUNING UP/DOWN**« on the device to start the PTY search.
  - Display: »**FM**«, the frequency for rapid run-through, »**PTY**« flashes.
- 4 Press »**TUNING UP/DOWN**« on the device briefly to interrupt the programme search.






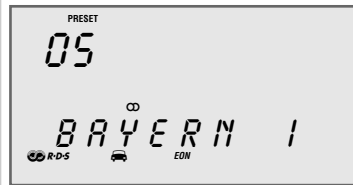
# TUNER MODE

## Radio traffic news

Some RDS stations broadcast additional traffic news. If a such a station is being received, the »« symbol appears in the display.

The EON (Enhanced Other Network) function is an additional RDS service with the help of which a station with traffic news is switched to automatically.

- 1 When receiving an RDS station, press »**TRAFFIC**« on the remote control.
  - Display: »«. If there are no traffic bulletins being broadcast, »*NO TR*« appears in the display.
  - »« flashes during traffic news and the volume is slightly increased.
  - If the station includes EON, »**EON**« appears additionally in the display.
  - If the current station does not offer traffic news, EON switches automatically to the traffic news of another station. After the bulletin has finished, it switches back to the current station.
- 2 To quit this function, press »**EON**« on the remote control.
  - Display: »« and »**EON**« disappear.



# CD MODE

## Basic CD mode functions



The stereo system is suitable for music CDs displaying the logo shown here or for CD-Rs with audio data.

Always keep the CD compartment closed to prevent dust from collecting on the laser optics. Do not attach adhesive labels to CDs. Keep the surfaces of CDs clean. You can play standard 12 cm CDs as well as 8 cm CDs on your stereo system. An adapter is not necessary.

## Selecting the CD input source

- 1 Select the input source using the »**CD ► II**« button.
  - If there is no CD in the compartment, the messages »**CD**«, and afterwards »**NO DISC**« appear.
  - If a CD is already present in the compartment, »**CD**«, the track number field and the title number »**01**« appear. The device starts the playback automatically.

## Inserting a CD

- 1 Press »**CD DOOR OPEN/CLOSE**« on the device to open the CD compartment.
  - The CD compartment opens.
  - Display: »**OPEN**« flashes, then »**OPEN**«.
- 2 Place the CD in the compartment with the printed side facing forwards.
- 3 Press »**CD DOOR OPEN/CLOSE**« on the device to close the CD compartment.
  - Display: »**CLOSE**« flashes, then »**CD READ**«.
  - The device "reads" the content of the CD. In the display appear the number of tracks e.g. »**12 TRACK**«, the total playing time, e.g. »**CD 58:15**« and the track number field. If the CD has more than 10 tracks, »**OVER**« appears additionally in the number field.

### Note:

The CD compartment closes itself automatically after three minutes and after switching off with »**ON/OFF**«.

NO DISC

▶01 TRACK  
CD 0:01


1	2	3
4	5	6
7	8	9
10	OVER	

OPEN

12 TRACK  
CD 58:15

1	2	3
4	5	6
7	8	9
10	OVER	

## CD MODE

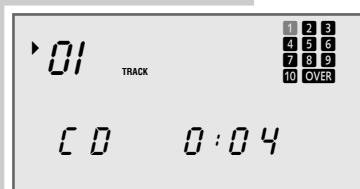

### CD playback

- 1 Press »**CD ▶||**« to start playback.
  - Playback begins with the first track.
  - Display: »▶«, the current track number and the elapsed playing time of the title. The current track number flashes in the number field. Playback stops at the end of the CD.
- 2 To pause playback, press »**CD ▶||**«.
  - Display: »||«, the track number flashes in the number field.
- 3 To resume playback, press »**CD ▶||**«.
- 4 To stop playback, press »■«.

### Selecting a different track

- 1 To select a previous or subsequent track, keep pressing »|◀◀ ◀◀« or »▶▶ ▶▶|◀« during playback until the number of the track appears in the display.
  - Playback starts automatically.

### Repeating the current track

- 1 Briefly press »|◀◀ ◀◀« during playback.
  - The track is repeated from the beginning.

## CD MODE

### Special CD mode features

#### Searching for a passage within a track

- 1 During playback, press »|◀◀ ◀◀◀ or »▶▶ ▶▶|◀ and hold it down until you find the passage you want to hear.  
Playback begins as soon as you let go of the »|◀◀ ◀◀◀ or »▶▶ ▶▶|◀ buttons.  
– Display: the current track and playing time

**Note:**


During the search the volume is reduced.

#### Playing the introductions of tracks on the CD

- 1 Press »INTRO◀ when the CD is in the STOP position.  
– Display: »INTRO◀.
- 2 Press »CD▶||◀ to start playback.  
– The first ten seconds of each track is played.
- 3 To quit this function, press »INTRO◀ three times.  
– Display: »INTRO◀ disappears.  
– The current and following tracks are played to the end.

#### Playing back tracks in random order

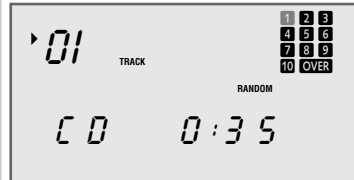

- 1 Press »CD▶||◀ to start playback.
- 2 Press »RANDOM◀ to select the function.  
– Display: »RANDOM◀.  
– The tracks on the CD are played back in random order.
- 3 To quit this function, press »RANDOM◀.  
– Display: »RANDOM◀ disappears.  
– The tracks are played back in numerical order.




## CD MODE





### Repeating a track (Repeat one)

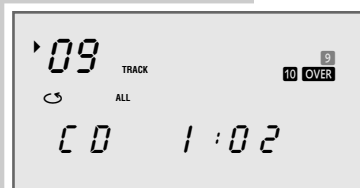- 1 Press »**CD ▶II**« to start playback.
- 2 Select the track you want to hear by pressing »|◀◀ ◀◀« or »▶▶ ▶▶|«.
- 3 Select the repeat function by pressing »**REPEAT**« once.
  - Display: » 1«.
  - The track is repeated.
- 4 To end this function, press »**REPEAT**« twice.
  - Display: » 1« disappears.



### Repeating all tracks (Repeat All)

- 1 Press »**CD ▶II**« to start playback.
- 2 Select the repeat function by pressing »**REPEAT**« twice.
  - Display: » **ALL**«.
  - The CD is repeated from the beginning.
- 3 To quit this function, press »**REPEAT**«.
  - Display: » **ALL**« disappears.

#### Note:

If a track memory is stored (see page 30), all the tracks of the CD inserted are repeated when the Repeat All function is called up.

### Creating a track memory – playing back tracks in selected order

You can create a track memory of up to 32 tracks for the current CD in any order you choose and then play them back in that sequence. A track may be stored more than once.

#### Selecting and storing tracks and playing back the track memory

- 1 Place a CD in the CD compartment.

**Note:**

The device must be in the STOP position.

- 2 Press »**PROGR**« to select the function.  
– Display: »**CD P- - 01**« and »**00 TRACK**«, »**PROG**« flashes.
- 3 Select the track you want to hear by pressing »|◀◀ ◀◀« or »▶▶ ▶▶|◀«.  
– Display: e.g. »**03**« (for the first track) and »**P-01**« (memory position).
- 4 Press »**PROGR**« to save the track.  
– Display: The stored track appears in the number field. »**00 TRACK**«, »**PROG**« flashes again.



**Note:**

Repeat steps **3** and **4** to programme more tracks.


- 5 To start playback of the track memory press »**CD ▶▶||**«.  
– Playback begins with the first programmed track.

**Note:**

If, when setting the time, no button is pushed for a period of longer than 10 seconds, the system will end the process automatically. You then have to start again at the beginning.

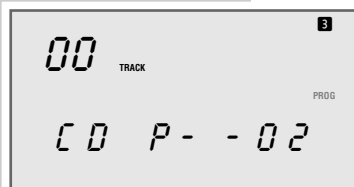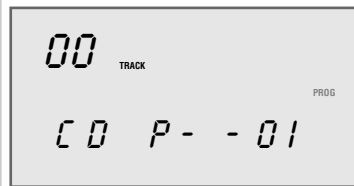

## CD MODE

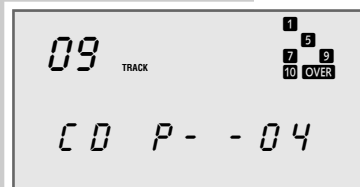

### Changing the track selection

- 1 To replace a stored track, keep pressing »**PROGR**« until its number appears in the display.
- 2 Select the new track number with »|◀◀ ◀◀« or »▶▶ ▶▶|«.
- 3 Press »**PROGR**« to store the new track.

### Deleting the track memory

- 1 Press »**CD DOOR OPEN/CLOSE**« on the device to open the CD compartment.  
– Display: »**PROG**« disappears.  
or  
Press »■« in programming mode.  
or  
Switch off the device by pressing »**ON/OFF**«.

# TIMER MODE

Your stereo system has two timer modes:

- The switch-on timer, which switches the stereo system on and off at a pre-set time.
- The sleep timer, which switches off the stereo system at a pre-set time.

## Switch-on timer

### Setting the switch-on timer

#### Note:

The clock on the device must have been set. If, when setting the time, no button is pushed for a period of longer than 10 seconds, the system will end the process automatically. You then have to start again at the beginning. During setting, the display can be illuminated for approximately 8 seconds by pressing any of the buttons.



- 1 With the device switched off, press and hold down **»TIMER«**.  
- Display: **»⌚«** and **»ON«**, the hour display flashes.
- 2 Set the hours for switching on using **»TUNING UP/DOWN«** on the device.
- 3 Press **»TIMER«**.  
- Display: **»⌚«** and **»ON«**, the minute display flashes.
- 4 Set the minutes for switching on using **»TUNING UP/DOWN«** on the device.
- 5 Press **»TIMER«**.  
- Display: **»⌚«** and **»OFF«**, the hour display flashes.
- 6 To enter the switch-off time, repeat steps 2 to 4.
- 7 Press **»TIMER«**.  
- Display: **»⌚«** **»TUNER«** or **»CD«**.
- 8 Select the CD or tuner input source using **»TUNING UP/DOWN«** on the device.

#### Note:

If you select CD, make sure that a CD has been inserted.



## TIMER MODE

- 9 If you select tuner as the input source, set the desired channel position with »|◀◀ ◀◀◀ or »▶▶ ▶▶|◀.
- 10 Press »TIMER◀.
- 11 Set the desired volume using »+ **VOLUME** -◀.
- 12 Quit the settings with »TIMER◀.

### Deactivating the switch-on timer

- 1 To deactivate the switch-on timer, press »TIMER◀ briefly in stand-by mode.
  - Display: »⊙◀ disappears.
  - The switch-on timer for the next day is deactivated.

or

- Switch off the device when it is ready to switch on with »ON/OFF◀.
- The switch-on timer remains activated for the next day.


### Sleep timer

#### Setting the sleep timer


- 1 Switch on the device using »ON/OFF◀ and select the input source you require.
- 2 Press »SLEEP◀ to select the function.
  - Display: »90 MIN◀ and »⏻◀.
- 3 Enter the required time (in 90 minute intervals from 10 to 10 minutes) by pressing »SLEEP◀.
  - Display: e.g. »30 MIN◀ and »⏻◀.
  - The stereo system switches off at the selected time.

#### Deactivating the sleep timer

- 1 To switch off the sleep timer, switch off the device using »ON/OFF◀. Alternatively, keep pressing »SLEEP◀ until »00 MIN◀ and »⏻◀ disappear from the display (in which case the device remains switched on).

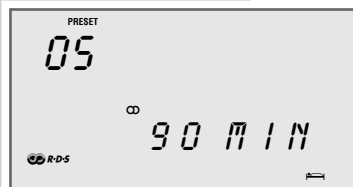

# INFORMATION

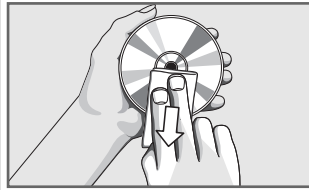

## Cleaning the CD unit

If the device is unable to scan CDs perfectly, use a standard commercially available cleaning CD to clean the laser optics. Other cleaning methods may damage the laser optics.

To clean CDs use a lint-free cloth and wipe them in a straight line from the centre of the disc outwards.

Do not use cleaning fluid for vinyl records or other solvents or scouring agents.

Always keep the CD compartment closed to prevent dust from collecting on the laser optics.

## Technical data

This device is noise-suppressed according to the applicable EU directives.

This product fulfils the European directives 89/336/EEC, 73/23/EEC and 93/68/EEC.

This device conforms to the safety regulation DIN EN 60065 (VDE 0860) and therefore the international safety regulation IEC 60065.

### Amplifier unit

#### Output:

Sine wave power 2 x 12W

Music signal power 2 x 20W

#### Input sensitivity/impedance

500 mV/22 k $\Omega$

### Receiver unit

#### Reception range

FM 87.5 ... 108.0 MHz

MW 522 ... 1620 kHz

### CD unit

#### Frequency response

20 Hz ... 20 kHz

#### Noise voltage ratio:

(wtd.) > 90 dB

### System

#### Power supply:

Operating voltage 230 V~

Mains frequency 50/60 Hz

Max. power consumption 75 W

Power consumption in stand-by mode

< 2 W

#### Dimensions and weight

Device dimensions

W x H x L 175 x 245 x 230 mm

Device weight 3.1 kg

Loudspeaker dimensions

W x H x L 130 x 240 x 160 mm

Weight per speaker 1.3 kg

## Additional information for units sold in the UK.

Units sold in the UK are suitable for operation from a 240V ac, 50Hz mains supply.

The range of multi-system receivers is built to work in most European countries. However, the mains plug and socket system for the UK differs from many European countries.

This appliance has been supplied with a fitted, non-removable, approved converter plug for use in the UK. This converter plug is fitted with a 5A rated fuse.

In case this appliance is supplied with a moulded 2-pin Euro plug only, which is unsuitable for UK operation, this must be cut off and immediately disposed of. An approved 13A, 3-pin UK plug should then be fitted by a qualified electrician.

### Note:

The severed Euro plug must be destroyed to avoid a possible shock hazard should it be inserted into a socket elsewhere.

If a non-rewireable 3-pin plug or a rewireable 13A (BS1363) 3-pin plug is used, it must be fitted with a 5A ASTA or BSI approved BS1362 fuse. If any other type of plug is used it must be protected by a 5A fuse either in the plug, or at the distribution board. If this type of plug becomes defective, ensure that the fuse is removed before disposal, to eliminate potential shock hazard.

If it is necessary to change the fuse in the non-rewireable plug, the correct type and rating (5A ASTA or BSI approved BS1362) must be used and the fuse cover must be refitted. If the fuse cover is lost or damaged, the lead and plug must not be used until a replacement is obtained. Replacement fuse covers should be obtained from your dealer.

### Important:

The wires in the mains lead are colour coded in accordance with the following code:

BLUE – NEUTRAL

BROWN – LIVE

As the colours of the wires in the mains lead of your appliance may not correspond with the coloured marking identifying terminals in your plug, proceed as follows:

Connect the BLUE coloured wire to plug terminal marked with the letter "N" or coloured black.

Connect the BROWN coloured wire to the plug terminal marked with the letter "L" or coloured red.

In no circumstance must any of the wires be connected to the terminal marked with the letter "E", earth symbol "⏏", coloured green, or green & yellow.

Replacement mains lead sets can be obtained from your local dealer, or by contacting Grundig Consumer Relations (01788 570088)

Moulded 3-pin lead set, suitable for UK use:

Ref: Leadset UK                      8290-991-224

Moulded 2-pin Euro lead set, not suitable for UK use:

Ref: Leadset Euro                    8290-991-316

## Rectifying minor problems

Not every kind of sound interference is caused by a defect in your HiFi system. Impairment can also be caused by leads having been accidentally pulled out, damaged CDs and worn out batteries in the remote control. If the following measures do not bring about satisfactory results, consult an authorised dealer.

Fault	Possible cause/remedy
No sound.	The volume setting is too low – increase the volume. The headphones are plugged in – disconnect the headphones. The power cord is incorrectly connected. Connect it properly. Mute is activated
The system does not respond when buttons are pressed.	Static electrical discharge. Switch off the device, disconnect the power cable and plug it in again after a few seconds. Press the »RESET« button.
The remote control does not work.	The batteries are flat – replace the batteries. The remote control is out of range of the stereo.
Poor radio reception.	Weak antenna signal – check the antenna. Interference from electrical devices such as televisions, video recorders, computers, neon lamps, thermostats or motors. Keep the stereo away from such devices.
Tracks on a CD are skipped.	The CD is damaged or dirty – replace the CD or clean it. The PROGRAM (track memory) or RANDOM functions are active. Deactivate the functions.

## GRUNDIG Service

### GRUNDIG Deutschland

Ihre regionale Kundendienst-Stelle in Deutschland erreichen Sie unter:

Telefon 0180/523 1852\* • Telefax 0180/523 1846\*

\*gebührenpflichtig



**GRUNDIG BELUX N.V.**  
Deltapark, Weihoek 3, Unit 3G  
B-1930 Zaventem  
+32/2-7 16 04 00

**GRUNDIG UK LTD.**  
Elstree Way, Borehamwood,  
Herts, WD6 1RX  
GB Großbritannien/Great  
Britain  
+44/1 81-3 24 94 00

Technical Service  
Unit 35, Woodside Park, Wood  
Street  
Rugby, Warwickshire, CV21  
2NP  
Großbritannien/Great Britain  
+44/1 78-8 57 00 88

**GRUNDIG IRELAND LTD.**  
2 Waverley Office Park, Old  
Naas Road  
EIR Dublin 12  
+3 53/1-4 50 97 17

**GRUNDIG FRANCE S.A.**  
5 Boulevard Marcel Pourtout  
F-92563 Rueil Malmaison  
Cedex  
+33/1-41 39 26 26

**GRUNDIG SCHWEIZ AG**  
Steinacker Straße 28  
CH-8302 Kloten  
+41/1-8 15 81 11

**GRUNDIG PORTUGUESA**  
Comércio de Artigos Electróni-  
cos, Lda.  
Rua Bento de Jesus Caraça 17  
P-1495 Cruz Quebrada,  
Lisboa  
+3 51/1-4 19 75 70

**GRUNDIG ESPAÑA S.A.**  
Solsonés, 2 planta baja B3  
Edificio Muntadas (Mas Blau)  
E-08820 El Prat De Llobre-  
gat (Barcelona)  
+34/93-4 79 92 00

**GRUNDIG NORGE A.S.**  
Glyntiveien 25, Postboks 234  
N-1401 Ski  
+47/64 87 82 00

**GRUNDIG DANMARK A/S**  
Lejrvej 19  
DK-3500 Værløse  
+45/44 48 68 22

**GRUNDIG OY**  
Luoteisrinne 5  
SF-02271 Espoo  
+3 58/9-8 04 39 00

**GRUNDIG SVENSKA AB**  
Albygatan 109 d, Box 4050  
S-17104 Solna  
+46/8-6 29 85 30

**GRUNDIG POLSKA SP.Z.O.O.**  
Ul. Czestochowska 140  
PL-62800 Kalisz  
+48/62-7 66 77 70

**GRUNDIG AUSTRIA Ges.m.b.H.**  
Breitenfurter Straße 43-45  
A-1120 Wien  
+43/1-81 11 70

**GRUNDIG NEDERLAND B.V.**  
Gebouw Amstelveste  
Joan Muyskenweg 22  
NL-1096 CJ Amsterdam  
+31/20-5 68 15 68

**GRUNDIG ITALIANA S.P.A.**  
Via G.B. Trener, 8  
I-38100 Trento  
+39/4 61-89 31 11



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>