

SPLIT TYPE ROOM AIR CONDITIONER OPERATION MANUAL



HSU-09LEK03/R2(DB)
HSU-12LEK03/R2(DB)
HSU-09LEK13/R2(DB)
HSU-12LEK13/R2(DB)
HSU-18LEK13/R2(DB)
HSU-24LEK13/R2(DB)
HSU-12CKAS(R2DB)
HSU-18CKAS(R2DB)
HSU-12HKAG(R2DB)
HSU-18HKAG(R2DB)

 
Contents

PARTS AND FUNCTIONS	1
OPERATION	2
MAINTENANCE	5
CAUTIONS	6
TROUBLE SHOOTING	7

- Please read this operation manual before using the air conditioner.
Keep this operation manual for future reference.

Parts and Functions


Indoor Unit

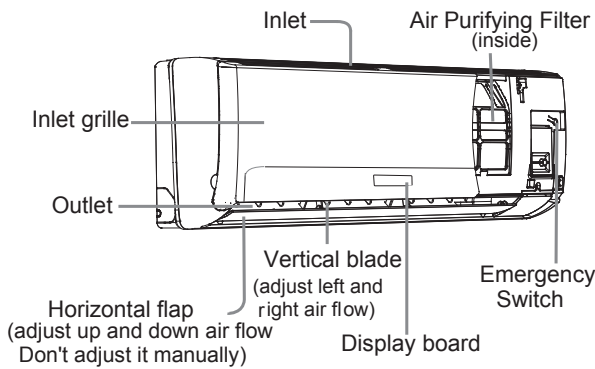

Display board



 
- 1 Signal receiver hole
- 2 ON/OFF display
- 3 Ambient temp. display
When receiving the remote control signal, display the set temperature and in the rest time the room temperature is displayed.
- 4 TIMER ON/OFF display
TIMER ON-OFF display
SLEEP display
Note to the power failure resume: press the sleep button ten times in five seconds and enter function after hearing four sounds. And press the sleep button ten times within five seconds and leave this function after hearing two sounds.
- 5 COOL/HEAT/DRY/AUTO display

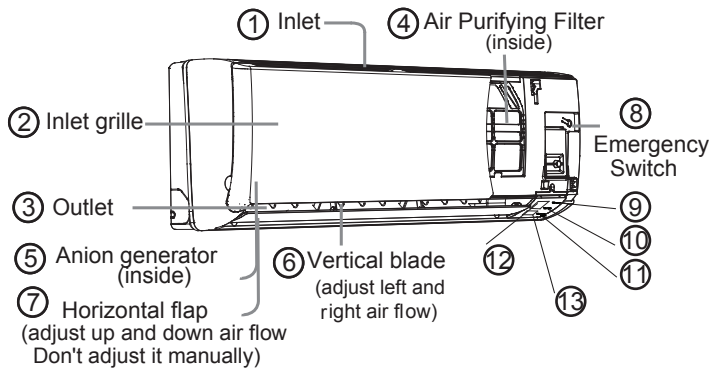

- 9 Power indicator (Lights up when unit starts.)
- 10 Timer mode indicator (Lights up when Timer operation is selected.)
- 11 Operation mode indicator (lights up when the compressor is on.)
- 12 Remote signal receiver (A beeping sound is generated when a signal from remote controller is received.)
- 13 Ambient temp display
When receiving the remote control signal, display the set temperature and in the rest time the room temperature is displayed and this room temperature is only for reference.


Actual inlet grille may vary from the one shown in the manual according to the product purchased

 Outdoor Unit

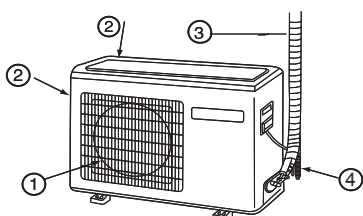

- 1 OUTLET
- 2 INLET
- 3 CONNECTING PIPING AND ELECTRICAL WIRING
- 4 DRAIN HOSE

 Remote controller

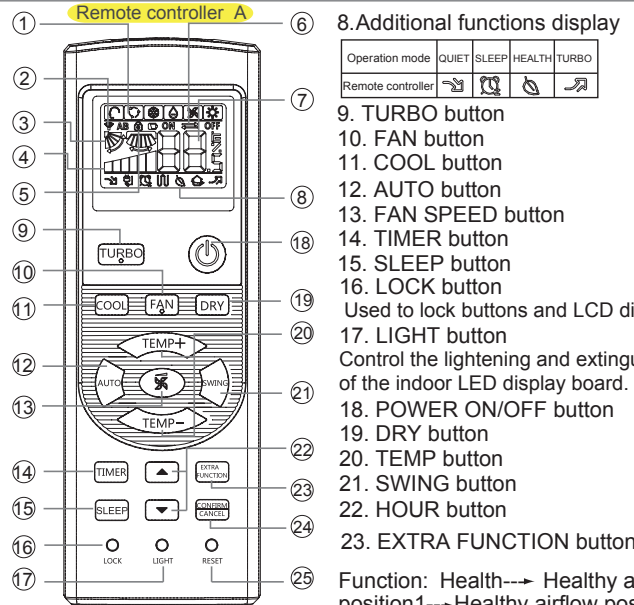

1. Mode display

Operation mode	AUTO	COOL	DRY	FAN
Remote controller				

2. Signal sending display

3. SWING display

4. FAN SPEED display



5. LOCK display

6. TIMER OFF display

7. TEMP display

8. Additional functions display

Operation mode	QUIET	SLEEP	HEALTH	TURBO
Remote controller				

 
- 9. TURBO button
- 10. FAN button
- 11. COOL button
- 12. AUTO button
- 13. FAN SPEED button
- 14. TIMER button
- 15. SLEEP button
- 16. LOCK button
Used to lock buttons and LCD display.
- 17. LIGHT button
Control the lightening and extinguishing of the indoor LED display board.
- 18. POWER ON/OFF button
- 19. DRY button
- 20. TEMP button
- 21. SWING button
- 22. HOUR button
- 23. EXTRA FUNCTION button
Function: Health--> Healthy airflow position 1-->Healthy airflow position 2
-->Restore the original flap position--> Right & left air airflow--> A-B yard--> Refresh air(reserved function)--> QUIET
--> Fahrenheit/Celsius mode conversion

24. CANCEL/CONFIRM button

Function: Setting and cancel to the timer and other additional functions.

25. RESET button

When the remote controller appears abnormal, use a sharp pointed article to press this button to reset the remote

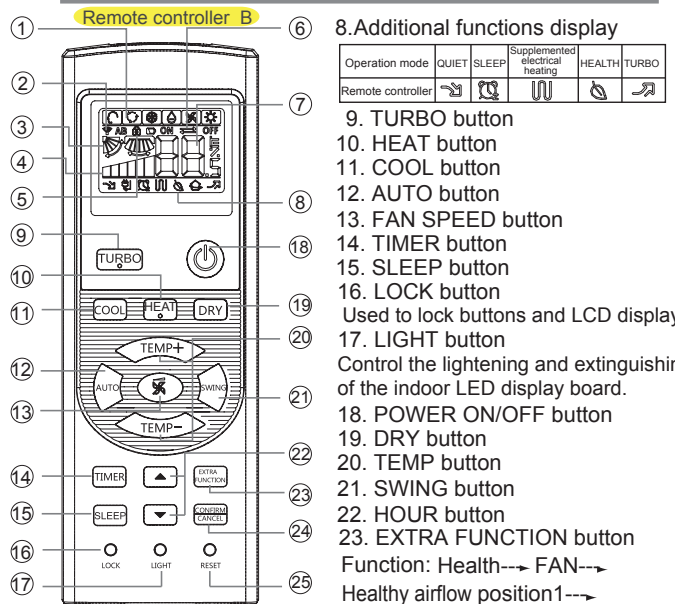


1. Mode display

Operation mode	AUTO	COOL	DRY	HEAT	FAN
Remote controller					

2. Signal sending display

3. SWING display

 4. FAN SPEED display



5. LOCK display

6. TIMER OFF display

7. TEMP display

8. Additional functions display

Operation mode	QUIET	SLEEP	Supplemented electrical heating	HEALTH	TURBO
Remote controller					

- 9. TURBO button
- 10. HEAT button
- 11. COOL button
- 12. AUTO button
- 13. FAN SPEED button
- 14. TIMER button
- 15. SLEEP button
- 16. LOCK button
Used to lock buttons and LCD display.
- 17. LIGHT button
Control the lightening and extinguishing of the indoor LED display board.
- 18. POWER ON/OFF button
- 19. DRY button
- 20. TEMP button
- 21. SWING button
- 22. HOUR button
- 23. EXTRA FUNCTION button
Function: Health--> FAN--> Healthy airflow position 1--> Healthy airflow position 2--> Right & left air airflow--> A-B yard--> Low-Temperature Heating Operation Down to 10 C
--> Refresh air(reserved function)--> QUIET
--> Fahrenheit/Celsius mode conversion

24. CANCEL/CONFIRM button

Function: Setting and cancel to the timer and other additional functions.

25. RESET button

 
When the remote controller appears abnormal, use a sharp pointed article to press this button to reset the remote

NOTE: Healthy function is not available for some units.

Operation

Unit start / stop

Remote controller

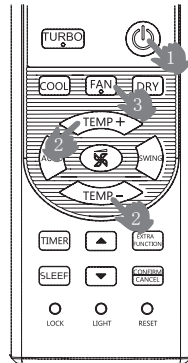

1. Unit start

Press ON/OFF on the remote controller, unit starts.

2. Select temp.setting

Press TEMP+ / TEMP- button

TEMP+ Every time the button is pressed, temp.setting increase 1°C,if kept depressed, it will increase rapidly

TEMP- Every time the button is pressed, temp.setting decrease 1°C,if kept depressed, it will decrease rapidly

Select a desired temperature.

3. Fan function

 
Remote controller A: Press FAN button.

Remote controller B:

Press **EXTRA FUNCTION** button to enter additional options, when cycle display to , will flash. And then press **CONFIRM/CANCEL** enter to FAN function.

For each press button fan speed changes as follows:

Remote controller:



Air conditioner is running under displayed fan speed. When FAN is set to AUTO, the air conditioner automatically adjusts the fan speed according to room temperature.

Operation Mode	Display Board	Remote Controller	Note
AUTO			Under the mode of auto operation, air conditioner will automatically select Cool or Heat operation according to room temperature. When FAN is set to AUTO, the air conditioner automatically adjusts the fan speed according to room temperature.
COOL			Cooling only unit do not have displays and functions related with heating
DRY			In DRY mode, when room temperature becomes lower than temp.setting+2°C,unit will run intermittently at LOW speed regardless of FAN setting.
HEAT			In HEAT mode,warm air will blow out after a short periodof the time due to cold-draft prevention function.
FAN	nothing		In FAN operation mode, the unit will not operate in COOL or HEAT mode but only in FAN mode ,AUTO is not available in FAN mode.And temp.setting is disabled. When FAN is set to AUTO, the air conditioner automatically adjusts the fan speed according to room temperature. In FAN mode,SLEEP operation is not available.

Air Flow Direction Adjustment

1. Status display of air flow

Press **EXTRA FUNCTION** button to enter additional options, when cycle display to , will flash. And then press **CONFIRM/CANCEL** enter to up and down air flow function.

Press **SWING** button. For each press,changes as follows:

Remote controller:

COOL/DRY: → → → → → →

HEAT: → → → → → → Initial state

2. Left and right air flow adjustment

(This function is unavailable on some models.)

Press **EXTRA FUNCTION** button to enter additional options, when cycle display to , will flash. And then press **CONFIRM/CANCEL** enter to Left and right air flow function.

Press **SWING** button. For each press,changes as follows:

Remote controller:

COOL/DRY/HEAT: → → → → → →

 
Cautions:

- When adjusting the flap by hand,turn off the unit.
- When humidity is high,condensate water might occur at air outlet if all vertical louvers are adjusted to left or right.
- It is advisable not to keep horizontal flap at downward position for a long time in COOL or DRY mode , otherwise, condensate water might occur.

Note:

When restart after remote turning off, the remote controller will automatically return to the previous set swing position.

Loading of the battery

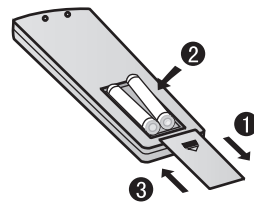

- 1 Remove the battery cover;
- 2 Load the batteries as illustrated. 2 R-03 batteries, resetting key (cylinder);
- 3 Be sure that the loading is in line with the " + "/"-";
- 4 Load the battery,then put on the cover again.

Note:

- The distance between the signal transmission head and the receiver hole should be within 7m without any obstacle as well.
- When electronic-started type fluorescent lamp or change-over type fluorescent lamp or wireless telephone is installed in the room, the receiver is apt to be disturbed in receiving the signals, so the distance to the indoor unit should be shorter.
- Full display or unclear display during operation indicates the batteries have been used up. Please change batteries.
- If the remote controller can't run normally during operation, please remove the batteries and reload several minutes later.

Hint:

 
Remove the batteries in case won't be in use for a long period. If there is any display after taking-out, just press reset key.

Operation

Timer On/Off On-Off Operation

1. After unit starts, select your desired operation mode.
2. Press TIMER button to change TIMER mode. Every time the button is pressed, display changes as follows:

Remote controller:



Then select your desired TIMER mode (TIMER ON or TIMER OFF or TIMER ON-OFF). " ON "or " OFF "will flash.

3. Press ▼ / ▲ button to set time.

▲ Press the button for each time, setting time in the first 12 hours increased by 0.5 hour every time, after 12 hours, increased by 1 hour every time.

▼ Press the button for each time, setting time in the first 12 hours decreased by 0.5 hour every time, after 12 hours, decreased by 1 hour every time.

It can be adjusted within 24 hours.

4. Confirm timer setting

After adjust the time, press button and confirm the time ON or OFF button will not flash any more.

5. Cancel timer setting

Press the timer button by times until the time display eliminated.

Hints:

After replacing batteries or a power failure happens, time setting should be reset.

According to the Time setting sequence of TIMER ON or TIMER OFF, either Start-Stop or Stop-Start can be achieved.

HEALTH Operation

(This function is unavailable on some models.)

Press button to enter additional options, when cycle display to , will flash, and then press , enter to health function. When cancel the function, please enter additional options again and to cancel health function.

The anion generator in the airconditioner can generate a lot of anion effectively balance the quantity of position and anion in the air and also to kill bacteria and speed up the dust sediment in the room and finally clean the air in the room.

TURBO/QUIET Operation

(This function is unavailable on some models.)

- (1) TURBO Operation

When you need rapid heating or cooling, you can use this function.

Press TURBO button, the remote controller will show , and then achieve to the turbo function. Press again this TURBO button, the turbo function will be cancelled.

- (2) QUIET Operation

Press button to enter additional options, when cycle display to , will flash, and then press , enter to quiet function. When cancel the function, please enter additional options again and to cancel quiet function.

 
Note :

During TURBO operation, in rapid COOL mode, the room will show inhomogeneous temperature distribution. Long period QUIET operation will cause effect of not too cool or not too warm.

Emergency operation and test operation

Emergency Operation:

- Use this operation only when the remote controller is defective or lost.
- When the emergency operation switch is pressed, the "Pi" sound is heard once, which means the start of this operation.
- In this operation, the system automatically selects the operation modes, cooling or fan or heat, according to the room temperature.

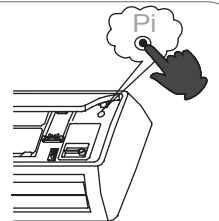

Room temperature	Operation mode	Designated temperature	Timer mode	Air flow
ABOVE 23°C	COOLING	26°C	NO	AUTOMATIC
BELOW 23°C	HEAT	23°C	NO	AUTOMATIC

(Cooling only unit) Room temperature	Operation mode	Designated temperature	Timer mode	Air flow
BELOW 23°C	FAN	26°C	NO	AUTOMATIC

- It is not possible to operate in dry mode.

Test operation:


Test operation switch is the same as emergency switch.

- Use this switch in the test operation when the room temperature is below 16°C, do not use it in the normal operation.
- Continue to press the test operation switch for more than 5 seconds. After you hear the "Pi" sound twice, release your finger from the switch: the cooling operation starts with the air flow speed "Hi".
- After 30 minutes, test operation ends automatically. (Only for 22K, 24K unit)



Operation

 
Comfortable SLEEP

Press **SLEEP** button, the remote controller will show , and then achieve to the sleep function. Press again this **SLEEP** button, the sleep function will be cancelled.

Operation Mode


1. In COOL, DRY mode

1 hours after SLEEP mode starts, temp. will become 1°C higher than temp. setting. After another 1 hours, temp. rises by 1°C further. The unit will run for further 6 hours then stops. Temp. is higher than temp. setting so that room temperature won't be too low for your sleep.

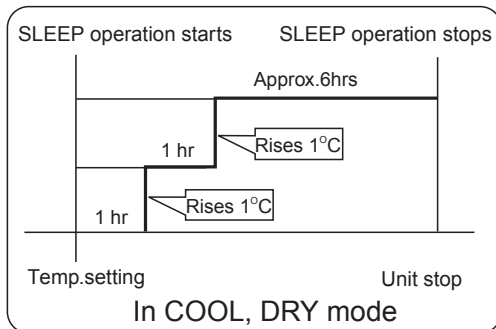

2. In HEAT mode

 1 hours after SLEEP mode starts, temp. will become 2°C lower than temp. setting. After another 1 hours, temp. decrease by 2°C further. After more another 3 hours, temp. rises by 1°C further. The unit will run for further 3 hours then stops. Temp. is lower than temp. setting so that room temperature won't be too high for your sleep.

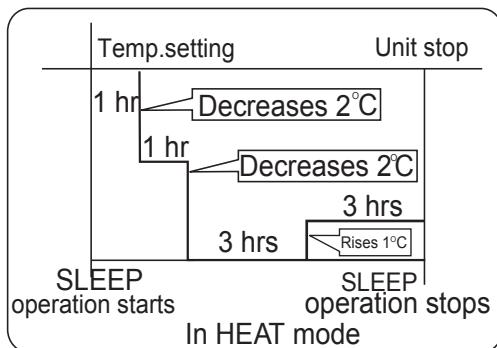

3. In AUTO mode

The unit operates in corresponding sleep mode corresponding sleep mode adapted to the automatically selected operation mode.

4. In FAN mode

It has no SLEEP function.

5. When quiet sleeping function is set to 8 hours the quiet sleeping time can not be adjusted. When TIMER function is set, the quiet sleeping function can't be set up. After the sleeping function is set up, if user resets TIMER function, the sleeping function will be cancelled; the machine will be in the state of timing-on, if the two modes are set up at the same time, either of their operation time is ended first, the unit will stop automatically, and the other mode will be cancelled.

Note

When TIMER function is set, the sleeping function can't be set up. After the sleeping function is set up, if user resets TIMER function, the sleeping function will be cancelled; the machine will be in the state of timing-on.

Note to the power failure resume:

press the sleep button ten times in five seconds and enter function after hearing four sounds. And press the sleep button ten times within five seconds and leave this function after hearing two sounds.

Power Failure Resume Function

If the unit is started for the first time, the compressor will not start running unless 3 minutes have elapsed. When the power resumes after power failure, the unit will run automatically, and 3 minutes later the compressor starts running.

Healthy airflow Operation

1. Press  to starting

Setting the comfort work conditions.

2. The setting of healthy airflow function

Press **EXTRA FUNCTION** button to enter additional options, Press this button continuously, the louvers location will cycle between in the following three locations, to choose the swing location what you needed, and then press **CONFIRM/CANCEL** button to confirm.




3. The cancel of the healthy airflow function

Press **EXTRA FUNCTION** button to enter additional options, Press this button continuously, the louvers location will cycle between in the following three locations again, and then press **CONFIRM/CANCEL** button to cancel.

Notice: Do not direct the flap by hand. Otherwise, the grille will run incorrectly. If the grille is not run correctly, stop for a minute and then start, adjusting by remote controller.

 
Note:

1. After setting the healthy airflow function, the position grill is fixed.
2. In cooling, it is better to select the  mode.
3. In cooling and dry, using the air conditioner for a long time under the high air humidity, condensate water may occur at the grille.


Maintenance

For Smart Use of The Air Conditioner

Setting of proper room temperature

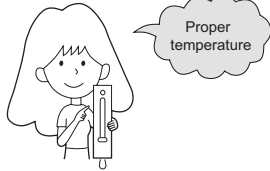

Do not block the air inlet or outlet

 

Remote Controller



 
Do not use water, wipe the controller with a dry cloth. Do not use glass cleaner or chemical cloth.

Indoor Body




wipe the air conditioner by using a soft and dry cloth. For serious stains, use a neutral detergent diluted with water. Wring the water out of the cloth before wiping, then wipe off the detergent completely.


Close doors and windows during operation



Use the timer effectively

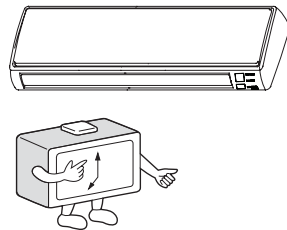 


Do not use the following for cleaning

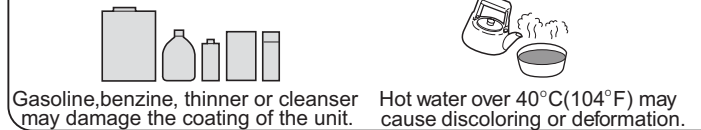 

If the unit is not to be used for a long time, turn off the power supply main switch.




 Use the louvers effectively



Air Filter cleaning

 - 1 Open the inlet grille by pulling it upward.
- 2 Remove the filter. Push up the filter's center tab slightly until it is released from the stopper, and remove the filter downward.
- 3 Clean the filter. Use a vacuum cleaner to remove dust, or wash the filter with water. After washing, dry the filter completely in the shade.
- 4 Attach the filter. Attach the filter correctly so that the "FRONT" indication is facing to the front. Make sure that the filter is completely fixed behind the stopper. If the right and left filters are not attached correctly, that may cause defects.
- 5 Close the inlet grille.

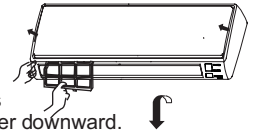

Replacement of Air Purifying Filter

 
1. Open the Inlet Grille

Prop up the inlet grille by using a small device named grille-support which located in the right side of the indoor unit.




2. Detach the standard air filter

Slide the knob slightly upward to release the filter, then withdraw it.

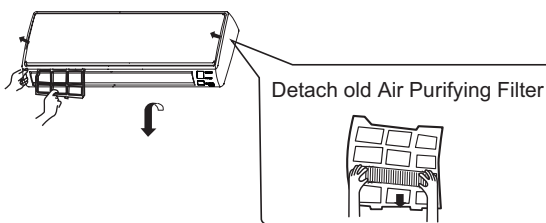

3. Attach Air Purifying Filter

 
Put air purifying filter appliances into the right and left filter frames.

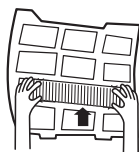

4. Attach the standard air filter (Necessary installation)

ATTENTION:

 The white side of the photocatalyst air purifying filter face outside, and the black side face the unit. The green side of the bacteria-killing medium air purifying filter face outside, and the white side face the unit.

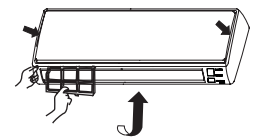

5. Close the Inlet Grille

Close the Grille surely

NOTE:

- The photocatalyst air purifying filter will be solarized in fixed time. In normal family, it will be solarized every 6 months.
- The bacteria-killing medium air purifying filter will be used for a long time, no need for replacement. But in the period of using them, you should remove the dust frequently by using vacuum cleaner or flapping them lightly, otherwise, its performance will be affected.
- Please keep the bacteria-killing medium air purifying filter in the cool and dry conditions avoid long time directly sunshine when you stop using it, or its ability of sterilization will be reduced.

Cautions

⚠ WARNING

Please call Sales/Service Shop for the Installation.
Do not attempt to install the air conditioner by yourself because improper works may cause electric shock, fire, water leakage.

⚠ WARNING

When abnormality such as burnt-smell found, immediately stop the operation button and contact sales shop.

 


OFF




⚠
STRICT
ENFORCEMENT

Use an exclusive power source with a circuit breaker



Check proper installation of the drainage securely

 ⚠
STRICT
ENFORCEMENT

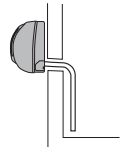

Connect power supply cord to the outlet completely



⚠
STRICT
ENFORCEMENT

Use the proper voltage

 


⚠
STRICT
ENFORCEMENT

1. Do not use power supply cord extended or connected in halfway
2. Do not install in the place where there is any possibility of inflammable gas leakage around the unit.
3. Do not get the unit exposed to vapor or oil steam.


⊘
PROHIBITION

Do not use power supply cord in a bundle.

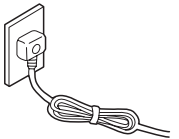

⊘
PROHIBITION

 Take care not to damage the power supply cord.

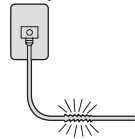

⊘
PROHIBITION

Do not insert objects into the air inlet or outlet.



 
⊘
PROHIBITION

Do not start or stop the operation by disconnecting the power supply cord and so on.




⊘
PROHIBITION

Do not channel the air flow directly at people, especially at infants or the aged.

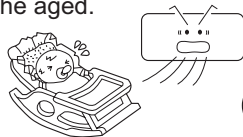


⊘
PROHIBITION

 Do not try to repair or reconstruct by yourself.

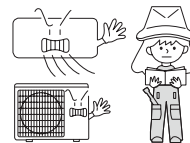


Connect the earth cable.

 

⚡
earthing


⚠ CAUTION

 Do not use for the purpose of storage of food, art work, precise equipment, breeding, or cultivation.




⊘
PROHIBITION

 Take fresh air occasionally especially when gas appliance is running at the same time.

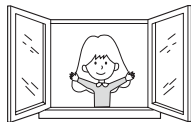


⚠
STRICT
ENFORCEMENT

 Do not operate the switch with wet hand.

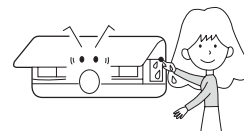


⊘
PROHIBITION

 Do not install the unit near a fireplace or other heating apparatus.

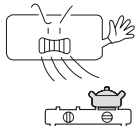


⊘
PROHIBITION

 Check good condition of the installation stand

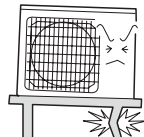


⊘
PROHIBITION

 Do not pour water onto the unit for cleaning

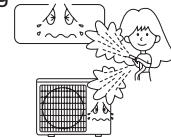

⊘
PROHIBITION

 Do not place animals or plants in the direct path of the air flow



⊘
PROHIBITION

Do not place any objects on or climb on the unit.



⊘
PROHIBITION






Do not place flower vase or water containers on the top of the unit.



⊘
PROHIBITION

Trouble shooting

Before asking for service, check the following first.

	Phenomenon	Cause or check points
Normal Performance inspection	The system does not restart immediately. 	<ul style="list-style-type: none"> When unit is stopped, it won't restart immediately until 3 minutes have elapsed to protect the system. When the electric plug is pulled out and reinserted, the protection circuit will work for 3 minutes to protect the air conditioner.
	Noise is heard 	<ul style="list-style-type: none"> During unit operation or at stop, a swishing or gurgling noise may be heard. At first 2-3 minutes after unit start, this noise is more noticeable (This noise is generated by refrigerant flowing in the system.) During unit operation, a cracking noise may be heard. This noise is generated by the casing expanding or shrinking because of temperature changes. Should there be a big noise from air flow in unit operation, air filter may be too dirty.
	Smells are generated.	<ul style="list-style-type: none"> This is because the system circulates smells from the interior air such as the smell of furniture, paint, cigarettes.
	Mist or steam are blown out. 	<ul style="list-style-type: none"> During COOL or DRY operation, indoor unit may blow out mist. This is due to the sudden cooling of indoor air.
	In dry mode, fan speed can't be changed.	<ul style="list-style-type: none"> In DRY mode, when room temperature becomes lower than temp.setting+2°C, unit will run intermittently at LOW speed regardless of FAN setting.
Multiple check		<ul style="list-style-type: none"> Is power plug inserted? Is there a power failure? Is fuse blownout?
	Poor cooling 	<ul style="list-style-type: none"> Is the air filter dirty? Normally it should be cleaned every 15 days. Are there any obstacles before inlet and outlet? Is temperature set correctly? Are there some doors or windows left open? Is there any direct sunlight through the window during the cooling operation?(Use curtain) Are there too much heat sources or too many people in the room during cooling operation?

Cautions

The machine is adaptive in following situation

1.Applicable ambient temperature range:

For: T1

Cooling	Indoor	Maximum: D.B / W.B Minimum: D.B / W.B	32°C/23°C 18°C/14°C
	Outdoor	Maximum: D.B Minimum: D.B	43°C/26°C 18°C

For: T3

Cooling	Indoor	Maximum: D.B / W.B Minimum: D.B / W.B	29°C/19 °C 18°C/14 °C
	Outdoor	Maximum: D.B / W.B Minimum: D.B	54°C/24 °C 18°C

- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person.
The type of connecting wire is H05RN-F or H07RN-F
- If the fuse on PC board is broken please change it with a fuse type T. 3.15A/250V.
If the fuse of outdoor unit on PC board is broken, please change it with the type of T. 25A/250V.
- The distance between the indoor unit and the floor should be more than 2m.
- The wiring method should be in line with the local wiring standard.
- After installation, the power plug should be easily reached.
- The used batteries should be disposed of properly.
- The appliance is not intended to use by young children or infirm persons without supervision.
- Young children should be supervised ensure that they do not play with the appliance.
- The appliance must be installed on a strong enough support.
- The wiring diagram is attached inside the machine.

T1: Application temp. range of air conditioner -7°C~43°C.

T3: Application temp. range of air conditioner -7°C~54°C.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>