

# Electronic Coffee Maker

---

## Cafetière Électronique

---

## Cafetera Electrónica



User Manual  
HDC10SS

---

Guide de l'Utilisateur  
HDC10SS

---

Manual del Usuario Modelo  
HDC10SS

**Haier**

Quality · Innovation · Style

Download from [www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

# IMPORTANT SAFEGUARDS

**When using electrical appliances, basic safety precautions should always be followed, including the following:**

1. **Read all instructions carefully.**
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock and injury to persons do not immerse cord, plug or unit in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow cooling before putting on or taking off parts and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK DO NOT REMOVE THE BOTTOM COVER. NO USER-SERVICEABLE PARTS INSIDE. REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY.
8. The use of accessory not evaluated for use with appliance may cause injuries
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces, including the stove.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. To disconnect, turn all controls to "Off", then remove plug from wall outlet.
13. Never use warm or hot water to fill the water reservoir. Use cold water only.

14. Scalding may occur is the cover is lifted or removed during the brewing cycle.
15. Do not use appliance for other than intended use.
16. Snap the lid securely onto the carafe before serving.
17. The container is designed for use with this appliance. It must never be used on a range top or in a conventional or microwave oven.
18. Do not set a hot carafe on a wet or cold surface.
19. Do not use a cracked carafe or a carafe that has a loose or weakened handle.
20. Do not clean coffee maker with scouring powders, steel wool pads, or other abrasive materials.

## **SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY**

Staple your receipt to your manual.

**You will need it to obtain warranty service.**

# TABLE OF CONTENTS

	<b>PAGE</b>
<b>Important Safeguards</b> .....	<b>1</b>
<b>Parts and Features</b> .....	<b>5</b>
<b>Before Using for the First Time</b> .....	<b>6</b>
<b>Operation</b> .....	<b>6</b>
<b>Care and Cleaning</b> .....	<b>8</b>
<b>Cleaning Mineral Deposits</b> .....	<b>8</b>
<b>Hints for Great Tasting Coffee</b> .....	<b>9</b>
<b>Storage</b> .....	<b>9</b>
<b>Limited Warranty</b> .....	<b>10</b>

## Polarized Plug

This appliance has a polarized plug, To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way, If the plug does not fit fully into the outlet, reverse the plug, If it still does not fit, contact a qualified electrician, **Do not attempt to defeat this safety feature.**


## Power Cord

A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a long cord. An extension cords may be used if care is exercised in their use:

The marked electrical rating of extension cord is equal to or greater than the electrical rating of this appliance. The electrical rating of this appliance is listed on the bottom panel of the unit.

The extension cord should be arranged so that it will not hang off of the counter top or table top where it can be pulled on by children or tripped over.

# PARTS AND FEATURES

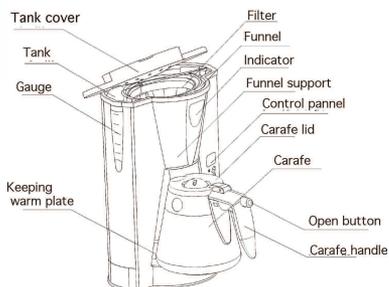

1. Water Reservoir
2. Removable Filter
3. Removable Filter Basket
4. Power On Indicator Light
5. Control Panel/LCD Display

6. Flip Up Cover
7. Water Level Indicator
8. Keep Warm Plate
9. Carafe

## BEFORE USING FOR THE FIRST TIME

1. Unpack the unit.
2. Check the contents against the accessories list.
3. Remove all labels and the protective film.
4. Select a suitable location for the unit on a flat, stable surface close to a power outlet.

Check to ensure all accessories are included and the unit is not damaged. Be sure the filter and filter basket are assembled properly. Before your first brew cycle, you will need to cycle the unit twice with water to remove any sediment. Brew clean water by filling the reservoir up to the MAX marker and follow the steps below (but do not use ground coffee at this time), then pour the cycled water out of the carafe. Repeat 2 times. Remove and Clean carafe, Lid, Filter and filter basket thoroughly with warm water.

## OPERATION

### Making Coffee

- 1) Open the flip up lid of coffee maker, use the carafe to fill the water reservoir with cold water. Watch the left or right water level indicator for your desired fill level. The water level should be between the MAX and MIN.
- 2) Place the filter basket in the filter basket in the unit. Make sure it is properly seated. Then place the filter into the filter basket.
- 3) Add ground coffee to filter. One level tablespoon for every cup is recommended, but you may adjust according to your personal taste.
- 4) Place the carafe on warming plate.  
Note: Please make sure the carafe is properly seated on to the warming plate.
- 5) Plug the power cord into the outlet, the LCD will display "AM 12:00" (fig.1).
- 6) Press the "ON/OFF" button, the "RUN" indicator lamp will now be illuminated. The brewing cycle will now begin.



Fig.1

Note: You can remove the carafe at any time during the brewing cycle and pour a cup of coffee. The coffeemaker will automatically stop dripping while the carafe is removed. To avoid a possible overflow, replace the carafe within 30 seconds.

- 7) Do not open the flip up lid cover during the brew cycle. The flow back of hot water could damage the coffeemaker.
- 8) You can take remove the carafe and serve when the brewing cycle is completed.

Note: The coffee produced will be slightly less than the water you have poured in, as the coffee grounds absorb some water. For your safety, you should keep the lid of carafe down when pouring. This also helps to keep the coffee warm.

- 9) Always turn the coffee maker off and unplug the power cord from the electrical outlet when the coffee maker is not in use.

Note: Always Use caution when pouring hot coffee, as the fresh brewed coffee is very hot.

### Automatic/Delayed Brew Function

Your coffee maker is fully programmable. You can set it to brew up to 24 hours in advance. (For example if the current time is 5:10 PM, you can set the coffee maker to automatically start at 8:15PM)

First follow steps 1 through 5 of the above "making coffee" section. Now you will need to set the automatic start function as follows:

- 1) Press the "ON/OFF" button twice; the "AUTO" indicator should now be illuminated.



Fig.2

- 2) Press the "PROG" button; the "LCD" should now be displaying "CLOCK". Set the clock to the current time by pressing the "HOUR" and "MIN" buttons. (Fig.2)



Fig.3

Note: The time cycle is 12 hours, every 12 hours; the "AM" and "PM" will change. Please be sure to set the clock to the correct current time "AM" or "PM"

- 3) Press the "PROG" button; the "LCD" should now display "TIMER", now set the automatic start time by pressing the "HOUR" and "MIN" buttons. (fig.3) As per our example, at 8:15PM the "AUTO" indicator light will go off, and the "RUN" indicator light will be illuminated. The coffee maker will now start automatically. After brewing, you will be ready to start serving.

Note: If you leave your coffee maker unattended for 2 hours, it will shut off automatically.

## CARE AND CLEANING

**CAUTION:** Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or liquid. After each use, always make sure the plug is first removed from wall outlet.

- 1) Clean the filter, carafe and carafe lid after each use in hot, sudsy water.
- 2) Wipe the product's exterior surface with a soft, damp cloth to remove stains.
- 3) Water droplets may build up in the area above the filter and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use of the product.
- 4) Use a damp cloth to gently wipe the warming plate. Never use an abrasive cleaner to clean your coffee maker.

## CLEANING MINERAL DEPOSITS

- To keep your coffee maker operating efficiently, you should clean away any mineral deposits left behind by hard water. This can be the result of the water quality in your area and the frequency you use your coffee maker. Please follow these directions to clean mineral deposits:
- Fill the carafe with one part white vinegar and three parts cold water, then pour the water and vinegar mixture into the water reservoir. Do not add ground coffee. Brew the water-vinegar solution as per the normal brewing instructions. Repeat until no yellow liquid brews through. If necessary, brewing with tap water until vinegar odor is gone.

# HINTS FOR GREAT-TASTING COFFEE

1. A clean coffee maker is essential for making great-tasting coffee. Regularly clean your coffee maker as specified in the "CLEANING AND MAINTENANCE" section. Always use fresh, cold water in the coffee maker.
2. Store unused coffee grounds in a cool, dry place. After opening a package of coffee grounds, reseal it tightly and store it in a refrigerator to maintain its freshness.
3. For optimum coffee taste, buy whole coffee beans and grind them finely just before brewing.
4. Do not reuse coffee grounds since this will greatly reduce the coffee's flavor. Reheating coffee is not recommended as coffee is at its peak flavor immediately after brewing.
5. Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the coffee grounds.
6. Oiliness may occur more frequently if heavily roasted coffees are used.

## STORAGE

Unplug the unit and allow it to cool. Always clean the unit before storing. Store your coffee maker in its original box in a clean dry place. Never pack up your coffee maker while it is still hot. Never wrap cord tightly around the appliance. Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

# LIMITED WARRANTY

## Full One Year

This warranty covers all defects in workmanship or materials for a period of 12 months from the date of purchase, provided you are able to present a valid proof-of-purchase (the original receipt)

Exceptions: Commercial or Rental Use Warranty is 90 days from date of original purchase.

This warranty covers appliances within the Continental United States, Puerto Rico and Canada.

### **What is not covered by this warranty:**

Damage from other than normal use or improper installation.

Damage from misuse, abuse, accident, alteration, lack of proper care and maintenance.

Failure caused by build-up of food matter or water deposits.

Product, whose rating label has been removed or altered.

Product serviced by other than authorized service center.

Replacement or repair of household fuses, circuit breakers or wiring.

Labor, shipping charges and replacement of defective parts beyond the initial 12-month period.

Do not return this product to the store.

If you need assistance with this product, please contact "Haier Customer Satisfaction Service at 1-877-337-3639 between 9:00 AM and 5:00 PM (EST) Monday to Friday.

### **Before calling, please have the following information available:**

Model number of your appliance. The name and address of the store you purchased the unit from and the date of purchase. A clear description of the problem.

Haier will repair or replace any part free of charge including labor that fails due to a defect in materials or workmanship, or replace with a comparable model.

### **THIS LIMITED WARRANTY IS GIVEN IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.**

The remedy provided in this warranty is exclusive and is granted in lieu of all other remedies.

This warranty does not cover incidental or consequential damages, so the abovelimitations may not apply to you. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

This warranty gives you specific legal rights, and you may have other rights, which vary, from state to state.

Haier America  
New York, NY 10018

# **IMPORTANT**

## **Do Not Return This Product To The Store**

If you have a problem with this product, please contact the "Haier Customer Satisfaction Center" at 1-877-337-3639.

**DATED PROOF OF PURCHASE REQUIRED FOR WARRANTY SERVICE**

# **IMPORTANT**

## **Ne pas Réexpédier ce Produit au Magasin**

Pour tout problème concernant ce produit, veuillez contacter le service des consommateurs 'Haier Customer Satisfaction Center' au 1-877-337-3639.  
**UNE PREUVE D'ACHAT DATEE EST REQUISE POUR BENEFICIER DE LA GARANTIE.**

# **IMPORTANTE**

## **No regrese este producto a la tienda**

Si tiene algún problema con este producto, por favor contacte el "Centro de Servicio al Consumidor de Haier" al 1-877-337-3639 (Válido solo en E.U.A).

**NECESITA UNA PRUEBA DE COMPRA FECHADA PARA EL SERVICIO DE LA GARANTIA**

**115V, 60 Hz**

**Made in China  
Fabriqué en Chine  
Hecho en China**

# **Haier**

**Haier America  
New York, NY 10018**

Issued: January - 06

**Printed in China**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>