


HANNspree Xv Quick Start Guide

JT02-37E1 37" Liquid Crystal Display TV


This guide is designed as a reference to help you start using your LCD TV quickly. Please refer to the User's Manual for more detailed installation and safety instructions.

Front View

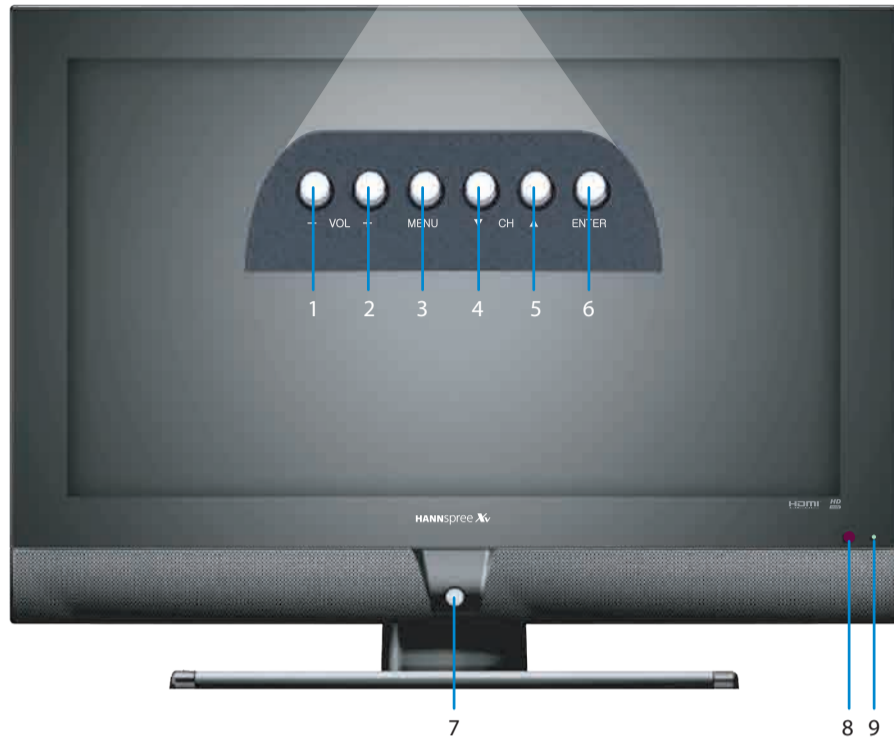

- 1. Volume down button
- 2. Volume up button
- 3. OSD Menu button
- 4. Channel down button
- 5. Channel up button
- 6. Enter button
- 7. Power button
- 8. Infrared receiver
- 9. Power LED indicator


Rear View

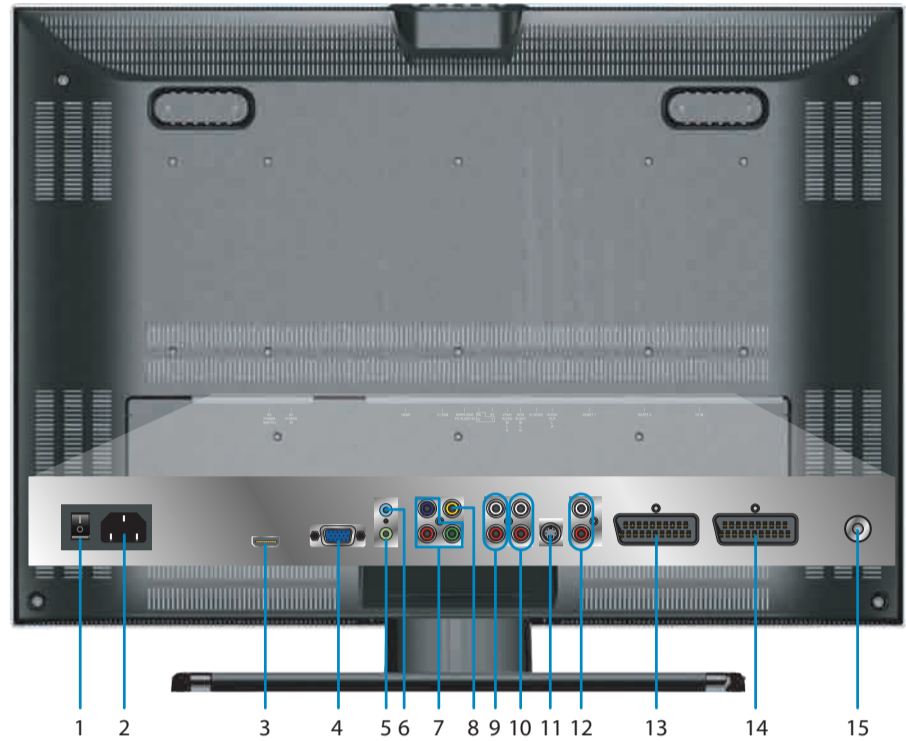

- 1. AC power switch
- 2. AC power input
- 3. HDMI input terminal (19 pin)
- 4. D-Sub signal input (15 pin)
- 5. Audio Input for VGA
- 6. Headphone jack
- 7. YPbPr/ HD component video input
- 8. Composite video input
- 9. Audio input for YPbPr/ HD components (L/R)
- 10. Audio input for AV or S-Video components (L/R)
- 11. S-Video input
- 12. Audio output (L/R)
- 13. SCART1 input
- 14. SCART2 / SCART2-SV input
- 15. RF antenna / Cable TV input

Making Connections

Connecting to Antenna/Cable TV

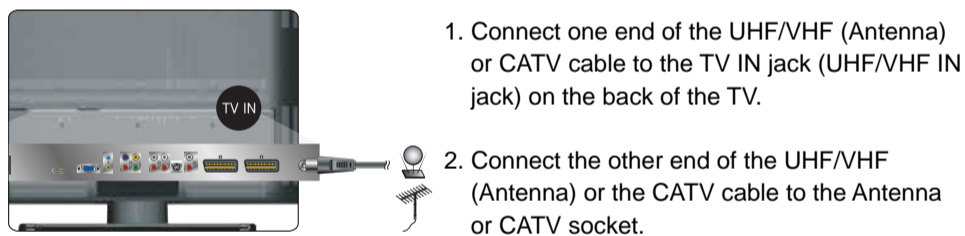


1. Connect one end of the UHF/VHF (Antenna) or CATV cable to the TV IN jack (UHF/VHF IN jack) on the back of the TV.
2. Connect the other end of the UHF/VHF (Antenna) or the CATV cable to the Antenna or CATV socket.


Connecting to VCR, VCD or DVD Player

The illustrations below show you how to connect your TV to a VCR, VCD or a DVD player.


With RCA AV cable

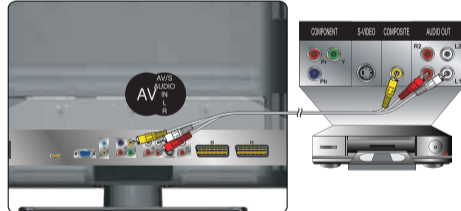


With S-Video cable

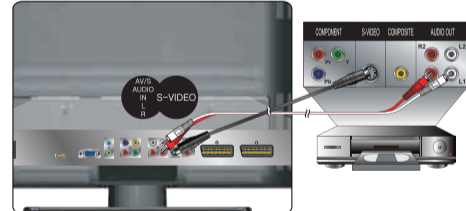


With YPbPr cable

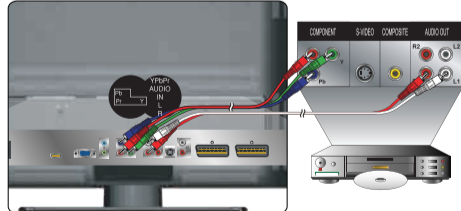

With SCART1

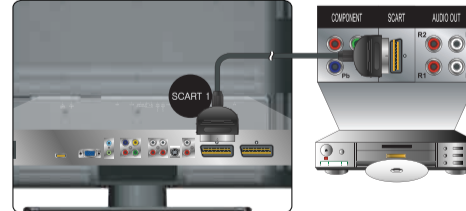

Connecting the Power Cord

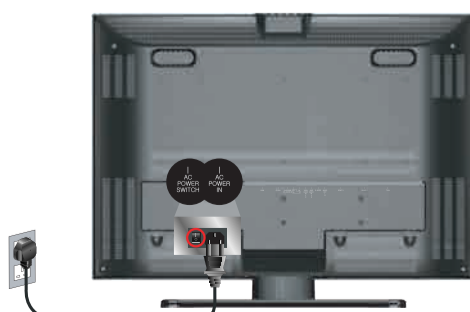


1. Plug the power connector into the AC-IN input jack on the rear cover of the TV-set.
2. Insert the three-pronged plug at the other end of the power cord into a power outlet.
3. Turn the main power switch on to supply power to the TV.

Getting Started

Selecting Input Source

1. Make sure your TV is turned on and a device such as a DVD player is connected.
2. Press the **SOURCE** button on the remote control and use the **◀/▶** button to select the required input source between TV, AV, SV, HD, SCART1, SCART2, SCART2-SV, D-SUB, and HDMI.
3. Press enter to confirm your selection.

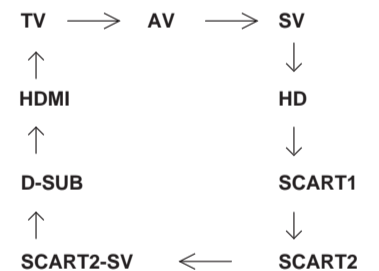

Auto Channel Scan

Follow the instructions below to automatically preset the channels for your TV before watching it for the first time.

1. Press the **"MENU"** button on your remote control or the control panel.
2. Use the **▲/▼** button to select Channel Menu.
3. Press the **◀/▶** button to start Auto Scan.

Note: After performing Auto Scan, you need not do it again when turning on your TV next time.

Auto Scan



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>