

Haier®

USER MANUAL
HLT71

7" DIGITAL LCD TV

**IMPORTANT
READ THESE INSTRUCTIONS
BEFORE USE AND RETAIN
FOR FUTURE REFERENCE.**

SAFETY INFORMATION

DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

THIS DEVICE IS INTENDED FOR CONTINUOUS OPERATION!

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, AND ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.

WARNING:

- TO PREVENT FIRE OR SHOCK HAZARD. DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

- TO PREVENT FIRE OR SHOCK HAZARD. DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

VENTILATION WARNING:

THE NORMAL VENTILATION OF THE PRODUCT SHALL NOT BE IMPEDED FOR INTENDED USE.

THE MAINS PLUG IS USED AS DISCONNECT DEVICE, THE DISCONNECT DEVICE SHALL REMAIN READILY OPERABLE.



CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacture's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinch particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Unplug this apparatus during lightening storms or when unused for long periods of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus, has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14) This appliance shall not be exposed to dripping or splashing water and that no object filled with liquid such as vases shall be placed on the apparatus.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

WARNINGS:

- This TV monitor should be operated only at the adaptor supplied.
- Do not try to repair the TV monitor yourself as it contains no user-serviceable parts. The TV monitor should only be repaired by a qualified technician.
- Stop using the TV monitor if the cabinet is damaged. Have it checked by a service technician.
- Put your monitor only in a clean, dry environment. Unplug the monitor immediately if it gets wet, and consult your service technician.
- Always unplug the monitor before cleaning it. Clean the cabinet with a clean, dry cloth. Apply non-ammonia-based cleaner onto the cloth, not directly onto the glass screen.
- Keep the TV monitor away from magnetic objects, motors, TV sets, and transformers.
- Do not place heavy objects on the cable or power cord.

Care and Maintenance

- Avoid exposing your monitor directly to sunlight or other heat sources. Place your TV monitor away from the sun to reduce glare.
- Put your TV monitor in a well-ventilated area. Do not place anything heavy on top of your monitor.
- Make certain that your TV monitor is installed in a clean and moisture-free area.

Safety Tips

- If smoke, abnormal noise or odor comes out of your TV monitor, switch off the power immediately and call your service center.
- Never try to repair the TV monitor yourself. Always call your service center or a qualified technician to fix it.
- Do not watch during driving, it is dangerous and is illegal!

Note

 
This user's manual contains graphics and information that is for reference purposes only and is subject to change without notice.

Power requirements

You may use the DC adaptor or the Cigarette lighter adaptor (NEGATIVE GROUND ONLY) supplied for the power source.

Battery installation

Attach the rechargeable battery pack to the bottom of the TV Player unit as illustrated below:



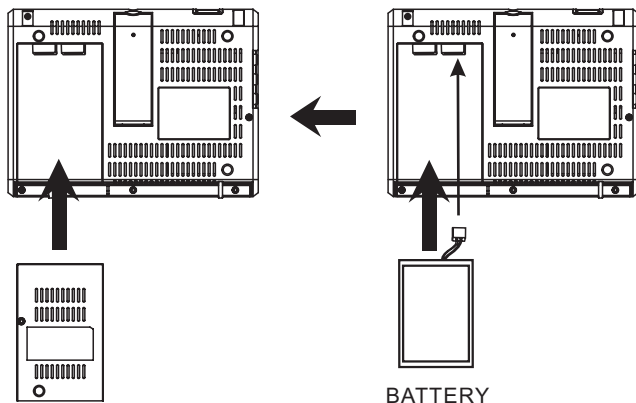


BATTERY COVER

NOTE:


This unit works either on the battery pack supplied or on DC power: unplug the DC Power adapter from the DC input jack to run off the battery pack (after fully charged); plugging the DC Power adapter while the battery pack is attached initiates the charging of this battery. Please insert the battery correctly. Generally, it takes about 6 hours to charge a dead battery pack full. A full charged battery pack can endure approximately 2 hours of continuous playback.

   Controls

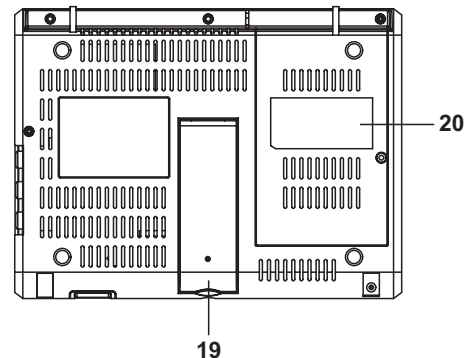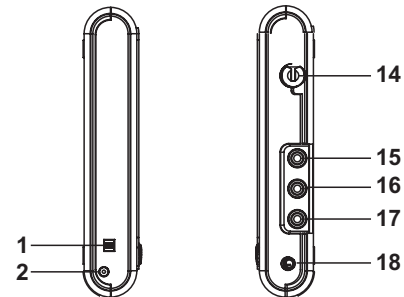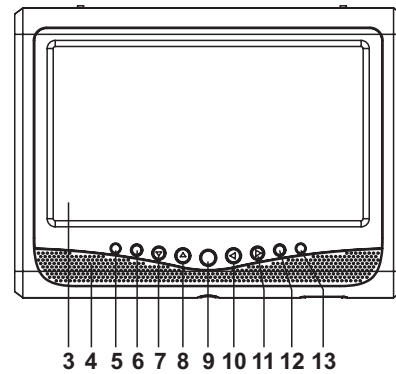

1. Power on/off switch
2. DC input jack
3. LCD display
4. Speaker
5. Standby/Power indicator
6. Menu
7. Channel -
8. Channel +
9. Auto/OK
10. Volume - (◀ right key in menu function)
11. Volume + (▶ left key in menu function)
12. Mode
13. Remote control sensor
14. RF in
15. Video in jack
16. Audio left in jack
17. Audio right in jack
18. Phones jack
19. Self-support Bracket
20. Battery compartment

 Remote control operation

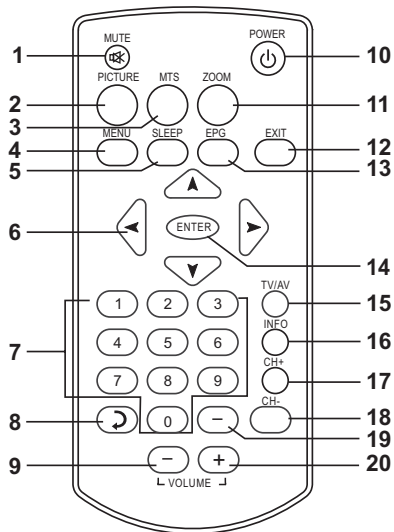

Note:

- Point the remote control unit from no more than about 5m from the remote control sensor and within about 60° of the front of the TV monitor.
- Do not press the button too quick. Press the button after the previous operation is completed.

- MUTE:** Used to toggle between normal & muted audio.
- PICTURE:** Press this button to select the picture display effect between Dynamic, soft, personal or standard.
- MTS:** Press to select the audio output language during DTV mode if there are multi languages available, during ATV mode, press this button to select audio output like mono & stereo.
- MENU:** Press this button to access the menu interface.
- SLEEP:** Use to auto power off by setting sleep timer.
- NAVIGATION buttons:** Press to select the options under OSD setting interface or alter the settings in a menu.
- (0~9):** Enter numeric values and to select the channel or program directly by entering its number.
- ↶:** Press to go to previously selected channel.
- VOL-:** Press this button to decrease the speaker volume.
- POWER:** Press this button to set the player to standby on or off state(If the main power of the set is on).
- ZOOM:** Used to select the desired display mode wide or normal. .
- EXIT:** Exit the menu interface.
- EPG:** Press this button to skim over TV programs guide.
- OK/ENTER:** Confirm the selection.
- TV/AV:** Select the desired signal input mode.
- INFO:** Press this button to display current program information.
- CH+:** Press this button to increase the channel number.
- CH-:** Press this button to decrease the channel number.
- :** Used to directly input TV channels.
- VOLUME +:** Press this button to increase the speaker volume.

HOW TO USE ANTENNA

 
Directly connect external movable antenna to RF in, may also connect roof antenna directly.

For better reception:

Adjust the direction/position of the antenna. The signal strength depends on the area of reception. If the signal is too weak, poor or no reception is possible. This is not a malfunction.

ATTENTION:

Do not rotate the antenna in counter direction after fixing, it may get loose & effect the channel reception.

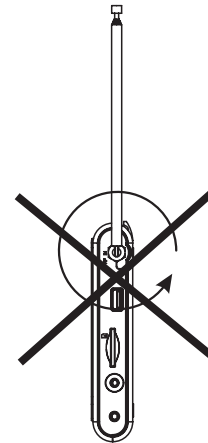

TV OPERATION

GET STARTED

- Be sure the TV antenna is connected to the set properly.
- Plug the AC adaptor to the power source to power on the TV set.
- Slide power on/off switch to on position.
- Press the TV/AV button on the remote or MODE button on the main unit to select TV Mode.
- Press AUTO/OK on the unit. Then select YES & press AUTO button to program the channels onto the memory.

PROGRAMING BY REMOTE:

Press the MENU button on the remote, and then select the satellite image by using the ► key. Then press down arrow button (▼) to select antenna function. Change to Air or Cable by using ► button, depending upon the type of connection. Then scroll to Auto Scan and press ► button twice, TV will start auto programming function taking all the available channels into memory.

NOTE: Auto Scan function has to be done for TV to capture channels initially.

PROGRAMING FROM UNIT

Turn the TV on and press menu button, scroll to satellite image by pressing Vol + (►), and then press channel - (▼) to select antenna function. Press Vol + to choose Air or cable reception. Then press CH - (▼) to select Auto scan function and press Vol + (►) and choose start scan by using CH - (▼) and press Vol + (►). The unit will start program.

SEARCH A PROGRAM

- Press CH UP/DOWN button once, the channel number changes. A desired channel can be reached using these two keys.
- NUMERIC button on the remote can facilitate you to select a specific channel. If the channel number exceeds 10, input first digital unit, then another digital unit;

- Note: this ATSC&Analog TV receiver can store the channels from 2~69, and the maximum of each channel has 8 programs. To select the desired programs by using - button and numeric buttons.

- Do as follows:
To select CH 13 NO. 2

Press 1 and 3, then press - and input 2.

Once the input is done, it will start broadcasting the selected channel immediately.

ADJUST THE VOLUME

 
Too loud the voice will damage your ears, to adjust the volume, use the VOLUME UP/DOWN buttons on the main unit or on the remote control.

AUDIO EFFECT OPTIONS

This TV set is with two speakers inside the front panel, which are enabled immediately it is powered on.

TV SETTING MENU

Press TV/AV button on the remote or MODE button on the main unit to select TV mode, then Press once the MENU button, the screen will pop up a setting menu; use the NAVIGATION LEFT/RIGHT buttons to select among the setting options, then press NAVIGATION UP/DOWN button to enter the sub menu, again use NAVIGATION LEFT/RIGHT button to select the desired option or adjust and press OK/ENTER Button to confirm the item to be set; Press MENU button to go to previously menu and press EXIT button to exit the menu interface.

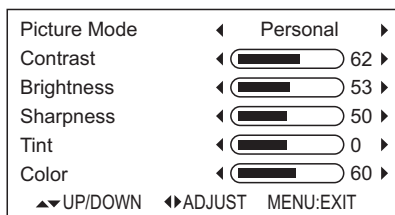


Picture mode: it is used to select the desired picture mode.
Contrast: it is used to adjust the contrast effect according to your own favorite.

Brightness: it is used to adjust the brightness effect according to your own favorite.

Sharpness: it is used to adjust the sharpness according to your own favorite.


Tint: it is used to adjust the tint effect according to your own favorite.

 Color: it is used to adjust the color according to your own favorite.

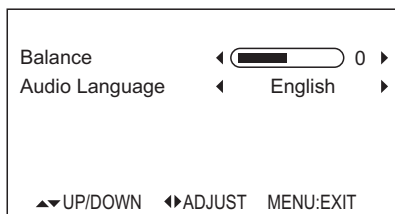

Balance: it is used to adjust the balance effect according to your own favorite.

 Audio language: it is used to select the desired audio output language.

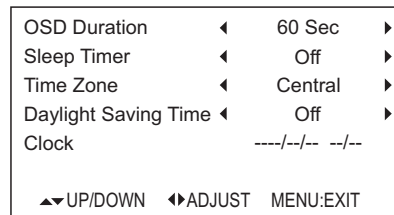


OSD Duration: it is used to set the OSD display duration.
Sleep Timer: it is used to set the sleep timer to auto power off the set.

Time Zone: it is used to select time zone from different region.

Daylight Saving time: it is used to advance one hour of the daylight time in summer in order to save the power.

 Clock: during DTV mode, it is used to show code create date.

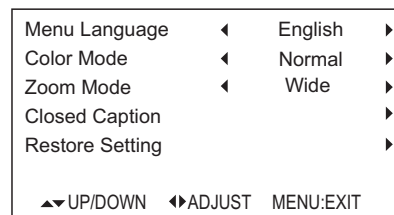

Menu Language: it is used to change menu language.

Color mode: it is used to change the color mode of screen.

Zoom Mode: it is used to select the display type.

 
Closed Caption: it is used to select the broadcasting program provides closed caption. There are three options as below:

CC mode: use to select on, CC on Mute, off.

Basic Selection: select among from CC1, Cc2, CC3, CC4, Text1, Text2, Text3 and Text4.

Advance Selection: service 1, Service 2, Service 3, Service 4, Service 5, Service 6,

Restore Setting: select this option to restore the factory setting.

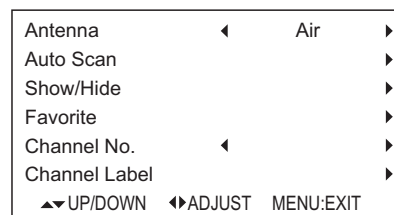

Antenna: it is used to select the Antenna type CATV or air.

Auto Scan: use this function to auto scanning and stored tuned channels. Select auto scan option, then press NAVIGATION RIGHT button to access the submenu, select the desired Cable system and then enter the auto scan option to begin auto scan.

 
Show/Hide: it is used to show or hide the programs according to your own favorite.

Favorite: it is used to select your favorite programs.

Channel NO.: Select the desired program from this option.

Channel Label: it is used to edit the name of the selected program.

Connecting to the DVD/VCD AV terminals

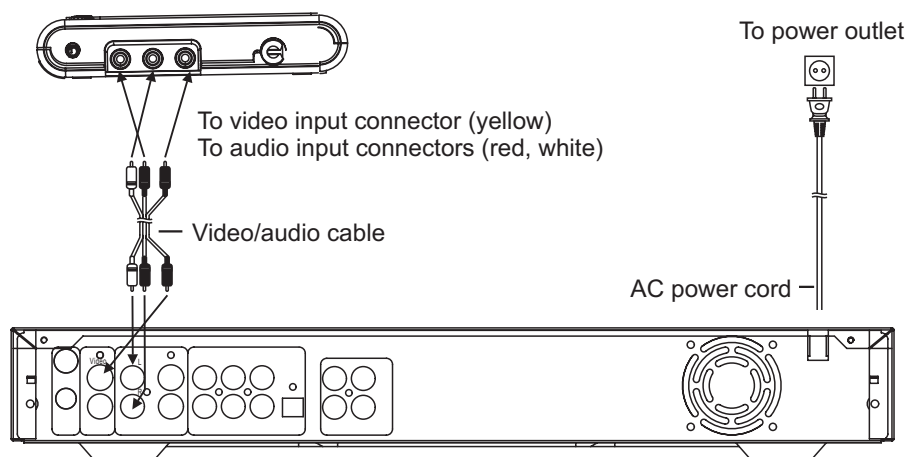

Symptom	Remedy / Possible of causes
No picture and sound	Check the power supply. Check the power switch and make sure it is at the ON position.
No picture	Make sure the channel is properly selected. External antenna is used for poor reception area.
No sound	Check whether the volume is switch to low level or muted? Headphone is inserted?
Picture is too dark	Check the brightness and contrast settings.
Picture is unstable	Adjust the direction, length of the antenna. Signal is too weak.
Double image	Antenna angle is not correct. Signal rebound from adjacent building etc.
"Snowy" on the screen	Power interference.
No colour	Make sure the system setting are correct.

ATTENTION

Due to the inherent nature of the Portable Televisions, this unit may not receive some channels, or may not have a clear reception. This may be currently due to the weak nature of the digital over the air signals, or the location of the unit from the transmitting Antenna.

Warranty

This Haier brand product, when shipped in its original container, will be free from defective workmanship and materials, and agrees that it will, at its option, either repair the defect or replace the defective product with a new or re-manufactured equivalent at no change to the purchaser, for parts or labor for the periods set forth below:

This warranty does not apply to the appearance of the product or the exterior of the product, which has been damaged or defaced, altered or modified in design or construction. It does not apply to the additional excluded items set forth below:

The warranty commences on the date the item was purchased and the original purchase receipt must be presented to the authorized service center before warranty repairs are rendered.

The limited warranty described herein is in addition to whatever implied warranties may be granted to purchasers by law. **ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD(S) FROM THE DATE OF PURCHASE SET FORTH BELOW.** Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein, or to extend the duration of any warranties beyond the time period described herein on behalf of Haier.

The warranties described herein shall be the sole and exclusive warranties granted by Haier and shall be the sole and exclusive remedy available to the purchaser. Correction of defects in the manner and for the period of time described herein, shall constitute complete fulfillment of all abilities and

Responsibility of Haier to the purchaser with respect to the product, and shall

constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise. In no event shall Haier be liable, or in any way responsible for any damages or defects in the product which were caused by repairs or attempted repairs performed by anyone other than an authorized service center or dealer; nor shall Haier be liable, or in any way responsible for incidental or consequential economic or property damage. Some states do not allow the exclusion of incidental or consequential damages, so that above exclusion may not apply to you.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

Warranty period for this product: 90 days for Labor, one year for parts.

Additional items excluded from warranty coverage: non-rechargeable batteries.

Where to obtain service: For the location of the nearest Haier authorized service center or to obtain product literature, accessories, supplies or customer assistance, please call 1-877-337-3639.

What to do to obtain service: ship or carry in your product to an authorized service dealer or center. Be sure to have proof of purchase.

If you ship the product, be sure it is packaged carefully.
Haier America
New York, NY 10018

Haier®

Haier
HLT71

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>