

# Haier

## LCD TV RECEIVER

---

## USER'S MANUAL

Please read this manual carefully before using your television and keep this manual in a good place for future reference.

MODEL:  
L1510A-C, L1510B-C, L1910A-C,  
L1910B-C, L1911W-C, L2011W-C

**To users:**

Thank you for using our LCD-TV.

Before connecting the LCD-TV and turning the power on, please read this book carefully. Please keep this book for later use. When it was loss of function by electrostatic shock, please switch the on/off button for restoring the function.

# CONTENT

 
- Safety Notice Items..... 1
- Front Panel Controls.....2
- Connection Options.....3
- Remote Control Key Functions.....4
- Remote Control .....5
  - Installing Batteries.....5
- Connection Instructions.....6
  - Grounding.....6
  - External equipment Connections.....6
    - Antenna Connection.....6
    - PC Setup.....7
    - DVD Setup.....7
    - VCR Setup.....8
    - Cable TV Setup.....9
    - External AV Source Setup.....9
- Basic Operating Instructions.....10
  - Turn on the LCD-TV.....10
  - Audio Control.....10
  - Mute.....10
  - Select the TV Channel You Want.....11
  - Picture Mode.....11
  - Program Swap.....11
  - Program Scan.....11
- Menu Operations.....12
  - Picture Menu Options.....12
  - Picture Menu Options Continued.....13
  - Audio Menu Options.....13
  - Audio Menu Options Continued.....14
  - Function Menu Options.....15
  - Function Menu Options Continued.....16
  - Adjust Menu Options.....16
  - Tuning Menu Options.....17
  - Tuning Menu Options Continued.....18
- TELE TEXT.....19
- Basic Playback.....21
- Advanced Playback.....22
- Special Function Playback.....23
  - JPEG DISC PLAYBACK.....23
  - MP3 PLAYBACK.....23
  - SCREEN SAVER FUNCTION.....23
- DVD System SETUP.....24
  - General Setup Process.....24
  - General Setup Page.....24
  - Preferencel Page.....26
- Playable Discs.....28
- Disc Protection and DVD Characteristics.....29
- Troubleshooting Guide.....30
- Specifications.....31

# Safety Notice Items

Incorrect usage will cause fire or electric shock. To prevent this, please do as required when you are installing, using and cleaning this machine. To insure your safety and extend the life-span of LCD-TV, please read the following items carefully before using:

- Please read and understand all the instructions before operation;
- Please keep the book for later use;
- Please comply with the warning instructions on the machine and in this book strictly;
- Please comply with the instructions provided;
- Please do not use additional devices that are not recommended by manufacturer;
- Before operation, please make sure that the operating voltage of your unit is normal;
- Do not place the unit on unstable, dusty and humid places;
- Never put the unit in direct sunlight or near heat sources;
- Allow enough space for proper ventilation;
- Please keep water away from the LCD-TV . If water comes in contact with the LCD-TV, disconnect the power cord from the power source, then wipe the set with a dry soft cloth;
- Do not remove the back cover. If services were need, please refer to qualified Personnel


# Front Panel Controls

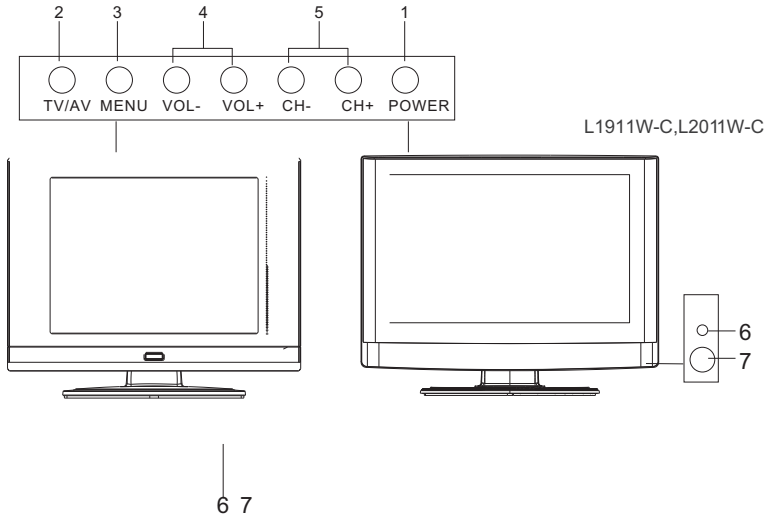



## Control Panel Function

1. Power supply switch
2. TV/AV Select the input signals: COMPONENT/PC/AV/SV/TV/DVD
3. MENU Press to select the main menu
4. VOL- Volume down / Left orientation to adjust the item in the OSD  
VOL+ Volume up / Right orientation to adjust the item/Press to enter
5. CH- TV channel down / to select the item in the menu  
CH+ TV channel up / to select the item in the menu
6. Power indicator  
Illuminates red in standby mode, illuminates green when the display is turned on
7. Remote Sensor Receiving remote control sends the infrared remote signal.
 
# Connection Options



\_\_\_\_\_

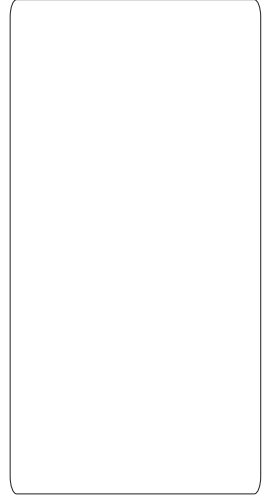  

# Remote Control Key Functions

 
When using the remote control, aim it towards the remote sensor on the TV

- 1 Stand By
  - 2 DVD Open/close
  - 3 DVD 10+
  - 4 Scan
  - 5 Zoom(Only be adjustable in the DVD mode)
  - 6 Mute
  - 7 Swap
  - 8 Call Screen Display
  - 9 Program Number
  - III  
TV/AV and some other source Exchange
  - 12 Digital Selector
  - 13 TV/DVD
  - 14 Volume/Channel Selection
  - 15 MENU
  - 16 DVD Audio
  - 17 Picture Mode
  - 18 DVD STOP
  - Tune Menu Button
  - DVD SETUP
  - DVD PAUSE/STEP
  - DVD FAST REVERSE
  - DVD FAST FORWARD
  - DVD MENU
  - DVD NEXT
  - DVD PREVIOUS
  - DVD REPEAT
  - DVD PLAY/ENTER
  - DVD A-B REPEAT
  - DVD Cursor Move button
  - DVD SLOW
  - DVD ANGLE
  - DVD SEARCH
  - DVD PROGRAM
  - DVD TITLE/PBC
  - DVD SUBTITLE
  - 37 DVD CALL
  - 38 TELETXT BUTTONS
  - 39 Exit Screen Display
- Fast text coloured buttons

# Remote Control Key Functions

## ***Installing Batteries***

1. Slide open the cover of the battery compartment on the back of the remote control.
2. Load two 5# alkaline batteries in the compartment. (plus and minus poles to respective mark)
3. Replace the cover of the battery compartment.

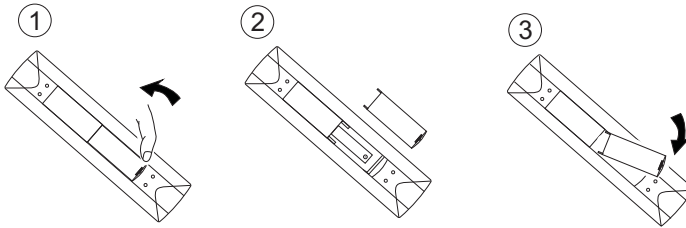





# Connection Instructions

## PC Setup

You can use your LCD-TV as a monitor for your personal computer using a VGA cable (not supplied).

### **Connection and use steps:**

1. Read the userguide supplied with your computer and ensure that it has a VGA connector;
2. Make sure that the power of the LCD-TV and the PC are off;
3. Connect a Dtype 15-pin VGA interface cable (not supplied) to the VGA video interface connector on the PC. Then connect the other end to the VGA video interface connector on the back of the LCD-TV. Tighten the screws on the VGA connectors once they are firmly connected;
4. Turn on the power of the LCD-TV first, and then turn on the power of the PC;
5. Press the TV/AV button to set the video input mode of the LCD-TV to PC-RGB;
6. Check the image on your TV. There may be noise associated with the resolution, vertical pattern, contrast or brightness in PC mode. If noise is present, change the PC mode to another resolution, change the refresh rate to another rate or adjust the brightness and contrast on the menu until the picture is clear. If the refresh rate of the PC graphic card can not be changed, change the PC graphic card or consult the manufacturer of the PC graphic card.



# Connection Instructions

## VCR Setup

- To avoid picture noise (interference), leave an adequate distance between the VCR and TV

### **Connection and use steps:**

 
 
 
1. Read the user guide supplied with your AV devices and ensure that it has Composite or S-Video connectors;
2. Make sure that the power of the LCD-TV and the AV device are off;

 
### **Connection Option 1**

Set VCR output switch to 3 or 4 and then tune TV to the same channel number.

### **Connection Option 2**


1. Connect the audio and video cables from the VCR's output jacks to the TV input jacks, as shown in the figure.  
When connecting the TV to VCR, match the jack colors (Video = yellow, Audio Left = white, and Audio Right = red).  
If you connect an S-VIDEO output from VCR to the S-VIDEO input, the picture quality is improved; compared to connecting a regular VCR to the Video input.
2. Insert a video tape into the VCR and press PLAY on the VCR. (Refer to the VCR owner's manual.)
3. Turn on the power of the LCD-TV first; and then turn on the power of the AV device;
4. Press the TV/AV button to set the video input mode of the LCD-TV to S-VIDEO mode or AV mode.

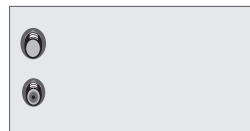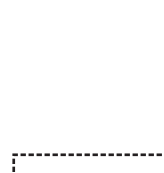




# Basic Operating Instructions
 
## Turn on the LCD-TV



Switch on the power button on the back of the set and the TV will in standby mode. When the **POWER** button on the remote control is pressed and the LCD-TV is turned on, the indicator light on the front of the LCD-TV changes from red to green. When the LCD-TV is turned off using the **POWER** button, the LCD-TV will go into standby mode and the indicator light turns red.

 Note:  
The display of the input mode will disappear in 3 seconds.



Switch Among Different Inputs: TV / COMPONENT/ PC / AV / SV/DVD

Each time you press the TV/AV button, TV, COMPONENT , PC, AV, SV will appear on the screen in the order.

Each time you press the TV/DVD button, TV, DVD will appear on the screen in the order.

.Note:

The display of the input mode will disappear in 3 seconds.

## Audio Control

1.Press the **V+** button to increase the volume. A number will appear on screen indicating the volume level.

2.Press the **V-** button to decrease the volume. A number will appear on screen indicating the volume level.

## Mute

1.Press the **MUTE** button to mute the sound temporarily. A mute icon appears on the screen.

2.Press the **MUTE** button or **V+/V-** again to restore the sound.  
The mute icon disappears.

# Basic Operating Instructions

## Select the TV Channel You Want

You can use the number keys on the remote control to directly select TV channels.

The LCD-TV can store up to 100 channels , and you can press the keys on the remote control or on the panel to make a selection.

“ ”

(  
)

“ ”

“ ”

“ ”

# Menu Operations

\* In this manual, the OSD (On Screen Display) may be different from your TV's because it is just an example to help you with the TV operation. Press TV/AV or TV/DVD to select the input source, and the menu in the different source is different.

1. Press **MENU** button to display the main menu, and **V+/V-** to select the main menu .
2. Press **P+/P-** to scroll through the parameters
3. Press **V+/V-** buttons to make changes to the parameters
4. Press the **EXIT** button to exit the menu

 
## Picture Menu Options

Picture quality can be adjusted for any input separately .

The picture quality on the screen can be adjusted as follows:

1. Press **MENU** button and **V+/V-** until the following menu appears on the screen.


### PC/COMPONENT MENU

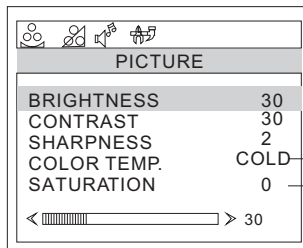

Only available in PC mode

Only available in COMPONENT mode

### TV/AV/SV/DVD MENU

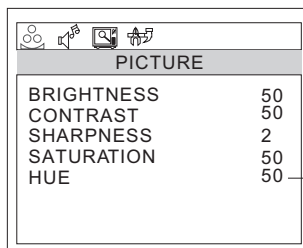 

Only available in NTSC system

Note: Sign on top of the menu in this manual may be different from the real

# Menu Operations

## Picture Menu Options continued

2. Press **P+/P-** button to enter the picture menu and to go up and down to select the desired option .
3. Press **V+/V-** button to increase and decrease the level to adjust the selected option to your preference .
4. Repeat step 2 and step 3 until desired picture quality has been achieved .

### **Function:**

**BRIGHTNESS** :Adjust the brightness of the picture . By increasing the level, it will add more light to dark parts of the picture and by decreasing the level ,it will add more dark to light parts of the picture.

**CONTRAST** :Adjust the contrast of the picture . The image becomes higher as the number increase.

**SHARPNESS** : Adjust the amount of the detail enhancement , the image sharpness rises as the number increases (By increasing the level, it will show cleaner and clearer images and by decreasing the level, it will make picture smoother).

**SATURATION** : Press **V+/V-** to adjust the color

 
**HUE** : Adjust the tone of the picture . Appear and be adjusted only under NTSC mode

**COLOR TEMP.** : Press to select the color temperature from WARM/NORMAL/ COLD .

## Audio Menu Options

Sound can be adjusted for any input as follows:

1. Press **MENU** and **V+/V-** button until the following menu appears on the screen

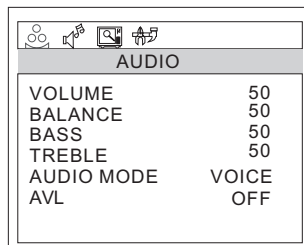

# Menu Operations

## Audio Menu Options continued

You can adjust sound options to the levels you prefer.

2. Press **P+/P-** button to enter the audio menu and to go up and down to select the desired option .
3. Press **V+/V-** button to increase and decrease the level to adjust the selected option to your preference .
4. Repeat step 2 and step 3 until desired sound quality has been achieved ..

### **Function :**

**VOLUME :** Adjust the volume of your TV

**BALANCE :** Adjust the balance of the audio output from left to right . When indication value of balance increases toward +50 , sound of the left speaker becomes weaker . When indication value of balance decreases toward -50 , sound of the right speaker become weaker .

**BASS :** Adjust the bass of the sound . Can only be adjust under PERSONAL mode .

**TREBLE :** Adjust the treble of the sound . Can only be adjust under PERSONAL mode .

**AUDIO MODE :** Press **V+/V-** to select among PERSONAL, VOICE, MUSIC and THEATRE .

**AVL:** Automatic Volume Limit Control reduces the effect of the large volume by the same volume of all the channels .



# Menu Operations

 
## Function Menu Options

### Menu Language Selection:


The menus can be shown on the screen in the selected language. First select your language.

1. Press **MENU** and **V+/V-** button until the following menu appears on the screen
2. Press **P+/P-** button to select LANGUAGE.
3. Press **V+/V-** button to select your desired language.

From this point on, the on-screen menus will be shown in the language of your choice.

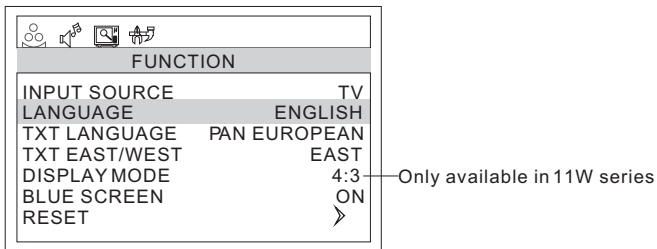

 1. Press **MENU** button and **V+/V-** until the following menu appears on the screen.

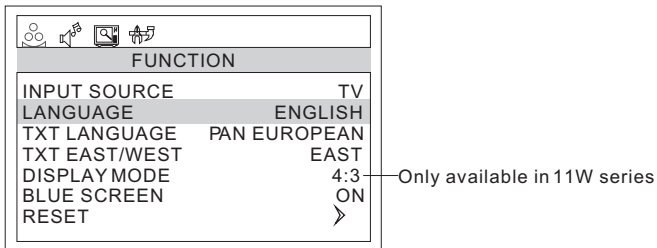

2. Press **P+/P-** button to enter the sound menu and to go up and down to select the desired option .
3. Press **V+/V-** button to increase and decrease the level to adjust the selected option to your preference .
4. Repeat step 2 and step 3 until desired picture quality has been achieved .

Functions:

1. INPUT SOURCE : Display current mode . There are PC , AV , SV ,TV , COMPONENT, DVD to display .

# Menu Operations

 
## Function Menu Options Continued

2. **TXT LANGUAGE:** To switch the teletext languages.
3. **TXTEAST/WEST:** To select EAST or WEST
4. **DISPLAY MODE:** To select the display mode between 4:3 and FULL SCREEN..
5. **BLUE SCREEN:** To set On, the screen will be in blue screen after 3 seconds if there is no signal.
6. **RESET :** Press **V+** to reset some settings to the factory default .

**Note:** The TXT LANGUAGE and TXT EAST/WEST have relation to the inputs.

## Adjust Menu Options

1. Press **MENU** and **V+/V-** button until the following menu appears on the screen

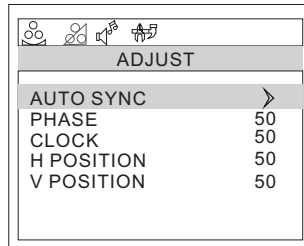

**Note:** This menu is only appears in PC mode.

2. Press **P+/P-** button to enter the adjust menu and to group and down to select the desired option .
3. Press **V+/V-** button to increase and decrease the level to adjust the selected option to your preference .
4. Repeat step 2 and step 3 until desired quality has been achieved ..

Functions:

**AUTO SYNC :** Is opted for adjustment of picture location frequency and phase parameters .

**PHASE :** Removes any horizontal distortion and clears or sharpness the displayed characters .

**CLOCK :** Adjust the TFT-LCD to match the PC input source

**H-POSITION :** Picture horizontal adjust

**V-POSITION :** Picture vertical position adjust .

# Menu Operations

## Tuning Menu Options

1. Press **MENU** and **V+/V-** button until the following menu appears on the screen



|               |      |
|---------------|------|
| CHANNEL       | 1    |
| COLOR SYSTEM  | AUTO |
| SOUND SYSTEM  | DK   |
| SKIP          | OFF  |
| AFC           | ON   |
| FINE TUNE     |      |
| EXCHANGE      |      |
| MANUAL SEARCH |      |
| AUTO SEARCH   |      |

**Note: This menu is only appears in TV mode.**

2. Press **P+/P-** button to enter the tuning menu and to go up and down to select the desired option .
3. Press **V+/V-** button to increase and decrease the level to adjust the selected option to your preference .
4. Repeat step 2 and step 3 until desired quality has been achieved ..

 
Functions:

1. CHANNEL : Press **V+/V-** to change the TV channel .
2. COLOR SYSTEM : Select the TV color system from AUTO, PAL, SECAM..
3. SOUND SYSTEM : Select the TV standard system from DK, I, BG
4. SKIP : If you want skip a channel , press **V+/V-** to select ON , and this channel will be skip next time when you press **P+/P-** . But you can press digits button to select the channel . If you want to restore the channel , select OFF.
5. AFC: Auto frequency control . Select ON to improve the image quality .
6. FINE TUNE : If the image received is not very good , you can press **P+/P-** to select FINE TURN item in menu . Then , press **V+/V-** button to adjust and improve the image quality .

# Menu Operations


## Tuning Menu Options Continued

7. EXCHANGE : Press **V+** to display the menu as follows:

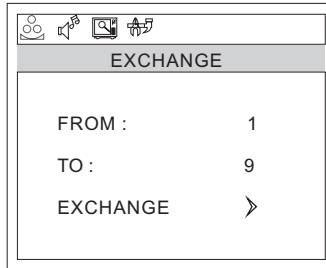


Press **P+/-** to select the item and then **V+/-** to adjust the channel and **V+** to confirm. ( For example: press **P+/-** to select FROM item, and then press **V+/-** to adjust the channel number to 1 and the current channel will change with the channel number changed; then Press **P+/-** to select TO item, and **V+/-** to adjust the channel number to 9 and the current channel will not change; press **P+/-** to select EXCHANGE item, and then **V+** to confirm. The two channels will be exchanged)

 8. MANUAL SEARCH : Press **V+** to start to search the channel . The following menu will display on the screen:



Press **V+/-** to select UP or DOWN, and then press MENU to confirm. (If you select DOWN, the search will search the lower frequency channel and UP will search the higher frequency channel)

 9. AUTO SEARCH : Auto search and save the channel . Press the **V+** button to start to search the channel and the following menu will appears on the screen: All channels now playing program will be automatically preset in order . After the search has finished, the first program number will display on the screen.






Press **V+/-** to select YES or NO, and menu to confirm. You could press MENU to stop the search.

**NOTE:** If you want to search the channels in L or L' system, you need to set the sound system to L in OSD

# TELETEXT

   - Teletext is an information system, broadcast by certain channels, which can be read like a newspaper . It also provides subtitles for people with hearing difficulties or those who are unfamiliar with the language in which a particular program is being broadcast (cable networks, satellite channels, etc.).

## Teletext

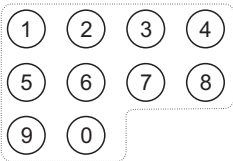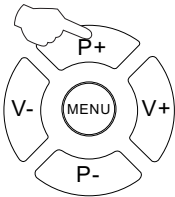

TUNE



## Teletext functions

To select "Teletext" press the Teletext button on the handset. To switch off Teletext, press the button again. "Note all menufunctions are not available in Teletext mode". Only a few direct button control functions are available in TELETEXT mode, they are:

- Volume adjustment
- Mute function


### Page up/down

Use the P+/- buttons to browse next or previous page.

### Page number entering

To select a Teletext page, enter the page number using the numeric key pad on the remote control, or use the P+ or P- buttons, or the coloured Fast text buttons.

### Mix mode

To view the TV picture while in Text mode press the  button, this will superimpose the Teletext data on top of the Tv picture. Press this button again to return to Full text.

### INDEX

Press the tune button to go to the index page of teletext.

# TELETEXT



# Basic Playback

## Basic Playback

### Preparations

- Press the TV/DVD button on the remote control to enter the DVD status.

### Basic playback

1. Press OPEN/CLOSE to open the disc tray, place a disc on the disc tray. (If there is no disc placed on the disc tray in DVD mode, OPEN will display on the screen all the times)
  - There is only one disc sizes. Place the disc in the correct guide on the disc tray. If the disc is out of the guide, it may damage the disc and cause the DVD player to malfunction. Do not place a disc which is unplayable in this DVD player.
2. Press OPEN/CLOSE to close the disc tray, the playback will automatically start.
  - Some discs do not start automatically. Press PLAY/ENTER to start playback.
3. Some discs may start playback with a menu. Use the cursor buttons on the remote control to select menu options and press PLAY/ENTER to start. You may also press the digit buttons to select a menu option directly. Many DVDs will not allow this during start-up.

### Pause playback

1. Press PAUSE/STEP to pause playback (still mode). The sound will be muted during still mode.
2. Press PLAY/ENTER to resume normal playback.

### Stop playback

1. Press STOP ■ button to go to stop mode, the TV screen will show the start logo. For some discs the player can recall the location where stopped, such as DVDs and audio CDs.
2. Press PLAY/ENTER to resume play-back from the location where playback was stopped.
3. Press STOP twice to stop completely. Play must then resume from the title beginning.

### Previous and Next

During Playing, pressing the PREV ◀ key will restart the current chapter and skip chapters backwards with each subsequent press until the start of the disc is reached. Each press of NEXT ▶ key during playing will skip the current chapter and play the next one. In the case of CD audio and photo discs the next track, song or photo is selected.

### Fast forward and Fast reverse

1. Press FWD ►► to fast forward through the disc. Each time the FWD ►► button is pressed, the fast forward motion speed changes.
2. Press PLAY/ENTER to resume normal playback.
3. Press REV ◀◀ to fast reverse through the disc. Each time the REV ◀◀ button is pressed, the fast reverse motion speed changes.
4. Press PLAY/ENTER to resume normal playback.

### Single step playback

1. When paused, press PAUSE/STEP repeatedly to single step forward frame by frame in the video.
2. Press PLAY/ENTER to resume normal playback.

# Advanced Playback

## Advanced Playback

### IMPORTANT NOTE:

ALL DESCRIBING FUNCTION IS FOR DVD DISCS. IF YOU PLAY OTHER FORMAT DISC, THE OPERATION AND DISPLAY ON SCREEN WILL BE SOME DIFFERENCE.

#### SBUTITLE

Press "SUBTITLE", the screen will display "SUBTITLE 01/XX XXXXX", "01" indicates the ordinal number of this language; "XX" indicates total number of language; "XXXXXX" indicates the language of country. (the number of language depends on disc). This function can select up to 32 languages displayed on screen.

#### REPEAT

Press "REPEAT" and Chapter repeat will be displayed on screen, the second press will display Title repeat, the third press will display All repeat, the fourth press will cancel this function.

#### A-B

Press "A-B" to begin start-point, press again to set an end point and complete setting. The selected section A-B will be repeated. The third press will cancel this function.

#### ANGLE

When enjoying sports, concert or theatre, press this key to watch same actions in different angles. (Valid for discs possessing this function. Using a disc recorded in multi-angle you can view the scene from different angles, for example, front, side, whole view and exterior scene).

#### D.MENU

Press this key to display root menu, select item according to your preference. (This function will work with a DVD having a multi-layer menu.)

#### D.CALL

Pressing this key will cycle through "title elapsed", "title remain", "chapter elapsed", "chapter remain" and "display off". Each displays the appropriate time information.

#### PROGRAM

When playing discs, press "PROGRAM" to enter program mode. Starting with program number "01" highlighted, press the digit buttons to select the title and chapter number that you want. When finished move the cursor to select "START". This will start the program playback.

#### SEARCH

Press "SEARCH" once to display Disc Go To --:--, use numeric key to enter the desired time of Disc. Press "SEARCH" twice to display Track Go To --:--, use numeric keys to enter the desired time of track. Press "SEARCH" 3 times to display Select Track --/03, use numeric keys to enter the desired track.

#### SLOW

Press SLOW to play a disc in slow forward. Each time the SLOW button is pressed, the slow motion speed changes. Press PLAY/ENTER to resume normal playback;

**Note:** This function is invalid for CD and MP3.

#### TITLE/PBC

With some DVD discs pressing this key will display the title menu. You can then use the digit buttons to select the item you prefer.

#### AUDIO

Press this key can change the audio mode. such as: Audio 1/2: AC 3 2 CH English  
Audio 2/2: AC 3 5.1 CH English

For CD audio, press this button to cycle between Mono Left, Mono Right, Mix-Mono and Stereo.

**Note:** When press this button continuously, you must above 3 seconds interval.



# Special Function Playback

## JPEG DISC PLAYBACK

When a disc containing standard JPEG picture files is inserted into the player, a navigation menu will be displayed automatically. Use the UP and DOWN cursor buttons to select a file then press PLAY/ENTER. The slide show will commence. Press PREVIOUS or NEXT to move between pictures. Press pause to stop on the current picture. Press PLAY/ENTER to resume normal playing.

JPEG disc contains with JPG-format picture information which can be decoded by micro-computer software and output through video output interface for enjoying on TV screen. Such function can be used in many domains. For example, in education, teachers can change those pictures for class into JPG-format file by digital camera or scanner, which is commonly used in computer, and record them into CD-R disc through disc recorder. It will be convenient for and direct to the students when teachers play the disc by TV set or other equipment in class. That reduces teachers' repetition work and good for reservation (information in disc can be reserved for more than 100 years); in family, users can record pictures which formed by digital camera or scanner into CD-R disc. Suppose one picture occupies about 100K bytes, then one disc may record about 6000 pictures; in commerce, manufacturers can show the products pictures one by one to consumers.

**NOTE:** The actual content will be different as per disc.

## MP3 PLAYBACK

 
When playing an MP3 disc, a navigation menu will be displayed automatically. In the menu, use UP or DOWN cursor buttons to choose the folder, then press PLAY/ENTER to enter the folder. Use the UP and DOWN cursor buttons to select the file and press PLAY/ENTER. Pressing the LEFT cursor button will take you to the previous screen/menu.

## SCREEN SAVER FUNCTION

This unit employs a screen saver mode to help protect the screen during static video pictures. This can be turned off on the GENERAL SETUP PAGE


# DVD System SETUP

## DVD System Setup

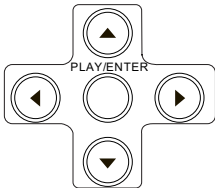

### General Setup Process

 1. Press the SETUP button, the General Setup Page, Preference Page will be displayed in turn.
2. Press ▲ or ▼ to select, the item, then press ► to enter the submenu.
3. Press ▲ or ▼ to select then press PLAY/ENTER to confirm.
4. Press SETUP repeatedly to exit the set-up menus.

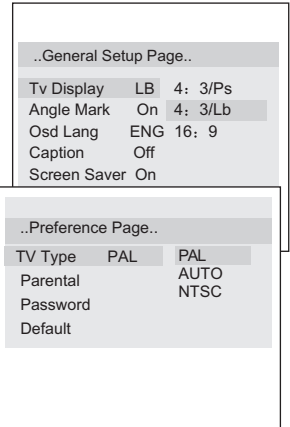

### General Setup Page

#### ASPECT RATIO DESCRIPTION

When using the DVD with the internal TV, select 4: 3/LB.

*The following information applies only when the DVD output is connected to an external TV.*

- 4: 3/PS (PS = Pan and Scan)

You may select if you have a normal aspect ratio (4:3) TV, although the NORMAL/LB (letter box) is a more common choice. In PS

 
 
mode, widescreen material will fill the screen, but at the expense of chopping off extreme left and right edges of the original film picture. For this feature to work, the disc must be specially coded. Such discs are uncommon.

- 4: 3/LB (LB = Letter Box)

You may select this if you have a normal aspect ratio (4:3) TV. Widescreen material will be shown in pure unaltered form, allowing the entire picture area of the original film to be viewed without any side cropping. Black bars will appear above and below the picture.

- 16: 9

You may select this if you have a widescreen (16:9) TV. Back bars may still appear above and below the picture even if using a widescreen TV. This is because some film directors prefer to use ultra widescreen aspect ratios e.g. 2.35:1. This will normally be indicated on the DVD packaging.

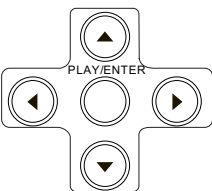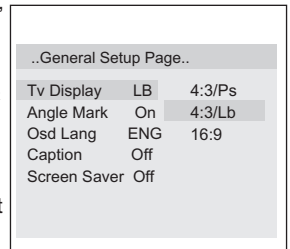


# DVD System SETUP(Continued)


## General Setup Page

**ANGLE MARK:** Users can select a particular camera angle when playing a DVD which offers multiple angles.

 
This item allows you to set Angle Mark ON or OFF.

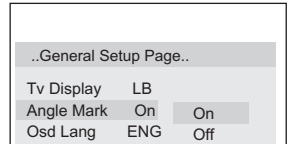

 
**On Screen Display (OSD) Language:** Users can select on-screen display language.

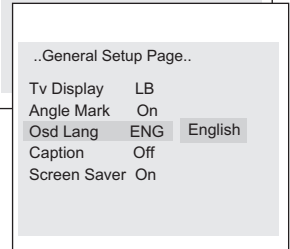

 **CAPTIONS:** This function allows you to display or hide the caption.

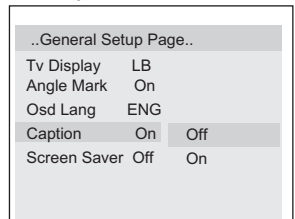

 
**SCREEN SAVER:** If the screen saver is on, then there will be an animated picture of DVD on the screen whenever the DVD player is idle for more than 3 minutes .

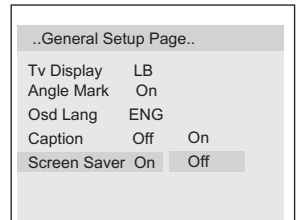


## Preference Page

The Preference Page is only available when there is no disc in the player. These settings are applied consistently to all discs which are inserted and played.

 **TV TYPE:** This player supports different TV output, including AUTO, NTSC, and PAL systems. Usually please set to AUTO.

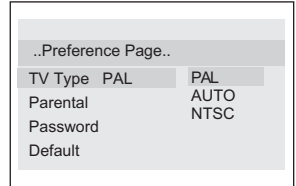

 **PARENTAL:** The parental control function works in conjunction with the different censorship classes assigned to DVDs. These classes help to control the types of DVDs that the family watches. There are up to 8 censorship classes for DVDs.

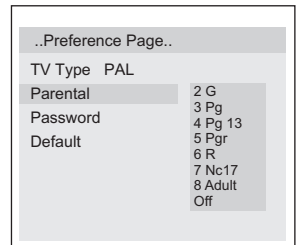

### Note:

 
 
- 1 To change this setting you must enter your password. (Initial password is 1234)
- 2 When set to OFF, all discs may be viewed.

### PASSWORD CHANGE:


You can change your password by entering 4 digits. You must confirm the 4 digits before the new password can be accepted.

NOTE: If you forget your password or a password is accidentally set enter 1369 as the password. This will enable you to regain control.

# DVD System SETUP(Continued)

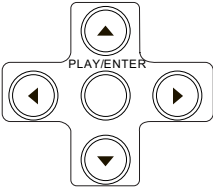

 **DEFAULT:** Resets all settings (except password and parental lock status) for this DVD player back to the manufacturers original settings. Press ENTER to perform the reset.

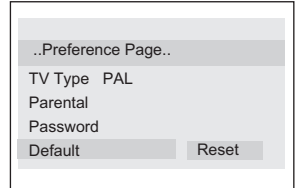










**Note:**

 
Some functions may not be available depending on the type of disc.

# Playable Discs

The following discs can be played:

| DISCS     | LABEL  | CONTENTS                           | DIMENSION |
|-----------|--|------------------------------------|-----------|
| DVD VIDEO |   | Audio +Video<br>(moving picture)   | 12cm      |
| AUDIO CD  |   | Audio                              | 12cm      |
| HDCD      |   | Audio                              | 12cm      |
| MP3       |   | Audio                              | 12cm      |
| JPEG      |   | Video(picture)                     | 12cm      |
| KODAK CD  |   | Video(picture)                     | 12cm      |
| CD-R      |   | Audio or Video<br>(moving picture) | 12cm      |
| CD-RW     |   | Audio or Video<br>(moving picture) | 12cm      |
| CD+G      |  | Audio(picture)                     | 12cm      |

- You cannot play discs other than those listed above.
- You cannot play discs of non-standardized discs, even if they may be labelled as above.
- The performance of CD-R or CD-RW disc is depend on the way of disc-burning. In a few cases, their performance may be not very well or even no performance.



# Troubleshooting Guide

- To assist in location possible faults use help guide below.

## Troubleshooting

|   |  |
|---|--|
| No picture, no sound                                | Verify if the television is properly plugged.<br>Verify if the television is properly supplied power.<br>Verify if electricity is available.   |
| Blank screen  | Verify if correct signals are input.<br>Press TV/AV button to change signal input to TV input.<br>Restart the television if power supply is interrupted.   |
| No sound  | Press Mute button and verify if Mute mode is set.<br>Switch to other channel and verify if the same problem happens.<br>Press VOL+ button to see if the problem can be solved.                               |
| Poor sound  | Verify if sound system is correct. Refer to some chapter for adjust.   |
| No picture in some channel                          | Verify if correct channel is selected.<br>Adjust the antenna.<br>Make adjustments by FINE TUNE and MANUAL SEARCH.  |
| No color for some channel program (black and white) | Verify if the same problem exists in other channels.<br>Check out of picture and sound systems.<br>Refer to relative instructions in the Manual for color adjust.  |
| Spots with some or all pictures                     | Verify if the antenna is correctly connected.<br>Verify if the antenna is in good condition.<br>Make fine adjustment of channel.   |
| Television out of control                           | Disconnect the television from power supply and, 10 seconds later, connect the television to the power supply. If the problem still exists, contact authorized after-sales service for technical assistance. |

### Note:

1. If the fault can not be repaired using the above guide consult with your local authorized service center.
2. The TV set must only be repaired by a qualified registered service person. Never attempt to remove the back cover as the TV set has dangerous voltages inside that may cause a fatality or fire.



# Specifications

Specifications of the television that you have just purchased may vary from the information in this table due to technical innovations.

|                              |  |  |
|------------------------------|--|--|
| <b>Model</b>                 | L1510A-C,L1510B-C,   | L1910A-C,L1910B-C<br>L1911W-C,L2011W-C |
| <b>Picture, sound system</b> | PAL/SECAM-BG,I,DK  |  |
| <b>DTV YPbPr YCbCr</b>       | 480i/p, 576i/p, 720p. 1080i  |  |
| <b>Audio output</b>          | $\geq 1.5W+1.5W$   |  |
| <b>External port</b>         | AV input PC input S-VIDEO input PC audio input<br>Headphone output COMPONENT input Antenna input |  |
| <b>Power requirements</b>    | ~150-240V 50/60Hz  |  |
| <b>Power consumption</b>     | $\leq 50W$   | $\leq 60W$                             |
| <b>Temperature</b>           | Working:5°C~35°C<br>Storage:-10°C~45°C   |  |
| <b>Humidity</b>              | Working:20%~80%<br>Storage:5%~90%  |  |
| <b>Accessories</b>           | Remote control<br>Batteries<br>Owner's manual<br>Warranty card                                   |  |

Note: Warranty card is only for the special countries and areas

● **Note:**

All specifications are subject to change without notice.  
All quality are approximate value.

# Haier

V0.2  
0090508262B

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>